

z/OS
3.2

*DFSMS Software Support for IBM System
Storage TS1140, TS1130, and TS1120
Tape Drives (3592)*



Note

Before using this information and the product it supports, read the information in [“Notices” on page 401.](#)

This edition applies to IBM® z/OS® 3.2 (5655-ZOS) and to all subsequent releases and modifications until otherwise indicated in new editions.

Last updated: 2025-09-30

© **Copyright International Business Machines Corporation 1973, 2025.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Figures.....	xv
Tables.....	xvii
About this document.....	xxi
Required product knowledge.....	xxi
Referenced information centers.....	xxi
z/OS information.....	xxii
Notational conventions.....	xxii
How to read syntax diagrams.....	xxii
How to read syntax conventions.....	xxiii
How to provide feedback to IBM.....	xxvii
Summary of changes.....	xxix
Summary of changes for z/OS 3.2.....	xxix
Summary of changes for z/OS 3.1.....	xxix
Part 1. TS1140 tape drive.....	1
Chapter 1. Introduction for TS1140 tape drive.....	3
TS1140 tape drive.....	3
Tape encryption.....	3
Key management for TS1140.....	5
Key store for TS1140.....	5
IBM Security Key Lifecycle Manager.....	5
Tivoli Key Lifecycle Manager (TKLM).....	5
Encryption Key Manager (EKM).....	5
In-band proxy for TS1140.....	6
Management interfaces for TS1140.....	6
Key label specifications for TS1140.....	6
Volume label support for TS1140.....	6
Volume recovery for TS1140.....	6
Re-keying support for TS1140.....	6
Recording format and media support for TS1140 tape drives.....	6
Performance scaling and segmentation for TS1140.....	8
z/OS software support for the TS1140 tape drive.....	8
Using TS1140 tape drives in an IBM tape library environment.....	10
Using TS1140 tape drives in a stand-alone environment.....	10
Resolving recording technology conflicts for TS1140.....	11
Implementation considerations for using TS1140 tape drives.....	11
Chapter 2. Migration to the software support for TS1140 tape drives.....	13
Understanding coexistence considerations for TS1140.....	13
Preparing to install the software.....	16
Installing the appropriate PTFs.....	17
Planning for DFSMS software support for the TS1140 tape drive.....	17
Implementing the DFSMS software support for the TS1140 tape drive.....	25

Chapter 3. Access method services (AMS) modifications for TS1140 tape drives.....	31
ALTER LIBRARYENTRY	31
Changed parameters for ALTER LIBRARYENTRY.....	31
ALTER VOLUMEENTRY.....	31
EFMT4 and EEFMT4 subparameter for ALTER VOLUMEENTRY.....	32
CREATE LIBRARYENTRY	32
Changed parameters for CREATE LIBRARYENTRY.....	32
CREATE VOLUMEENTRY	33
EFMT4 and EEFMT4 subparameters for CREATE VOLUMEENTRY.....	33
DCOLLECT.....	33
DDCEEFMT4 and DDCEEFM4 subparameter for DCOLLECT.....	33
LISTCAT.....	34
EFMT4 and EEFMT4 subparameters in List tape volume entries sample output.....	34
Chapter 4. Tape drive and tape volume allocation modifications for TS1140 tape drives.....	35
Device support modifications.....	35
IOS000I Message with Encryption Failure.....	37
SMS modifications.....	38
In Data Class.....	39
Overriding Attributes Defined in the Data Class.....	39
MVS device allocation modifications.....	39
JCL DD Statement Parameters and Equivalent Text Units for TS1140.....	40
DSNAME Allocation Text Units for TS1140.....	40
Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1140.....	40
Volume Interchange Specification - Key = '006F'.....	40
Chapter 5. ISMF modifications for TS1140 tape drive.....	43
Data class define and alter panels.....	43
Mountable tape volume list panel.....	43
Tape library define and alter panels	43
Chapter 6. OCE modifications for TS1140 tape drive.....	45
Overview.....	45
SMS Managed Tape.....	45
WORM support.....	45
Recording Technology Conflict.....	45
Multiple Recording Format Capability.....	45
Cartridge Reuse with DISP=OLD SHR.....	46
OCE Tape Installation Exits.....	46
Multiple recording format capability.....	47
IEZDEB (second DEB extension).....	47
Chapter 7. DFSMSdss considerations for the TS1140 tape drive.....	49
Chapter 8. DFSMSHsm considerations for the TS1140 tape drive.....	51
Modifying your SMS data classes.....	51
Modifying your dump classes.....	51
Input tape utilization.....	52
Requesting information for encrypted volumes and tapes.....	52
Displaying EFMT4 and EEFMT4 formatted volumes.....	53
Displaying encrypted tape volumes.....	53
Requesting information for dump volumes.....	53
Specifying esoteric tape unit names to DFSMSHsm.....	54
Tape Hardware Emulation.....	54
Specifying how much of a tape DFSMSHsm uses.....	54
Using tape device naming conventions.....	55
Output tape selection.....	56

Output tape utilization.....	56
Scratch Tapes.....	56
Partial Tapes.....	56
Input tape utilization.....	56
Reuse Capacity.....	57
Mixed Device Esoteric Units.....	57
Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives.....	57
Recovering overwritten encrypted tapes.....	57
DFSMSHsm tips.....	57
Chapter 9. DFSMSrmm modifications for TS1140 tape drive.....	59
DFSMSrmm TSO subcommands.....	59
ADDVOLUME.....	59
CHANGEVOLUME.....	61
SEARCHVOLUME.....	63
ADDDATASET.....	65
CHANGEDATASET.....	65
LISTDATASET.....	65
LISTVOLUME.....	66
DFSMSrmm REXX variables.....	67
DFSMSrmm structured field introducers.....	67
Compound SFI.....	69
DFSMSrmm macros.....	69
Chapter 10. EREP modifications for TS1140 tape drive.....	73
TAPE subsystem exception report.....	73
Emulated device summary report.....	73
TAPE Media Informational Messages (MIMs).....	73
Chapter 11. JES3 modifications for TS1140 tape drive.....	75
Chapter 12. OAM modifications for TS1140 tape drive.....	77
OAM library support.....	77
LCS external services changes.....	77
OAM installation exits changes.....	78
Operator command support changes.....	78
Mount processing change.....	79
OAM macro changes.....	79
Cartridge entry processing.....	80
OAM object tape support.....	81
Object tape migration considerations.....	81
Object tape volume management support.....	82
Chapter 13. MVS IOS support for TS1140 tape drive.....	83
Part 2. TS1130 tape drive.....	85
Chapter 14. Introduction for TS1130 tape drive.....	87
TS1130 tape drive.....	87
Tape encryption.....	87
Key management for TS1130.....	88
Key store for TS1130.....	89
Encryption Key Manager (EKM) for TS1130.....	89
Tivoli Key Lifecycle Manager (TKLM).....	89
In-band proxy for TS1130.....	89
Management interfaces for TS1130.....	89

Key label specifications for TS1130.....	89
Volume label support for TS1130.....	89
Volume recovery for TS1130.....	90
Re-keying support for TS1130.....	90
Recording format and media support for TS1130 tape drives.....	90
Performance scaling and segmentation for TS1130.....	92
z/OS software support for the TS1130 tape drive.....	92
Using TS1130 tape drives in an IBM tape library environment.....	94
Using TS1130 tape drives in a stand-alone environment.....	94
Resolving recording technology conflicts for TS1130.....	94
Implementation considerations for using TS1130 tape drives.....	94
 Chapter 15. Migration to the software support for TS1130 tape drives.....	97
Understanding coexistence considerations for TS1130.....	97
Preparing to install the software.....	100
Installing the appropriate PTFs.....	101
Planning for DFSMS software support for the TS1130 tape drive.....	101
Implementing the DFSMS software support for the TS1130 tape drive.....	108
 Chapter 16. Access method services (AMS) modifications.....	113
Enterprise format 3 (EFMT3) and enterprise encrypted format 3 (EEFMT3).....	113
EFMT3 and EEFMT3 support for ALTER VOLUMEENTRY.....	113
EFMT3 and EEFMT3 subparameter for ALTER VOLUMEENTRY.....	113
EFMT3 and EEFMT3 support for CREATE VOLUMEENTRY.....	114
EFMT3 and EEFMT3 subparameters for CREATE VOLUMEENTRY.....	114
EFMT3 and EEFMT3 Support for DCOLLECT.....	114
EFMT3 and EEFMT3 subparameter for DCOLLECT.....	114
EFMT3 and EEFMT3 support for LISTCAT.....	114
EFMT3 and EEFMT3 subparameters in List tape volume entries sample output.....	115
 Chapter 17. Tape drive and tape volume allocation modifications for 3592 Model E06.....	117
Device support modifications.....	117
IOS000I Message with Encryption Failure.....	119
SMS modifications.....	121
In Data Class.....	121
Overriding Attributes Defined in the Data Class.....	121
MVS device allocation modifications.....	121
JCL DD statement parameters and equivalent text units for TS1130.....	123
DSNAME Allocation Text Units for TS1130.....	123
Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1130.....	123
Volume Interchange Specification - Key = '006F'.....	123
 Chapter 18. ISMF modifications for TS1130 tape drive.....	125
Data class define and alter panels.....	125
Mountable tape volume list panel.....	125
 Chapter 19. OCE modifications for TS1130 tape drive.....	127
Overview.....	127
SMS Managed Tape.....	127
Recording Technology Conflict.....	127
Multiple Recording Format Capability.....	127
Cartridge Reuse with DISP=OLD SHR.....	128
OCE Tape Installation Exits.....	128
Multiple Recording Format Capability.....	128
IEZDEB (second DEB extension).....	128
 Chapter 20. DFSMSdss considerations for the TS1130 tape drive.....	129
DFSMSdss handling of hardware encryption.....	129

Updates to the DFSMSdss Application Programming Interface.....	129
Chapter 21. DFSMSShsm considerations for the TS1130 tape drive.....	131
Modifying your SMS data classes.....	131
Modifying your dump classes.....	131
Input tape utilization.....	132
Requesting information for encrypted volumes and tapes.....	132
Displaying EFMT3 and EEFMT3 formatted volumes.....	133
Displaying encrypted tape volumes.....	133
Requesting information for dump volumes.....	133
Specifying esoteric tape unit names to DFSMSShsm.....	134
Tape Hardware Emulation.....	134
Specifying how much of a tape DFSMSShsm uses.....	134
Using tape device naming conventions.....	135
Output tape selection.....	135
Output tape utilization.....	135
Scratch Tapes.....	136
Partial Tapes.....	136
Input tape utilization.....	136
Reuse Capacity.....	136
Mixed Device Esoteric Units.....	136
Conversion of tapes from D/T3490 to D/T3590.....	136
Allowing DFSMSShsm to use the 3590-1 generic unit when it contains mixed track technology drives.....	137
Recovering overwritten encrypted tapes.....	137
DFSMSShsm tips.....	137
Chapter 22. DFSMSRmm modifications for TS1130 tape drive.....	139
EDGINERS ERASE function.....	139
EXEC Parameters for EDGINERS.....	139
SYSIN Commands for EDGINERS.....	141
DFSMSRmm TSO subcommands.....	143
ADDVOLUME.....	143
CHANGEVOLUME.....	145
SEARCHVOLUME.....	146
ADDDATASET.....	146
CHANGEDATASET.....	147
LISTDATASET.....	147
LISTVOLUME.....	148
DFSMSRmm REXX variables.....	149
DFSMSRmm structured field introducers.....	149
Compound SFI.....	150
DFSMSRmm macros.....	151
Creating Reports.....	152
Chapter 23. EREP modifications for 3592 Model E06.....	153
TAPE subsystem exception report.....	153
Emulated device summary report.....	153
TAPE Media Informational Messages (MIMs).....	153
Chapter 24. JES3 modifications for TS1130 tape drive.....	155
Chapter 25. OAM modifications for TS1130 tape drive.....	157
OAM library support.....	157
LCS external services changes.....	157
OAM installation exits changes.....	158
Operator command support changes.....	158
Mount processing change.....	158

OAM macro changes.....	159
Cartridge entry processing.....	159
OAM object tape support.....	160
KB tracking.....	160
Sample Jobs.....	161
Object tape migration considerations.....	162
Object tape volume management support.....	163
Chapter 26. MVS IOS support for TS1130 tape drive.....	165
Part 3. Encryption-capable TS1120 tape drive.....	167
Chapter 27. Introduction for encryption-capable TS1120 tape drive.....	169
Encryption-capable TS1120 tape drive.....	169
Tape encryption for TS1120.....	169
Key management for TS1120.....	170
Key store for TS1120.....	171
Encryption Key Manager (EKM) for TS1120.....	171
In-band proxy for TS1120.....	172
Management interfaces for TS1120.....	172
Key label specifications for TS1120	173
Volume label support for TS1120.....	174
Volume recovery for TS1120.....	174
Re-keying support for TS1120.....	174
Media support for encryption-capable TS1120 tape drives.....	175
Performance scaling and segmentation for TS1120.....	177
z/OS software support for the encryption-capable TS1120 tape drive.....	177
Using encryption-capable TS1120 tape drives in an IBM tape library environment.....	180
Using encryption-capable TS1120 tape drives in a stand-alone environment.....	181
Resolving recording technology conflicts for TS1120.....	181
Implementation considerations for using encryption-capable TS1120 tape drives.....	181
Chapter 28. Migration to the software support for encryption-capable TS1120 tape drives.....	185
Understanding coexistence considerations for encryption-capable TS1120.....	185
Preparing to install the software.....	190
Installing the appropriate PTFs.....	190
Planning for DFSMS software support for the encryption-capable TS1120 tape drive.....	190
Implementing the DFSMS software support for the encryption-capable TS1120 tape drive.....	197
Chapter 29. Access method services (AMS) modifications.....	203
Enterprise Encrypted Format 2 (EEFMT2).....	203
EEFMT2 Support for ALTER VOLUMEENTRY.....	203
EEFMT2 subparameter for ALTER VOLUMEENTRY.....	203
EEFMT2 Support for CREATE VOLUMEENTRY.....	203
EEFMT2 subparameter for CREATE VOLUMEENTRY.....	204
EEFMT2 Support for DCOLLECT.....	204
EEFMT2 subparameter for DCOLLECT.....	204
EEFMT2 Support for LISTCAT.....	204
EEFMT2 subparameter in List tape volume entries sample output.....	205
Chapter 30. Tape drive and tape volume allocation modifications for encryption-capable TS1120 tape drive.....	207
Device support modifications.....	207
IOS000I Message with Encryption Failure.....	210
DD statement changes.....	211
Parameter field.....	212
Overrides.....	212

SMS modifications.....	212
In Data Class.....	213
Overriding Attributes Defined in the Data Class.....	213
MVS device allocation modifications.....	213
JCL DD statement parameters and equivalent text units for TS1120.....	214
DSNAME Allocation Text Units for TS1120.....	215
Key Label 1 Specification - Key = '8023'.....	215
Key Label 2 Specification - Key = '8024'.....	215
Key Encode 1 Specification - Key = '8025'.....	215
Key Encode 2 Specification - Key = '8026'.....	216
Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1120.....	216
Volume Interchange Specification - Key = '006F'.....	216
MVS Data Areas.....	216
 Chapter 31. ISMF modifications for encryption-capable TS1120 tape drive.....	219
Data class define and alter panels for TS1120.....	219
Mountable tape volume list panel.....	219
 Chapter 32. OCE modifications for encryption-capable TS1120 tape drive.....	221
Overview.....	221
SMS Managed Tape.....	221
Recording Technology Conflict.....	221
Multiple Recording Format Capability.....	221
Encryption and key labels.....	222
Media Support.....	223
OCE tape installation exits.....	223
OCE Messages.....	224
OCE Encryption Abends.....	224
 Chapter 33. DFSMSHsm considerations for the encryption-capable TS1120 tape drive.....	225
Modifying your SMS data classes.....	225
Modifying your dump classes.....	225
Input tape utilization.....	226
Requesting information for encrypted volumes and tapes.....	226
Displaying EEFM2 formatted volumes.....	227
Displaying encrypted tape volumes.....	227
Requesting information for dump volumes.....	227
Specifying esoteric tape unit names to DFSMSHsm.....	228
Tape Hardware Emulation.....	228
Specifying how much of a tape DFSMSHsm uses.....	228
Using tape device naming conventions.....	228
Output tape selection.....	229
Output to Scratch Tapes.....	229
Output to Partial Tapes.....	229
Output tape utilization.....	229
ACS Routines.....	229
Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives.....	230
Recovering overwritten encrypted tapes.....	230
DFSMSHsm tips.....	230
 Chapter 34. DFSMSdss considerations for the encryption-capable TS1120 tape drive.....	231
Planning to use hardware encryption for dump tapes.....	231
Reviewing changes to SMS data classes.....	231
Reviewing changes to DFSMSHsm dump classes.....	231
DFSMSdss handling of dump encryption requests.....	232
If double encryption is required.....	232
DFSMSdss Stand Alone Restore program.....	233

Updates to the Dump Volume Output Notification Exit (Exit 26).....	233
Chapter 35. DFSMSrmm modifications for encryption-capable TS1120 tape drive.....	235
ADDVOLUME.....	235
CHANGEVOLUME.....	237
SEARCHVOLUME.....	239
LISTVOLUME.....	240
DFSMSrmm REXX variables.....	241
DFSMSrmm structured field introducers.....	242
DFSMSrmm macros.....	242
Chapter 36. EREP modifications for encryption-capable TS1120 tape drive.....	245
Chapter 37. JES3 modifications for encryption-capable TS1120 tape drive.....	247
Chapter 38. OAM modifications for encryption-capable TS1120 tape drive.....	249
OAM library support.....	249
LCS external services changes.....	249
OAM installation exits changes.....	250
Operator command support changes.....	250
Mount processing change.....	250
OAM macro changes.....	250
Cartridge entry processing.....	251
OAM object tape support.....	252
Object tape migration considerations.....	252
Object tape volume management support.....	252
Chapter 39. MVS IOS support for TS1120 tape drive.....	253
Changes to MVS parmlib members.....	253
Changes to MVS system commands.....	253
Other administration tasks in support of MVS in-band tape encryption	253
IOS Proxy Retry Logic.....	254
Part 4. 3592 Model E05 (also referred to as the TS1120).....	255
Chapter 40. Introduction for 3592 Model E05.....	257
IBM System Storage Tape System 3592.....	257
3592 Model E05 tape drive.....	257
Write Once, Read Many (WORM).....	258
Performance scaling and segmentation for 3592.....	259
z/OS software support for the 3592 Model E05 tape drive.....	260
Using 3592 Model E05 tape drives in an IBM tape library environment.....	262
Using 3592 Model E05 tape drives in a stand-alone environment.....	263
Resolving recording technology conflicts for 3592.....	263
Implementation considerations for Using 3592 Model E05 tape drives.....	263
Chapter 41. Migration to the software support for 3592 Model E05 tape drives.....	265
Understanding coexistence considerations for 3592 Model E05.....	265
Preparing to install the software.....	268
Installing the appropriate PTFs.....	268
Planning for DFSMS software support for the 3592 Model E05.....	268
Implementing the DFSMS software support for the 3592 Model E05.....	274
Chapter 42. Access method services (AMS) modifications for 3592 Model E05.....	279
ALTER LIBRARYENTRY.....	279
ALTER LIBRARYENTRY command syntax.....	279
ALTER LIBRARYENTRY parameters.....	280

Altering a tape library entry example.....	281
ALTER VOLUMEENTRY.....	281
ALTER VOLUMEENTRY command syntax.....	282
ALTER VOLUMEENTRY parameters.....	283
Altering a volume entry example.....	284
CREATE LIBRARYENTRY.....	284
CREATE LIBRARYENTRY command syntax.....	284
CREATE LIBRARYENTRY parameters.....	285
Creating a tape library entry example.....	286
CREATE VOLUMEENTRY.....	287
CREATE VOLUMEENTRY command syntax.....	287
CREATE VOLUMEENTRY parameters.....	288
Creating a VOLUME entry example.....	290
DCOLLECT.....	290
DCOLLECT command syntax.....	290
DCOLLECT parameters.....	291
DCOLLECT example.....	292
LISTCAT.....	292
LISTCAT command syntax.....	292
LISTCAT parameters.....	293
List tape volume entries sample output.....	293
Chapter 43. Tape drive and tape volume allocation modifications for 3592 Model E05.....	295
Device support modifications.....	295
SMS modifications.....	298
MVS device allocation modifications.....	298
Chapter 44. ISMF modifications for 3592 Model E05.....	301
Data class define and alter panels for 3592 Model E05.....	301
Mountable tape volume list panel.....	301
Tape library management panels.....	301
Chapter 45. OCE modifications for 3592 Model E05.....	303
Overview.....	303
SMS Managed Tape.....	303
Recording Technology Conflict.....	303
Dual Recording Capability.....	303
Segmentation Format.....	304
Media Support.....	304
OCE Tape Installation Exits.....	304
Chapter 46. DFSMSHsm modifications for 3592 Model E05.....	305
Planning and installation.....	305
Input tape utilization.....	305
Output tape selection.....	305
Output tape utilization.....	306
Scratch tapes.....	306
Partial tapes.....	306
Reuse capacity table.....	306
Displaying EFMT2 formatted volumes.....	306
WORM tape cartridge rejection at OPEN time.....	307
Aggregate backup and recovery (ABARs) with WORM tape cartridge.....	307
DFSMSHsm tips.....	307
Chapter 47. DFSMSrmm modifications for 3592 Model E05.....	309
ADDVOLUME.....	309
CHANGEVOLUME.....	311
SEARCHVOLUME.....	312

DFSMSrmm REXX variables.....	312
DFSMSrmm structured field introducers.....	313
DFSMSrmm macros.....	313
Volume Not in Library Support.....	314
Chapter 48. EREP modifications for 3592 Model E05.....	315
Tape subsystem exception report.....	315
Event history report.....	315
System error summary report.....	315
Emulated device summary report.....	316
Chapter 49. JES3 modifications for 3592 Model E05.....	317
Chapter 50. OAM modifications for 3592 Model E05.....	319
OAM library support.....	319
LCS external services changes.....	319
OAM installation exits changes.....	319
Operator command support changes.....	320
Scratch mount considerations.....	320
Scratch threshold processing change.....	320
OAM macro changes.....	321
Volume not in library installation exit enhancement.....	322
Cartridge entry processing.....	323
Tape device selection information (TDSI) Migration Considerations.....	323
OAM object tape support.....	323
Object tape migration considerations.....	325
Object tape volume management support.....	325
Part 5. 3592 Model J.....	327
Chapter 51. Introduction for 3592 Model J.....	329
IBM System Storage Tape System 3592.....	329
3592 Model J tape drive.....	329
Write Once, Read Many (WORM).....	330
z/OS software support for the 3592 Model J tape drive.....	331
Using 3592 Model J tape drives in an IBM tape library environment.....	332
Using 3592 Model J tape drives in a stand-alone environment.....	333
Implementation considerations for Using 3592 Model J tape drives.....	333
Chapter 52. Migration to the software support for 3592 Model J tape drives.....	335
Understanding coexistence considerations for 3592 Model J1A.....	335
Preparing to install the software.....	338
Installing the appropriate PTFs.....	338
Planning for DFSMS software support for the 3592 Model J.....	338
Implementing the DFSMS software support for the 3592 Model J.....	345
Chapter 53. Access method services (AMS) modifications for 3592 Model J.....	349
ALTER LIBRARYENTRY.....	349
ALTER LIBRARYENTRY command syntax.....	349
ALTER LIBRARYENTRY parameters.....	350
Altering a tape library entry example.....	351
ALTER VOLUMEENTRY.....	351
ALTER VOLUMEENTRY command syntax.....	351
ALTER VOLUMEENTRY parameters.....	352
Altering a volume entry example.....	353
CREATE LIBRARYENTRY.....	354
CREATE LIBRARYENTRY command syntax.....	354

CREATE LIBRARYENTRY parameters.....	354
Creating a tape library entry example.....	356
CREATE VOLUMEENTRY.....	356
CREATE VOLUMEENTRY command syntax.....	356
CREATE VOLUMEENTRY parameters.....	357
Creating a VOLUME entry example.....	358
DCOLLECT.....	359
DCOLLECT command syntax.....	359
DCOLLECT parameters.....	359
DCOLLECT example.....	360
LISTCAT.....	360
LISTCAT command syntax.....	361
LISTCAT parameters.....	361
List tape volume entries sample output.....	361
Chapter 54. Tape drive and tape volume allocation modifications for 3592 Model J.....	363
Device support modifications.....	363
SMS modifications.....	366
MVS device allocation modifications.....	366
Chapter 55. ISMF modifications for 3592 Model J.....	369
Data class define and alter panels for 3592 Model J.....	369
Mountable tape volume list panel.....	369
Tape library management panels.....	369
Chapter 56. OCE modifications for 3592 Model J.....	371
SMS-managed tape configuration database (TCDB) volume record.....	371
SMS-managed tape (TVR) volume record.....	371
DEVSUPxx parmlib member options.....	371
Open/EOV Volume Security and Verification Exit.....	372
IFGTEP macro.....	372
OCE Tape Installation Exits.....	373
Chapter 57. DFSMSShsm modifications for 3592 Model J.....	375
Output tape selection.....	375
Output tape utilization.....	375
Reuse capacity table.....	375
WORM tape cartridge rejection at OPEN time.....	376
Aggregate backup and recovery (ABARs) with WORM tape cartridge.....	376
DFSMSShsm tips.....	376
Chapter 58. DFSMSRmm modifications for 3592 Model J.....	379
ADDVOLUME.....	379
CHANGEVOLUME.....	381
SEARCHVOLUME.....	381
DFSMSRmm REXX variables.....	382
DFSMSRmm structured field introducers.....	383
DFSMSRmm macros.....	383
DFSMSRmm return codes and reason codes.....	383
Parmlib Member EDGRMMxx VLPOOL MASTEROVERWRITE command.....	384
SMSACS Input Variables for RMMVRS and RMMPOOL ACS Calls.....	385
Using DFSMSRmm to manage WORM tapes.....	385
Defining WORM tapes to DFSMSRmm.....	385
Separating WORM tapes in separate scratch pools.....	385
Changing the status of WORM tapes.....	385
Identifying WORM tapes ready for destruction.....	386
Chapter 59. EREP modifications for 3592 Model J.....	387

Tape subsystem exception report.....	387
Event history report.....	387
System error summary report.....	387
Emulated device summary report.....	388
Chapter 60. JES3 modifications for 3592 Model J.....	389
Chapter 61. OAM modifications for 3592 Model J.....	391
OAM library support.....	391
LCS external services changes.....	391
OAM installation exits changes.....	391
Operator command support changes.....	391
OAM macro changes.....	393
Scratch mount considerations.....	395
3592 drive level and allocation considerations.....	395
OAM object tape support.....	395
Object tape data set low-level qualifier enhancement.....	396
Object tape volume management support.....	397
MOVEVOL command.....	397
Appendix A. Accessibility.....	399
Notices.....	401
Terms and conditions for product documentation.....	402
IBM Online Privacy Statement.....	403
Policy for unsupported hardware.....	403
Minimum supported hardware.....	403
Programming interface information.....	404
Trademarks.....	404
Glossary.....	405
Index.....	413

Figures

1. DS QT,960 output.....	35
2. DS QT,960,MED output.....	36
3. TAPE subsystem exception report.....	73
4. Emulated device summary report.....	73
5. TAPE Media Informational Messages (MIMs).....	74
6. DS QT,960 output.....	117
7. DS QT,960,MED output.....	118
8. EDGINERS EXEC Parameters.....	140
9. EDGINERS SYSIN Commands.....	142
10. TAPE subsystem exception report.....	153
11. Emulated device summary report.....	153
12. TAPE Media Informational Messages (MIMs).....	154
13. DEVSERV QTAPE MED display content.....	208
14. DS QT,962,MED output.....	208
15. DS QT,940 output.....	208
16. DS QT,DA0 output.....	209
17. DS QT,B60,MED message.....	209
18. DS QT,DA0,MED message.....	209
19. LISTCAT output for 3592 Model E05.....	294
20. DEVSERV QTAPE MED display content.....	295
21. DS QT,962,MED output.....	296
22. DS QT,940 output.....	296
23. DS QT,DA0 output.....	296

24. DS QT,B60,MED message.....	297
25. DS QT,DA0,MED message.....	297
26. Contents of the shipped table: TAPEUNITS.....	314
27. Partial tape subsystem exception report.....	315
28. Partial event history report.....	315
29. Partial system error summary report.....	316
30. Partial emulated device summary report.....	316
31. LISTCAT output.....	362
32. DEVSERV QTAPE MED display content.....	363
33. DS QT,962,MED output.....	364
34. DS QT,940,MED output.....	364
35. DS QT,DA0,MED output.....	364
36. DS QT,B60,MED message.....	365
37. DS QT,DA0,MED message.....	365
38. Partial event history report.....	387
39. Partial event history report.....	387
40. Partial system error summary report.....	388
41. Partial emulated device summary report.....	388

Tables

1. Syntax conventions.....	xxiii
2. Components that provide software support for the TS1140 tape drive.....	9
3. Coexistence migration tasks for TS1140 tape drives.....	14
4. TS1140 tape drive planning considerations.....	18
5. Format swaps allowed for TS1140.....	36
6. Error codes for control unit failures.....	37
7. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types.....	39
8. IFGTEP fields for the installation exit parameter list	46
9. Tape device naming conventions.....	55
10. Changed TSO subcommand REXX variables.....	67
11. Changed structured field introducers.....	68
12. DFSMSrmm mapping macro changes.....	69
13. OAM mapping macro changes.....	79
14. Components that provide software support for the TS1130 tape drive.....	92
15. Coexistence migration tasks for TS1130 tape drives.....	98
16. TS1130 tape drive planning considerations.....	101
17. Format swaps allowed for TS1130.....	119
18. Error codes for control unit failures.....	120
19. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types.....	122
20. IFGTEP fields for the installation exit main parameter list	128
21. ADREID0 Mapping.....	129
22. Tape device naming conventions.....	135
23. Changed TSO subcommand REXX variables.....	149

24. Changed structured field introducers.....	150
25. DFSMSrmm mapping macro changes.....	151
26. OAM mapping macro changes.....	159
27. Components that provide software support for the encryption-capable TS1120 tape drive.....	177
28. Coexistence migration tasks for encryption-capable TS1120 tape drives.....	186
29. Encryption-capable TS1120 tape drive planning considerations.....	191
30. Error codes for control unit failures.....	210
31. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types.....	213
32. JCL DD Statement Parameters and Equivalent Text Units.....	214
33. Verb code 01 (dsname allocation) – text unit keys, mnemonics, and functions.....	215
34. IFGTEP fields for the installation exit main parameter list	223
35. IFGTEP fields for the installation exit file end on volume parameter list.....	223
36. Tape device naming conventions.....	229
37. DFSMSdss handling of dump encryption requests.....	232
38. ADREID0 mapping.....	233
39. Changed TSO subcommand REXX variables.....	241
40. Changed structured field introducers.....	242
41. DFSMSrmm mapping macro changes.....	242
42. OAM mapping macro changes.....	251
43. Components that provide software support for the 3592 Model E05 tape drive.....	260
44. Coexistence migration tasks for 3592 Model E05.....	266
45. 3592 Model E05 planning considerations.....	268
46. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types.....	299
47. IFGTEP fields for the installation exit main parameter list	304
48. DFSMSrmm media names.....	310

49. Changed TSO subcommand REXX variables.....	312
50. Changed structured field introducers.....	313
51. DFSMSrmm mapping macro changes.....	313
52. OAM mapping macro changes.....	321
53. Library table column descriptions.....	324
54. Components that provide software support for the 3592 Model J tape drive.....	331
55. Coexistence migration tasks.....	335
56. 3592 Model J planning considerations.....	339
57. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types.....	366
58. IFGTEP fields for the installation exit main parameter list.....	372
59. IFGTEP fields for the installation exit main parameter list.....	373
60. DFSMSrmm media names.....	380
61. Changed TSO subcommand REXX variables.....	382
62. Changed structured field introducers.....	383
63. DFSMSrmm mapping macro changes.....	383
64. New return codes and reason codes.....	384
65. OAM mapping macro changes.....	393
66. Library table column descriptions.....	396

About this document

This document describes z/OS Version 2 Data Facility Storage Management Subsystem (DFSMS) software support for the 3592 family of tape drives. It is designed to help system operators, system programmers, and application programmers understand, install, and use the IBM System Storage 3592 software support. The IBM 3592 family includes the TS1140 (3592 Model E07), TS1130 (3592 Model E06), the encryption-capable TS1120 (the enhanced 3592 Model E05), the original 3592 Model E05, and the 3592 Model J1A tape drives. This document:

- Introduces the functional features of the 3592 family of drives (3592 Model E07 (TS1140), 3592 Model E06 (TS1130), 3592 Model E05 (TS1120), and the 3592 Model J1A)).
- Describes the modifications made to z/OS DFSMS functional components and related licensed programs in support of the drive.
- Describes migration tasks and coexistence tasks for implementing the tape drives.

For information about accessibility features of z/OS, for users who have a physical disability, see [Appendix A, “Accessibility,”](#) on page 399.

Required product knowledge

To use this document effectively, you should be familiar with the following software products:

- Access method services (AMS)
- Data facility sort (DFSORT)
- Device support/asynchronous operations manager (AOM)
- DFSMS data set services (DFSMSdss)
- DFSMS hierarchical storage manager (DFSMSHsm)
- DFSMS removable media manager (DFSMSRmm)
- One of:
 - IBM Security Key Lifecycle Manager
 - Tivoli Key Lifecycle Manager (TKLM)
 - Encryption Key Manager component for the Java™ platform (EKM) (for TS1120 and TS1130 only)
- Environmental recording, editing, and printing (EREP)
- Input/output supervisor (IOS)
- Interactive storage management facility (ISMF)
- MVS allocation
- MVS job entry subsystem 3 (JES3)
- Open/close/end-of-volume (OCE)
- Object access method (OAM)
- Storage management subsystem (SMS)

Referenced information centers

The following information centers are referenced in this document:

- IBM System Storage 3592-C07 Controller
Customer Information Center (http://pic.dhe.ibm.com/infocenter/etc/cust/index.jsp?topic=%2Fcom.ibm.storage.etc.doc%2Fwelcome%2Fetc_ic_welcome.html)

- IBM 3592 Model E07 Tape Drive Information Center (<http://pic.dhe.ibm.com/infocenter/jagdrive/cust/index.jsp>)

z/OS information

This information explains how z/OS references information in other documents and on the web.

When possible, this information uses cross-document links that go directly to the topic in reference using shortened versions of the document title. For complete titles and order numbers of the documents for all products that are part of z/OS, see *z/OS Information Roadmap*.

Notational conventions


This section explains the notational conventions used in this document.

How to read syntax diagrams

There is one basic rule for reading the syntax diagrams: Follow only one line at a time from the beginning to the end and code everything you encounter on that line.

The following rules apply when reading syntax diagrams:


- Read the syntax diagrams from left to right and from top to bottom.
- Each syntax diagram begins with a double arrowhead (➤➤) and ends with opposing arrows (➤➤).
- An arrow (➤➤) at the end of a line indicates that the syntax continues on the next line. A continuation line begins with an arrow (➤➤).
- Commands and keywords are shown in uppercase letters.
- Some commands and keywords have alternative abbreviations; these appear as part of the stack for that command or keyword. For example, the alternative abbreviation for DISPLAY is D.



- Where you can choose from two or more keywords, the choices are stacked one above the other. If one choice within the stack lies on the main path, a keyword is required, and you must choose one. In the following example you must choose either DETAIL or STATUS.




- If a stack is placed below the main path, a keyword is optional, and you can choose one or none. In the following example, PURGE, KEEP, and LOCATION are optional keywords. You can choose any one of the three.

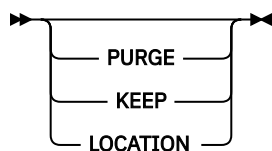

- Where you can choose from two or more keywords and one of the keywords appears above the main path, that keyword is the default. You may choose one or the other of the keywords, but if none is entered, the default keyword is automatically selected. In the following example you may choose either DETAIL or STATUS. If neither is chosen, STATUS is automatically selected.



- Words or names in italicized, lowercase letters represent information that you supply. The values of these variables may change depending on the items to which they refer. For example, *volser* refers to the serial number of a volume, while *storgrp_name* refers to the name of a storage group.
- You must provide all items enclosed in parentheses (). You must include the parentheses. In the following example, you must supply the volume serial number (*volser*) and it must be enclosed in parentheses.




You would code this as follows:

```
D SMS,VOL(volser)
```

The variable *volser* is the serial number of the volume you wish to display.

- The repeat symbol shown below indicates that you can specify keywords and variables more than once. The repeat symbol appears above the keywords and variables that can be repeated. For example, when a comma appears in the repeat symbol, you must separate repeated keywords or variables with a comma.

In the following example, you may specify the *library_name* and one or more system identification numbers (*system_ID*) that are separated by commas. You must enclose the name of the library and all of the system IDs in parentheses.

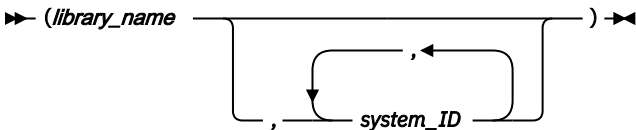

You would code this as follows:

```
(library_name, system_ID, system_ID, system_ID)
```

The variable *library_name* is the name of the library you are working with, and *system_ID* names three different instances of system identification numbers.

How to read syntax conventions

This section describes how to read syntax conventions. It defines syntax notations and provides syntax examples that contain these items.

Table 1. Syntax conventions			
Notation	Meaning	Book syntax example	Sample entry
Apostrophes	Apostrophes indicate a parameter string and must be entered as shown.	SEND 'message',NOW	SEND 'listings ready',NOW
Comma	Commas must be entered as shown.	DISPLAY C,K	DISPLAY C,K

Table 1. Syntax conventions (continued)			
Notation	Meaning	Book syntax example	Sample entry
Ellipsis ...	Ellipsis indicates that the preceding item or group of items can be repeated one or more times. Do not enter the ellipsis.	VARY (devspec[,devspec]...),ONLINE	VARY (282,283,287),ONLINE
Parentheses and special characters	Parentheses and special characters must be entered as shown.	DUMP COMM=(text)	DUMP COMM=(PAYROLL)
Underline	Underline indicates a default option. If you select an underlined alternative, you do not have to specify it when you enter the command.	K T [, <u>REF</u>] [,UTME=nnn]	K T
Lowercase parameter	Lowercase indicates a variable term. Substitute your own value for the item.	MOUNT devnum	MOUNT A30 or mount a30
Uppercase parameter	Uppercase indicates the item must be entered using the characters shown. Enter the item in either upper or lowercase.	DISPLAY SMF	DISPLAY SMF or display smf
Single brackets	Single brackets represent single or group-related items that are optional. Enter one or none of these items.	DISPLAY DMN[=domainum]	DISPLAY DMN=5
Stacked brackets	Stacked brackets represent group-related items that are optional. Enter one or none of these items.	[TERMINAL] [NOTERMINAL]	NOTERMINAL
Single braces	Single braces represent group-related items that are alternatives. You must enter one of the items. You cannot enter more than one.	{COMCHECK COMK}	COMK

Table 1. Syntax conventions (continued)

Notation	Meaning	Book syntax example	Sample entry
Stacked braces	Stacked braces represent group related items that are alternatives. You must enter one of the items. You cannot enter more than one.	<pre>MN {DSNAME} {SPACE} {STATUS}</pre>	<pre>MN SPACE</pre>
Or-bar ()	An or-bar indicates a mutually-exclusive choice. When used with brackets, enter one or none of the items. When used with braces, you must enter one of the items.	<pre>ACTIVATE RECOVER=SOURCE</pre>	<pre>RECOVER=SOURCE</pre>
Stacked items with or-bars () and brackets	Stacked items with or-bars indicates a mutually-exclusive choice. Enter one or none of these items.	<pre>CD RESET [,SDUMP] ,SYSABEND ,SYSUDUMP ,SYSMDUMP ,ALL</pre>	<pre>CD RESET ,SYSUDUMP</pre>

How to provide feedback to IBM

We welcome any feedback that you have, including comments on the clarity, accuracy, or completeness of the information. For more information, see [How to send feedback to IBM](#).

Summary of changes

This information includes terminology, maintenance, and editorial changes. Technical changes or additions to the text and illustrations for the current edition are indicated by a vertical line to the left of the change.

Note: IBM z/OS policy for the integration of service information into the z/OS product documentation library is documented on the z/OS Internet Library under [IBM z/OS Product Documentation Update Policy](http://www.ibm.com/docs/en/zos/latest?topic=zos-product-documentation-update-policy) (www.ibm.com/docs/en/zos/latest?topic=zos-product-documentation-update-policy).

Summary of changes for z/OS 3.2

The following content is new, changed, or no longer included in z/OS 3.2.

New

The following content is new.

September 2025 release

- None.

Changed

The following content is changed.

September 2025 release

- None.

Deleted

The following content is deleted.

September 2025 release

- None.

Summary of changes for z/OS 3.1

This information contains no technical changes for this release.

Part 1. TS1140 tape drive

Chapter 1. Introduction for TS1140 tape drive

Like the TS1120 and TS1130 tape drives, the TS1140 provides a tape encryption capability. Data encryption is an important tool for protecting against the possible misuse of confidential information that could occur should tapes be lost or stolen. Unless the possessor of the tape has the required key, any encrypted data on the tape will remain confidential and will be unreadable.

This topic describes the IBM System Storage TS1140 (3592 Model E07, 3592-4E) tape drives and the z/OS software support needed to use them.

TS1140 tape drive

Unlike the TS1120 (3592 Model E05), which can be either encryption capable (3592-2E) or not (3592-2), the TS1140 (3592 Model E07) is always capable of encryption when used by z/OS and always reports as 3592-4E. References in this document to "encryption-capable" means that the encryption feature in the drive had been enabled and the drive is capable of encrypting. In other documents, this may be referred to as "encryption-enabled".

The TS1140 tape drive offers these features:

- Creates tapes for archive files.
- Optionally creates encrypted tapes.
- Backs up and restores systems in case of system or disk storage problems.
- Stores high-speed, high-capacity sequential application data sets.
- Stores temporary data sets.
- Satisfies off-site data storage for disaster recovery.
- Provides data interchange (MEDIA9 and MEDIA10 cartridges) with other systems that use 3592 Model E07 (TS1140) and 3592 Model E06 (TS1130) subsystems. The 3592 Model E07 can also read MEDIA9 and MEDIA10 cartridges written in the EFMT2 and EEFMT2 formats, as well as MEDIA5, MEDIA6, MEDIA7, and MEDIA8 cartridges written in EFMT1, EFMT2, EEFMT2, EFMT3, and EEFMT3 formats.
- Supports WORM (write once, read many) tape data cartridges whose data cannot be altered.

The advantages of the TS1140 tape drive over other encryption methods, such as host-based software encryption, are that it:

- Permits full performance of the tape device when encryption is enabled.
- Permits encryption to be performed after compression.
- Avoids performance penalties in the host.

Tape encryption

The TS1140 tape drive supports encryption of media tape cartridges. The existing z/OS DFSMS support for tape subsystem encryption (introduced with the TS1120) allows you to specify by data class that data is to be encrypted. In addition to this, the key label-related information that is used to encrypt the data key (of a tape cartridge) can be specified through the DD statement (JCL, dynamic allocation, and TSO ALLOCATE), data class, or encryption key manager defaults.

Note: Encryption key managers are applications that work with IBM encryption-enabled tape drives in generating, protecting, storing and maintaining encryption keys that are used to encrypt information being written to and decrypt information being read from tape media. IBM offers two encryption key managers that support the TS1140:

- Tivoli Key Lifecycle Manager (TKLM). The TS1140 requires, at a minimum, V2.0 of TKLM. More information on this offering can be found on the TKLM website: <http://www.ibm.com/software/tivoli/products/key-lifecycle-mgr/>

- IBM Security Key Lifecycle Manager for z/OS V1.1. More information about this offering can be found at http://publib.boulder.ibm.com/infocenter/tivihelp/v2r1/index.jsp?topic=/com.ibm.tivoli.isklm.doc_11/ic-homepage.html.

A third IBM offering, the IBM Encryption Key Manager for Java platform (EKM) does not support the TS1140 (it supports only the TS1120 and the TS1130). References in this book to an "encryption key manager" for use with a TS1140 apply generically to either TKLM or IBM Security Key Lifecycle Manager.

The communication path to the encryption key manager is across TCP/IP, with the choice to go either in-band or out-of-band for the key management flow. With out-of-band key management, the communication path to the encryption key manager is handled by the control unit going directly to the encryption key manager. Then, for in-band key management, the communication path to the encryption key manager is handled across ESCON/FICON, with an IOS proxy interface then handling the key exchange (across TCP/IP) with the encryption key manager.

Unless directed otherwise, a TS1140 tape drive records in the new non-encryption enterprise format 4 (EFMT4). It can also record in the new encryption specific recording format (enterprise encrypted format 4 (EEFMT4)). The EFMT4 and EEFMT4 recording formats are supported on the 3592 media types MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13. The existing Performance Scaling and Performance Segmentation data class options can also be used with the EFMT4 and EEFMT4 recording formats on MEDIA 9 and MEDIA11. The capacities of tapes written in EFMT4 and EEFMT4 are the same.

A TS1140 tape drive can also read the existing EFMT1 recording format on media types MEDIA5 through MEDIA8 and the EFMT2, EFMT3, EEFMT2, and EEFMT3 recording formats on media types MEDIA5 through MEDIA10. A TS1140 tape drive can be explicitly directed to write from beginning of tape (BOT) in the EFMT3 or EEFMT3 recording format on media types MEDIA9 and MEDIA10.

When writing from the beginning of tape (BOT), an encryption-capable TS1140 tape drive will, by default, record in the non-encryption recording format (EFMT4). Unless explicitly requested through data class to record in the lower recording format (EFMT3 or EEFMT3) or the new encryption format (EEFMT4), the non-encryption format EFMT4 will be assumed and explicitly set during OPEN processing. When writing from the beginning of the tape (file sequence 1, DISP=OLD or DISP=SHR for volume reuse), since this processing does not go through the data class ACS routine, OPEN processing will determine whether encryption (EEFMT3 or EEFMT4) had previously been used and ensure that encryption is requested for this next usage of the tape. So, if the previous usage of the tape was encrypted, OPEN will explicitly set the new encryption format (EEFMT4) and will obtain and pass the volume's existing key management-related information to the drive (key label and encoding mechanism). In this case, a new data key is generated and used. However, the volume's existing key management-related information is used to encrypt the data key. This is similar to the way that the encryption formats EEFMT2 and EEFMT3 are handled by the TS1120 and TS1130 encryption support. This is also consistent with TS1120 and TS1130 drives, where, on reuse, if encryption was not used, the highest non-encryption recording format is specified.

For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the encryption key manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.

In the TS1140 tape drive environment (whether system-managed or not), when writing from the beginning of tape (file sequence 1, DISP=NEW), to request encryption format, EEFMT4 (or EEFMT3 for downward compatibility) is specified in the data class. OPEN processing passes key management-related information (such as the key labels) to the drive for subsequent communication with the encryption key manager.

To select encryption for a cartridge, do these steps:

1. Define a data class that requests encryption.

2. Modify or create ACS routines to associate the tape output functions using encryption with a data class that requests encryption.
3. Specify the appropriate key labels either through the DD statement (JCL, dynamic allocation, or TSO allocate), data class, or by using encryption key manager established defaults.

Key management for TS1140

Key Management consists of a number of elements including:

- A key store where the keys to encrypt and decrypt the data key are securely kept and readily available.
- An encryption key manager that communicates with the drive through the designated key management path (in-band or out-of-band).
- Ability of the tape drive to request and process (with the encryption key manager) key management information.
- A management interface for configuring and managing the encryption key manager.

Key store for TS1140

Other than the original Encryption Key Manager (EKM) not supporting the TS1140, key store for TS1140 is unchanged from TS1120. See [“Key store for TS1120” on page 171](#) for more information.

IBM Security Key Lifecycle Manager

The IBM Security Key Lifecycle Manager can be used with the TS1140 (3592 Model E07), as well as the TS1130 (3592 Model E06) and the TS1120 (3592 Model E05) tape encrypting drives. Like the original Encryption Key Manager (EKM), the IBM Security Key Lifecycle Manager serves data keys to the tape drive. The IBM Security Key Lifecycle Manager is closer in functionality to the original Encryption Key Manager (EKM) and does not have the advanced key management functionality and GUI provided by the TKLM. Customers using the Encryption Key Manager (EKM) or the Tivoli Key Lifecycle Manager (TKLM) can migrate to the IBM Security Key Lifecycle Manager based on their key management needs. For additional information, see the IBM Security Key Lifecycle Manager Information Center.

Tivoli Key Lifecycle Manager (TKLM)

The Tivoli® Key Lifecycle Manager (TKLM) can be used with the new TS1140 (3592 Model E07), as well as the existing TS1130 (3592 Model E06) and the TS1120 (3592 Model E05) tape encrypting drives. Like the Encryption Key Manager (EKM), the TKLM serves data keys to the tape drive. TKLM focuses on ease of use and provides a graphical interface (GUI) to help with the installation and configuration of the key manager. It also allows for the creation and management of the key encrypting keys (certificates). Customers using the Encryption Key Manager (EKM) can migrate to TKLM. For additional information on TKLM, see the IBM Tivoli Key Lifecycle Manager Information Center.

Encryption Key Manager (EKM)

Key manager support for TS1140 is unchanged from TS1120, except:

- The original Encryption Key Manager (EKM) does not support the TS1140.
- EEFMT3 or EEFMT4 may be specified for the recording format.

See [“Encryption Key Manager \(EKM\) for TS1120” on page 171](#) for more information.

The original Encryption Key Manager (EKM) can be used with the TS1120 and the TS1130 Tape Drives. The TS1140, however, requires the Tivoli Key Lifecycle Manager (TKLM) Version 2 or the IBM Security Key Lifecycle Manager. Host software including the IOS proxy has no direct knowledge of which key manager is being used. Specification of the key manager is handled using the EKM keyword on existing IOS commands regardless of which key manager is being used.

In-band proxy for TS1140

In-band proxy for TS1140 is unchanged from TS1120. See [“In-band proxy for TS1120” on page 172](#) for more information.

Note: For IPv6 support (with the IOS proxy) refer to APAR OA22271. This support was added after the initial tape encryption support for the TS1120.

Management interfaces for TS1140

Management interfaces for TS1140 is unchanged from TS1120. See [“Management interfaces for TS1120” on page 172](#) for more information.

Key label specifications for TS1140

Key label specifications for TS1140 is unchanged from TS1120, except that EEFMT4 (EE4) or EEFMT3 (EE3) may be specified for the recording format. See [“Key label specifications for TS1120 ” on page 173](#) for more information.

Volume label support for TS1140

Volume label support for TS1140 is unchanged from TS1120. See [“Volume label support for TS1120” on page 174](#) for more information.

Volume recovery for TS1140

Volume recovery support for TS1140 is unchanged from TS1120. See [“Volume recovery for TS1120” on page 174](#) for more information.

Re-keying support for TS1140

Re-keying support (introduced after the initial tape encryption support for the TS1120 (APAR OA20076), also applies to the TS1140. See [“Re-keying support for TS1120” on page 174](#) for more information on what it means to re-key a tape cartridge. Re-keying is initiated through the IEHINITT utility with the REKEY option.

Recording format and media support for TS1140 tape drives

The TS1140 tape drive reads and writes in the new EFMT4 (enterprise format 4) and EEFMT4 (enterprise encrypted format 4) recording formats (MEDIA9 through MEDIA13), as well as the existing EFMT3 (enterprise format 3) and EEFMT3 (enterprise encrypted format 3) recording formats (MEDIA9 and MEDIA10). The TS1140 tape drive can also read (but not write) the older EFMT2 and EEFMT2 recording formats (MEDIA9 and MEDIA10), and media types MEDIA5 through MEDIA8 (EFMT1, EFMT2, EEFMT2, EEFMT3, and EEFMT3). EEFMT4 records data in an encrypted format. EEFMT4 provides the same capacity as EFMT4.

Ensure that any partially filled MEDIA9 or MEDIA10 tapes written in EFMT2 or EEFMT2, and MEDIA5 through MEDIA8 tapes written in EFMT1, EFMT2, EEFMT2, EFMT3, or EEFMT3 are marked-full (as appropriate), because they cannot be extended on the TS1140.

The IBM System Storage TS1140 tape drive uses the following IBM System Storage family of tape media.

- MEDIA9 - The IBM Enterprise Extended Tape Cartridge (MEDIA9) physical media. MEDIA9 requires the EFMT4, EFMT4, EFMT3, or EEFMT3 recording format, and provides an uncompressed capacity of 1600 GB with EFMT4 or EEFMT4 (1000 GB with EFMT3 or EEFMT3). Provides a compressed capacity of 4800 GB with EFMT4 or EEFMT4 (3000 GB with EFMT3 or EEFMT3), assuming a 3:1 compression ratio (the compression ratio depends on the type of data written). Read-only for EFMT2 and EEFMT2.

- MEDIA10 - The IBM Enterprise Extended WORM Tape Cartridge (MEDIA10) physical media. The MEDIA10 capacity is the same as the MEDIA9 capacity.
- MEDIA11 - The IBM Enterprise Advanced Tape Cartridge (MEDIA11) physical media. MEDIA11 requires the EFMT4 or EEFMT4 recording format, and provides an uncompressed capacity of 4000 GB. Provides a compressed capacity of 12000 GB, assuming a 3:1 compression ratio (the compression ratio depends on the type of data written).
- MEDIA12 - The IBM Enterprise Advanced WORM Tape Cartridge (MEDIA12), physical media. The MEDIA12 capacity is the same as the MEDIA11 capacity.
- MEDIA13 - The IBM Enterprise Advanced Economy Tape Cartridge (MEDIA13) physical media. MEDIA13 requires the EFMT4 or EEFMT4 recording format, and provides an uncompressed capacity of 500 GB. Provides a compressed capacity of 1500 GB, assuming a 3:1 compression ratio (the compression ratio depends on the type of data written). For this media type there is equivalent WORM cartridge.

You can use the TS1140 tape drive in the stand-alone environment or the tape library environment (automated or manual). Currently, the TS1140 tape drive does not have a cartridge loader.

Support for the TS1140 tape drive will be provided at z/OS V1R11 and later releases

Note:

1. If no recording technology has been specified for MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13, EFMT4 is the default recording technology. Other recording formats (EFMT3, EEFMT3, or EEFMT4) can be specified through data class. This applies to both the stand-alone and to the system-managed tape library environments. However, with the TS1140, EFMT3 and EEFMT3 are supported only with MEDIA9 and MEDIA10.
2. To enable the EFMT4 and EEFMT4 formatted cartridges (MEDIA9 and MEDIA10) to be relabelled/ reused from load point on a 3592 Model E05 (3592-2 and 3592-2E) or on a 3592 Model E06 (3592-3E), drive microcode updates are required on these drives. This is particularly important in a system-managed tape library environment, because common scratch pools are used across the media types.
3. For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the encryption key manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.
4. The TS1140 tape drive optionally provides performance scaling by using only 20 percent of the full capacity on a MEDIA9 or MEDIA11 cartridge. The default is to use the cartridge's full capacity. The performance scaling option is not available with the economy or WORM media type.
5. The TS1140 tape drive optionally provides performance segmentation. Performance segmentation divides the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. This option is available on MEDIA9 and MEDIA11 tapes. The performance segmentation option is not available with the economy or WORM cartridge. The performance segmentation option is mutually exclusive with the performance scaling option.
6. The TS1140 tape drive emulates only 3590 Model B1x tape drives in the standalone and in the system-managed tape library environment (manual or automated).
7. The TS1140 tape drive is supported by the 3592 Model C06 tape controller (ESCON® or FICON® attachment) and with the C07 tape controller (FICON-only attachment). It is not supported with the older J70 tape controller.
8. The TS1140 (3592 Model E07) tape drive is not supported in the older 3494 automated tape library.

9. The TS1140 (3592 Model E07) tape drive coexists with 3592 Model J1A, 3592 Model E05 (3592-2 and 3592-2E), and 3592 Model E06 (3592-3E) devices in the 3584 automated tape library.
10. The TS1140 (3592 Model E07) tape drive coexists with 3490, 3490E, 3590, 3592 Model J1A, 3592 Model E05 (3592-2 and 3592-2E), and 3592 Model E06 (3592-3E) devices in a manual tape library.
11. The TS1140 tape drive cannot use the MEDIA3 or MEDIA4 cartridges used in 3590 tape drives, nor can it write to the older 3592 media types (MEDIA5, MEDIA6, MEDIA7, or MEDIA8).
12. For the system-managed tape library support (automated or manual), even though a mix of 3592 tape drives (different models) is supported under a single control unit, with z/OS system-managed tape library support, all devices under the same control unit must be homogenous and support the same capabilities. So, although a mix of 3592 tape drives is supported within the same library, within each control unit, all the devices must be either TS1140 tape drives (only) or TS1130 tape drives (only) or TS1120 tape drives (only). In addition to this, all TS1120 tape drives must also be homogeneous so a mix of encryption and non-encryption capable drives is also not supported within a control unit.

Related reading:

For additional information, see:

- IBM System Storage TS1140 Tape Drive InfoCenter (<http://publib.boulder.ibm.com/infocenter/3592drives/cust/index.jsp>)
- IBM System Storage 3592-C07 Controller Customer Information Center (<http://publib.boulder.ibm.com/infocenter/etc/cust/index.jsp>)
- *IBM System Storage 3592 Tape Drives and TS1120 Controller Introduction and Planning Guide*, GA32-0555,
- *IBM System Storage 3592 Tape Drives and TS1120 Controller Operator Guide*, GA32-0556

Performance scaling and segmentation for TS1140

The TS1140 tape drive supports performance scaling and performance segmentation of media tape cartridges. These functions allow you to optimize performance for MEDIA9 and MEDIA11 cartridges; a cartridge can be defined for performance scaling or performance segmentation, but not both.

Except for the cartridge segment sizes for the EFMT4 and EEFMT4 recording formats, performance scaling and segmentation for the TS1140 is the same as for the TS1120. See “Performance scaling and segmentation for TS1120” on page 177 for an overview of performance scaling and segmentation and for information on the cartridge segment sizes for the EFMT2 and EEFMT2 recording formats.

Performance scaling for the TS1140 (3592 Model E07) tape drive limits the data written to the first 20% (the optimally scaled performance capacity) of the cartridge and when using the performance segmentation option, the overall capacity of the cartridge is limited to 86.6% of the total capacity. The fast access segment occupies the first 20% of the cartridge, followed by the slower access segment. By default, the MEDIA9 or MEDIA11 cartridge is used to its full capacity. When written from loadpoint, a scaled or segmented tape cartridge is reformatted according to the assigned data class.

z/OS software support for the TS1140 tape drive

Use z/OS software with the TS1140 tape drive to protect your data with the IBM System Storage family of tape media and the EFMT4 and EEFMT4 recording formats. [Table 27 on page 177](#) describes the software support changes for the new TS1140 tape drive.

Note: The software support changes described in “[z/OS software support for the encryption-capable TS1120 tape drive](#)” on page 177 also apply to the TS1140.

Table 2. Components that provide software support for the TS1140 tape drive

Component	Function
DFSMSdfp AMS	AMS commands, CREATE LIBRARYENTRY, ALTER LIBRARYENTRY, CREATE VOLUMEENTRY, ALTER VOLUMEENTRY, DCOLLECT, and LISTCAT are changed to support the new EFMT4 and EEFMT4 recording technologies and the new MEDIA11, MEDIA12, and MEDIA13 media types. AMS allows the use of the new EFMT4 and EEFMT4 recording technologies and the use of the new MEDIA11, MEDIA12, and MEDIA13 media types as well as the printing and displaying of information about the recording technology and media type.
DFSMSdfp Device Services	Device Services manages the IBM System Storage Tape System devices.
DFSMSdfp ISMF	The ISMF Tape Library Application, Data Class Application, Mountable Tape Volume Application panels have been enhanced to support two new record formats (EFMT4 and EEFMT4) and three new media types (MEDIA11, MEDIA12 and MEDIA13).
DFSMSdfp NaviQuest	NaviQuest sample jobs and CLISTs have been updated to support the new recording formats (EFMT4 and EEFMT4) and the new media types (MEDIA11, MEDIA12 and MEDIA13).
DFSMSdfp OAM	OAM tape library support allows the use of the new recording formats (EFMT4 and EEFMT4) and the new media types (MEDIA11, MEDIA12 and MEDIA13) in the IBM 3584 Automated Tape library and in the manual tape library. OAM object tape support allows the use of TS1140 tape drives and media for object-related activity.
DFSMSdfp OCE/IFGOJES3	OCE/IFGOJES3 allows the use of the new EFMT4 and EEFMT4 recording technologies and use of the new MEDIA11, MEDIA12 and MEDIA13 media types.
DFSMSdfp SMS	SMS allows the use of the new EFMT4 and EEFMT4 recording technologies and use of the new MEDIA11, MEDIA12 and MEDIA13 media types. You can specify a data class to request data encryption (EEFMT4) or non-encryption (EFMT4) with media types MEDIA9 through MEDIA13. EFMT4 (non-encryption) is the default recording technology for the TS1140.
DFSMSdss	DFSMSdss ensures that encrypted data dumped to a TS1140 tape drive will not be doubly encrypted, unless the user makes specific arrangements for double-encryption. DFSMSdss Stand Alone Restore will not read a dump data set that resides on an encrypted tape.

<i>Table 2. Components that provide software support for the TS1140 tape drive (continued)</i>	
Component	Function
DFSMSHsm	DFSMSHsm allows the use of TS1140 tape drives and media for all DFSMSHsm tape related functions. The LIST TTOC SELECT parameters have been extended to take new values EFMT4 (or E4) and EEFMT4 (or EE4).
DFSMSrmm	These DFSMSrmm functions have been enhanced to support the TS1140: <ul style="list-style-type: none"> • DFSMSrmm TSO subcommands now allow the use of the new EFMT4 and EEFMT4 recording technologies and the use of the new MEDIA11, MEDIA12 and MEDIA13 media types. • REXX variables of the TSO subcommand have been enhanced to support the TS1140 • API structured field introducers have been enhanced to support the TS1140, including new compound SFI
DFSORT	DFSORT works without change with the IBM System Storage Tape System devices.
EREP	EREP provides unique device type information for TS1140 tape drives when formatting LOGREC records.
z/OS Multiple Virtual Storage (MVS) Allocation	MVS Allocation allows the use of the new EFMT4 and EEFMT4 recording technologies and the use of the new MEDIA11, MEDIA12 and MEDIA13 media types when using the Dynamic Allocation Text Unit DALINCHG. MVS allocation (starting with z/OS V1R12) also allows a 2-byte specification for the DALINCHG parameter input.

Using TS1140 tape drives in an IBM tape library environment

Before using the new TS1140 tape drive, ensure that all existing 3592 Model E05 and E06 drives in the library are upgraded to recognize and enable cartridges formatted for EFMT4 or EEFMT4 (MEDIA9 and MEDIA10) to be relabelled/reused on the older E05 and E06 drives. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

Because the 3592 Model E07 is only downward read (and not write) compatible with the EFMT1 format (on MEDIA5 through MEDIA8), the EFMT2 and EEFMT2 formats (on MEDIA5 through MEDIA10), and the EFMT3 and EEFMT3 formats (on MEDIA5 through MEDIA8), you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E07 drive to be considered eligible for these combinations.

The considerations listed in [“Using encryption-capable TS1120 tape drives in an IBM tape library environment”](#) on page 180 also apply to the TS1140.

Using TS1140 tape drives in a stand-alone environment

Before using the new TS1140 tape drive, ensure that all existing 3592 Model E05 and E06 drives are upgraded to recognize and enable cartridges formatted for EFMT4 or EEFMT4 (MEDIA9 and MEDIA10) to be relabelled/reused on the older E05 and E06 drives. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

The considerations listed in [“Using encryption-capable TS1120 tape drives in a stand-alone environment”](#) on page 181 also apply to the TS1140.

Recommendation: Use a manual tape library, DFSMSrmm, third-party tape management software, or write your own applications when using TS1140 tape drives in a stand-alone environment.

Resolving recording technology conflicts for TS1140

3592 Model E05 (TS1120) devices, 3592 Model E06 (TS1130) devices, and 3592 Model E07 (TS1140) devices can all write to MEDIA9 and MEDIA10 media types. However, conflicts occur when an EFMT4 or EEFMT4 formatted cartridge is mounted on a 3592 Model E05 or 3592 Model E06 and is being relabelled or reused.

The OPEN and EOVS routines can resolve these recording technology conflicts if you meet these conditions:

- Set OPEN for output to the first file
- Specify VOLNSNS=YES in the DEVSUPxx member of PARMLIB
- Position the tape cartridge at the load point.

If these conditions are met and if the cartridge has an internal *volser* recorded in its volume control region, OPEN and EOVS routines rewrite the VOL1 label with the volume identifier in the sense data.

Note: To enable this support, make sure that the 3592 Model E05 and 3592 Model E06 devices are at the appropriate microcode level, so that an up-level (MEDIA9 and MEDIA10) volume can have its volume identifier returned in the sense data.

For additional information about resolving recording technology conflicts, see [z/OS DFSMS Using Magnetic Tapes](#) and [z/OS DFSMS Installation Exits](#).

Implementation considerations for using TS1140 tape drives

The implementation considerations listed in [“Implementation considerations for using encryption-capable TS1120 tape drives”](#) on page 181 also apply to the TS1140.

As appropriate, specify EE4 (EEFMT4 recording format) for encryption or use the media interchange recording technology specification (E3 for EFMT3 or EE3 for EEFMT3 with MEDIA9 and MEDIA10) to request that the lower recording formats be used. By default, when writing from load point, EFMT4 (E4) is used by the TS1140 tape drive (MEDIA9 through MEDIA13).

Related reading:

See Chapter 2, [“Migration to the software support for TS1140 tape drives,”](#) on page 13 for migration information and implementation information.

Chapter 2. Migration to the software support for TS1140 tape drives

DFSMS software support for the TS1140 tape drive addresses media management and data allocation in an IBM 3584 Automated Tape Library and in the manual tape library (MTL). You can manage media and allocate data to appropriate non-library (stand-alone) drives through separation of the real and emulating drives, third-party tape management software, or user-written applications. You can use the TS1140 tape drive on systems that are running z/OS V1R11 and above.

This topic outlines the tasks and associated procedures that must be performed to migrate to software support for the TS1140 tape drive in these environments:

- Stand-alone environment
- IBM tape library environment
- HSMplex
- OAMplex
- RMMplex

Understanding coexistence considerations for TS1140

Coexistence support for the TS1140 tape drive is provided at z/OS V1R11 and above by installing the needed full-support PTFs without the Device Services enabling PTF.

In addition to this, existing device services support prevents the TS1140 tape drives from coming online on a system that does not have all of the full-support PTFs installed. Installation of the Devices Services enabling PTF brings in all of the needed full-support PTFs. See [Table 3 on page 14](#) for a discussion of the coexistence PTFs that may be needed. For past discussion of the other 3592 models and their coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model J1A” on page 335](#), [“Understanding coexistence considerations for 3592 Model E05” on page 265](#), [“Understanding coexistence considerations for encryption-capable TS1120” on page 185](#), and [“Understanding coexistence considerations for TS1130” on page 97](#).

Review the coexistence migration tasks described in these topics:

Table 3. Coexistence migration tasks for TS1140 tape drives

Environment	Coexistence Considerations
Stand-Alone	<p>As described in Chapter 1, “Introduction for TS1140 tape drive,” on page 3, z/OS DFSMS and related licensed programs provide full support for the TS1140 tape drive. EFMT4/EEFMT4 is supported with MEDIA9-MEDIA13 and EFMT3/EEFMT3 is also supported with MEDIA9-MEDIA10 (for read/write). Read-only support is provided for EFMT3/EEFMT3 (MEDIA5-MEDIA8), EFMT2/EEFMT2 (MEDIA5-MEDIA10) and EFMT1 (MEDIA5-MEDIA8). The TS1140 tape drive support enables the tape drives to operate in the stand-alone environment in 3590 Model B1x emulation and to coexist with other emulated tape drives. However, prior to using the new TS1140 tape drive, ensure that all existing 3592 Model E05 and E06 tape drives have their microcode upgraded to recognize and enable the EFMT4 and EEFMT4 formatted cartridges (MEDIA9 and MEDIA10) to be relabelled/reused on the 3592 Model E05 and Model E06. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In the stand-alone (non-system managed environment), even though a mix (different models) of 3592 devices is supported under a control unit, IBM recommends that all 3592 devices under the same control unit be homogenous for easier separation and management.</p>

Table 3. Coexistence migration tasks for TS1140 tape drives (continued)

Environment	Coexistence Considerations
IBM Tape Library	<p>As described in Chapter 1, “Introduction for TS1140 tape drive,” on page 3, z/OS DFSMS and related licensed programs provide full support for the TS1140 tape drive. EFMT4/EEFMT4 is supported with MEDIA9-MEDIA13 and EFMT3/EEFMT3 is also supported with MEDIA9-MEDIA10 (for read/write). Read-only support is provided for EFMT3/EEFMT3 (MEDIA5-MEDIA8), EFMT2/EEFMT2 (MEDIA5-MEDIA10) and EFMT1 (MEDIA5-MEDIA8). The system-managed tape library support allows the tape drives to operate in an ATL or MTL environment as 3590 Model B1x devices, providing device allocation and tape media management support. As appropriate for the library type and model, this support allows the TS1140 tape drive to coexist with other emulated 3590-1 tape drives in the same tape library. However, prior to using the new TS1140 tape drive, ensure that all existing 3592 Model E05 and Model E06 tape drives have their microcode upgraded to recognize and enable the EFMT4 and EEFMT4 formatted cartridges (MEDIA9 and MEDIA10) to be relabelled/reused on the 3592 Model E05 and E06. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In addition to this, in the system-managed tape library environment, all 3592 drives under the same control unit must have the same recording format capabilities and report under the same ERDS physical identifier (EPI). This ensures that all of the devices under the same control unit are homogeneous and that each device under the same control unit is capable of handling the request.</p> <p>A tape configuration database (TCDB) with EFMT4 and EEFMT4 volume records can coexist with lower-level systems. No additional coexistence support is needed to support the new recording formats and the new media types. However, because the 3592 Model E07 is only downward read (and not write) compatible with the EFMT3 and EEFMT3 formats (on MEDIA5-MEDIA8), EFMT2 and EEFMT2 formats (on MEDIA5-MEDIA10), and EFMT1 format (on MEDIA5-MEDIA8), you must specify (as appropriate) the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E07 drive to be considered eligible for recording technology and media type combinations discussed above.</p>
DFSMSdfp Device Services/AOM	<p>The Device Services component prevents any device that has an unknown EPI from coming online. Therefore, if a TS1140 tape drive is attached to a system that does not have any of the TS1140 support installed, the device is not allowed on-line and the following existing message text is issued for message IEA435I:</p> <p>'UNKNOWN DEVICE IN EMULATION MODE NOT BROUGHT ONLINE'</p> <p>When the Device Services full function support APAR is installed without the enabling APAR, the Device Service Exit will recognize the device EPI, but because the enabling APAR that brings all of the software support in is not installed, the device will not come on-line and the following new message text will be issued for IEA435I:</p> <p>'3592-4E DRIVE DETECTED BUT NOT ALL 3592-4E SUPPORT IS PRESENT'.</p>

Table 3. Coexistence migration tasks for TS1140 tape drives (continued)	
Environment	Coexistence Considerations
HSMplex	In an HSMplex, all systems in the HSMplex should have full support for the 3592-4E tape subsystem before any instance of DFSMSHsm uses the new tape drives. If any system does not fully support the 3592-4E, a request for tape input can fail because a 3592-4E device is not available on that system.
OAMplex	<p>For OAM's object support customers, in addition to the planning steps required for migration to the software support for the TS1140 tape drives in the stand-alone and IBM tape library environments, there are coexistence considerations your installation must take into account before you install the software in an OAMplex:</p> <ul style="list-style-type: none"> • For the TS1140 tape drive support, OAM object tape coexistence support is provided at z/OS V1R11 and above, through installation of the full support PTF without the device services enabling PTF. • OAM coexistence support prevents lower-level systems from selecting volumes with ERDS Physical Identifier (EPI) values for object write requests that are not supported on that system. • OAM object support has coexistence considerations when running in an OAMplex environment with at least one system with the full support installed and enabled and at least one system without the full support for the new devices installed and enabled. In this mixed support environment, it is possible for a retrieve request to be received for an object that resides on a tape cartridge volume written in the EFMT4 and EEFMT4 format by a system that does not have the TS1140 tape drive full support installed. Coexistence support is provided that allows OAM to attempt to locate an instance of OAM in the OAMplex where the full support is installed and enabled. If an instance of OAM is found where the request can be processed, the OAM on the system where the request originated will ship the retrieve request, if the object is not greater than 50 MB, to the target system using XCF messaging services. • Once TS1140 tape drives devices are used in an OAMplex environment and objects are written to tape volumes with the new EPI value recorded, it is expected that any OAM on a system where the full support is installed and enabled is eligible for processing requests using that volume. Therefore, TS1140 tape drives devices must be available to all instances of OAM where the full support is installed.
OCE (Open / Close / End-of-Volume)	None.
RMMplex	None.

Preparing to install the software

Related reading:

For additional information, see:

- IBM System Storage TS1140 Tape Drive InfoCenter (<http://publib.boulder.ibm.com/infocenter/3592drives/cust/index.jsp>)
- IBM System Storage 3592-C07 Controller Customer Information Center (<http://publib.boulder.ibm.com/infocenter/etc/cust/index.jsp>)
- *IBM System Storage 3592 Tape Drives and TS1120 Controller Introduction and Planning Guide*, GA32-0555,

- *IBM System Storage 3592 Tape Drives and TS1120 Controller Operator Guide*, GA32-0556

For encryption key manager requirements, refer to the InfoCenters for TKLM or IBM Security Key Lifecycle Manager.

Coexistence support for the TS1140 tape drive is provided with z/OS V1R11 and above by installing the appropriate full support PTFs without the device services enabling PTF.

Installing the appropriate PTFs

Refer to the 3592 PSP bucket for the APAR and PTF numbers applicable for each release. An enabling PTF exists to provide full device support for the TS1140 tape drive. Installation of the appropriate enabling PTF pulls in all of the needed support PTFs and indicates to the system that all of the needed software support is installed. For z/OS V1R11 and above, refer to enabling APAR OA33947. Also for the added TS1140 legacy read support for MEDIA5, MEDIA6, MEDIA7, and MEDIA8 refer to OA37269. This is needed in addition to the base TS1140 support and requires that the TS1140 tape drives be at PGA1 code level D3I3_5CD (or higher).

In addition, as appropriate for your environment and release level, determine what coexistence PTFs are needed for your environment.

Planning for DFSMS software support for the TS1140 tape drive

The planning steps you must consider to successfully install the TS1140 tape drive software, vary depending upon the tape environment you have installed. [Table 4 on page 18](#) discusses planning considerations for stand-alone environments (including tape devices installed in vendors' automated tape libraries) and for IBM tape library environments.

Table 4. TS1140 tape drive planning considerations

Area	Planning Considerations
System customization: stand-alone environment	<ol style="list-style-type: none"> 1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT4 (or EEFMT3 for media interchanges). Also specify, as appropriate, the non-encryption recording formats, EFMT4 (or EFMT3 for media interchanges). If a TS1140 tape drive is allocated, the default recording format is EFMT4. EFMT4 and EEFMT4 can be used with MEDIA9 through MEDIA13 and MEDIA9 and MEDIA10 can be used with EFMT3 and EEFMT3. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. As appropriate, determine which key labels are to be used and how they will be specified, data class, the DD statement or encryption key manager established defaults. 3. Determine whether you will need help from your tape management system vendor and contact them, if needed. 4. As appropriate, plan for the installation of the encryption key manager (IBM Security Key Lifecycle Manager or TKLM) and decide which of the supported key stores to use. 5. As appropriate, plan for the key labels that will be used and the encoding mechanism (label or hash) for each and where the key labels will be specified. 6. For in-band key management (with encryption), update the IOS PARMLIB member (IECIOSxx) using the EKM command. Also create a z/OS UNIX segment for the IOS address space. 7. Upgrade 3592 Models E05 and E06 drive microcode to enable the drives to recognize and enable the EFMT4 and EEFMT4 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 8. Determine which systems should have coexistence support and which systems should have full support. 9. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 10. Determine when to IPL the host machine after installing all necessary PTFs.

Table 4. TS1140 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: IBM library tape environment	<ol style="list-style-type: none"> 1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT4 (or EEFMT3 for media interchanges). Also specify, as appropriate, the non-encryption recording formats, EFMT4 (or EFMT3 for media interchanges). If a TS1140 tape drive is allocated, the default recording format is EFMT4. EFMT4 and EEFMT4 can be used with MEDIA9 through MEDIA13 and MEDIA9 and MEDIA10 can be used with EFMT3 and EEFMT3. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Because the TS1140 is only downward read (and not write) compatible with the EFMT1 format (on MEDIA5 through MEDIA8), the EFMT2 and EEFMT2 formats (on MEDIA5 through MEDIA10), and the EFMT3 and EEFMT3 formats (on MEDIA5 through MEDIA8), explicit specification of the read-compatible special attribute indicator (in the tape configuration database) or usage of the LABEL=(,,IN) on the DD statement of JCL is needed to enable the TS1140 tape drive to be considered eligible for these volume types. 3. As appropriate, determine which key labels are to be used and how they will be specified, data class, the DD statement or encryption key manager established defaults. 4. Determine whether you will need help from your tape management system vendor and contact them, if needed. 5. As appropriate, plan for the installation of the encryption key manager (IBM Security Key Lifecycle Manager or TKLM) and decide which of the supported key stores to use. 6. As appropriate, plan for the key labels that will be used and the encoding mechanism (label or hash) for each and where the key labels will be specified. 7. For in-band key management (with encryption), update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also create a z/OS UNIX segment for the IOS address space. 8. Upgrade 3592 Models E05 and E06 drive microcode to enable the drives to recognize and enable the EFMT4 and EEFMT4 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 9. Identify the installation exit changes that are needed. 10. Determine which systems should have coexistence support and which systems should have full support. 11. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 12. Determine when to IPL the host machine after installing all necessary PTFs.

Table 4. TS1140 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the TS1140 tape drive devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the system customization planning steps listed for a stand-alone environment. b. Determine the esoteric or generic device names that need to be added to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Determine whether to use the global keyword DSNWITHSGNAME on the SETOAM statement in the CBROAMxx member of PARMLIB to append the object storage group name to the OAM object tape data set names. See “Object tape data set low-level qualifier enhancement” on page 396 for additional information. d. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new encryption format EEFMT4 (by default, the non-encryption recording format EFMT4 is used). 2. If you install the TS1140 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the system customization planning considerations listed for an IBM tape library environment. b. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices and the new encryption format EEFMT4. 3. In addition, if you install the TS1140 tape drive devices in an OAMplex: <ol style="list-style-type: none"> a. Ensure that the TS1140 tape drive devices are available to all instances of OAM where the full support software is installed. b. Determine whether systems exist that will require coexistence support. This situation is particularly important in an OAMplex where at least one system has the full-support software installed and enabled, and at least one system will not have all of the support installed or enabled. Coexistence support is needed if not all of the systems in the OAMplex will be at the same full-support level. c. To provide this coexistence support, as appropriate for the support and the release level, install the OAM full-support PTF without the enabling PTF or any separate coexistence support PTF. d. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.
System customization: DFSMSHsm	See “Implementation considerations for using TS1140 tape drives” on page 11 and “DFSMSHsm tips” on page 230 .

Table 4. TS1140 tape drive planning considerations (continued)

Area	Planning Considerations
Storage administration: stand-alone tape environment	<ol style="list-style-type: none"> 1. Determine how to setup your tape management systems pooling support to separate rewritable (MEDIA9, MEDIA11, and MEDIA13) and WORM (MEDIA10 and MEDIA12) media and also to separate the extended, advanced, and economy length cartridges, as appropriate, for your job and application usage. The older 3592 media types (MEDIA5 through MEDIA8) are supported on the TS1140 only for read requests. 2. Review the usage of the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA, (optional) to ensure that the media type mounted is the media type requested through data class. This can be used in conjunction with the tape management systems pooling support as an additional safety check. 3. Review the existing SMS data class media policies to ensure compatibility with existing tape scratch pool policies before enabling the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA. 4. Review the existing SMS data class recording technology policies to ensure that data class policies set to EFMT3 and EEFMT3 are being appropriately used. If a TS1140 tape drive is allocated and the specified data class indicates EFMT3 or EEFMT3, the drive will record in the lower recording technology. Also, remember that the TS1140 can only write to MEDIA9 and MEDIA10 (EFMT3, EEFMT3, EFMT4, and EEFMT4) and MEDIA11, MEDIA12, and MEDIA13 (EFMT4 and EEFMT4), so also review any existing SMS data classes for applicability. 5. Determine the data class updates that are needed to request the appropriate recording format for the TS1140 tape drives. If a TS1140 tape drive is allocated, the default recording format is EFMT4 (non-encryption). 6. Determine if media should use performance segmentation, with a fast access segment to be filled first, and a slower access segment to be filled after. If you decide to use the performance segmentation attribute (available only with MEDIA9 and MEDIA11 tape cartridges, and mutually exclusive with performance scaling), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance segmentation. b. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation. 7. Determine if media should be used at full capacity or scaled for optimal performance. If you decide to use the performance scaling attribute (available only with MEDIA9 and MEDIA11 tape cartridges), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance scaling. b. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling. 8. Determine how to allocate media to appropriate nonlibrary drives. Consider using the IBM manual tape library. You can also separate the real drives from the emulating drives, use third-party tape management software, or use customer-written applications. 9. Identify any needed changes to the hardware configuration definition (HCD) to define the new devices.

Table 4. TS1140 tape drive planning considerations (continued)

Area	Planning Considerations
Storage administration: IBM tape library environment	<ol style="list-style-type: none"> 1. Review the usage of the DEVSUPxx PARMLIB option, MTL_NO_DC_WORM_OK, if the WORM cartridges in the manual tape library environment will be mounted through use of the tape management systems pooling support versus a data class WORM media specification. 2. Determine the 3592 media usage of rewritable (MEDIA9, MEDIA11, and MEDIA13) and WORM (MEDIA10 and MEDIA12) media and also the usage of the extended, advanced and economy length cartridges. Then make the appropriate data class definition updates to select the appropriate media type. WORM media can only be used if explicitly requested through data class. 3. Review ACS routines for changes needed in selecting tape storage groups and libraries that have the TS1140 tape drive devices. 4. Determine the data class updates that are needed to use the recording technology, media type, and performance scaling or performance segmentation data class attribute (performance scaling or segmentation available only with MEDIA9 and MEDIA11 tape cartridges). 5. Identify any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA9, MEDIA10, MEDIA11, MEDIA12 and MEDIA13 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 7. Because the TS1140 is only downward read (and not write) compatible with the EFMT1 format (on MEDIA5 through MEDIA8), the EFMT2 and EEFMT2 formats (on MEDIA5 through MEDIA10), and the EFMT3 and EEFMT3 formats (on MEDIA5 through MEDIA8), explicit specification of the read-compatible special attribute indicator (in the tape configuration database) or usage of the LABEL=(,,IN) on the DD statement of JCL is needed to enable the TS1140 tape drive to be considered eligible for the combinations above.
Storage administration: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the TS1140 tape drive devices in a stand-alone environment, follow the storage administration planning steps listed for a stand-alone environment. 2. If you install the TS1140 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the storage administration planning steps listed for an IBM tape library environment. b. Review ACS routines for STORE or CTRANS environments and make any changes needed to ensure proper class assignment. 3. If you install the TS1140 tape drive devices in an OAMplex, you must make the devices available to all instances of OAM where the full support is installed.

Implementing this change could affect these areas of your processing environment:

Area	Considerations
Storage Administration	<p>The following NaviQuest CLISTs have changed:</p> <ul style="list-style-type: none"> • ACBJBAD1 - Sample job for data class define/alter/display • ACBJBAL1 – Sample job for tape library define/alter/display • ACBJBAL5 – Sample job for tape library report • ACBJBAL6 – Sample job to generate tape library list and report • ACBQBAC2 – Generates SMS report • ACBQBAD1 – CLIST for define/alter/display of data class • ACBQBAD2 – CLIST for define/alter a data class • ACBQBAL1 – CLIST for define/alter/ display of tape library • ACBQBAL2 – CLIST for define/alter tape library • ACBQBAL3 – CLIST for display of tape library • ACBQBAL5 – CLIST for report from a saved tape library list • ACBQBAL6 – CLIST for generating a tape library list • ACBQFLR2 - ONLINE- SMS config report from DCOLLECT • ACBQUTR3 – Adds legend to reports for headings DS, DASD volume & TAPE volume reports from saved table/DCOLLECT • ACBHELP - CLIST for NaviQuest help <p>ISMF panels have been changed to support the two new recording formats, EFMT4 and EEFMT4 and the three new media types MEDIA11, MEDIA12 and MEDIA13. See Chapter 5, “ISMF modifications for TS1140 tape drive,” on page 43 for information about ISMF support for the TS1140 tape drive.</p>
Operations	<p>These commands have been updated with this support:</p> <ul style="list-style-type: none"> • DEVSERV QLIB,CATS • DEVSERV QTAPE • DISPLAY SMS,VOLUME • IDCAMS ALTER LIBRARYENTRY • IDCAMS ALTER VOLUMEENTRY • IDCAMS CREATE LIBRARYENTRY • IDCAMS CREATE VOLUMEENTRY • IDCAMS DCOLLECT • IDCAMS LISTCAT • LIBRARY DISPDRV • LIBRARY ENTER • LIBRARY SETCL
Auditing	None.

Area	Considerations
Application development	<p data-bbox="493 186 1393 245">The mapping macros and installation exits listed have been changed for this function.</p> <ul data-bbox="493 266 1179 888" style="list-style-type: none"> • CBRTDSI - Maps the Tape Device Selection Information • CBRTVI - Maps the Tape Volume Information • CBRUXCPL - Installation Exit CBRUXCUA Parameter List • CBRUXEPL - Installation Exit CBRUXENT Parameter List • CBRUXJPL - Installation Exit CBRUXEJC Parameter List • CBRUXNPL - Installation Exit CBRUXVNL Parameter List • DALINCHG - Dynamic Allocation DALINCHG Text Unit • EDGRDEXT - DFSMSrmm Data Set Extract record • EDGRVEXT - DFSMSrmm Volume Extract Record • EDGRXEXT - DFSMSrmm Extended Extract record • EDGXSF - DFSMSrmm API SFI definitions • IECUCBCX - Maps the Tape UCB Device Class extension • IFGTPEP - Maps the installation exit main parameter list • IEZDEB - Maps the data extent block (DEB) • IHADFVT - Maps the data facilities vector table <p data-bbox="493 909 1466 1287">Tracking Data Written: An application may track in KBs, data such as the number of logical bytes written, the number of physical bytes written, the amount of free space remaining on a volume, the capacity of the volume, or the number of logical bytes deleted. With a 1+ TB tape (non-compressed), the possibility exists with the TS1140 (as well as the TS1130) to overflow some of the 4-byte fields that contain these values. Of particular concern would be the logical data-related fields that (with compression) deal with an amount of data that may be larger than the physical capacity of the tape. Applications that use, store, and display this type of information may need to account for and determine how best to handle an overflow situation. For a signed (4-byte) integer X'7F FF FF FF' (2,147,483,647 in KBs) supports 2+ TBs and for an unsigned (4-byte) integer X'FF FF FF FF' (4294967295 in KBs) supports 4+ TBs.</p>

Area	Considerations
Diagnostic procedures	<p>The messages listed have been changed for this support.</p> <ul style="list-style-type: none"> • CBR0113I • CBR0114I • CBR0119I • CBR1082I • CBR1083I • CBR1084I • CBR1085I • CBR1180I • CBR1220I • CBR1240I • CBR3015I • CBR3660A • CBR3781I • CBR4105I • CBR6419I • IEA435I • IEH623E • IEH641I • IGF513I
Automation products	None.
General use	For DFSMSrmm, use the RMM subcommands ADDVOLUME, CHANGEVOLUME, and SEARCHVOLUME to specify the new media types (MEDIA11, MEDIA12, and MEDIA13), the recording technology EFMT4 or EEFMT4, and for EEFMT4, the key labels KEYLABEL1/KEYENCODE1 and KEYLABEL2/KEYENCODE2.

Implementing the DFSMS software support for the TS1140 tape drive

To implement the TS1140 tape drives software support, perform the system-level and application-level tasks listed in the following tables. **Required** tasks apply to any DFSMS installation enabling the function. **Optional** tasks apply to only specified operating environments or to situations where there is more than one way to set up or enable the function. For more details on the procedures associated with a given task, see the reference listed.

System-level tasks	Condition	Procedure reference
<p><i>Stand-alone tape environment</i></p> <ol style="list-style-type: none"> 1. Implement the data class policy specifying EFMT4 or EEFMT4. Also, specify as appropriate, the interchange recording formats, EFMT3 or EEFMT3. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. If no data class is used, EFMT4 will be the recording technology. 2. As appropriate, install the encryption key manager (IBM Security Key Lifecycle Manager or TKLM) and set up the key store it will use. 3. As appropriate, create the data classes or the DD statements (or use encryption key manager defaults) to specify the key labels and their encoding mechanism (label or hash). 4. As appropriate, for in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also create a z/OS UNIX segment for the IOS address space. 5. Upgrade 3592 Model E05 and 3592 Model E06 microcode to enable the drives to recognize and enable the EFMT4 or EEFMT4 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 6. Make the required installation exit changes. 7. Make any needed changes to the HCD to define the new devices. 8. If more than one recording technology is used for the same device type, create a unique esoteric for each of the recording technologies. Use the esoteric unit names in DFSMSHsm to direct allocations uniquely to each group of devices. 9. If performance scaling or performance segmentation is used (available only with MEDIA9 and MEDIA11 tape cartridges), update or create ACS routines to assign a data class to tape output functions. For example, for DFSMSHsm, you can filter on single file tape data set names used by DFSMSHsm functions. Define the data class with the performance scaling or performance segmentation attribute. 10. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of TS1140 tape drives exclusively because the EFMT4 and EEFMT4 recording technologies are not compatible with other devices. 11. Install coexistence PTFs as appropriate. 12. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support • z/OS HCD User's Guide • z/OS DFSMSHsm Implementation and Customization Guide

System-level tasks	Condition	Procedure reference
<p><i>IBM tape library environment</i></p> <ol style="list-style-type: none"> 1. Implement the data class policy specifying EFMT4 or EEFMT4. Also, specify as appropriate, EFMT3 or EEFMT3 (for media interchange). Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Because the TS1140 is only downward read (and not write) compatible with MEDIA9 and MEDIA10 (EFMT2 and EEFMT2) and MEDIA5 through MEDIA8 (EFMT1, EFMT2, EEFMT2, EFMT3 and EEFMT3), explicit specification of the read-compatible special attribute indicator (in the tape configuration database) or usage of the LABEL=(,,IN) on the DD statement of JCL is needed to enable the TS1140 tape drive to be considered eligible for these volume types. 3. As appropriate, install the encryption key manager (IBM Security Key Lifecycle Manager or TKLM) and set up the key store it will use. 4. As appropriate, create the data classes or the DD statements (or use encryption key manager defaults) to specify the key labels and their encoding mechanism (label or hash). 5. For in-band key management, update (as appropriate) the IOS PARMLIB member (IECIOSxx) using the EKM command. Also create a z/OS UNIX segment for the IOS address space. 6. Upgrade 3592 Model E05 and 3592 Model E06 microcode to enable the library drives to recognize and enable the EFMT4 or EEFMT4 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 7. Make the required installation exit changes. 8. Define or alter existing data class constructs as appropriate, to specify the EFMT4 or EEFMT4 recording technology, MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13 media type, and the performance attributes (performance scaling or performance segmentation available only with MEDIA9, or MEDIA11 tape cartridges). 9. Define or alter existing storage group constructs to include libraries with the new TS1140 tape drives devices. 10. Update ACS routines to direct allocation to the TS1140 tape drives device as requested. 11. Validate and activate any new or modified SMS configuration. 12. Make any needed changes to the HCD to define the new devices. 13. To define the partitioning category code for MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 14. IPL the system. 	Required	<ul style="list-style-type: none"> • <i>z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries</i> • <i>z/OS HCD User's Guide</i> • <i>z/OS DFSMSdftp Storage Administration</i>

System-level tasks	Condition	Procedure reference
<p><i>OAM object tape environment</i></p> <p>The migration steps that you must take in tape environments that use OAM objects vary depending upon the type of environment that is installed:</p> <ol style="list-style-type: none"> If you install the new TS1140 tape drives devices in an OAMplex: <ol style="list-style-type: none"> Make the new TS1140 tape drives devices available to all instances of OAM where the full support software is installed. Install coexistence PTFs as appropriate. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). If you install the new TS1140 tape drives devices in an IBM tape library: <ol style="list-style-type: none"> Follow the migration steps listed for an IBM tape library environment. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. Make the needed changes to ACS routines for ALLOC, STORE, or CTRANS environments. If you install the new TS1140 tape drives devices in a stand-alone environment: <ol style="list-style-type: none"> Follow the migration steps listed for a stand-alone environment. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new EFMT4 or EEFMT4 recording technologies. The esoteric or generic unit name must consist of TS1140 tape drives exclusively because the EFMT4 and EEFMT4 recording technologies are not compatible with the other 3592 drives. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). Make the needed changes to ACS routines for ALLOC, STORE and CTRANS environments. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new EFMT4 or EEFMT4 recording technologies. 	Required	<p>z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support</p>
<p><i>DFSMSHsm tape environment</i></p> <p>DFSMSHsm allows the specification of tape unit names using either generic or esoteric names. Installations that have a mixture of non-SMS-managed 3590 devices defined under the 3590-1 generic name, need to perform these steps:</p> <ol style="list-style-type: none"> Define a unique esoteric for each recording technology. Use the SETSYS USERUNITTABLE command to define these esoteric names to DFSMSHsm. This also applies to mixed devices in the 3490 generic. Installations that use SMS-managed tape devices or have a single 3590-1 recording technology, do not need to define an esoteric for those devices. 	Required	<ul style="list-style-type: none"> z/OS DFSMSHsm Implementation and Customization Guide z/OS DFSMSHsm Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>Setting up DFSMSHsm to use WORM output tapes for ABACKUP</i></p> <p>In a SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.</p> <p>In a non-SMS tape environment, the default allows tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUPxx parameter, ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS, is used, then the data class must request the appropriate media type for it to be successfully mounted.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
Application-level tasks	Condition	Procedure reference
<p>For programs that use dynamic allocation and cannot take advantage of predefined data class definitions, set the PARM for the DALINCHG text unit key in DALINCHG to specify the media type and recording technology for system-managed tape library allocations.</p>	Optional	z/OS MVS Programming: Authorized Assembler Services Guide

Chapter 3. Access method services (AMS) modifications for TS1140 tape drives

This topic describes changes to the access method services (AMS) commands to support the TS1140 tape drives. The changed commands are:

- “ALTER LIBRARYENTRY ” on page 31
- “ALTER VOLUMEENTRY” on page 31
- “CREATE LIBRARYENTRY ” on page 32
- “CREATE VOLUMEENTRY ” on page 33
- “DCOLLECT” on page 33
- “LISTCAT” on page 34



Attention: Use these AMS commands only to recover from tape volume catalog errors. Because AMS cannot change the library manager inventory in an automated tape library, use ISMF for normal tape library alter functions.

Related reading:

For explanations of all the parameters used with the AMS commands and additional examples, refer to *z/OS DFSMS Access Method Services Commands*.

ALTER LIBRARYENTRY

Use the AMS ALTER LIBRARYENTRY command to modify the attributes for an existing tape library entry.

The NUMBERSCRATCHVOLUMES parameter and the SCRATCHTHRESHOLD parameter now accept the MEDIA11, MEDIA12, and MEDIA13 subparameters for the IBM System Storage family of tape media.

The maximum value for the NUMBEREMPTYLOTS and NUMBERSLOTS parameters of the ALTER LIBRARYENTRY command has been increased from 999999 to 9999999.

Changed parameters for ALTER LIBRARYENTRY

NUMBERSCRATCHVOLUMES(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num) MEDIA11(num) MEDIA12(num) MEDIA13(num))

This shows the new MEDIA11, MEDIA12, and MEDIA13 subparameters associated with the NUMBERSCRATCHVOLUMES parameter.

SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num) MEDIA11(num) MEDIA12(num) MEDIA13(num))

This shows the new MEDIA11, MEDIA12, and MEDIA13 subparameters associated with the SCRATCHTHRESHOLD parameter.

NUMBEREMPTYLOTS(nnnnnnn)

The maximum value for the NUMBEREMPTYLOTS parameter has been increased from 999999 to 9999999.

NUMBERSLOTS(nnnnnnn)

The maximum value for the NUMBERSLOTS parameter has been increased from 999999 to 9999999.

ALTER VOLUMEENTRY

Use the AMS ALTER VOLUMEENTRY command to modify the attributes for an existing tape volume entry.

Enterprise format 4 (EFMT4) and enterprise encrypted format 4 (EEFMT4) are new recording technologies used by the TS1140 tape drive. EFMT4 is the non-encrypted recording format and is the default recording format for the TS1140. EEFMT4 is used to specify that the data on the tape is recorded in the encryption format.

The ALTER VOLUMEENTRY command allows recording fields in the volume records of a tape library to be altered with the following rules:

- EFMT4 subparameter indicates READ/WRITE on an EFMT4 track device.
- EEFMT4 subparameter indicates READ/WRITE on an EEFMT4 track device.
- EFMT4 subparameter of RECORDING is only allowed with media types MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13. The use of MEDIA1 through MEDIA8 will produce an IDC3226I error message being generated twice, once for EFMT4 and once for the media type. The generation of the two IDC3226I error messages indicates an incompatibility between the EFMT4 subparameter and the media type displayed.
- EEFMT4 subparameter of RECORDING is only allowed with media types MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13. The use of MEDIA1 through MEDIA8 will produce an IDC3226I error message being generated twice, once for EEFMT4 and once for the media type. The generation of the two IDC3226I error messages indicates an incompatibility between the EEFMT4 subparameter and the media type displayed.

EFMT4 and EEFMT4 subparameter for ALTER VOLUMEENTRY

RECORDING(18TRACK | 36TRACK | 128TRACK | 256TRACK | 384TRACK | EFMT1 | EFMT2 | EEFMT2 | EFMT3 | EEFMT3 | EFMT4 | EEFMT4 | UNKNOWN)

This shows the new EFMT4 and EEFMT4 subparameters associated with the RECORDING parameter for ALTER VOLUMEENTRY

CREATE LIBRARYENTRY

Use the AMS CREATE LIBRARYENTRY command to create a tape library entry. Use it only to recover from tape volume catalog errors.

The NUMBERSCRATCHVOLUMES and SCRATCHTHRESHOLD parameters now accept the MEDIA11, MEDIA12, and MEDIA13 subparameters for the IBM System Storage family of tape media.

The maximum value for the NUMBEREMPTYLOTS and NUMBERSLOTS parameters of the CREATE LIBRARYENTRY command has been increased from 999999 to 9999999.

Changed parameters for CREATE LIBRARYENTRY

NUMBERSCRATCHVOLUMES(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num) MEDIA11(num) MEDIA12(num) MEDIA13(num))

This shows the new MEDIA11, MEDIA12, and MEDIA13 subparameters associated with the NUMBERSCRATCHVOLUMES parameter.

SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num) MEDIA11(num) MEDIA12(num) MEDIA13(num))

This shows the new MEDIA11, MEDIA12, and MEDIA13 subparameters associated with the SCRATCHTHRESHOLD parameter.

NUMBEREMPTYLOTS(nnnnnnn)

The maximum value for the NUMBEREMPTYLOTS parameter has been increased from 999999 to 9999999.

NUMBERSLOTS(nnnnnnn)

The maximum value for the NUMBERSLOTS parameter has been increased from 999999 to 9999999.

CREATE VOLUMEENTRY

Enterprise format 4 (EFMT4) and enterprise encrypted format 4 (EEFMT4) are new recording technologies used by the TS1140 tape drive. EFMT4 is the non-encrypted recording format and is the default recording format for the TS1140. EEFMT4 is used to specify that the data on the tape is recorded in the encryption format.

The CREATE VOLUMEENTRY command allows the recording field in the volume records of a tape library to be created with subparameters of EFMT4 or EEFMT4 with the following rules:

- EFMT4 subparameter indicates READ/WRITE on an EFMT4 track device.
- EEFMT4 subparameter indicates READ/WRITE on an EEFMT4 device.
- EFMT4 is allowed only with media types MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13. Any use of MEDIA1 through MEDIA8 will produce an IDC3226I error message being displayed twice, once for EFMT4 and once for the media in question. The double display indicates an incompatibility between the EFMT4 subparameter and the media type displayed.
- EEFMT4 is allowed only with media types MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13. Any use of MEDIA1 through MEDIA8 will produce an IDC3226I error message being displayed twice, once for EEFMT4 and once for the media in question. The double display indicates an incompatibility between the EEFMT4 subparameter and the media type displayed.
- If MEDIA9 or MEDIA10 are specified and RECORDING is not specified, default to EFMT2 for RECORDING value. Default to EFMT4 for MEDIA11, MEDIA12, and MEDIA13, if recording is not specified.

EFMT4 and EEFMT4 subparameters for CREATE VOLUMEENTRY

RECORDING(18TRACK | 36TRACK | 128TRACK | 256TRACK | 384TRACK | EFMT1 | EFMT2 | EEFMT2 | EFMT3 | EEFMT3 | EFMT4 | EEFMT4 | UNKNOWN)

This shows the new EFMT4 and EEFMT4 subparameters associated with the RECORDING parameter for CREATE VOLUMEENTRY.

DCOLLECT

The DCOLLECT command has values added to its definitions for DDRECTE to allow the constants DDCEFMT4 for the EFMT4 recording technology and DDCEEFM4 for the EEFMT4 recording technology. The DCOLLECT command also has values added to its definitions for DDCMEDIA to allow the constants DDCMED11 for media MEDIA11, DDCMED12 for media MEDIA12 and DDCMED13 for media MEDIA13.

DDCEFMT4 and DDCEEFM4 subparameter for DCOLLECT

DDRECTE(DDCEFMT4 | DDCEEFM4)

DDCEFMT4

The recording technology is EFMT4. The constant value is 11.

DDCEEFM4

The recording technology is EEFMT4. The constant value is 12.

DDCMEDIA(DDCMED11|DDCMED12|DDCMED13)

DDCMED11

MEDIA11

DDCMED12

MEDIA12

DDCMED13

MEDIA13

LISTCAT

The LISTCAT command is enhanced to display for VOLUME entries:

- the new EFMT4 and EEFMT4 values associated with the RECORDING parameter
- the new MEDIA11, MEDIA12, and MEDIA13 values associated with the MEDIA-TYPE parameter

In addition, when displaying the NUMBERSCRATCHVOLUMES and the SCRATCHTHRESHOLD for the various media types, the display now uses two sets of titles and values, rather than one set included on three lines, as in previous releases. The display now appears as:

SCRATCH-VOLUME-----	MEDIA1	MEDIA2	MEDIA3	MEDIA4	MEDIA5	MEDIA6	MEDIA7	MEDIA8	MEDIA9	MEDIA10
SCR-VOL-THRESHOLD-----	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx
	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx
SCRATCH-VOLUME-----	MEDIA11	MEDIA12	MEDIA13							
SCRATCH-THRESHOLD-----	xxx	xxx	xxx							
	xxx	xxx	xxx							

EFMT4 and EEFMT4 subparameters in List tape volume entries sample output

```
LISTCAT -
  VOLUMEENTRIES
  ALL
IDCAMS  SYSTEM SERVICES          TIME: 11:29:12          09/02/11
PAGE    2
                                LISTING FROM CATALOG -- SYS1.VOLCAT.V0
VOLUME-ENTRY----V0A2991
  DATA-VOLUME
  LIBRARY-----ATLIB02          RECORDING-----EEFMT4          ERROR-STATUS-----NOERROR          CREATION-
DATE-2008-04-02
                                MEDIA-TYPE-----MEDIAx          USE-ATTRIBUTE----SCRATCH          ENT-EJ-
DATE----- (NULL)
  STORAGE-GROUP---*SCRCH*        COMPACTION----- (YES)
MOUNTED----- (NULL)
  CHECKPOINT----- (NULL)        SP-ATTRIBUTE-----NONE          WRITE-PROTECTED--- (NULL)          LAST-
WRITTEN----- (NULL)
  LOCATION-----LIBRARY          SHELF-LOC----- (NULL)
EXPIRATION----- (NULL)
  OWNER----- (NULL)
IDCAMS  SYSTEM SERVICES          TIME: 11:29:12          09/02/11
PAGE    3
                                LISTING FROM CATALOG -- SYS1.VOLCAT.VGENERAL
THE NUMBER OF ENTRIES PROCESSED WAS:
  AIX -----0
  ALIAS -----0
  CLUSTER -----0
  DATA -----0
  GDG -----0
  INDEX -----0
  NONVSAM -----0
  PAGESPACE -----0
  PATH -----0
  SPACE -----0
  USERCATALOG -----0
  TAPELIBRARY -----0
  TAPEVOLUME -----1
  TOTAL -----1
THE NUMBER OF PROTECTED ENTRIES SUPPRESSED WAS 0
IDC0001I FUNCTION COMPLETED, HIGHEST CONDITION CODE WAS 0
IDCAMS  SYSTEM SERVICES          TIME: 11:29:12          09/02/11
PAGE    4
IDC0002I IDCAMS PROCESSING COMPLETE. MAXIMUM CONDITION CODE WAS 0
```

Note: MEDIAx represents either MEDIA9, MEDIA10, MEDIA11, MEDIA12, or MEDIA13.

Chapter 4. Tape drive and tape volume allocation modifications for TS1140 tape drives

Changes made to device support, storage management subsystem (SMS), and Multiple Virtual Storage (MVS) device allocation enable you to allocate the tape drives and tape volumes. Within an IBM tape library environment, your system can fully recognize all supported media types and recording technologies.

Device support modifications

z/OS DFSMS device support provides hardware device-specific code, which allows tape drives, tape volumes, and DASD to interface with z/OS DFSMS. Specifically, it provides:

- The interfacing exits to the input/output supervisor (IOS) and EXCP device support code
- Error recovery procedure routines
- Services to acquire and log statistical and error data
- Services to acquire and display device states
- Utilities for functions like initializing tapes

You can use the MVS DEVSERV command to request basic status information on a device, a group of devices, or storage control units. You can use the QTAPE parameter of the DEVSERV command to display tape device information. Use DEVSERV QTAPE to display the real device type and the emulated device type.

With the DEVSERV QTAPE MED (medium) option, you can display information for the device type, media type, and cartridge volume serial number.

The syntax of the DEVSERV QTAPE command with the MED option is as follows:

DS QT,xxxx,MED,nnn

xxxx

Represents a three-digit or a four-digit device number in hexadecimal format.

nnn

Stands for the number of devices, starting at the address xxxx, for which the DEVSERV command displays the MED information. The value nnn is optional and can be any decimal number from 1 to 256, with 1 as the default value.

DEVSERV QTAPE will display '3592E07' for the real device type, where E07 is the drive model, if the underlying physical device is a 3592 Model E07 (TS1140). If the MEDIUM option is specified for DEVSERV QTAPE command, the real device type will be displayed as '3592-4E'.

Figure 1 on page 35 shows the output of DS QT,960 when a TS1140 (3592 Model E07) tape drive emulates a 3590 Model B1x tape drive.

```
11.20.46 SYSTEM1          DS QT,960
11.20.46 SYSTEM1          IEE459I 11.20.46 DEVSERV QTAPE 760
UNIT DTYPE DSTATUS CUTYPE DEVTYPE CU-SERIAL DEV-SERIAL ACL LIBID
0960 3590   ON-RDY  3592C06 3592E07* 0178-00030 0178-00030
```

Figure 1. DS QT,960 output

Figure 2 on page 36 shows the output of DS QT,960,MED when a TS1140 (3592 Model E07) tape drive emulates a 3590 Model B1x tape drive.

```

11.21.21 SYSTEM1          ds qt,960,MED
11.21.21 SYSTEM1          IEE459I 11.21.21 DEVSERV QTAPE 763
UNIT RDTYPE  EDTYPE EXVLSR INVLSR RMEDIA EMEDIA      WWID
0960 3592-4E 3590-1      1P0694 9 3

```

Figure 2. DS QT,960,MED output

A bit DFVTJAG4 is added to the IHADFVT mapping macro that maps the data facilities vector table. When this bit is set, it indicates that all of the software support for the 3592 Model E07 (TS1140) drive is on the system. This bit is set by the enabling module IECTEPTF, if it is installed.

The IECUCBCX mapping macro is changed to support the TS1140:

- The new EPI value is X'15' - REALJAG4_EMUL3590

The DDR Swap Exit handles swaps involving the 3592 Model E07 drive and the new recording formats EFMT4 and EEFMT4. Appropriate rules are also put in place for handling a lower technology EFMT2, EFMT3, EEFMT2, or EEFMT3 (MEDIA9 and MEDIA10) request on a 3592 Model E07 to a 3592 Model J, E05, or E06 (as appropriate and as consistent with past 3592 support). [Table 5 on page 36](#) shows a summary of what swaps are allowed.

Table 5. Format swaps allowed for TS1140			
Format	From device	Allowed to device	Message
EFMT1	3592-J	3592-J 3592-2 3592-2E	'MUST SWAP TO A 3592-J OR 3592-2'
EFMT1	3592-2 3592-2E	3592-2 3592-2E	'MUST SWAP TO A 3592-2'
EFMT2	3592-2 3592-2E	3592-2 3592-2E 3592-3E	'MUST SWAP TO A 3592-2 OR 3592-3E'
EEFMT2	3592-2E	3592-2E 3592-3E	'MUST SWAP TO A 3592-2E OR 3592-3E'
EFMT2/EEFMT2 or EFMT3/EEFMT3 (MEDIA5 - MEDIA8)	3592-3E	3592-3E	'MUST SWAP TO A 3592-3E'
EFMT3/EEFMT3 (MEDIA9 - MEDIA10)	3592-3E	3592-3E 3592-4E	'MUST SWAP TO A 3592-3E OR 3592-4E'
EFMT3/EEFMT3 (MEDIA9 - MEDIA10) or EFMT4/EEFMT4	3592-4E	3592-4E	'MUST SWAP TO A 3592-4E'
EFMT1 EFMT2/EEFMT2 (MEDIA5 - MEDIA10)	3592-3E	3592-3E 3592-4E	'MUST SWAP TO A 3592-3E OR 3592-4E' (Read attempt only - write attempts suppressed in ERP)
EFMT1 EFMT2/EEFMT2 (MEDIA5 - MEDIA8) EFMT3/EEFMT3 (MEDIA5 - MEDIA8)	3592-4E	3592-4E	'MUST SWAP TO A 3592-4E' (Read attempt only - write attempt's suppressed in ERP)

IOS000I Message with Encryption Failure

If an encryption-related key exchange between the drive and the key manager fails, an IOS000I message is issued indicating that an encryption failure has occurred:

```
IOS000I 07C2,7D,I0E,06,0600,,**,J1G150,ENCREADA 594
804008C022402751 0806FF0000131415 0017181900000092 2004E82061C42111
ENCRYPTION FAILURE
CU=08 DRIVE=131415 EKM=171819
```

Note: The preceding values for CU, DRIVE, and EKM generically represent the byte positions in sense data where the errors would be reported.

The control unit (CU), DRIVE, and EKM error codes are from sense bytes 08, 13-15, and 17-19, respectively. For example:

```
IOS000I 0BD0,60,I0E,01,0E00,,**,JJC046,ATNCMP1
804C08C022402751 0001FF0000000000 0005EE3100000092 2004E82061BA2111
ENCRYPTION FAILURE
CU=00 DRIVE=000000 EKM=05EE31
```

In this example, the error was reported by the encryption key manager (TKLM or IBM Security Key Lifecycle Manager).

For an EKM failure when using TKLM, refer to the "Reported errors" section of the Tivoli Key Lifecycle Manager Information Center. When looking up the EKM failure, use the last two bytes of the error code (for example, EE31 in the example above).

For an EKM failure when using IBM Security Key Lifecycle Manager, refer to the "Reported errors" section of the IBM Secure Key Lifecycle Manager Information Center. When looking up the EKM failure, use the last two bytes of the error code (for example, EE31 in the example above).

For a control unit failure, refer to:

- IBM System Storage 3592-C07 Controller Customer Information Center (<http://publib.boulder.ibm.com/infocenter/etc/cust/index.jsp>)
- *IBM System Storage 3592 Tape Drives and TS1120 Controller Operator Guide*, GA32-0556

Table 30 on page 210 contains error codes for control unit failures.

Table 6. Error codes for control unit failures		
Error code	Description	Recovery action
00	Not a control unit reported failure	Refer to the EKM and drive error codes reported in the IOS000I message for failure information.
01	The EKM was not available for an out-of-band key exchange.	Verify the EKM that the control unit is configured to use and also verify the state of that EKM. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).

Table 6. Error codes for control unit failures (continued)

Error code	Description	Recovery action
02	Timeout for an out-of-band key exchange	The EKM may have gone down mid-sequence, or there may be a network problem. Verify the state of the EKM and the TCP/IP network. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).
03	An in-band key exchange was canceled by the host.	Check for an IOS628E message for further information as to why the in-band proxy may have canceled the key exchange. For additional information on these error codes, see z/OS UNIX System Services Messages and Codes .

For more detailed information about the drive-reported conditions, and also about the EKM-reported conditions, see the Problem Determination section of the *IBM System Storage TS3500 Tape Library Operator Guide*, GA32-0560.

If there are multiple error codes reported, start with the EKM error code.

In addition, any system-managed tape library scratch tape that receives the IOS000I ENCRYPTION FAILURE message along with an IEC512 I/O ERR, remains in a scratch status, but is updated in the Tape Control Data Base (TCDB) with a VOLUME ERROR STATUS of I/O ERROR. This causes it to be placed in the software error category, and the tape is unusable until the I/O ERROR condition is cleared through manual intervention (for example, use ISMF volume ALTER from scratch. Scratch moves the volume from the software error category back to the scratch category). Periodically, use the DISPLAY SMS,LIBRARY command with DETAIL to display the number of scratch volumes in the software error category.

SMS modifications

SMS automates and centralizes storage management. It automatically assigns service requirements and attributes to data when that data is created. SMS configuration services validate, for example, the recording technology value that ISMF specifies in data class definitions.

SMS will support a new recording technology EFMT4 and EEFMT4 and the new media types MEDIA11, MEDIA12 and MEDIA13.

In an IBM tape library environment (automated or manual), use ISMF to specify the new recording formats (EFMT4 and EEFMT4) and the new media types (MEDIA11, MEDIA12 and MEDIA13). Note that the TS1140 (3592 Model E07) tape drive can read in the EFMT1 format (MEDIA5 through MEDIA8), the EFMT2 and EEFMT2 formats (MEDIA5 through MEDIA10), and the EFMT3 and EEFMT3 formats (MEDIA5 through MEDIA10). It can write in the new EFMT4 and EEFMT4 formats (MEDIA9, MEDIA10, MEDIA11, MEDIA12, MEDIA13) and for media interchange, it can also write in the EFMT3 and EEFMT3 formats (MEDIA9 and MEDIA10).

The recording technology attribute and the performance scaling or performance segmentation options can also be specified and used outside of the system-managed tape library environment.

In support of the TS1140 tape drives, SMS configuration services are updated to validate the recording technology values EFMT4 and EEFMT4 and the new media type values MEDIA11, MEDIA12 and MEDIA13.

In Data Class

With SMS, the system obtains information about the attributes of a data set from the data class for the data set.

When using encryption, any data set attributes you specify on these DD parameters override the corresponding attributes in the data class for the data set:

KEYLABL1 (key label 1)
KEYENCD1 (encoding for key label 1)
KEYLABL2 (key label 2)
KEYENCD2 (encoding for key label 2)

Overriding Attributes Defined in the Data Class

For a new data set, you can override the data class attributes defined in the data class for the data set by coding one or more of these DD parameters:

KEYLABL1 (key label 1)
KEYENCD1 (encoding for key label 1)
KEYLABL2 (key label 2)
KEYENCD2 (encoding for key label 2)

MVS device allocation modifications

MVS device allocation helps prioritize and select tape drives to meet the needs of application programs or system functions. Batch (JCL) or dynamic (SVC99) allocation makes these device needs known to MVS device allocation. MVS device allocation selects the appropriate devices and serializes them for the requester to use. It can also request that appropriate volumes be mounted on the allocated devices. It accomplishes these tasks by interfacing with SMS, DEVSERV, OAM, MSGDISP, and other system components.

MVS device allocation currently supports multiple types of tape devices. Within an IBM tape library environment, MVS device allocation considers media types and recording technologies when allocating tape drives and tape volumes. For the TS1140 tape drive, the dynamic allocation (SVC 99) volume interchange text unit (DALINCHG) allows you to specify EFMT4 or EEFMT4 for the recording technology and MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13 for the media type.

See [Table 7 on page 39](#) for DALINCHG parameter values appropriate for the TS1140.

<i>Table 7. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types</i>		
Parameter Value	Recording Technology	Media Type
99 or 0909	EFMT3	MEDIA9
A9 or 0A09	EEFMT3	MEDIA9
B9 or 0B09	EFMT4	MEDIA9
C9 or 0C09	EEFMT4	MEDIA9
09 or 0009	No format	MEDIA9
9A or 090A	EFMT3	MEDIA10
AA or 0A0A	EEFMT3	MEDIA10
BA or 0B0A	EFMT4	MEDIA10

Table 7. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types (continued)

Parameter Value	Recording Technology	Media Type
CA or 0C0A	EEFMT4	MEDIA10
OA or 000A	No format	MEDIA10
BB or 0B0B	EFMT4	MEDIA11
CB or 0C0B	EEFMT4	MEDIA11
OB or 000B	No format	MEDIA11
BC or 0B0C	EFMT4	MEDIA12
CC or 0C0C	EEFMT4	MEDIA12
OC or 000C	No format	MEDIA12
BD or 0B0D	EFMT4	MEDIA13
CD or 0C0D	EEFMT4	MEDIA13
OD or 000D	No format	MEDIA13

Related reading:

- See [z/OS MVS System Commands](#) for more information on the DEVSERV QTAPE command.
- See [z/OS MVS Programming: Authorized Assembler Services Guide](#) for more information about the DALINCHG parameter.
- See [z/OS DFSMS Installation Exits](#) for more information about the IECUCBCX mapping macro.

JCL DD Statement Parameters and Equivalent Text Units for TS1140

The JCL DD statement parameters and equivalent text units for TS1140 are unchanged from those for the TS1130 and the TS1120. See [“JCL DD statement parameters and equivalent text units for TS1120”](#) on page 214.

DSNAME Allocation Text Units for TS1140

The DSNAME allocation text units for TS1140 are unchanged from those for the TS1130 and the TS1120. See [“DSNAME Allocation Text Units for TS1120”](#) on page 215.

Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1140

Volume Interchange Specification - Key = '006F'

DALINCHG specifies the media type and track recording technique required for system-managed tape library allocation. Whenever possible, IBM suggests that you use an installation-defined DATACLAS construct name to control cartridge media type and track recording technique. Use this key only when it is not possible to use a predefined DATACLAS construct because of the dynamic nature of the program and because the program must control the media type and track recording technique. Contact your storage administrator before using this key.

Note: To specify DALINCHG, your program must be APF-authorized, in supervisor state, or running in PSW key 0-7. The specification of DALINCHG will be ignored if a non-system-managed tape volume is allocated.

When you code this key, # must be one, but LEN and PARM can be either 1 byte or 2 bytes in length (the 2-byte PARM length is supported in z/OS V1R12 and above). These PARM values are new for the TS1140:

B9 or 0B09

Enterprise Format 4 recording technology requested; Enterprise Extended Tape Cartridge 3592 requested.

C9 or 0C09

Enterprise Encrypted Format 4 recording technology requested; Enterprise Extended Tape Cartridge 3592 requested.

BA or 0B0A

Enterprise Format 4 recording technology requested; Enterprise Extended WORM Tape Cartridge 3592 requested.

CA or 0C0A

Enterprise Encrypted Format 4 recording technology requested; Enterprise Extended WORM Tape Cartridge 3592 requested.

0B or 000B

No specific recording technology requested; Enterprise Advanced Tape Cartridge 3592 requested.

BB or 0B0B

Enterprise Format 4 recording technology requested; Enterprise Advanced Tape Cartridge 3592 requested.

CB or 0C0B

Enterprise Encrypted Format 4 recording technology requested; Enterprise Advanced Tape Cartridge 3592 requested.

0C or 000C

No specific recording technology requested; Enterprise Advanced WORM Tape Cartridge 3592 requested.

BC or 0B0C

Enterprise Format 4 recording technology requested; Enterprise Advanced WORM Tape Cartridge 3592 requested.

CC or 0C0C

Enterprise Encrypted Format 4 recording technology requested; Enterprise Advanced WORM Tape Cartridge 3592 requested.

0D or 000D

No specific recording technology requested; Enterprise Advanced Economy Tape Cartridge 3592 requested.

BD or 0B0D

Enterprise Format 4 recording technology requested; Enterprise Advanced Economy Cartridge Tape 3592 requested.

CD or 0C0D

Enterprise Encrypted Format 4 recording technology requested; Enterprise Advanced Economy Tape Cartridge 3592 requested.

Chapter 5. ISMF modifications for TS1140 tape drive

In ISMF, these applications are modified to support the two new recording formats, EFMT4 and EEFMT4, and the three new media types, MEDIA11, MEDIA12, and MEDIA13:

- Data class define and alter panels
- Mountable tape volume list panel
- Tape library define and alter panels

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information on the ISMF tape library management application.
- See *z/OS DFSMSdfp Storage Administration* for additional information about data classes and the ISMF data class panels.

Data class define and alter panels

A data class is a set of data set allocation attributes and associated values. You can use the ISMF data class panels to define, alter, display, and list a data class. For the TS1140, you can specify (for media types MEDIA9 through MEDIA13) the E4 value for the recording technology attribute EFMT4, and the EE4 value for the recording technology attribute EEFMT4 on the data class define/alter panel. For EEFMT4, a panel is displayed for the user to enter the Key Labels and Encoding Mechanisms. The Performance Scaling and Performance Segmentation data class options can be used with MEDIA9 and MEDIA11. For media interchange, you can specify EFMT3 (E3) or EEFMT3 (EE3) with MEDIA9 and MEDIA10.

Mountable tape volume list panel

On the mountable tape volume list, the value EFMT4 or EEFMT4 can appear in column 9, RECORDING TECHNOLOGY and the value MEDIA11, MEDIA12, or MEDIA13 can appear in column 8, MEDIA TYPE. Existing media types MEDIA9 and MEDIA10 also apply to the new recording formats EFMT4 and EEFMT4.

Tape library define and alter panels

On the Tape Library Define and Tape Library Alter/Redefine panels, Scratch Threshold fields appear for media types MEDIA11, MEDIA12, and MEDIA13.

On the Tape Library display and Tape Library List panels, Scratch Threshold and Scratch Number fields appear for media types MEDIA11, MEDIA12, and MEDIA13.

Chapter 6. OCE modifications for TS1140 tape drive

The z/OS DFSMS Open/Close/End-of-Volume (OCE) component is a set of system routines that builds the control block structure that connects the application, access method, and the operating system. OCE modifications for the TS1140 tape drive (3592 Model E07) include support for the EFMT4 and EEFMT4 recording technologies and the MEDIA11, MEDIA12, and MEDIA13 media types.

Related reading:

- See [z/OS DFSMS Using Data Sets](#) and [z/OS DFSMS Using Magnetic Tapes](#) for additional information about the OCE routines.
- See [z/OS DFSMS Installation Exits](#) for more information on OCE installation exit parameter lists.
- See [z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries](#) for more information on tape volume records.

Overview

Two new recording formats, EFMT4 and EEFMT4, and three new media types, MEDIA11, MEDIA12, and MEDIA13, are supported by the TS1140 tape drive (3592 Model E07). The new recording formats (supported on MEDIA9 through MEDIA13) are higher density formats that increase cartridge capacities. For media interchange, the TS1140 drive is downward write and read compatible with EFMT3 and EEFMT3 (MEDIA9 and MEDIA10), and downward read compatible with EFMT3 and EEFMT3 (MEDIA5 through MEDIA8), EFMT2 and EEFMT2 (MEDIA5 through MEDIA10), and EFMT1 (MEDIA5 through MEDIA8). EFMT4 is the default recording technology. The TS1140 tape drive is supported only in 3590-1 Model B emulation.

SMS Managed Tape

An SMS managed cartridge Tape Volume Record (TVR) is updated by OPEN and EOVS with the recording technology and media type when opened for output to the first file (beginning of tape) on a TS1140.

WORM support

OPEN processing supports the new WORM MEDIA12 cartridge by honoring specification of the existing WORM related DEVSUP Parmlib member options (ENFORCE_DC_MEDIA and MTL_NO_DC_WORM_OK). This parallels the support for previous WORM cartridges.

Recording Technology Conflict

OPEN and EOVS resolve the incompatible track conflict when an EFMT4 or EEFMT4 formatted cartridge (MEDIA9 and MEDIA10) is mounted on a 3592 Model E05 or 3592 Model E06 drive during OPEN OUTPUT file sequence 1. The load point label structure is rewritten at the drive capable recording technology using the existing volume serial number obtained from the drive sense data.

Multiple Recording Format Capability

When a data set is opened for OUTPUT, file sequence 1, DISP=NEW, OPEN processing will be enhanced to recognize the data class recording technology specification and will explicitly direct the TS1140 to record in the appropriate recording format. By default, the TS1140 will record in the non-encrypted up-level format EFMT4 unless explicitly changed to record in another format. OPEN processing will always send down the recording format specified in data class, and if a recording format is not explicitly specified, EFMT4 will be used.

When writing from BOT (file sequence 1, DISP=OLD.SHR (for volume reuse), because this processing does not go through the data class ACS routine, Open processing will determine whether encryption had

previously been used and will ensure that the next usage of the volume is consistent with past usage. If the previous usage of the volume used encryption, OPEN will explicitly set the new encryption format (EEFMT4). OPEN will also obtain and pass the volume's existing key management-related information to the drive (key label and encoding mechanism). If encryption was not used, the default recording format (EFMT4) will be used. This behavior is consistent with past 3592 generation drives.

Cartridge Reuse with DISP=OLD|SHR

Cartridge reuse occurs when writing from BOT file sequence 1 with a disposition of DISP=OLD or DISP=SHR. When the mounted cartridge is encrypted, OPEN processing will set the recording technology to EEFMT4 and pass the volume's existing key labels and encoding mechanism to the drive. Additionally, when the mounted MEDIA9 or MEDIA11 cartridge is Performance Scaled or Performance Segmented OPEN will ensure the cartridge maintains the same characteristic on reuse.

OCE Tape Installation Exits

The IFGTEP macro maps the tape log data. [Table 8 on page 46](#) describes the IFGTEP fields for mapping the installation exit parameter list.

<i>Table 8. IFGTEP fields for the installation exit parameter list</i>		
Field name	Length and type	Description
TEPMRECTK	FIXED(8)	Recording technology of the mounted volume in binary. 11 - EFMT4 12 - EEFMT4
TEPMMEDT	FIXED(8)	Media type of the mounted volume in binary. 11 - MEDIA11 12 - MEDIA12 13 - MEDIA13
TEPEKBTRV	CHAR(6)	KB traversed from BOT (applies to 3590 architecture devices)
TEPSKBTRV	CHAR(6)	KB traversed from BOT (applies to 3590 architecture devices)
TEPE4KBYT	CHAR(3)	Bytes written to the volume in 4K increments since volume mounted (applies to 3490 architecture devices)
TEPS4KBYT	CHAR(3)	Bytes written to the volume in 4K increments since volume mounted (applies to 3490 architecture devices)

Table 8. IFGTEP fields for the installation exit parameter list (continued)

Field name	Length and type	Description
TEPEMPOS	FIXED(16)	Starting with the 3592 Model E07, media position decimal value n, representing the numerator in the fraction n/65535. This fraction represents the ratio of the distance from the beginning of the volume to the current position rounded down to the nearest 1/65535th.
TEPSMPOS	FIXED(16)	Same as TEPEMPOS.

Note: The following main and FILEE (File End on Volume) fields will be changed from FIXED(31) to FIXED(32):

TEPELSTB
TEPETBLK
TEPMCAPH
TEPMCAPP

Multiple recording format capability

For both system managed and standalone environments, during OPEN OUTPUT, file sequence 1, DISP=NEW, OPEN will retrieve the DATACLASS to determine which recording technology (EFMT4 or EEFMT4 or interchange formats EFMT3 or EEFMT3) should be used. For the prevailing recording format, OPEN will issue a command to enable it from load point. In fact, whenever the tape is to be written from load point, OPEN OUTPUT and EOVS will issue a command for the existing or prevailing recording technology. By default EFMT4 is requested.

IEZDEB (second DEB extension)

OPEN processing will set the new IEZDEB bit DEB2XEE4 if the cartridge is encrypted in the EEFMT4 format. OPEN will also set existing bit DEB2XENC if the cartridge is encrypted (regardless of the encryption format used). Refer to the IEZDEB mapping macro for additional bit settings pertaining to the recording format being used.

```
DEB2XEEG - 3592-E06/E07 WRITING IN EEFMT3 RECTECH
DEB2XEE4 - 3592-E07 WRITING IN EEFMT4 RECTECH
DEB2XENC - TAPE CARTRIDGE ENCRYPTED
```

OPEN will also set new bit DEB2XEF3 if the cartridge, on a 3592 Model E07, is written in the lower recording format EFMT3.

```
DEB2XEF3 - 3592-E07 WRITING IN EFMT3 RECTECH
```

Chapter 7. DFSMSdss considerations for the TS1140 tape drive

DFSMSdss, a z/OS functional component, allows you to copy, move, dump, and restore data sets and volumes. DFSMSdss is the primary data mover of DFSMS.

The considerations for using DFSMSdss with the TS1140 tape drive are that same as those for the TS1130. See [Chapter 20, “DFSMSdss considerations for the TS1130 tape drive,”](#) on page 129.

Chapter 8. DFSMSHsm considerations for the TS1140 tape drive

DFSMSHsm, a z/OS functional component, automatically manages low activity and inactive data in both system-managed and non-system-managed environments. DFSMSHsm also provides automatic backup and recovery of active data in those environments.

DFSMSHsm can use the TS1140 tape drive (3592 Model E07, 3592-4E) for all functions. DFSMSHsm normally uses non-WORM media (MEDIA9, MEDIA11, and MEDIA13) for non-ABARS functions. DFSMSHsm uses all media, including WORM (MEDIA10 and MEDIA12) for ABARS processing. DFSMSHsm can use the WORM media for non-ABARS processing, if specifically allowed by your installation.

This topic describes these considerations for using DFSMSHsm with the TS1140 tape drive:

- [“Modifying your SMS data classes” on page 51](#)
- [“Modifying your dump classes” on page 51](#)
- [“Input tape utilization” on page 52](#)
- [“Requesting information for encrypted volumes and tapes” on page 52](#)
- [“Requesting information for dump volumes” on page 53](#)
- [“Specifying esoteric tape unit names to DFSMSHsm” on page 54](#)
- [“Tape Hardware Emulation” on page 54](#)
- [“Specifying how much of a tape DFSMSHsm uses” on page 54](#)
- [“Using tape device naming conventions” on page 55](#)
- [“Output tape selection” on page 56](#)
- [“Output tape utilization” on page 56](#)
- [“Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives” on page 57](#)
- [“Recovering overwritten encrypted tapes” on page 57](#)
- [“DFSMSHsm tips” on page 57.](#)

Modifying your SMS data classes

To use tape hardware encryption, you must modify your SMS data class definitions to request encryption from the encryption-capable tape drives.

Modifying your dump classes

The method for requesting encryption depends on whether you plan to use hardware encryption or host-based encryption, as follows:

- To request hardware encryption for a dump class, specify it in the SMS data class for the dump data.
- To request host-based encryption for a dump class, use the DFSMSHsm `DEFINE DUMPClass(ENCRYPT)` command. With `ENCRYPT`, include the `RSA` or `KEYPASSWORD` subparameters to specify the type of host-based encryption. `ENCRYPT(NONE)` specifies host-based encryption should not be done.

If your dump classes are currently defined to use host-based encryption (and possibly host-based compression before encryption), it is recommended that you remove the host-based encryption requests from any dump classes for which you plan to use tape hardware encryption.

During the process of migrating your dump classes to use hardware encryption, you might have some dump classes that are still defined to use host-based encryption, while their associated SMS data classes are defined to use tape hardware encryption. Here, DFSMSdss ignores requests for host-based encryption

for these tape volumes and, instead, uses hardware encryption. This processing allows you to complete the migration to hardware encryption without having to modify your dump-requesting jobs. However, removing host-based encryption requests from a dump class when tape hardware encryption is also requested can avoid confusion concerning which process is active.

Note:

1. To determine whether hardware encryption or host-based encryption was used for a particular tape volume, check the associated dump volume record (DVL).
2. If more than one dump class is specified (creating more than one dump copy), those dump classes specify host-based encryption, each dump class has a unique data class assigned, and some but not all of the associated data classes request tape hardware encryption, then all dump copies will fail. In other words, tape hardware encryption can override host-based encryption for all dump classes associated with a source volume or none of the dump classes, but it cannot override a subset of those dump classes.

Related reading:

- For more information on the DEFINE DUMPCCLASS command, see [*z/OS DFSMSdfp Storage Administration*](#).

Input tape utilization

In an SMS environment, the choice of an input drive for a particular tape is controlled by the library and is transparent to DFSMSHsm.

In a non-SMS environment, the choice of drives is controlled by the unit name recorded in the tape's CDS records. This unit name is the name of the original output unit selected by the installation, or its generic equivalent. In a mixed non-SMS environment where more than one tape technology is associated with a generic unit name, you must use esoteric names for the output unit and its associated input unit.


With the TS1140, the drive can utilize MEDIA5 through MEDIA13 as input for all functions although MEDIA6, MEDIA8, MEDIA10, and MEDIA12 are normally only used by the ABARS function. The choice of the correct recording technology when they are mounted on a TS1140 is transparent to DFSMSHsm.

Requesting information for encrypted volumes and tapes

New values EFMT4 and EEMFT4 are added to the SELECT parameter of the DFSMSHsm LIST TTOC command to allow you to list tape volumes with and without tape hardware encryption.

This shows a portion of the syntax for the LIST TTOC command:

N: TTOC SELECT Optional Parameters

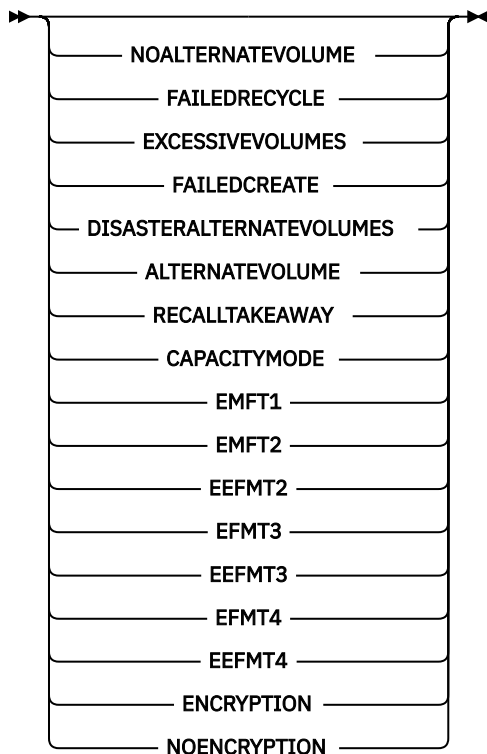

Related reading:

For more information on the LIST TTOC command, see [z/OS DFSMSdfp Storage Administration](#).

Displaying EFMT4 and EEFMT4 formatted volumes

You can use the LIST TTOC command to list volumes based on the recording technology used. To list all volumes recorded in EFMT4 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EFMT4) ODS(ttoc.out.dataset)
```

To list all volumes recorded in EEFMT4 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EEFMT4) ODS(ttoc.out.dataset)
```

Displaying encrypted tape volumes

You can use the LIST TTOC command to list tape volumes that were encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(ENCRYPTION) ODS(ttoc.out.dataset)
```

You can also use the LIST TTOC command to list tape volumes that were not encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(NOENCRYPTION) ODS(ttoc.out.dataset)
```

Requesting information for dump volumes

For a list of the information for a specific dump volume managed by DFSMSHsm, specify the LIST command with the DUMPVOLUME(*volser*) parameter. If the volume was tape hardware encrypted, the ENC field will indicate THW.

For a list of the information for the dump volumes of the requested status managed by DFSMSHsm, specify the LIST command with the DUMPVOLUME parameter without the volume serial number. Instead, include a status parameter such as AVAILABLE, UNAVAILABLE, EXPIRED, UNEXPIRED, or NORETENTIONLIMIT. The command lists the volumes in alphanumeric sequence by volume serial number.

Related reading:

For more information on the LIST DUMPVOLUME command, see [*z/OS DFSMSdfp Storage Administration*](#)

Specifying esoteric tape unit names to DFSMSHsm

When using the SETSYS USERUNITTABLE command to specify esoteric tape unit names to DFSMSHsm, note that DFSMSHsm rejects mixed combinations of device names in an esoteric group, with these exceptions:

- It allows the use of both 3480 and 3480X device names in a single group. Improved Data Recording Capability (IDRC), however, is not used with such a group because all devices in the group are treated as 3480s. If an esoteric group associated only with 3480Xs exists, 3480s should not be added to it, because the data already written using this esoteric tape unit name may create IDRC incompatibilities.
- The following sets of tape units are allowed into the same esoteric because they share common write formats:
 - 3592-1, 3592-2, and 3592-2E tape units, which share EFMT1
 - 3592-2, 3592-2E, and 3592-3E tape units, which share EFMT2 and EEFMT2
 - 3592-3E and 3592-4E tape units, which share EFMT3 and EEFMT3

It is up to the user to ensure the drives in a mixed esoteric will be used with a common recording technology. For example, if any 3592-1 drives are included, then all drives in the esoteric must use EFMT1 for output. If the esoteric mixes 3592-2 and 3592-2E drives, then all drives must be set up to use EFMT1 or EFMT2. If the esoteric contains mixed 3592-2E and 3592-3E tape units, then all drives must be set up to use EFMT2 or EEFMT2, the write formats they have in common. If the esoteric contains mixed 3592-3E and 3592-4E tape units, then all drives must be set up to use EFMT3 or EEFMT3, the write formats they have in common.

Note:

1. If DFSMSHsm rejects an esoteric tape unit name, it does not reject the rest of the valid esoteric names specified in the USERUNITTABLE command. Those names are now recognized by DFSMSHsm as valid esoteric tape unit names. Each time you specify USERUNITTABLE, the valid esoteric tape unit names identified with this parameter replace any esoteric tape unit names identified through a previous USERUNITTABLE parameter of the SETSYS command.

Related reading:

- For more information on the SETSYS command, see [*z/OS DFSMSdfp Storage Administration*](#).

Tape Hardware Emulation

- The 3592-E07, along with the 3592-E06 and the 3592-E05, always runs in emulation mode as a 3590-B1x tape drive.
- The 3590-E1x, 3590-H1x, and the 3592-J1A drives emulate either a 3490-E1x or 3590-B1x.

Specifying how much of a tape DFSMSHsm uses

For 3592 devices: If your installation requires very fast access to data on a MEDIA9 or MEDIA11 tape, consider using the 3592 performance scaling feature. In DFSMSHsm, performance scaling applies in both tape libraries and standalone environments.

Performance scaling uses 20% of the physical space on each tape and keeps data sets closer together and closer to the initial load point. Performance scaling permits the same amount of data to exist on a larger number of tapes, allowing more input tasks to run concurrently. With performance scaling, you can effectively increase the "bandwidth" of operations that read data in from tape.

In contrast, performance segmentation allows the use of most of the physical media, while enhancing performance for the first and last portions of the tape.

Related reading:

- For more information about implementing DFSMSHsm tape environments, see [z/OS DFSMSdfp Storage Administration](#).

Using tape device naming conventions

Table 9 on page 55 shows the hardware (marketing device name) and software (MVS generic device name) names for 3592 tape devices. The MVS generic device names are also the names used by the job control language (JCL) to communicate with the z/OS operating system. Use the MVS generic name or your installations esoteric name in any JCL statements or DFSMSHsm commands that specify device names.

Table 9. Tape device naming conventions		
Device description	Hardware name	Generic MVS name
<p>3592-4E</p> <ul style="list-style-type: none"> • Enterprise recording format: EFMT1 (readonly), EFMT2 (readonly), EEFMT2 (readonly), EFMT3, EEFMT3, EFMT4, EEFMT4 • IBM Enterprise tape cartridge: MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10, MEDIA11, MEDIA12, MEDIA13 <p>Note: MEDIA5 through MEDIA8 are readonly.</p> <ul style="list-style-type: none"> • Always in "emulation mode" as a 3590 Model B device. 	3592-E07	3590-1
<p>3592-3E</p> <ul style="list-style-type: none"> • Enterprise recording format: EFMT1 (readonly), EFMT2, EEFMT2, EFMT3, EEFMT3 • IBM Enterprise tape cartridge: MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10 • Always in "emulation mode" as a 3590 Model B device. 	3592-E06	3590-1
<p>3592-2E</p> <ul style="list-style-type: none"> • Enterprise recording format: EFMT1, EFMT2, EEFMT2 • IBM Enterprise tape cartridge: MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10 • Always in "emulation mode" as a 3590 Model B device. 	3592-E05	3590-1
<p>3592-2</p> <ul style="list-style-type: none"> • Enterprise recording format: EFMT1, EFMT2 • IBM Enterprise tape cartridge: MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10 • Always in "emulation mode" as a 3590 Model B device. 	3592-E05	3590-1

Table 9. Tape device naming conventions (continued)		
Device description	Hardware name	Generic MVS name
3592-J <ul style="list-style-type: none"> Enterprise recording format: EFMT1 IBM Enterprise tape cartridge: MEDIA5, MEDIA6, MEDIA7, MEDIA8 In “emulation mode” as a 3590 Model B device (or 3490E tape drives with MEDIA5 tape cartridge media only). In a system-managed tape library environment (manual or automated), only 3590 Model B emulation is supported. 	3592-J1A	3590-1

Output tape selection

DFSMSHsm can select TS1140 tape drives (3592-4E) for output in SMS and non-SMS tape environments.

Output tape utilization

DFSMSHsm writes to 97% of the capacity of MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13 tapes unless otherwise specified by the installation. Other percentages can be specified through the SETSYS TAPEUTILIZATION command, depending on the particular needs of the installation.

Scratch Tapes

The TS1140 can use scratch MEDIA9, MEDIA11, and MEDIA13 tapes for all DFSMSHsm functions. It can also utilize scratch MEDIA10 and MEDIA12 tapes for ABARS. The TS1140 can write in EFMT3, EEFMT3, EFMT4, and EEFMT4 recording technologies. The recording technology used on scratch media is controlled by the data class assigned to the tape by the ACS routines. If no recording technology is specified the default of EFMT4 is used.

The ACS routines often use the single file format tape data set name to make the data class selection. This control is transparent to DFSMSHsm.

Partial Tapes

When the TS1140 uses a partial tape for output, the existing data on tape may be in the EFMT3, EEFMT3, EFMT4, or EEFMT4 recording technologies. The tape will be extended in the same format. The choice of the correct recording technology will be transparent to DFSMSHsm. MEDIA10 and MEDIA12 tapes are normally (unless patched by the customer) used only by ABARS and only as scratch tapes. MEDIA11, MEDIA12, and MEDIA13 partial tapes are always recorded using EFMT4 or EEFMT4 technology.

Earlier technology 3592 drives might use MEDIA9 and MEDIA10 partial tapes. DFSMSHsm checks the recording format already on the tape against the capabilities of the drive to ensure the drive is capable of extending the tape. If not, DFSMSHsm rejects the partial tape.

Input tape utilization

With the TS1140, the drive can use MEDIA5 through MEDIA13 as input for all functions, although MEDIA6, MEDIA8, MEDIA10, and MEDIA12 are normally only used by the ABARS function. The choice of the correct recording technology when they are mounted on a TS1140 is transparent to DFSMSHsm.

Reuse Capacity

The current scheme has one reuse capacity for each media type regardless of the recording technology. This encourages media used with multiple recording technologies to move from older to newer technologies. This scheme will continue with TS1140.

Mixed Device Esoteric Units

Keeping with the philosophy of allowing only write compatible tape devices to coexist in the same esoteric, TS1140 drives will be allowed in the same esoteric with TS1130 drives but not allowed in the same esoteric with TS1120 or 3592-J1A drives. The read-only compatibility between the TS1140 and TS1120 and 3592-J1A does not meet the write-compatibility requirements for a mixed esoteric. In a stand-alone (non IBM library) tape environment, the user must make sure all drives in a mixed esoteric will use a recording technology they have in common when they write data to tape. For TS1140 and TS1130 drives the common recording technologies for read and write are EFMT3 and EEFMT3.

Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives

You might encounter a situation in which you need to use the 3590-1 generic unit when it contains a mixture of 3590 devices that cannot share tapes. If so, you must use other means, such as SMS ACS routines, to keep these drives separate, and you can use this patch to disable the DFSMSHsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.1.....)
```

You can use this patch to re-enable the DFSMSHsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.0.....)
```

By default, checking is enabled for non-SMS tape allocations.

A non-SMS tape allocation for a generic unit 3590-1 containing mixed track technologies causes DFSMS to issue message ARC0030I. Here, DFSMSHsm allows the allocation to continue, but a tape/tape unit mismatch can result in an OPEN failure.

DFSMSHsm does not issue message ARC0030I for a mix of 3592-1, 3592-2, and TS1120 tape units, nor for a mix of 3592-2, TS1120, and TS1130 tape units, nor for a mix of TS1130 and TS1140 tape units, since they can write using a common recording technology.

Recovering overwritten encrypted tapes

Recovery of overwritten encrypted tape volumes might not be possible; the tape recovery process described in the topic "Case 6: Overwritten Migration Tape" of [*z/OS DFSMSdfp Storage Administration*](#) does not work for an encrypted tape.

DFSMSHsm tips

See "DFSMSHsm tips" on page 307 for some tips that you might find helpful when using DFSMSHsm with the TS1140 tape drive.

Chapter 9. DFSMSrmm modifications for TS1140 tape drive

DFSMSrmm is a feature of z/OS. It manages all tape media, such as cartridge system tapes and 3420 reels, and other removable media that you define to it. The DFSMSrmm modifications for the TS1140 tape drive include updates to:

- DFSMSrmm TSO subcommands
- REXX variables of the TSO subcommand
- API structured field introducers
- Mapping macros fields

Note: References to the new recording formats (EFMT4 and EEFMT4) and to the new media type (MEDIA11, MEDIA12) are applicable at z/OS V1R11 and above, whereas changes pertaining to physical size, physical space used, compression, and block counts are applicable only at z/OS V1R12 and above.

Related reading:

- See [*z/OS DFSMSrmm Managing and Using Removable Media*](#) for the complete syntax of the DFSMSrmm ADDVOLUME subcommand, the DFSMSrmm CHANGEVOLUME subcommand, the DFSMSrmm SEARCHVOLUME subcommand, DFSMSrmm return codes and reason codes, and REXX variables.
- See [*z/OS DFSMSrmm Application Programming Interface*](#) for further information about the DFSMSrmm API.
- See [*z/OS DFSMSrmm Implementation and Customization Guide*](#) and [*z/OS DFSMSrmm Reporting*](#) for additional information about DFSMSrmm mapping macros.


DFSMSrmm TSO subcommands

This section describes the updates to these DFSMSrmm TSO subcommands:

- ADDVOLUME
- CHANGEVOLUME
- SEARCHVOLUME
- ADDDATASET
- CHANGEDATASET
- LISTDATASET
- LISTVOLUME

ADDVOLUME

The ADDVOLUME TSO subcommand adds volumes to the DFSMSrmm control data set. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the ADDVOLUME TSO subcommand.

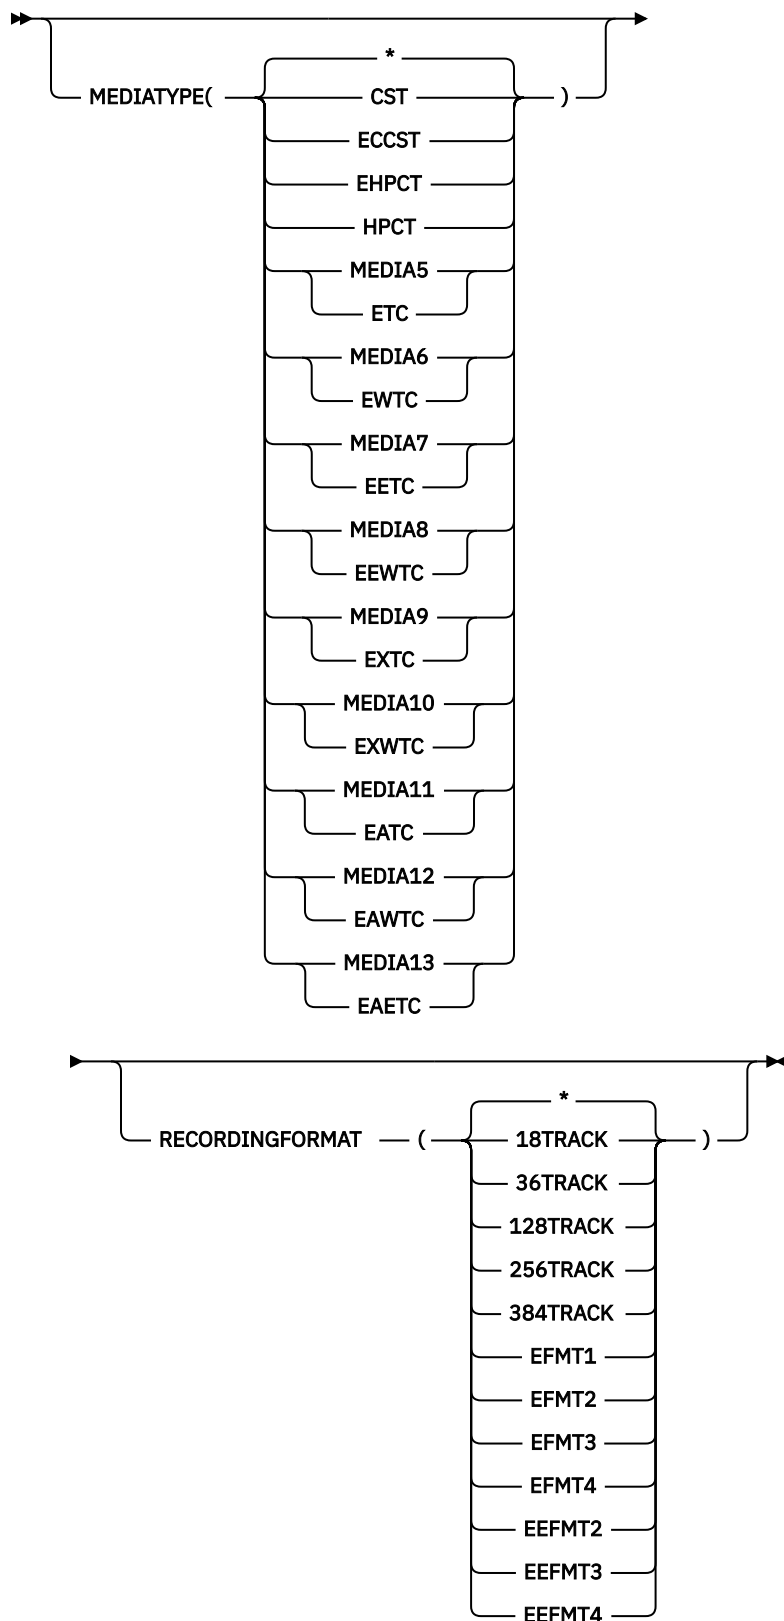

RECORDINGFORMAT(EFMT4)

Data has been written to the volume in EFMT4 (enterprise format 4) recording format. A recording format of EFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

RECORDINGFORMAT(EFMT4)

Data has been written to the volume in EFMT4 (enterprise encrypted format 4) recording format. A recording format of EFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

MEDIATYPE(MEDIA11 | EATC)

IBM Enterprise Advanced Tape Cartridge. MEDIA11 is valid only with a recording format of EFMT4 or EFMT4.

MEDIATYPE(MEDIA12 | EAWTC)

IBM Enterprise Advanced WORM Tape Cartridge. MEDIA12 is valid only with a recording format of EFMT4 or EFMT4.


MEDIATYPE(MEDIA13 | EAETC)

IBM Enterprise Advanced Economy Tape Cartridge. MEDIA13 is valid only with a recording format of EFMT4 or EFMT4.

To use the EFMT4 and the EFMT4 recording technology, you must specify the MEDIATYPE(MEDIATYPE(MEDIA9|MEDIA10|MEDIA11|MEDIA12|MEDIA13) operand of the ADDVOLUME TSO subcommand.

CHANGEVOLUME

The CHANGEVOLUME TSO subcommand updates details for a volume defined to DFSMSrmm. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the CHANGEVOLUME TSO subcommand.

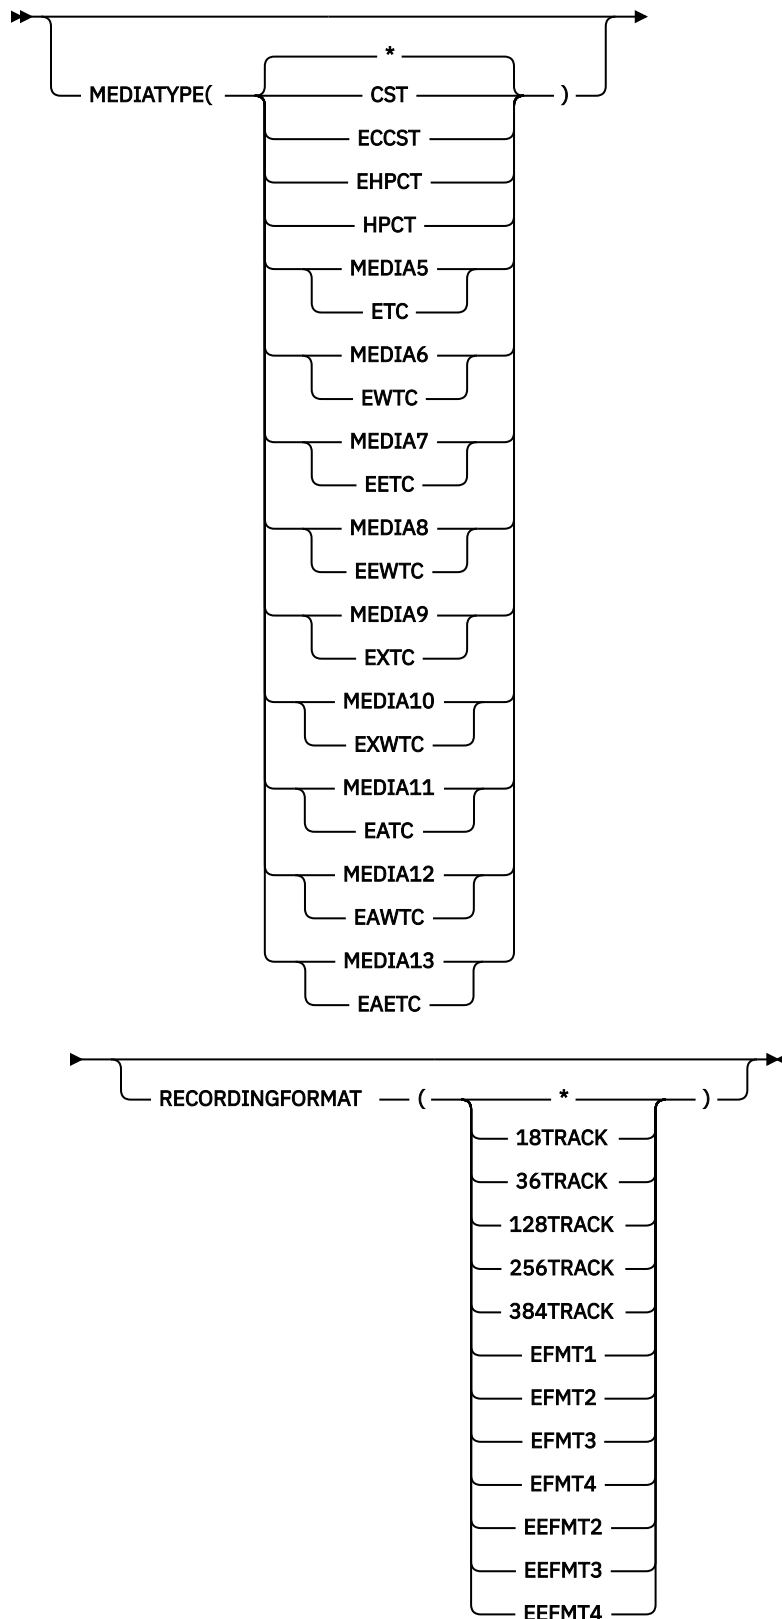

RECORDINGFORMAT(EFMT4)

Data has been written to the volume in EFMT4 (enterprise format 4) recording format. A recording format of EFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

RECORDINGFORMAT(EEFMT4)

Data has been written to the volume in EEFMT4 (enterprise encrypted format 4) recording format. A recording format of EEFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

MEDIATYPE(MEDIA11 | EATC)

IBM Enterprise Advanced Tape Cartridge. MEDIA11 is valid only with a recording format of EFMT4 or EEFMT4.

MEDIATYPE(MEDIA12 | EAWTC)

IBM Enterprise Advanced WORM Tape Cartridge. MEDIA12 is valid only with a recording format of EFMT4 or EEFMT4.


MEDIATYPE(MEDIA13 | EAETC)

IBM Enterprise Advanced Economy Tape Cartridge. MEDIA13 is valid only with a recording format of EFMT4 or EEFMT4.

To use the EFMT4 and the EEFMT4 recording technology, you must specify the MEDIATYPE(MEDIA9, MEDIA10, MEDIA11, MEDIA12, MEDIA13) operand of the CHANGEVOLUME TSO subcommand.

SEARCHVOLUME

You can use the SEARCHVOLUME TSO subcommand to obtain a list of volumes that match selection criteria that you specify. Specify EEFMT4 to limit your search to volumes that are written in the EEFMT4 recording technology. You can also specify a particular media type, such as MEDIA11, to then further limit your search. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the SEARCHVOLUME TSO subcommand.

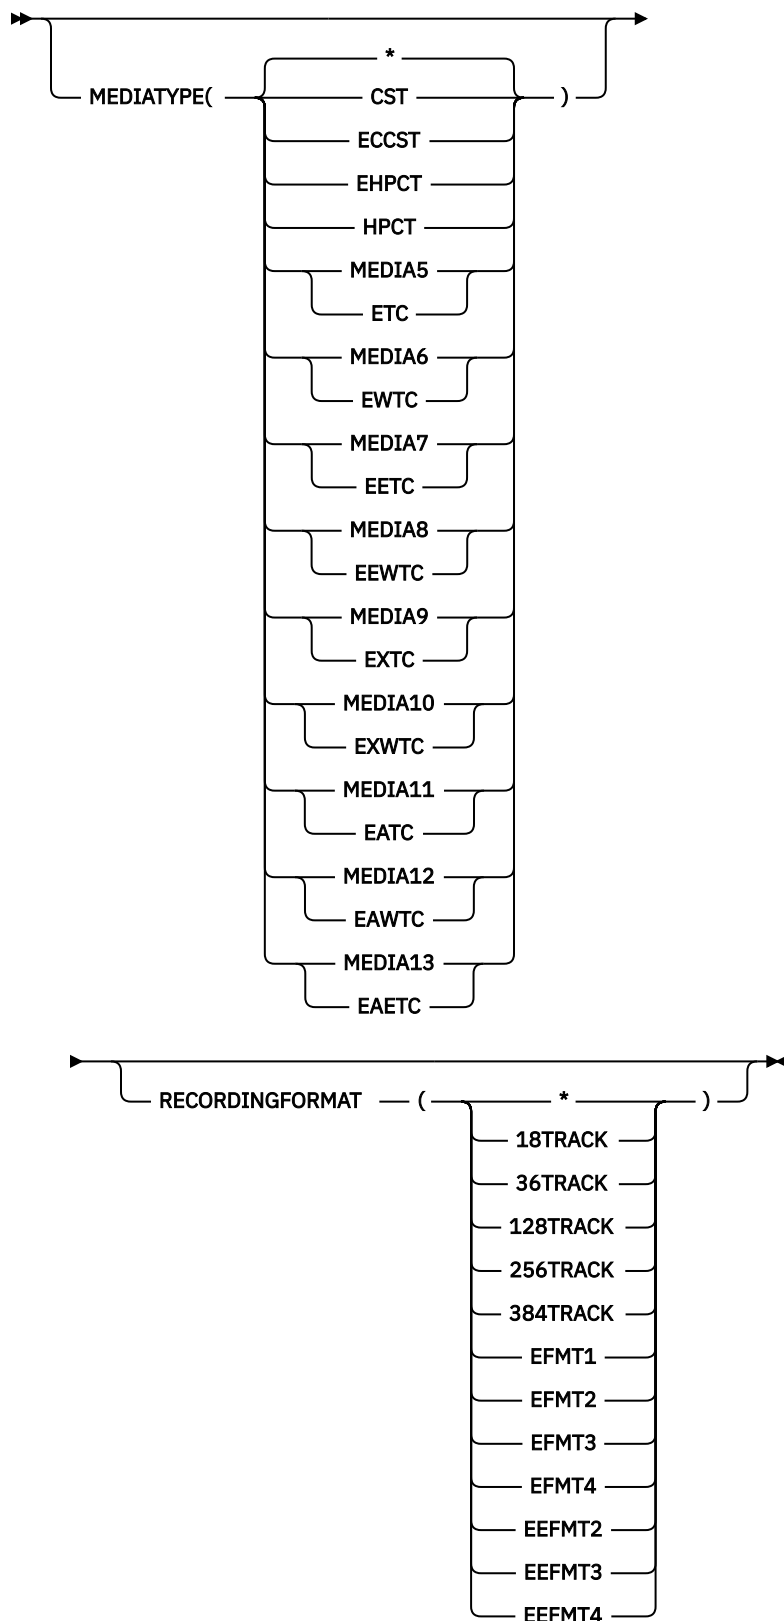

RECORDINGFORMAT(EFMT4)

Data has been written to the volume in EFMT4 (enterprise format 4) recording format. A recording format of EFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

RECORDINGFORMAT(EFMT4)

Data has been written to the volume in EFMT4 (enterprise encrypted format 4) recording format. A recording format of EFMT4 is valid with existing MEDIATYPE(MEDIA9 | MEDIA10) and new MEDIATYPE (MEDIA11 | MEDIA12 | MEDIA13) only.

MEDIATYPE(MEDIA11 | EATC)

IBM Enterprise Advanced Tape Cartridge. MEDIA11 is valid only with a recording format of EFMT4 or EFMT4.

MEDIATYPE(MEDIA12 | EAWTC)

IBM Enterprise Advanced WORM Tape Cartridge. MEDIA12 is valid only with a recording format of EFMT4 or EFMT4.

MEDIATYPE(MEDIA13 | EAETC)

IBM Enterprise Advanced Economy Tape Cartridge. MEDIA13 is valid only with a recording format of EFMT4 or EFMT4.

ADDDATASET

Use the ADDDATASET TSO subcommand to manually define a data set on a volume to DFSMSrmm. The volume on which the data set resides must have either master or user status.

BLKCOUNT(number_of_blocks)

Specifies the number of data blocks used by the data set. The value corresponds to that recorded in the data set's End of File label. The minimum allowable decimal value is 0; the maximum allowable decimal value is 4294967295. DFSMSrmm uses BLKCOUNT, together with BLKSIZE, to calculate the approximate size of the data set and the sum of all data set sizes to set the volume usage. If you do not use BLKCOUNT, DFSMSrmm cannot list the space used for the data set or volume when you request it. The default value is 0.

Note: The total block count cannot be set or changed by subcommand. It is set based on information recorded during CLOSE processing.

CHANGEDATASET

Use the CHANGEDATASET TSO subcommand to update information about data sets defined to DFSMSrmm.

BLKCOUNT(number_of_blocks)

Specifies number of data blocks used by the data set. The value corresponds to that recorded in the data set's End of File label. The minimum allowable decimal value is 0; the maximum allowable decimal value is 4294967295. DFSMSrmm uses BLKCOUNT together with BLKSIZE to calculate the data set's approximate size and the sum of all data set sizes to set the volume usage.

TOTALBLKCOUNT(count)

Use this operand to add a block count for a complete tape data set. The total block count is the sum of all block counts for all volumes on which the data set resides. The minimum allowable decimal value is 0. The maximum allowable decimal value is 18446744073709551615.

Note: When this operand is specified, the FORCE operand must also be specified if DFSMSrmm has automatically recorded information about the volume during O/C/EOV processing of a data set on the volume. To use the FORCE operand, you must have CONTROL access to the STGADMIN.EDG.MASTER security resource and UPDATE access to the STGADMIN.EDG.FORCE security resource.

LISTDATASET

You can use the LISTDATASET TSO subcommand to display information that is recorded by DFSMSrmm for a single data set. In addition to the previously displayed information, LISTDATASET now also displays **Physical size (KB)** and **Compression** fields. Also the maximum size for **Total block count** is increased to 20 digits.

To request information recorded by DFSMSrmm for the data set ADSM.BFS on volume MAA269, issue the command:

```
RMM LISTDATASET 'ADSM.BFS' volume(MAA269)
```

DFSMSrmm displays information such as that shown:

```
Data set name = ADSM.BFS
Volume        = MAA269          Physical file sequence number = 1
Owner         =                  Data set sequence = 1
Create date   = 04/29/2011 Create time = 17:51:00 System ID      = EDS1
Expiration date = 05/29/2011 Original expir. date =
Block size    = 262144         Block count      = 1
Data set size(KB) = 256
Physical size(KB) = 85          Compression      = 3.01
Percent of volume = 0           Total block count = 12345678901234567890
Logical Record Length = 0       Record Format    = U
Date last written = 04/29/2011 Date last read     = 04/29/2011
Job name        = ADSM          Last job name    = ADSM
Step name       = ADSM          Last step name   = ADSM
Program name    = DSMSESV       Last program name = DSMSESV
DD name         = SYS00325      Last DD name     = SYS00325
Device number   = 05C2          Last Device number = 05C2
Management class = ATLSMT       VRS management value =
Storage group   = MAS3LIB1      VRS retention date = 05/01/2012
Storage class   = MEDIA3        VRS retained      = NO
Data class      = ATLSM         ABEND while open   = NO
Catalog status  = UNKNOWN
```

LISTVOLUME

You can use the LISTVOLUME TSO subcommand to display information that is recorded by DFSMSrmm for a single volume. In addition to the previously displayed information, LISTVOLUME now also displays **Physical (KB)** and **Compression** fields. You must specify a volume serial number.

To request all the information recorded by DFSMSrmm for the encrypted volume with serial number JJC024, issue the command:

```
RMM LISTVOLUME JJC024 ALL
```

DFSMSrmm displays information such as that shown:

```
Volume information:
Volume = JJC024 VOL1 = Rack = JJC024 Owner = RMMUSER
Type = PHYSICAL Stacked count = 0 Jobname = D016216J
Worldwide ID =
Creation: Date = 06/28/2011 Time = 04:49:14 System ID = W98MVS2
Assign: Date = Time = System ID = W98MVS2
Expiration date = 09/02/2011 Original =
Retention date = Set retained = NO
Data set name = RMMUSER.TEST.CBR
Volume status:
Status = USER Availability = Label = SL
Current label version = Required label version =
Media information:
Density = IDRC Type = EETC Format = EEFTM3 Compaction = YES
Special attributes = NONE Vendor =
Encryption Key Labels: Method:
1=wcc1 LABEL
2=wcc2 LABEL
Action on release:
Scratch immediate = N Expiry date ignore = N
Scratch = Y Replace = N Return = N Init = N Erase = N Notify = N
Actions pending:
Scratch = N Replace = N Return = N Init = N Erase = N Notify = N
Storage group =
Loan location = Account = T,H,IOM,,,SYSPROG
Description =
Security class = Description =
Access information:
Owner access = ALTER Volume access = NONE Last change = *OCE
VM use = N MVS use = Y
Access list:
Statistics:
Number of data sets = 2 Data set recording= ON
Volume usage(MB)= 2 Use count = 3
Physical(KB) = 680 Compression = 3.01
Capacity(MB) = 200 Percent full = 0
```



```

Date last read = 08/28/2011   Date last written = 08/28/2011
Drive last used = 0FA0       Write mount count = 2
Volume sequence = 1          Media name = 3480
Previous volume =             Next volume =
Product number =             Level = V R M
Feature code =
Error counts:
Temporary read = 0           Temporary write = 0
Permanent read = 0           Permanent write = 0
Store information:
Movement tracking date =     Intransit = N
In container =              Move mode = AUTO
Location: Current            Destination Old Required Home
Name = ATL15393
Type = AUTO                 ATL15393
Bin number =                AUTO
Media name =

```

DFSMSrmm REXX variables

You can use the REXX variables to obtain volume information. The variables produced by the SEARCHVOLUME subcommand are stem variables.

Table 10. Changed TSO subcommand REXX variables

Variable Name	Subcommands	Contents	Format
EDG@BLKT	LD	Total block count	Numeric: up to 10 characters. -1 indicates that BLK6 should be used.
EDG@BLK6	LD	Total block count	Numeric: 0 - 18446744073709551615
EDG@CRAT	LD, LV	Compression ratio in hundredths	Numeric: 0.00 – 999.99 There will always be 2 decimal places.
EDG@MEDR	LV SV	Recording technology	One of *, 18TRK, 36TRK, 128TRK, 256TRK, 384TRK, EFMT1, EFMT2, EEFMT2, EFMT3, EEFMT3, EFMT4, and EEFMT4
EDG@MEDT	LC LV SV	Tape media type	One of *, CST, EAETC, EATC, EAWTC, ECCST, EETC, EEWTC, EHPCT, ETC, EWTC, EXTC, EXWTC, HPCT
EDG@PSZ6	LD LV	Physical space used	Character: Two concatenated fields, <i>factor</i> and <i>value</i> ; where <i>factor</i> is KB, MB, GB, or blank; and <i>value</i> is 0 to 9999999999. For example, GB720.

DFSMSrmm structured field introducers

The DFSMSrmm application programming interface (API) returns data as structured fields in an output buffer that you define. Structured fields consist of a structured field introducer (SFI) and the data. SFIs describe the type, length, and other characteristics of the data.

All Structured Field Introducers (SFIs) have this format:

Bytes

Description

0-1

2-byte length: SFI length plus data length

2-4

3-byte identifier: SFI ID (hexadecimal)

5

1-byte type modifier: Type of SFI

- 0 = 8-byte, fixed-length SFI

6

1-byte (Reserved)

7

1-byte data type: Type of data, if any, that follows the SFI

- 0=Undefined (no data)
- 1=Character (fixed-length)
- 2=Bit(8) (1-byte flag, multiple bits can be on)
- 3=Binary(8) (1-byte (hex) value)
- 4=Binary(15) (2-byte (hex) value)
- 5=Binary(32) (unsigned 4-byte (hex) value)
- 6=Binary(64) (unsigned 8-byte (hex) value)
- 7=Character (variable-length)
- 8=Compound SFI (multiple related values, see [“Compound SFI” on page 69.](#))
- 9=(4 bytes) Packed decimal Julian date: yyyydddC
- A=(4 bytes) Packed decimal time format: hhmmssC

Table 40 on page 242 shows the structured field introducers that support TS1140 tape drives.

Table 11. Changed structured field introducers

Name	Number	Type	Length	Value	Subcommands
BLKT	X'80D030'	Binary(32)	12	Total block count X'FFFFFFFF' indicates that BLK6 SFI contains the actual value	LD SD
BLK6	X'80D0B0'	Binary(64)	16	Total block count	LD
CRAT	X'817890'	Binary(32)	12	Compression ratio in hundreths	LD LV
MEDR	X'857000'	Binary(8)	9	Recording technology: 0=NON-CARTRIDGE 1=18TRK 2=36TRK 3=128TRK 4=256TRK 5=384TRK 6=EFMT1 7=EFMT2 8=EEFMT2 9=EFMT3 10=EEFMT3 11=EFMT4 12=EEFMT4	LC LV SV
MEDT	X'858000'	Binary(8)	9	Media type: 0=UNDEFINED 1=CST 2=ECCST 3=HPCT 4=EHPCT 5=ETC/MEDIA5 6=EWTC/MEDIA6 7=EETC/MEDIA7 8=EEWTC/MEDIA8 9=EXTC/MEDIA9 10=EXWTC/MEDIA10 11=EATC/MEDIA11 12=EAWTC/MEDIA12 13=EAETC/MEDIA13	LV, SV
PSZ6	X'87D300'	Compound (Binary(8) Factor, Binary(64) Value)	22	Physical space used: 0=bytes 1=KB 2=MB 3=GB Value: Minimum value = 0.	LD LV

Compound SFI

A compound SFI includes multiple values each with own data type and length.

Compound type:

1

Factored. A Binary(8) value combined with a second field containing a count. The second field is identified by a data type.

Factor values:

0

Bytes (unfactored)

1

KB

2

MB

3

GB

4

TB

and so on.

Compound SFIs follow this structure;

Byte Count
Description

8

Standard SFI including 1 byte data type identifier (X'08')

1

Compound type identifier; 1 = Factored; 2 self describing fields where the first is the factor used, and the second is the resultant value

1

Length of the first field, including this byte

1

Data type identifier

n

First data field as identified by the preceding data type field; for example Binary(8)

1

Length of the next field, including this byte

1

Data type identifier

n

Next data field as identified by the preceding data type field; for example Binary(64)

DFSMSrmm macros

Table 41 on page 242 shows the changes made to DFSMSrmm mapping macros for TS1140 tape drives.

Table 12. DFSMSrmm mapping macro changes

Mapping Macro	Function	Updates
EDGCDREC	Maps the DFSMSrmm conversion dataset record.	New field: DSNPHYS_SIZE - Physical size of dataset in KB

Table 12. DFSMSrmm mapping macro changes (continued)

Mapping Macro	Function	Updates
EDGCLREC	Maps the DFSMSrmm conversion library record.	Recording technology values: EFMT4, EEFMT4. New fields: LDS1PHYS_SIZE - Physical size of the 1st dataset in KB LVPHYS_USED - Physical space used on volume in KB
EDGRDXT	Maps the data set name record in the DFSMSrmm extract data set.	New fields: RDPHYS_SIZE - Actual data on tape after compaction (Factored) RDCOMP_RAT - Compression ratio for the file in hundredths. Always showing 2 decimal places.
EDGRVEXT	Maps the volume records in the DFSMSrmm extract data set.	Recording technology values: EFMT4, EEFMT4. New fields: RVPHYS_USED – Actual space used by all files after compaction (Factored) RVCOMP_RAT - Compression ratio for the volume in hundredths. Always showing 2 decimal places.
EDGRXEXT	Maps the extended data set records in the DFSMSrmm extract data set.	Recording technology values: EFMT4, EEFMT4. New fields: XVPHYS_USED - Actual space used by all files after compaction (factored) XVCOMP_RAT - Compression ratio for the volume in hundredths. Always showing 2 decimal places. XDPHYS_SIZE – Actual data on tape after compaction (factored)
EDGSVREC	Maps the DFSMSrmm SMF volume records.	Recording technology values: EFMT4, EEFMT4. New 64-bit field: MVPHYS_USED - Volume physical space used in KB.
EDGSDREC	Maps the data set information.	New 64-bit field: MDPHYS_SIZE - .Data set physical size in KB
EDGSRCSY	Maps the SMF record symbols used with DFSORT.	Recording technology values: EFMT4, EEFMT4. New fields: MDPHYS_SIZE - .Data set physical size in KB MVPHYS_USED -Volume physical space used in KB

Table 12. DFSMSrmm mapping macro changes (continued)

Mapping Macro	Function	Updates
EDGEXTSY	Maps the extract data set symbols used with DFSORT.	<p>Recording technology values: EFMT4, EEFMT4.</p> <p>New fields:</p> <ul style="list-style-type: none"> RDCOMP_RAT - Compression ratio for dataset RDPHYS_SIZE - Physical size of dataset (factored) RVCOMP_RAT-Compression ratio for volume RVPHYS_USED - Physical space used on volume (factored)

Chapter 10. EREP modifications for TS1140 tape drive

Environmental Recording, Editing, and Printing (EREP) program is a diagnostic application program that runs under MVS, VM, and VSE. It generates and prints reports from error recording data set (ERDS) records. With these reports, IBM service representatives can determine the existence, nature, and location of a problem.

This topic describes changes to the TAPE subsystem exception report, emulated device summary report, and TAPE Media Informational Messages (MIMs) of the EREP program to support TS1140 tape drives.

TAPE subsystem exception report

In the following TAPE subsystem exception report, EREP reports a temporary ORB record in support of TS1140 (3592 Model E07) tape drives.

TAPE SUBSYSTEM EXCEPTION REPORT						REPORT DATE 220 11		
						PERIOD FROM 076 10		
						TO 077 10		
*** SEQUENCE BY PROBABLE FAILING UNIT ***								
PROBABLE FAILING UNIT	DEVICE TYPE/ VALID	FAILURE AFFECT	CPU	DEVNO /CUA	SIMS	MIMS	OBR PERM	OBR TEMP
*****-TOTALS-----								
LIBRARY				TOTAL	0	0	0	1
	3570-CXX	LIBRARY INFORMATIONAL DATA	00	07C2	0	0	0	1
DEVICE				TOTAL	0	0	2	1
	3590-H1X	LIBRARY DRIVE NOT UNLOADED	02	0C24	0	0	1	0
	3592-J1X	WORM OVERWRITE REJECTED	03	0C27	0	0	0	1
	3592-E06	LIBRARY DRIVE NOT UNLOADED	00	1B90	0	0	0	1
	3592-E07	LIBRARY DRIVE NOT UNLOADED	00	2B90	0	0	0	1

Figure 3. TAPE subsystem exception report

Emulated device summary report

In the following emulated device summary report, a TS1140 (3592-E07) tape drive emulates a 3590-B1X tape drive.

3590 DEVICE SUMMARY		REPORT DATE 295 11	
		PERIOD FROM 195 10	
		TO 195 10	
DEVICE ADDRESS	REAL / EMULATED DEVICE TYPE		
0FA2	3592-J1X / 3490-CXX		
0FA3	3592-E06 / 3590-B1X		
0FA4	3592-E07 / 3590-B1X		

Figure 4. Emulated device summary report

TAPE Media Informational Messages (MIMs)

TAPE Media Informational Messages (MIMs) now support TS1140 (3592 Model E07) tape drives, as shown in the following figure.

```

TAPE MEDIA INFORMATION MESSAGES (MIMS)                                REPORT DATE 028 11
                                                                    PERIOD FROM 023 10
                                                                    TO    028 10

*****
VOLUME-JANZ01  DEVICE-0883  DATE-028/11  TIME-06:54:49:45
* D/T-3590-B11          S/N 0113-00001
* SERVICE ALERT        REFCODE-0057  MEDIA IDENTIFIER-0021  FORMAT IDENTIFIER-00
* DATA DEGRADED IN PARTITION 1229
* REFERENCE MEDIA MAINTENANCE PROCEDURE 57

VOLUME-JANZ98  DEVICE-08A9  DATE-028/11  TIME-06:54:49:45
* D/T-359-A00          S/N 0113-23456
* SERIOUS ALERT        REFCODE-0000  MEDIA IDENTIFIER-0073  FORMAT IDENTIFIER-00
* EXCEPTION 00
* REFERENCE MEDIA MAINTENANCE PROCEDURE 00

VOLUME-JANZ99  DEVICE-08A9  DATE-028/11  TIME-06:54:49:45
* D/T-3590/3490EMU     S/N 0113-23456
* SERIOUS ALERT        REFCODE-0000  MEDIA IDENTIFIER-0073  FORMAT IDENTIFIER-00
* EXCEPTION 00
* REFERENCE MEDIA MAINTENANCE PROCEDURE 00

VOLUME-SL0001  DEVICE-0DC1  DATE-028/11  TIME-06:54:49:45
* D/T-3592-E07          S/N 0000-00000
* SERVICE ALERT        REFCODE-1011  MEDIA IDENTIFIER-0120  FORMAT IDENTIFIER-01
* EXCEPTION 10
* REFERENCE MESSAGE CODE 10

```

Figure 5. TAPE Media Informational Messages (MIMs)

Chapter 11. JES3 modifications for TS1140 tape drive

JES3, a z/OS MVS subsystem, manages resources and work flow before and after jobs are processed. You can enable JES3 to allocate TS1140 (3592 Model E07) tape drives and tape volumes in an SMS-managed IBM tape library environment (automated or manual) for 3590 Model B emulation only. To do so, you need to specify at least one of these library device group (LDG) names in your JES3plex. An LDG is a predefined set of tape subsystems within a JES3plex.

LDNsssss

Includes any TS1140 devices with the library indicated by serial number sssss.

LDGdddd

Includes any TS1140 devices (dddd=359N) in any library in the JES3plex.

Chapter 12. OAM modifications for TS1140 tape drive

The Object Access Method (OAM) is a component of DFSMSdfp. OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. You can also use OAM's object support to manage objects on DASD, tape, and optical volumes.

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information about using OAM to manage tape volumes and tape libraries.
- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support* for additional information about using OAM to manage the data on tape volumes.
- See *z/OS MVS System Messages, Vol 4 (CBD-DMO)* for explanations and appropriate actions for CBRxxxxx messages.

OAM library support

OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. This topic describes the OAM library support functions that have been changed for use with the TS1140 tape drives. The enhancements include support for two new recording formats, EFMT4 and EEFMT4 and three new media types, MEDIA11, MEDIA12, and MEDIA13.

These steps should be considered when planning to use the new TS1140 (3592-4E) drives:

1. Define the new devices using HCD.
2. Modify your ACS routines to select tape storage groups and libraries with TS1140 (3592-4E) devices.
3. Add, as appropriate, data classes to use the new recording formats (EFMT4 and EEFMT4) and the new media types (MEDIA11, MEDIA12 and MEDIA13) on the new TS1140 (3592-4E) drives. MEDIA9 and MEDIA10 can also be used with EFMT4 and EEFMT4.
4. Add, as appropriate (for media interchange), data classes with EFMT3 and EEFMT3, which can be used on the TS1140 with MEDIA9 and MEDIA10.
5. Specify, as appropriate (for the EEFMT3 or EEFMT4 recording format), the key labels and encoding mechanism for each label.
6. Specify, as appropriate, the read-compatible special attribute indicator for EFMT1 (on MEDIA5 through MEDIA8), EFMT2 and EEFMT2 (on MEDIA5 through MEDIA10), and EFMT3 and EEFMT3 (on MEDIA5 through MEDIA8) formatted volumes. OAM will use the read-compatible special attribute indicator (TDSSPEC) in the tape configuration database (TCDB) or usage of the LABEL=(,IN) on the DD statement of JCL to determine if a volume is eligible to be read by a TS1140 (3592-4E) device.
7. Contact your tape management system vendor to obtain their support and any modified installation exits.

LCS external services changes

External Services supports the TS1140 tape drive media types, MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13, and the new recording technologies EFMT4 and EEFMT4. It also supports, for media interchange, the older recording technologies EFMT3 and EEFMT3 (on MEDIA9 and MEDIA10). Note that the TS1140 (3592 Model E07) tape drive can only read EFMT1 (on MEDIA5 through MEDIA8), EFMT2 and EEFMT2 (on MEDIA5 through MEDIA10), and EFMT3 and EEFMT3 (on MEDIA5 through MEDIA8) and, as previously indicated, only if the read-compatible special attribute indicator is set, will a TS1140 (3592-4E) device be considered eligible for the volume. The following functions are supported:

- Change use attribute

- Query volume residence
- Test volume eligibility
- Eject a volume
- Manual cartridge entry

Note:

- The MEDIA9 and MEDIA10 media types are supported with EFMT2 and EEFMT2 (read-only) and EFMT3, EEFMT3, EFMT4 and EEFMT4 (read-write).
- The MEDIA11, MEDIA12, and MEDIA13 media types are valid only with the EFMT4 and EEFMT4 recording technologies.
- The MEDIA5 through MEDIA8 media types are supported only for read requests.
- In general, in an environment sharing the TCDB at different software levels, if a lower-level system without appropriate support attempts to perform one of the CBRXLCS functions using a volume that has EFMT4 or EEFMT4 recording technology (or has a media type of MEDIA11, MEDIA12 or MEDIA13), the request fails with existing return code LCSFAIL (12) and existing reason code LCSFNSUP (310).

OAM installation exits changes

These installation exits support the EFMT4 and EEFMT4 recording technology and the MEDIA11, MEDIA12 and MEDIA13 media types:

- Change use attribute (CBRUXCUA) installation exit: Tape recording technology fields have been updated with EFMT4 and EEFMT4. The media type fields have been updated for MEDIA11, MEDIA12 and MEDIA13.
- Cartridge entry (CBRUXENT) installation exit: Tape recording technology fields have been updated with EFMT4 and EEFMT4. The media type fields have been updated for MEDIA11, MEDIA12 and MEDIA13.
- Cartridge eject (CBRUXEJC) installation exit: Tape recording technology fields have been updated with EFMT4 and EEFMT4. The media type fields have been updated for MEDIA11, MEDIA12 and MEDIA13.
- Volume not in library (CBRUXVNL) installation exit: Tape recording technology fields have been updated with EFMT4 and EEFMT4. The media type fields have been updated for MEDIA11, MEDIA12 and MEDIA13. For additional information regarding this exit, refer to [“Volume not in library installation exit enhancement”](#) on page 322.

Operator command support changes

Volumes with EFMT4 and EEFMT4 recording technology or media types MEDIA11, MEDIA12 or MEDIA13 are displayed only on systems with full TS1140 tape drive support installed.

These operator tasks have been changed in support of the TS1140 tape drive.

- The DISPLAY LIBRARY DETAIL command displays new scratch counts for MEDIA11, MEDIA12, and MEDIA13.
- The DISPLAY SMS,VOLUME command displays the new EFMT4 and EEFMT4 recording technologies and the new MEDIA11, MEDIA12 and MEDIA13 media types, as appropriate, in the output display for CBR1180I (OAM tape volume status).
- The LIBRARY DISPDRV command displays 3592-4E for the TS1140 tape drive in the output display for CBR1220I (Tape drive status).
- The LIBRARY ENTER command allows MEDIA11, MEDIA12, and MEDIA13 to be set when entering the new media types into a manual tape library.
- The LIBRARY SETCL command allows MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13 to be set for a TS1140 tape drive that supports a cartridge loader. (Even though the TS1140 does not have a cartridge loader, when in a tape library environment, the presence of a cartridge loader is simulated.)

Mount processing change

A TS1140 can both read and write the EFMT3 and EEFMT3 recording formats on MEDIA9 and MEDIA10 or the new EFMT4 and EEFMT4 recording formats on MEDIA9 through MEDIA13. The drive can also read EFMT1 (MEDIA5 through MEDIA8), EFMT2 and EEFMT2 (MEDIA5 through MEDIA10), and EFMT3 and EEFMT3 (MEDIA5 through MEDIA8).

For a DISP=OLD (or DISP=MOD treated as DISP-OLD), if the read-compatible special attribute indicator is not enabled for an EFMT1 request (MEDIA5 through MEDIA8), EFMT2/EEFMT2 request (MEDIA5 through MEDIA10), or EFMT3/EEFMT3 request (MEDIA5 through MEDIA8), device preferencing will occur as it did in prior releases, as the 3592 Model E07 would not be eligible to satisfy the request. Otherwise, if the read-compatible special attribute indicator is enabled, the existing device preferencing lists will be used (oldest to newest drive technology), with the addition of the 3592 Model E07 at the end of the list (at the lowest preference level).

For a DISP=NEW request, a TS1140 tape drive is considered eligible for an EFMT3 or EEFMT3 request (on MEDIA9 and MEDIA10), as well as for the new EFMT4 and EEFMT4 requests (on MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13). If a media type is not specified for an EFMT4 or EEFMT4 scratch request, the preference is MEDIA11 followed by MEDIA9, and then MEDIA13, enabling the higher capacity cartridges to be selected first. For an EFMT3 or EEFMT3 request with no media type specified, for a TS1140, MEDIA9 will be the only media type considered.

OAM macro changes

Table 42 on page 251 describes changes to OAM mapping macros and installation exit parameter lists in support of TS1140 tape drives.

Table 13. OAM mapping macro changes			
The macro	that maps	has these changes.	
CBRTDSI	the tape device selection information (TDSI)	TDSEFMT4 EQU 11 * TDSEEFMT4 EQU 12 * * * TDSMED11 EQU 11 * TDSMED12 EQU 12 * TDSMED13 EQU 13 *	READ/WRITE ON ENTERPRISE FORMAT 4 (EFMT4) DEVICE READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 4 (EEFMT4) DEVICE MEDIA11 - ENTERPRISE ADVANCED TAPE CARTRIDGE MEDIA12 - ENTERPRISE ADVANCED WORM TAPE CARTRIDGE MEDIA13 - ENTERPRISE ADVANCED ECONOMY TAPE CARTRIDGE
CBRTVI	the tape volume information	TVIEFMT4 EQU 11 * TVIEEFMT4 EQU 12 * * TVIMED11 EQU 11 * TVIMED12 EQU 12 * TVIMED13 EQU 13 * TVISCRMB EQU C'SB' TVISCRMC EQU C'SC' TVISCRMD EQU C'SD'	READ/WRITE ON ENTERPRISE FORMAT 4 (EFMT4) DEVICE READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 4 (EEFMT4) DEVICE MEDIA11 - ENTERPRISE ADVANCED TAPE CARTRIDGE MEDIA12 - ENTERPRISE ADVANCED WORM TAPE CARTRIDGE MEDIA13 - ENTERPRISE ADVANCED ECONOMY TAPE CARTRIDGE VOLUME IS MEDIA11 SCRATCH VOLUME IS MEDIA12 SCRATCH VOLUME IS MEDIA13 SCRATCH

Table 13. OAM mapping macro changes (continued)		
The macro	that maps	has these changes.
CBRUXCPL	the change use attribute installation exit parameter list	<pre> UXCEfmt4 EQU 11 READ/WRITE ON ENTERPRISE * FORMAT 4 (EFMT4) DEVICE UXCEEfmt4 EQU 12 READ/WRITE ON ENTERPRISE * ENCRYPTED FORMAT 4 (EEFMT4) * DEVICE UXCMED11 EQU 11 MEDIA11 - ENTERPRISE ADVANCED * TAPE CARTRIDGE UXCMED12 EQU 12 MEDIA12 - ENTERPRISE ADVANCED * WORM TAPE CARTRIDGE UXCMED13 EQU 13 MEDIA13 - ENTERPRISE ADVANCED * ECONOMY TAPE CARTRIDGE </pre>
CBRUXEPL	the cartridge entry installation exit parameter list	<pre> UXEEfmt4 EQU 11 READ/WRITE ON ENTERPRISE FORMAT 4 * (EFMT4) DEVICE UXEEEFmt4 EQU 12 READ/WRITE ON ENTERPRISE ENCRYPTED * FORMAT 4 (EEFMT4) DEVICE UXEMED11 EQU 11 MEDIA11 ENTERPRISE ADVANCED * TAPE CARTRIDGE UXEMED12 EQU 12 MEDIA12 ENTERPRISE ADVANCED * WORM TAPE CARTRIDGE UXEMED13 EQU 13 MEDIA13 ENTERPRISE ADVANCED * ECONOMY TAPE CARTRIDGE </pre>
CBRUXJPL	the cartridge eject installation exit parameter list	<pre> UXJEFmt4 EQU 11 READ/WRITE ON ENTERPRISE FORMAT 4 * (EFMT4) DEVICE UXJEEfmt4 EQU 12 READ/WRITE ON ENTERPRISE ENCRYPTED * FORMAT 4 (EEFMT4) DEVICE UXJMED11 EQU 11 MEDIA11 - ENTERPRISE ADVANCED * TAPE CARTRIDGE UXJMED12 EQU 12 MEDIA12 - ENTERPRISE ADVANCED * WORM TAPE CARTRIDGE UXJMED13 EQU 13 MEDIA13 - ENTERPRISE ADVANCED * ECONOMY TAPE CARTRIDGE </pre>
CBRUXNPL	the volume not in library installation exit parameter list	<pre> UXNEfmt4 EQU 11 READ/WRITE ON ENTERPRISE FORMAT 4 * (EFMT4) DEVICE UXNEEFmt4 EQU 12 READ/WRITE ON ENTERPRISE ENCRYPTED * FORMAT 4 (EEFMT4) DEVICE UXNMED11 EQU 11 MEDIA11 - ENTERPRISE ADVANCED * TAPE CARTRIDGE UXNMED12 EQU 12 MEDIA12 - ENTERPRISE ADVANCED * WORM TAPE CARTRIDGE UXNMED13 EQU 13 MEDIA13 - ENTERPRISE ADVANCED * ECONOMY TAPE CARTRIDGE </pre>

Cartridge entry processing

When a volume is entered into an IBM automated or manual tape library, the cartridge entry installation exit (CBRUXENT) is invoked to approve or deny an enter request, and to set or verify the recording technology to be associated with a volume.

If a volume TCDB record does not exist for the entry of a private MEDIA9 or MEDIA10 volume, and there is no applicable recording technology being provided by the library's entry default data class, EFMT2 is passed to the exit. If the exit returns with a recording technology for a MEDIA9 or MEDIA10 volume and it is not EFMT2, EEFMT2, EFMT3, EEFMT3, EFMT4, or EEFMT4, the specification is considered invalid and the exit is disabled.

If a volume TCDB record does not exist for the entry of a private MEDIA11, MEDIA12, or MEDIA13 volume, and there is no applicable recording technology being provided by the library's entry default

data class, EFMT4 is passed to the exit. If the exit returns with a recording technology for a MEDIA11, MEDIA12, or MEDIA13 volume and it is not EFMT4 or EEFMT4, the specification is considered invalid and the exit is disabled.

If a volume TCDB record does not exist for the entry of a volume and the volume is being entered as a scratch volume, UNKNOWN will be passed to the exit and will be assigned when the volume is used during job processing.

If a TCDB volume record exists and the volume's recording technology or media type is not supported on the system processing the volume, in an ATLD, the volume is left in the library manager insert category to be processed by a system with appropriate support.

The cartridge entry installation exit (CBRUXENT) is passed by register 1, the pointer to a parameter list mapped by CBRUXEPL.

OAM object tape support

In a stand-alone environment, the SETOAM TAPEUNITNAME parameter in the CBROAMxx member of PARMLIB can be specified using an esoteric that contains TS1140 (3592-4E) tape drives. In the stand-alone environment, 3592 Model J, TS1120 (not encryption capable), TS1120 (encryption capable), TS1130, and TS1140 drives need to be separated in their own unique esoteric in to prevent the allocation of any drive other than a TS1140 for a volume written with EFMT4 or EEFMT4 recording technology, because EFMT4 and EEFMT4 are compatible only with TS1140 drives. In an IBM tape library environment, the SETOAM DATACLASS parameter at the storage group (or global level) can be used to specify a wanted recording technology and ensure allocating an appropriate drive.

The ERDS Physical ID (EPI) value for the TS1140 drive is a hex '15' and is stored in the Db2 TAPEVOL table of the OAM Optical Configuration Database (OCDB) for a volume written on the TS1140 drive (in the EFMT4 or EEFMT4 recording formats, and the older recording formats EFMT3 and EEFMT3), and displayed, as appropriate, in the volume display. The new media types is also displayed as MEDIA11, MEDIA12, and MEDIA13, when appropriate. MEDIA11, MEDIA12, and MEDIA13 volumes are recorded in the Db2 TAPEVOL table as character values '16', '17', and '18', respectively.

Object tape migration considerations

If you choose to encrypt your object data, any partially filled non-encrypted tape volumes associated with an object storage group that you want to encrypt, should be marked full and not writable, so they are not selected. This is important because at the volume level all of the data on the tape is either encrypted or non-encrypted, and a mix of the two cannot reside on the same tape.

Because the 3592 Model E07 is downward write compatible only with EFMT3 and EEFMT3 (on MEDIA9 and MEDIA10), customers might need to mark any partially filled tapes "full " or "not writable" as they migrate to the newer 3592 drive technology and no longer have any devices capable of writing in the older formats. This includes partially filled MEDIA9 or MEDIA10 tapes written in EFMT2 or EEFMT2, and MEDIA5 through MEDIA8 tapes written in EFMT1, EFMT2, EEFMT2, EFMT3, or EEFMT3.

These items should be considered when planning to use TS1140 drives:

If the TS1140 devices are in an IBM tape library:

1. Follow the steps listed in [“OAM library support” on page 249](#) for OAM Library Support.
2. Add new data classes, specifying EFMT3 and EEFMT3 recording technologies.
3. Review ACS routines for STORE, or CTRANS, or both environments for any changes that might be necessary to ensure proper class assignment.

If the TS1140 devices are not in an IBM tape library, use device esoterics for STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the Object storage groups that are to use the new devices. It is important to separate in an esoteric the different 3592 devices to prevent allocating an inappropriate device for a volume written in the EFMT4 or EEFMT4 recording technology. Add new TAPEUNITNAME with the new device esoteric to the STORAGEGROUP statements in the CBROAMxx PARMLIB member for object storage groups or object backup storage groups that use the new devices.

All partially filled EFMT2 and EEFMT2 volumes (on MEDIA9 and MEDIA10) belonging to a storage group with TS1140 devices assigned need to be marked "full" or "not writeable", as the TS1140 is not downward write-compatible with these recording formats. This prevents a TS1140 from being selected.

Object tape volume management support

The TS1140 tape drive (for write) supports the existing 3592 media types (MEDIA9 and MEDIA10) plus the new MEDIA11, MEDIA12, and MEDIA13 media types, including special handling of WORM (MEDIA10 and MEDIA12) tape volumes that have expired. You cannot recycle WORM tape volumes because they cannot be written from load point.

Chapter 13. MVS IOS support for TS1140 tape drive

MVS IOS support for the TS1140 tape drive is unchanged from that for the TS1120 tape drive. See [Chapter 39, “MVS IOS support for TS1120 tape drive,” on page 253](#) for more information.

Part 2. TS1130 tape drive

Chapter 14. Introduction for TS1130 tape drive

Like the TS1120 tape drive, the TS1130 provides a tape encryption capability. Data encryption is an important tool for protecting against the possible misuse of confidential information that could occur should tapes be lost or stolen. Unless the possessor of the tape has the required key, any encrypted data on the tape will remain confidential and will be unreadable.

This topic describes the IBM System Storage TS1130 (3592 Model E06, 3592-3E) tape drives and the z/OS software support needed to use them.

TS1130 tape drive

Unlike the TS1120 (3592 Model E05), which can be either encryption capable (3592-2E) or not (3592-2), the TS1130 (3592 Model E06) is always capable of encryption when used by z/OS and always reports as 3592-3E. References in this document to "encryption-capable," means that the encryption feature in the drive had been enabled and the drive is capable of encrypting. In other documents, this may be referred to as "encryption-enabled."

The TS1130 tape drive offers these features:

- Creates tapes for archive files.
- Optionally creates encrypted tapes.
- Backs up and restores systems in case of system or disk storage problems.
- Stores high-speed, high-capacity sequential application data sets.
- Stores temporary data sets.
- Satisfies off-site data storage for disaster recovery.
- Provides data interchange with other systems that use 3592 Model E06 (TS1130) or 3592 Model E05 (TS1120) subsystems. The 3592 Model E06 can also read the 3592 Model J1A (EFMT1) format.
- Supports WORM (write once, read many) tape data cartridges whose data cannot be altered.

The advantages of the TS1130 tape drive over other encryption methods, such as host-based software encryption, are that it:

- Permits full performance of the tape device when encryption is enabled.
- Permits encryption to be performed after compression.
- Avoids performance penalties in the host.

Tape encryption

The TS1130 tape drive supports encryption of media tape cartridges. The existing z/OS DFSMS support for tape subsystem encryption (introduced with the TS1120) allows you to specify by data class that data is to be encrypted. In addition to this, the key label-related information that is used to encrypt the data key (of a tape cartridge) can be specified through the DD statement (JCL, dynamic allocation, and TSO ALLOCATE), data class, or Encryption Key Manager component for the Java platform (EKM) defaults. The communication path to the Encryption Key Manager (EKM) is across TCP/IP, with the choice to go either in-band or out-of-band for the key management flow. With out-of-band key management, the communication path to the Encryption Key Manager is handled by the control unit going directly to the Encryption Key Manager. Then, for in-band key management, the communication path to the Encryption Key Manager is handled across ESCON/FICON, with an IOS proxy interface then handling the key exchange (across TCP/IP) with the Encryption Key Manager.

Note: References in this document to Encryption Key Manager (EKM) also apply to the new Tivoli Key Lifecycle Manager (TKLM). Either key manager can be used with the TS1130 and TS1120 tape drives. The

TS1130 requires, at a minimum, version 2.1 of the EKM or version 1.0 of the TKLM. The first release of the TKLM is targeted for 2H2008 (plans are always subject to change).

Unless directed otherwise, a TS1130 tape drive records in the new non-encryption enterprise format 3 (EFMT3). It can also record in the new encryption specific recording format (enterprise encrypted format 3 (EEFMT3)). The EFMT3 and EEFMT3 recording formats are supported across all of the 3592 media types (MEDIA5 - MEDIA10). The existing Performance Scaling and Performance Segmentation data class options, applicable with MEDIA5 and MEDIA9, can also be used with the EFMT3 and EEFMT3 recording formats. The capacities of EMFT3 and EEFMT3 written tapes are the same.

A TS1130 tape drive can also read the existing EFMT1, EFMT2, EEFMT2 recording formats and can be explicitly directed to write from beginning of tape (BOT) in the EFMT2 or EEFMT2 recording format.

When writing from the beginning of tape (BOT), an encryption-capable TS1130 tape drive will, by default, record in the non-encryption recording format (EFMT3). Depending on the host platform and its encryption enablement mechanism, this default can be changed at the drive. However, under z/OS and OPEN processing (file sequence 1, DISP=NEW), unless explicitly requested through data class to record in the lower recording format (EFMT2 or EEFMT2) or the new encryption format (EEFMT3), the non-encryption format EFMT3 will be assumed and explicitly set during OPEN processing. When writing from the beginning of the tape (file sequence 1, DISP=OLD or DISP=SHR for volume reuse), since this processing does not go through the data class ACS routine, OPEN processing will determine whether encryption (EEFMT2 or EEFMT3) had previously been used and ensure that encryption is requested for this next usage of the tape. So, if the previous usage of the tape was encrypted, OPEN will explicitly set the new encryption format (EEFMT3) and will obtain and pass the volume's existing key management-related information to the drive (key label and encoding mechanism). In this case, a new data key is generated and used. However, the volume's existing key management-related information is used to encrypt the data key. This is similar to the way that the encryption format EEFMT2 is handled by the 3592 Model E05 (TS1120) encryption support. This is also consistent with today's 3592 Model E05 drives, where, on reuse, if encryption was not used, the highest non-encryption recording format is specified.

For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the Encryption Key Manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.

In the TS1130 tape drive environment (whether system-managed or not), when writing from the beginning of tape (file sequence 1, DISP=NEW), to request encryption format, EEFMT3 (or EEFMT2 for downward compatibility) is specified in the data class. OPEN processing passes key management-related information (such as the key labels) to the drive for subsequent communication with the Encryption Key Manager.

To select encryption for a cartridge, do these steps:

1. Define a data class that requests encryption.
2. Modify or create ACS routines to associate the tape output functions using encryption with a data class that requests encryption.
3. Specify the appropriate key labels either through the DD statement (JCL, dynamic allocation, or TSO allocate), data class, or by using Encryption Key Manager established defaults.

Key management for TS1130

Key Management consists of a number of elements including:

- A key store where the keys to encrypt and decrypt the data key are securely kept and readily available.

- An Encryption Key Manager (EKM) that communicates with the drive through the designated key management path (in-band or out-of-band).
- Ability of the tape drive to request and process (with the Encryption Key Manager) key management information.
- A management interface for configuring and managing the Encryption Key Manager (EKM).

Key store for TS1130

Key store for TS1130 is unchanged from TS1120. See [“Key store for TS1120” on page 171](#) for more information.

Encryption Key Manager (EKM) for TS1130

Encryption Key Manager (EKM) for TS1130 is unchanged from TS1120, except that EEFMT3 may be specified for the recording format. See [“Encryption Key Manager \(EKM\) for TS1120” on page 171](#) for more information.

In addition to the Encryption Key Manager (EKM), there is also a new Tivoli Key Lifecycle Manager (TKLM) that can be used with the TS1130 and TS1120 tape drives. References in this document to Encryption Key Manager (EKM) also apply to the new Tivoli Key Lifecycle Manager (TKLM). The TS1130 requires, at a minimum, version 2.1 of the EKM or version 1.0 of the TKLM. Host software including the IOS proxy has no direct knowledge of which key manager is being used. Specification of either key manager is handled the same way, using the EKM keyword on existing IOS commands. The first release of the TKLM is targeted for 2H2008 (plans are always subject to change).

Tivoli Key Lifecycle Manager (TKLM)

The new Tivoli Key Lifecycle Manager (TKLM) can be used with the new TS1130 (3592 Model E06), as well as the existing TS1120 (3592 Model E05) tape encrypting drives. Like the Encryption Key Manager (EKM), the TKLM serves data keys to the tape drive. The first release of TKLM focuses on ease of use and provides a new graphical interface (GUI) to help with the installation and configuration of the key manager. It also allows for the creation and management of the key encrypting keys (certificates). Customers using the existing Encryption Key Manager (EKM) can migrate to the new TKLM. For additional information on the TKLM, see the IBM Tivoli Key Lifecycle Manager Information Center.

In-band proxy for TS1130

In-band proxy for TS1130 is unchanged from TS1120. See [“In-band proxy for TS1120” on page 172](#) for more information.

Note: New with the IOS proxy is support for IPv6. Refer to APAR OA22271. This support was added after the initial tape encryption support for the TS1120.

Management interfaces for TS1130

Management interfaces for TS1130 is unchanged from TS1120. See [“Management interfaces for TS1120” on page 172](#) for more information.

Key label specifications for TS1130

Key label specifications for TS1130 is unchanged from TS1120, except that EEFMT3 (EE3) may be specified for the recording format. See [“Key label specifications for TS1120 ” on page 173](#) for more information.

Volume label support for TS1130

Volume label support for TS1130 is unchanged from TS1120. See [“Volume label support for TS1120” on page 174](#) for more information.

Volume recovery for TS1130

Volume recovery support for TS1130 is unchanged from TS1120. See [“Volume recovery for TS1120” on page 174](#) for more information.

Re-keying support for TS1130

Re-keying support for the TS1120, which also applies to the TS1130, was introduced after the initial tape encryption support for the TS1120 (APAR OA20076). See [“Re-keying support for TS1120” on page 174](#) for more information on what it means to re-key a tape cartridge. Re-keying is initiated through the IEHINITT utility with a new REKEY option.

Recording format and media support for TS1130 tape drives

The TS1130 tape drive reads and writes in the new EFMT3 (enterprise format 3) and EEFMT3 (enterprise encrypted format 3) recording formats, as well as the existing EFMT2 (enterprise format 2) and EEFMT2 (enterprise encrypted format 2) recording formats. The TS1130 tape drive can also read (but not write) the older EFMT1 (enterprise format 1) recording format. EEFMT3 records data in an encrypted format. EEFMT3 provides the same capacity as EFMT3. The IBM System Storage TS1130 tape drive uses the following IBM System Storage family of tape media:

- MEDIA5 - The IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) physical media. Provides an uncompressed capacity of 640 GB with EFMT3 or EEFMT3 (500 GB with EFMT2 or EEFMT2). Provides a compressed capacity of 1920 GB with EFMT3 or EEFMT3 (1500 GB with EFMT2 or EEFMT2), assuming a 3:1 compression ratio (the compression ratio depends on the type of data written).
- MEDIA6 - The IBM TotalStorage Enterprise WORM Tape Cartridge (MEDIA6) physical media. The MEDIA6 capacity is the same as the MEDIA5 capacity.
- MEDIA7 - The IBM TotalStorage Enterprise Economy Tape Cartridge (MEDIA7) physical media. Provides an uncompressed capacity of 128 GB with EFMT3 or EEFMT3 (100 GB with EFMT2 or EEFMT2). Provides a compressed capacity of 384 GB with EFMT3 or EEFMT3 (300 GB with EFMT2 or EEFMT2), assuming a 3:1 compression ratio (the compression ratio depends on the type of data written).
- MEDIA8 - The IBM TotalStorage Enterprise Economy WORM Tape Cartridge (MEDIA8) physical media. The MEDIA8 capacity is the same as the MEDIA7 capacity.
- MEDIA9 - The IBM TotalStorage Enterprise Extended Tape Cartridge (MEDIA9) physical media. MEDIA9 requires the EFMT2, EFMT3, EEFMT2, or EEFMT3 recording format, and provides an uncompressed capacity of 1000 GB with EFMT3 or EEFMT3 (700 GB with EFMT2 or EEFMT2). Provides a compressed capacity of 3000 GB with EFMT3 or EEFMT3 (2100 GB with EFMT2 or EEFMT2), assuming a 3:1 compression ratio (the compression ratio depends on the type of data written).
- MEDIA10 - The IBM TotalStorage Enterprise Extended WORM Tape Cartridge (MEDIA10) physical media. The MEDIA10 capacity is the same as the MEDIA9 capacity.

You can use the TS1130 tape drive in the stand-alone environment or the tape library environment (automated or manual). Currently, the TS1130 tape drive does not have a cartridge loader. However, in the stand-alone environment, the TS3400 Tape Library provides an automated solution on z/OS. The TS1130 and TS1120 drives in the TS3400 appear to the host as stand-alone 3592 drives with cartridge loaders.

Support for the TS1130 tape drive will be provided at z/OS V1R7 and later releases.

Note:

1. If no recording technology has been specified for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10, EFMT3 is the default recording technology. Other recording formats (EFMT2, EEFMT2, or EEFMT3) can be specified through data class. This applies to both the stand-alone and to the system-managed tape library environments.
2. To enable the EFMT3 and EEFMT3 formatted cartridges to be relabelled/reused from load point on a 3592 Model J1A (3592-1) or a 3592 Model E05 (3592-2 and 3592-2E), drive microcode

updates are required on these drives. This is particularly important in a system-managed tape library environment, because common scratch pools are used across the media types.

3. For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the Encryption Key Manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.
4. The TS1130 tape drive optionally provides performance scaling by using only 20 percent of the full capacity on a MEDIA5 or MEDIA9 cartridge. The default is to use the cartridge's full capacity. The performance scaling option is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
5. The TS1130 tape drive optionally provides performance segmentation. Performance segmentation divides the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. This option is available on MEDIA5 and MEDIA9 tapes, but is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media. The performance segmentation option is mutually exclusive with the performance scaling option.
6. The TS1130 tape drive emulates only 3590 Model B1x tape drives (all 3592 tape cartridge media are supported in this emulation mode) in the standalone and in the system-managed tape library environment (manual or automated).
7. The TS1130 tape drive is supported by the 3592 Model J70 and C06 tape controllers, with either ESCON or FICON® attachment.
8. The TS1130 (3592 Model E06) tape drive coexists with 3490E, 3590, 3592 Model J1A, and 3592 Model E05 (3592-2 and 3592-2E) in the 3494 automated tape library.
9. The TS1130 (3592 Model E06) tape drive coexists with 3592 Model J1A and 3592 Model E05 (3592-2 and 3592-2E) devices in the 3584 automated tape library.
10. The TS1130 (3592 Model E06) tape drive coexists with 3490, 3490E, 3590, 3592 Model J1A, and 3592 Model E05 (3592-2 and 3592-2E) devices in a manual tape library.
11. The TS1130 tape drive cannot use the MEDIA3 or MEDIA4 cartridges used in 3590 tape drives.
12. For the system-managed tape library support (automated or manual), even though a mix of 3592 tape drives (different models) is supported under a single control unit, with z/OS system-managed tape library support, all devices under the same control unit must be homogenous and support the same capabilities. So, although a mix of TS1130 (3592 Model E06) and TS1120 (3592 Model E05) tape drives is supported within the same library, within each control unit, all the devices must be either TS1130 tape drives (only) or TS1120 tape drives (only). In addition to this, all TS1120 tape drives must also be homogeneous so a mix of encryption and non-encryption capable drives is also not supported within a control unit.

Related reading:

For additional information, see:

- *IBM System Storage TS1130 Tape Drive and TS1120 Tape Drive and Controller Introduction and Planning Guide 3592 Models J1A, E05, E06, E07, J70 and C06*, GA32-0555,
- *IBM System Storage TS1130 Tape Drive and TS1120 Tape Drive and Controller Operator Guide 3592 Models J1A, E05, E06, E07, J70, and C06*

Performance scaling and segmentation for TS1130

The TS1130 tape drive supports performance scaling and performance segmentation of media tape cartridges. These functions allow you to optimize performance for MEDIA5 and MEDIA9 cartridges; a cartridge can be defined for performance scaling or performance segmentation, but not both.

Except for the cartridge segment sizes for the EFMT3 and EEFMT3 recording formats, performance scaling and segmentation for the TS1130 is the same as for the TS1120. See “Performance scaling and segmentation for TS1120” on page 177 for an overview of performance scaling and segmentation and for information on the cartridge segment sizes for the EFMT2 and EEFMT2 recording formats.

Performance scaling for the TS1130 (3592 Model E06) tape drive limits the data written to the first 20% (the optimally scaled performance capacity) of the cartridge and when using the performance segmentation option, the overall capacity of the cartridge is limited to 86.6% of the total capacity. The fast access segment occupies the first 20% of the cartridge, followed by the slower access segment. So, for example, using EFMT3 or EEFMT3, a MEDIA5 cartridge written on a 3592 Model E06 has a capacity of 640 GB. If the cartridge is performance segmented, the MEDIA5 cartridge is segmented into a 128 GB fast access segment and a 426 GB slower access segment (for a total capacity of 554 GB). By default, the MEDIA5 or MEDIA9 cartridge is used to its full capacity. When written from loadpoint, a scaled or segmented tape cartridge is reformatted according to the assigned data class.

z/OS software support for the TS1130 tape drive

Use z/OS software with the TS1130 tape drive to protect your data with the IBM System Storage family of tape media and the EFMT3 and EEFMT3 recording formats. Table 27 on page 177 describes the software support changes for the new TS1130 tape drive.

Note: The software support changes described in “z/OS software support for the encryption-capable TS1120 tape drive” on page 177 also apply to the TS1130.

Table 14. Components that provide software support for the TS1130 tape drive	
Component	Function
DFSMSdfp AMS	AMS commands, CREATE VOLUMEENTRY, ALTER VOLUMEENTRY, DCOLLECT, and LISTCAT are changed to support the new EFMT3 and EEFMT3 recording technologies. Two new subparameters, EFMT3 and EEFMT3, for the parameter RECORDING, has been added for CREATE VOLUMEENTRY and ALTER VOLUMEENTRY. AMS allows the use of the new EFMT3 and EEFMT3 recording technologies, as well as the printing and displaying of information about the recording technology.
DFSMSdfp Device Services	Device Services manages the IBM System Storage Tape System devices.
DFSMSdfp ISMF	The ISMF Data Class Application and Mountable Tape Volume Application panels have been enhanced to allow the specification of two new values (E3 for EFMT3 and EE3 for EEFMT3) in the Recording Technology Format field.
DFSMSdfp NaviQuest	NaviQuest sample jobs and CLISTs have been updated to support new EFMT3 and EEFMT3 recording technologies in the data class.

Table 14. Components that provide software support for the TS1130 tape drive (continued)

Component	Function
DFSMSdfp OAM	OAM tape library support allows the use of the new EFMT3 and EEFMT3 recording technologies and IBM System Storage family of tape media in the IBM 3494 and 3584 Automated Tape library and in the manual tape library. OAM object tape support allows the use of TS1130 tape drives and media for object-related activity.
DFSMSdfp OCE/IFGOJES3	OCE/IFGOJES3 allows the use of the new EFMT3 and EEFMT3 recording technologies.
DFSMSdfp SMS	SMS allows the use of the new EFMT3 and EEFMT3 recording technologies. You can specify a data class to request data encryption (EEFMT3) or non-encryption (EFMT3) with media types MEDIA5 through MEDIA10. EFMT3 (non-encryption) is the default recording technology for the TS1130.
DFSMSdss	<p>DFSMSdss ensures that encrypted data dumped to a TS1130 tape drive will not be doubly encrypted, unless the user makes specific arrangements for double-encryption.</p> <p>DFSMSdss Stand Alone Restore will not read a dump data set that resides on an encrypted tape.</p>
DFSMShsm	DFSMShsm allows the use of TS1130 tape drives and media for all DFSMShsm tape related functions. The LIST TTOC SELECT parameters have been extended to take new values EFMT3 (or E3) and EEFMT3 (or EE3).
DFSMSrmm	<p>These DFSMSrmm functions have been enhanced to support the TS1130:</p> <ul style="list-style-type: none"> • The ERASE release action can now be configured to selectively perform a data key shred, a secure data erase, or a combination. • DFSMSrmm TSO subcommands now allow the use of the new EFMT3 and EEFMT3 recording technologies. • REXX variables of the TSO subcommand have been enhanced to support the TS1130 • API structured field introducers have been enhanced to support the TS1130, including new compound SFI
DFSORT	DFSORT works without change with the IBM System Storage Tape System devices.
EREP	EREP provides unique device type information for TS1130 tape drives when formatting LOGREC records.
z/OS Multiple Virtual Storage (MVS) Allocation	MVS Allocation allows the use of the new EFMT3 and EEFMT3 recording technologies when using the Dynamic Allocation Text Unit DALINCHG.

Using TS1130 tape drives in an IBM tape library environment

Before using the new TS1130 tape drive, ensure that all existing 3592 Model J1A and E05 drives in the library are upgraded to recognize and enable cartridges formatted for EFMT3 or EEFMT3 to be relabelled/reused on the 3592 Model J1A and E05 drives. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

Because the 3592 Model E06 is only downward read (and not write) compatible with the EFMT1 format, you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E06 drive to be considered eligible for an EFMT1 request.

The considerations listed in [“Using encryption-capable TS1120 tape drives in an IBM tape library environment”](#) on page 180 also apply to the TS1130.

Using TS1130 tape drives in a stand-alone environment

Before using the new TS1130 tape drive, ensure that all existing 3592 Model J1A and E05 drives are upgraded to recognize and enable cartridges formatted for EFMT3 or EEFMT3 to be relabelled/reused on the 3592 Model J1A and E05 drives. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

The considerations listed in [“Using encryption-capable TS1120 tape drives in a stand-alone environment”](#) on page 181 also apply to the TS1130.

Recommendation: Use a manual tape library, DFSMSrmm, third-party tape management software, or write your own applications when using TS1130 tape drives in a stand-alone environment.

Resolving recording technology conflicts for TS1130

3592 Model J1A devices, 3592 Model E05 (TS1120) devices, and 3592 Model E06 (TS1130) devices can all write to MEDIA5-MEDIA8 media types. However, conflicts occur when an EFMT3 or EEFMT3 formatted cartridge is mounted on a 3592 Model J1A or 3592 Model E05 and is being relabelled/reused.

The OPEN and EOVR routines can resolve these recording technology conflicts if you meet these conditions:

- Set OPEN for output to the first file
- Specify VOLNSNS=YES in the DEVSUPxx member of PARMLIB
- Position the tape cartridge at the load point.

If these conditions are met and if the cartridge has an internal *volser* recorded in its volume control region, OPEN and EOVR routines rewrite the VOL1 label with the volume identifier in the sense data.

Note: To enable this support, make sure that the 3592 Model J1A devices and 3592 Model E05 devices are at the appropriate microcode level, so that an up-level volume can have its volume identifier returned in the sense data.

For additional information about resolving recording technology conflicts, see [z/OS DFSMS Using Magnetic Tapes](#) and [z/OS DFSMS Installation Exits](#).

Implementation considerations for using TS1130 tape drives

The implementation considerations listed in [“Implementation considerations for using encryption-capable TS1120 tape drives”](#) on page 181 also apply to the TS1130.

As appropriate, specify EE3 (EEFMT3 recording format) for encryption or use the media interchange recording technology specification (E2 for EFMT2 or EE2 for EEFMT2) to request that the lower recording formats be used. By default, when writing from load point, EFMT3 (E3) is used by the TS1130 tape drive.

Related reading:

See Chapter 15, [“Migration to the software support for TS1130 tape drives,”](#) on page 97 for migration information and implementation information.

Chapter 15. Migration to the software support for TS1130 tape drives

DFSMS software support for the TS1130 tape drive addresses media management and data allocation in an IBM 3494 Automated Tape Library, in an IBM 3584 Automated Tape Library, and in the manual tape library (MTL). You can manage media and allocate data to appropriate non-library (stand-alone) drives through separation of the real and emulating drives, third-party tape management software, or user-written applications. You can use the TS1130 tape drive on systems that are running z/OS V1R7 and above.

This topic outlines the tasks and associated procedures that must be performed to migrate to software support for the TS1130 tape drive in these environments:

- Stand-alone environment
- IBM tape library environment
- HSMplex
- OAMplex
- RMMplex

Understanding coexistence considerations for TS1130

Coexistence support for the TS1130 tape drive is provided at z/OS V1R7 and above by installing the needed full-support PTFs without the Device Services enabling PTF. Coexistence support for DFSMSrmm is also provided at z/OS V1R6. In addition to this, existing device services support prevents the TS1130 tape drives from coming online on a system that does not have all of the full-support PTFs installed. Installation of the Devices Services enabling PTF brings in all of the needed full-support PTFs. See [Table 15 on page 98](#) for a discussion of the coexistence PTFs that may be needed. For past discussion of the 3592 Model J1A and its coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model J1A” on page 335](#). For past discussion of the 3592 Model E05 and its coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model E05” on page 265](#) and [“Understanding coexistence considerations for encryption-capable TS1120” on page 185](#).

Review the coexistence migration tasks described in these topics:

Table 15. Coexistence migration tasks for TS1130 tape drives

Environment	Coexistence Considerations
Stand-Alone	<p>As described in Chapter 14, “Introduction for TS1130 tape drive,” on page 87, z/OS DFSMS and related licensed programs provide full support for the TS1130 tape drive and MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10. The TS1130 tape drive support enables the tape drives to operate in the stand-alone environment in 3590 Model B1x emulation and to coexist with other emulated tape drives. However, prior to using the new TS1130 tape drive, ensure that all existing 3592 Model J1A and 3592 Model E05 tape drives have their microcode upgraded to recognize and enable the EFMT3 and EEFMT3 formatted cartridges to be relabelled/reused on the 3592 Model J1A and 3592 Model E05. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In the stand-alone (non-system managed environment), even though a mix (different models) of 3592 devices is supported under a control unit, IBM recommends that all 3592 devices under the same control unit be homogenous for easier separation and management.</p>
IBM Tape Library	<p>As described in Chapter 14, “Introduction for TS1130 tape drive,” on page 87, z/OS DFSMS and related licensed programs provide full support for the TS1130 tape drives and MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10. The system-managed tape library support allows the tape drives to operate in an ATL or MTL environment as 3590 Model B1x devices, providing device allocation and tape media management support. As appropriate for the library type and model, this support allows the TS1130 tape drive to coexist with other emulated 3590-1 tape drives in the same tape library. However, prior to using the new TS1130 tape drive, ensure that all existing 3592 Model J1A and 3592 Model E05 tape drives have their microcode upgraded to recognize and enable the EFMT3 and EEFMT3 formatted cartridges to be relabelled/reused on the 3592 Model J1A and 3592 Model E05. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In addition to this, in the system-managed tape library environment, all 3592 drives under the same control unit must have the same recording format capabilities and report under the same ERDS physical identifier (EPI). This ensures that all of the devices under the same control unit are homogeneous and that each device under the same control unit is capable of handling the request. Therefore, a mix of 3592 Model E06 (TS1130) and 3592 Model E05 (TS1120) devices under the same control unit is not supported.</p> <p>A tape configuration database (TCDB) with EFMT3 and EEFMT3 volume records can coexist with lower-level systems. No additional coexistence support is needed. Because the 3592 Model E06 is only downward read (and not write) compatible with the EFMT1 format, you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,IN) on the DD statement of JCL to enable the 3592 Model E06 drive to be considered eligible for an EFMT1 request.</p>

Table 15. Coexistence migration tasks for TS1130 tape drives (continued)

Environment	Coexistence Considerations
DFSMSdfp Device Services/AOM	<p>Today, the Device Services component prevents any device that has an unknown EPI from coming online. Therefore, if a TS1130 tape drive is attached to a system that does not have any of the TS1130 support installed, the device is not allowed on-line and the following existing message text is issued for message IEA435I:</p> <p>'UNKNOWN DEVICE IN EMULATION MODE NOT BROUGHT ONLINE'</p> <p>When the Device Services full function support APAR is installed without the enabling APAR, the Device Service Exit will recognize the device EPI, but because the enabling APAR that brings all of the software support in is not installed, the device will not come on-line and the following new message text will be issued for IEA435I:</p> <p>'3592-3E DRIVE DETECTED BUT NOT ALL 3592-3E SUPPORT IS PRESENT'.</p>
HSMplex	<p>In an HSMplex, all systems in the HSMplex should have full support for the 3592-3E tape subsystem before any instance of DFSMSHsm uses the new tape drives. If any system does not fully support the 3592-3E, a request for tape input can fail because a 3592-3E device is not available on that system.</p>

Table 15. Coexistence migration tasks for TS1130 tape drives (continued)

Environment	Coexistence Considerations
OAMplex	<p>For OAM's object support customers, in addition to the planning steps required for migration to the software support for the TS1130 tape drives in the stand-alone and IBM tape library environments, there are coexistence considerations your installation must take into account before you install the software in an OAMplex:</p> <ul style="list-style-type: none"> • For the TS1130 tape drive support, OAM object tape coexistence support is provided at z/OS V1R7 and above, through installation of the full support PTF without the device services enabling PTF. Coexistence and full support systems must also have the new overflow-related columns added to the TAPEVOL table in the Optical Configuration Database (OCDB). Only one system in an OAMplex needs to run CBRSMKBO sample JCL to add the new TAPEVOL columns, but all systems in the OAMplex need to run CBRPBIND. • OAM coexistence support prevents lower-level systems from selecting volumes with ERDS Physical Identifier (EPI) values for object write requests that are not supported on that system. • OAM object support has coexistence considerations when running in an OAMplex environment with at least one system with the full support installed and enabled and at least one system without the full support for the new devices installed and enabled. In this mixed support environment, it is possible for a retrieve request to be received for an object that resides on a tape cartridge volume written in the EFMT3 and EEFMT3 format by a system that does not have the TS1130 tape drive full support installed. Coexistence support is provided that allows OAM to attempt to locate an instance of OAM in the OAMplex where the full support is installed and enabled. If an instance of OAM is found where the request can be processed, the OAM on the system where the request originated will ship the retrieve request, if the object is not greater than 50 MB, to the target system using XCF messaging services. • Once TS1130 tape drives devices are used in an OAMplex environment and objects are written to tape volumes with the new EPI value recorded, it is expected that any OAM on a system where the full support is installed and enabled is eligible for processing requests using that volume. Therefore, TS1130 tape drives devices must be available to all instances of OAM where the full support is installed.
OCE (Open / Close / End-of-Volume)	None.
RMMplex	<p>Toleration APAR OA22706 is required for z/OS V1R6 and later releases (all supported releases that can co-exist with z/OS V1R7). This must be installed on all DFSMSrmm systems in an RMMplex prior to the introduction of the new function PTF for this SPE. Unlike other z/OS components changed for 3592 Model E06 support, this coexistence support is needed in RMM even if the 3592 Model E06 drive is not being used.</p>

Preparing to install the software

Refer to *IBM System Storage TS1120/TS1130 Tape Drive and Controller Introduction and Planning Guide 3592 Models J1A, E05, E06, EU6, J70 and C06*, GA32-0555, for hardware requirements. Also refer to the *Encryption Key Manager Introduction, Planning, and User's Guide*, GA76-0418, for Encryption Key Manager requirements.

Coexistence support for the TS1130 tape drive is provided with z/OS V1R7 and above by installing the appropriate full support PTFs without the device services enabling PTF.

Installing the appropriate PTFs

Refer to the 3592 PSP bucket for the APAR and PTF numbers applicable for each release. An enabling PTF exists to provide full device support for the TS1130 tape drive. Installation of the appropriate enabling PTF pulls in all of the needed support PTFs and indicates to the system that all of the needed software support is installed. For z/OS V1R7 and above, refer to enabling APAR OA22119.

In addition, as appropriate for your environment and release level, determine what coexistence PTFs are needed for your environment.

Planning for DFSMS software support for the TS1130 tape drive

The planning steps you must consider to successfully install the TS1130 tape drive software, vary depending upon the tape environment you have installed. [Table 16 on page 101](#) discusses planning considerations for stand-alone environments (including tape devices installed in vendors' automated tape libraries) and for IBM tape library environments.

Table 16. TS1130 tape drive planning considerations

Area	Planning Considerations
System customization: stand-alone environment	<ol style="list-style-type: none">1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT3 (or EEFMT2 for media interchanges). Also, specify, as appropriate, the non-encryption recording formats, EFMT3 (or EFMT2 for media interchanges). If a TS1130 tape drive is allocated, the default recording format is EFMT3. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified.2. As appropriate, determine which key labels are to be used and how they are specified, data class, the DD statement or Encryption Key Manager established defaults.3. Determine whether you need help from your tape management system vendor and contact them, if needed.4. As appropriate, plan for the installation of the Encryption Key Manager (EKM) and decide which of the supported key stores to use.5. As appropriate, plan for the key labels that are used and the encoding mechanism (label or hash) for each and where the key labels are specified.6. For in-band key management (with encryption), update the IOS PARMLIB member (IECIOSxx) using the EKM command. Also, create a z/OS UNIX segment for the IOS address space.7. Upgrade 3592 Model J1A and 3592 Model E05 drive microcode to enable the drives to recognize and enable the EFMT3 and EEFMT3 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB.8. Determine which systems should have coexistence support and which systems should have full support.9. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.10. Determine when to IPL the host machine after installing all necessary PTFs.

Table 16. TS1130 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: IBM library tape environment	<ol style="list-style-type: none"> 1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT3 (or EEFMT2 for media interchange). Also, specify as appropriate, the non-encryption recording formats, EFMT3 or EFMT2 (for media interchange). If a TS1130 tape drive is allocated, the default recording format is EFMT3. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Because the 3592 Model E06 is only downward read (and not write) compatible with the EFMT1 format, you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E06 drive to be considered eligible for an EFMT1 request. 3. As appropriate, determine which key labels are to be used and how they are specified, data class, the DD statement or Encryption Key Manager established defaults. 4. Determine whether you need help from your tape management system vendor and contact them, if needed. 5. As appropriate, plan for the installation of the Encryption Key Manager (EKM) and decide which of the supported key stores to use. 6. As appropriate, plan for the key labels that will be used and the encoding mechanism (label or hash) for each and where the key labels are specified. 7. For in-band key management (with encryption), update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also, create a z/OS UNIX segment for the IOS address space. 8. Upgrade 3592 Model J1A and 3592 Model E05 drive microcode to enable the drives to recognize and enable the EFMT3 and EEFMT3 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 9. Identify the installation exit changes that are needed. 10. Determine which systems should have coexistence support and which systems should have full support. 11. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 12. Determine when to IPL the host machine after installing all necessary PTFs.

Table 16. TS1130 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the TS1130 tape drive devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the system customization planning steps listed for a stand-alone environment. b. Determine the esoteric or generic device names that need to be added to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Determine whether to use the global keyword DSNWITHSGNAME on the SETOAM statement in the CBROAMxx member of PARMLIB to append the object storage group name to the OAM object tape data set names. See “Object tape data set low-level qualifier enhancement” on page 396 for additional information. d. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new encryption format EEFMT3 (by default, the non-encryption recording format EFMT3 is used). 2. If you install the TS1130 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the system customization planning considerations listed for an IBM tape library environment. b. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices and the new encryption format EEFMT3. 3. In addition, if you install the TS1130 tape drive devices in an OAMplex: <ol style="list-style-type: none"> a. Ensure that the TS1130 tape drive devices are available to all instances of OAM where the full support software is installed. b. Determine whether systems exist that will require coexistence support. This situation is particularly important in an OAMplex where at least one system has the full-support software installed and enabled, and at least one system will not have all of the support installed or enabled. Coexistence support is needed if not all of the systems in the OAMplex will be at the same full-support level. c. To provide this coexistence support, as appropriate for the support and the release level, install the OAM full-support PTF without the enabling PTF or any separate coexistence support PTF. d. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 4. In an OAM Object Tape environment, any coexistence or full support systems must also have the new overflow-related columns added to the TAPEVOL table in the Optical Configuration Database (OCDB). Only one system in an OAMplex needs to run CBRSMKBO sample JCL to add the new TAPEVOL columns, but all systems in the OAMplex need to run CBRPBIND. Adding the new TAPEVOL columns and running CBRPBIND is needed with the installation of the PTFs regardless of whether the new TS1130 tape drives are being used.

Table 16. TS1130 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: DFSMSHsm	See “Implementation considerations for using TS1130 tape drives” on page 94 and “DFSMSHsm tips” on page 230.
Storage administration: stand-alone tape environment	<ol style="list-style-type: none"> 1. Determine how to setup your tape management systems pooling support to separate rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also to separate the standard, economy, and extended length cartridges, as appropriate for your job and application usage. 2. Review the usage of the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA, (optional) to ensure that the media type mounted is the media type requested through data class. This can be used in the tape management systems poolwithg support as an additional safety check. 3. Review the existing SMS data class media policies to ensure compatibility with existing tape scratch pool policies before enabling the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA. 4. Review the existing SMS data class recording technology policies to ensure that data set policies set to EFMT2 and EEFMT2 are being appropriately used. If a TS1130 tape drive is allocated and the specified data class indicates EFMT2 or EEFMT2, the drive records in the lower recording technology. Also, remember that the TS1130 does not record in the EFMT1 format, so also review any existing SMS data classes that specify EFMT1 for applicability. 5. Determine the data class updates that are needed to request the appropriate recording format for the TS1130 tape drives. If a TS1130 tape drive is allocated, the default recording format is EFMT3 (non-encryption). 6. Determine if media should use performance segmentation, with a fast access segment to be filled first, and a slower access segment to be filled after. If you decide to use the performance segmentation attribute (available with MEDIA5 and MEDIA9 tape cartridges only, and mutually exclusive with performance scaling), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance segmentation. b. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation. 7. Determine if media should be used at full capacity or scaled for optimal performance. If you decide to use the performance scaling attribute (available with MEDIA5 and MEDIA9 tape cartridges only), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance scaling. b. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling. 8. Determine how to allocate media to appropriate nonlibrary drives. Consider using the IBM manual tape library. You can also separate the real drives from the emulating drives, use third-party tape management software, or use customer-written applications. 9. Identify any needed changes to the hardware configuration definition (HCD) to define the new devices.

Table 16. TS1130 tape drive planning considerations (continued)

Area	Planning Considerations
Storage administration: IBM tape library environment	<ol style="list-style-type: none"> 1. Review the usage of the DEVSUPxx PARMLIB option, MTL_NO_DC_WORM_OK, if the WORM cartridges in the manual tape library environment will be mounted through use of the tape management systems pooling support versus a data class WORM media specification. 2. Determine the 3592 media usage of rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also the usage of the standard, economy, and extended length cartridges. Then make the appropriate data class definition updates to select the appropriate media type. WORM media can only be used if explicitly requested through data class. 3. Review ACS routines for changes needed in selecting tape storage groups and libraries that have the TS1130 tape drive devices. 4. Determine the data class updates that are needed to use the recording technology, media type, and performance scaling or performance segmentation data class attribute (performance scaling or segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 5. Identify any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 7. Because the 3592 Model E06 is only downward read (and not write) compatible with the EFMT1 format, you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E06 drive to be considered eligible for an EFMT1 request.
Storage administration: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the TS1130 tape drive devices in a stand-alone environment, follow the storage administration planning steps listed for a stand-alone environment. 2. If you install the TS1130 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the storage administration planning steps listed for an IBM tape library environment. b. Review ACS routines for STORE or CTRANS environments and make any changes needed to ensure proper class assignment. 3. If you install the TS1130 tape drive devices in an OAMplex, you must make the devices available to all instances of OAM where the full support is installed.

Implementing this change could affect these areas of your processing environment:

Area	Considerations
Storage Administration	<p>The following NaviQuest CLISTs have changed:</p> <ul style="list-style-type: none"> • ACBQBAD1 is a CLIST used to define, alter, or display a data class. • ACBQBAD2 is a CLIST used to define or alter a data class. <p>ISMF panels have been changed to support the two new recording formats, EFMT3 and EEFMT3. See Chapter 18, “ISMF modifications for TS1130 tape drive,” on page 125 for information about ISMF support for the TS1130 tape drive.</p>
Operations	<p>These commands have been updated with this support:</p> <ul style="list-style-type: none"> • DEVSERV QTAPE • DISPLAY SMS,VOLUME • IDCAMS ALTER VOLUMEENTRY • IDCAMS CREATE VOLUMEENTRY • IDCAMS DCOLLECT • IDCAMS LISTCAT • LIBRARY DISPDRV
Auditing	None.

Area	Considerations
Application development	<p>The mapping macros and installation exits listed have been changed for this function.</p> <ul style="list-style-type: none"> • CBRTDSI - Maps the Tape Device Selection Information • CBRTVI - Maps the Tape Volume Information • CBRUXCPL - Installation Exit CBRUXCUA Parameter List • CBRUXEPL - Installation Exit CBRUXENT Parameter List • CBRUXJPL - Installation Exit CBRUXEJC Parameter List • CBRUXNPL - Installation Exit CBRUXVNL Parameter List • DALINCHG - Dynamic Allocation DALINCHG Text Unit • EDGRDEXT - DFSMSrmm Data Set Extract record • EDGRVEXT - DFSMSrmm Volume Extract Record • EDGRXEXT - DFSMSrmm Extended Extract record • EDGXSF - DFSMSrmm API SFI definitions • IECUCBCX - Maps the Tape UCB Device Class extension • IFGTEP - Maps the installation exit main parameter list • IEZDEB - Maps the data extent block (DEB) • IHADFVT - Maps the data facilities vector table <p>Tracking Data Written: An application may track in KBs, data such as the number of logical bytes written, the number of physical bytes written, the amount of free space remaining on a volume, the capacity of the volume, or the number of logical bytes deleted. Now, with a 1 TB tape (non-compressed), the possibility exists with the 3592 Model E06 to overflow some of the 4-byte fields that contain these values. Of particular concern would be the logical data-related fields that (with compression) deal with an amount of data that may be larger than the physical capacity of the tape. Applications that use, store, and display this type of information may need to account for and determine how best to handle an overflow situation. For a signed (4-byte) integer X'7F FF FF FF' (2,147,483,647 in KBs) supports 2+ TBs and for an unsigned (4-byte) integer X'FF FF FF FF' (4294967295 in KBs) supports 4+ TBs.</p>
Diagnostic procedures	<p>The messages listed have been changed for this support.</p> <ul style="list-style-type: none"> • CBR0178I • CBR0203I • CBR0206I • CBR0207I • CBR0211I • CBR1083I • CBR1180I • CBR1220I • IEA435I • IEH623E • IEH641I • IGF513I
Automation products	None.

Area	Considerations
General use	For DFSMSrmm, use the RMM subcommands ADDVOLUME, CHANGEVOLUME, and SEARCHVOLUME to specify the recording technology EFMT3 or EEFMT3, and for EEFMT3, the key labels KEYLABEL1/KEYENCODE1 and KEYLABEL2/KEYENCODE2.

Implementing the DFSMS software support for the TS1130 tape drive

To implement the TS1130 tape drives software support, perform the system-level and application-level tasks listed in the following tables. **Required** tasks apply to any DFSMS installation enabling the function. **Optional** tasks apply to only specified operating environments or to situations where there is more than one way to set up or enable the function. For more details on the procedures associated with a given task, see the reference listed.

System-Level Tasks	Condition	Procedure Reference
<p><i>Stand-alone tape environment</i></p> <p>1. Implement the data class policy specifying EFMT3 or EEFMT3. Also, specify as appropriate, the interchange recording formats, EFMT2 or EEFMT2. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. If no data class is used, EFMT3 will be the recording technology.</p> <p>2. As appropriate, install the Encryption Key Manager (EKM) and set up the key store it will use.</p> <p>3. As appropriate, create the data classes or the DD statements (or use Encryption Key Manager defaults) to specify the key labels and their encoding mechanism (label or hash).</p> <p>4. As appropriate, for in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also create a z/OS UNIX segment for the IOS address space.</p> <p>5. Upgrade 3592 Model J1A and 3592 Model E05 microcode to enable the drives to recognize and enable the EFMT3 or EEFMT3 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB.</p> <p>6. Make the required installation exit changes.</p> <p>7. Make any needed changes to the HCD to define the new devices.</p> <p>8. If more than one recording technology is used for the same device type, create a unique esoteric for each of the recording technologies. Use the esoteric unit names in DFSMSHsm to direct allocations uniquely to each group of devices.</p> <p>9. If performance scaling or performance segmentation is used (available with MEDIA5 and MEDIA9 tape cartridges only), update or create ACS routines to assign a data class to tape output functions. For example, for DFSMSHsm, you can filter on single file tape data set names used by DFSMSHsm functions. Define the data class with the performance scaling or performance segmentation attribute.</p> <p>10. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of TS1130 tape drives exclusively because the EFMT3 and EEFMT3 recording technologies are not compatible with other devices.</p> <p>11. Install coexistence PTFs as appropriate.</p> <p>12. IPL the system.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support • z/OS HCD User's Guide • z/OS DFSMSHsm Implementation and Customization Guide

System-Level Tasks	Condition	Procedure Reference
<p><i>IBM tape library environment</i></p> <ol style="list-style-type: none"> 1. Implement the data class policy specifying EFMT3 or EEFMT3. Also, specify as appropriate, EFMT2 or EEFMT2 (for media interchange). Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Because the 3592 Model E06 is only downward read (and not write) compatible with the EFMT1 format, you must specify the read-compatible special attribute indicator (in the tape configuration database) or use LABEL=(,,IN) on the DD statement of JCL to enable the 3592 Model E06 drive to be considered eligible for an EFMT1 request. 3. As appropriate, install the Encryption Key Manager (EKM) and set up the key store it will use. 4. As appropriate, create the data classes or the DD statements (or use Encryption Key Manager defaults) to specify the key labels and their encoding mechanism (label or hash). 5. For in-band key management, update (as appropriate) the IOS PARMLIB member (IECIOSxx) using the EKM command. Also create a z/OS UNIX segment for the IOS address space. 6. Upgrade 3592 Model J1A and 3592 Model E05 microcode to enable the library drives to recognize and enable the EFMT3 or EEFMT3 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 7. Make the required installation exit changes. 8. Define or alter existing data class constructs as appropriate, to specify the EFMT3 or EEFMT3 recording technology, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10 media type, and the performance attributes (performance scaling or performance segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 9. Define or alter existing storage group constructs to include libraries with the new TS1130 tape drives devices. 10. Update ACS routines to direct allocation to the TS1130 tape drives device as requested. 11. Validate and activate any new or modified SMS configuration. 12. Make any needed changes to the HCD to define the new devices. 13. To define the partitioning category code for MEDIA5 MEDIA6, MEDIA7, or MEDIA8, MEDIA9, or MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 14. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries • z/OS HCD User's Guide • z/OS DFSMSdftp Storage Administration

System-Level Tasks	Condition	Procedure Reference
<p><i>OAM object tape environment</i></p> <p>The migration steps that you must take in tape environments that use OAM objects vary depending upon the type of environment that is installed:</p> <ol style="list-style-type: none"> 1. If you install the new TS1130 tape drives devices in an OAMplex: <ol style="list-style-type: none"> a. Make the new TS1130 tape drives devices available to all instances of OAM where the full support software is installed. b. Install coexistence PTFs as appropriate. c. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). 2. If you install the new TS1130 tape drives devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the migration steps listed for an IBM tape library environment. b. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Make the needed changes to ACS routines for ALLOC, STORE, or CTRANS environments. 3. If you install the new TS1130 tape drives devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the migration steps listed for a stand-alone environment. b. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new EFMT3 or EEFMT3 recording technologies. The esoteric or generic unit name must consist of TS1130 tape drives exclusively because the EFMT3 and EEFMT3 recording technologies are not compatible with the other 3592 drives. c. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). d. Make the needed changes to ACS routines for ALLOC, STORE and CTRANS environments. e. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new EFMT3 or EEFMT3 recording technologies. 4. In an OAM Object Tape environment, any coexistence or full support systems must also have the new overflow-related columns added to the TAPEVOL table in the Optical Configuration Database (OCDB). Only one system in an OAMplex needs to run CBRSMKBO sample JCL to add the new TAPEVOL columns, but all systems in the OAMplex need to run CBRPBIND. Adding the new TAPEVOL columns and running CBRPBIND is needed with the installation of the new PTFs regardless of whether the new TS1130 tape drives are being used. 	Required	<i>z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support</i>

System-Level Tasks	Condition	Procedure Reference
<p><i>DFSMSHsm tape environment</i></p> <p>DFSMSHsm allows the specification of tape unit names using either generic or esoteric names. Installations that have a mixture of non-SMS-managed 3590 devices defined under the 3590-1 generic name, need to perform these steps:</p> <ol style="list-style-type: none"> 1. Define a unique esoteric for each recording technology. 2. Use the SETSYS USERUNITTABLE command to define these esoteric names to DFSMSHsm. This also applies to mixed devices in the 3490 generic. Installations that use SMS-managed tape devices or have a single 3590-1 recording technology, do not need to define an esoteric for those devices. 	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
<p><i>Setting up DFSMSHsm to use WORM output tapes for ABACKUP</i></p> <p>In a SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.</p> <p>In a non-SMS tape environment, the default allows tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUPxx parameter, ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS, is used, then the data class must request the appropriate media type for it to be successfully mounted.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
Application-level tasks	Condition	Procedure reference
<p>For programs that use dynamic allocation and cannot take advantage of predefined data class definitions, set the PARM for the DALINCHG text unit key in DALINCHG to specify the media type and recording technology for system-managed tape library allocations.</p>	Optional	z/OS MVS Programming: Authorized Assembler Services Guide

Chapter 16. Access method services (AMS) modifications

This topic describes changes to the access method services (AMS) commands to support the new subparameters, EFMT3 and EEFMT3 for the parameter RECORDING. The changed commands are:

- “ALTER VOLUMEENTRY” on [page 281](#)
- “CREATE VOLUMEENTRY” on [page 287](#)
- “DCOLLECT” on [page 290](#)
- “LISTCAT” on [page 292](#)



Attention: Use these AMS commands only to recover from tape volume catalog errors. Because AMS cannot change the library manager inventory in an automated tape library, use ISMF for normal tape library alter functions.

Related reading:

For explanations of all the parameters used with the AMS commands and additional examples, refer to [z/OS DFSMS Access Method Services Commands](#).

Enterprise format 3 (EFMT3) and enterprise encrypted format 3 (EEFMT3)

Enterprise format 3 (EFMT3) and enterprise encrypted format 3 (EEFMT3) are new recording technologies used by the TS1130 tape drive. EFMT3 is the non-encrypted recording format and is the default recording format for the TS1130. EEFMT3 is used to specify that the data on the tape is recorded in the encryption format.

EFMT3 and EEFMT3 support for ALTER VOLUMEENTRY

Use the AMS ALTER VOLUMEENTRY command to modify the attributes for an existing tape volume entry.

The ALTER VOLUMEENTRY command allows recording fields in the volume records of a tape library to be altered with the following rules:

- EFMT3 subparameter indicates READ/WRITE on an EFMT3 track device.
- EEFMT3 subparameter indicates READ/WRITE on an EEFMT3 track device.
- EFMT3 subparameter of RECORDING is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10. The use of MEDIA1 through MEDIA4 will produce an IDC3266I error message being generated twice. Once for EFMT3 and once for the media type. The generation of the two IDC3226I error messages indicates an incompatibility between the EEFMT3 subparameter and the media type displayed.
- EEFMT3 subparameter of RECORDING is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 or MEDIA10. The use of MEDIA1 through MEDIA4 produces an IDC3226I error message being generated twice, once for EEFMT3 and once for the media type. The generation of the two IDC3226I error messages indicates an incompatibility between the EEFMT3 subparameter and the media type displayed.

EFMT3 and EEFMT3 subparameter for ALTER VOLUMEENTRY

RECORDING(18TRACK | 36TRACK | 128TRACK | 256TRACK | 384TRACK | EFMT1 | EFMT2 | EEFMT2 | EFMT3 | EEFMT3 | UNKNOWN)

This shows the EEFMT3 subparameter associated with the RECORDING parameter for ALTER VOLUMEENTRY

EFMT3 and EEFMT3 support for CREATE VOLUMEENTRY

The CREATE VOLUMEENTRY command allows the recording field in the volume records of a tape library to be created with subparameters of EFMT3 or EEFMT3 with the following rules:

- EFMT3 subparameter indicates READ/WRITE on an EFMT3 track device.
- EEFMT3 subparameter indicates READ/WRITE on an EEFMT3 device.
- EFMT3 is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10. Any use of MEDIA1 through MEDIA4 will produce an IDC3226I error message being displayed twice. Once for EFMT3 and once for the media in question. The double display indicates an incompatibility between the EFMT3 subparameter and the media type displayed.
- EEFMT3 is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10. Any use of MEDIA1 through MEDIA4 produces an IDC3226I error message being displayed twice. Once for EEFMT3 and once for the media in question. The double display indicates an incompatibility between the EEFMT3 subparameter and the media type displayed.
- If MEDIA5, MEDIA6, MEDIA7, or MEDIA8 are specified and RECORDING is not specified, default to EFMT1 for RECORDING value.
- If MEDIA9 or MEDIA10 are specified and RECORDING is not specified, default to EFMT2 for RECORDING value.

EFMT3 and EEFMT3 subparameters for CREATE VOLUMEENTRY

RECORDING(18TRACK | 36TRACK | 128TRACK | 256TRACK | 384TRACK | EFMT1 | EFMT2 | EEFMT2 | EFMT3 | EEFMT3 | UNKNOWN)

This shows the EEFMT3 subparameter associated with the RECORDING parameter for CREATE VOLUMEENTRY.

EFMT3 and EEFMT3 Support for DCOLLECT

The DCOLLECT command has values added to its definitions for DDRECTE to allow the constants DDCEFMT3 for the EFMT3 recording technology and DDCEEFM3 for the EEFMT3 recording technology.

EFMT3 and EEFMT3 subparameter for DCOLLECT

DDRECTE(DDCRTNUL | DDC18TRK | DDC36TRK | DDC128TK | DDC256TK | DDC384TK | DDCEFMT1 | DDCEFMT2 | DDCEEFM2 | DDCEFMT3 | DDCEEFM3)

DDCEFMT3

The recording technology is EFMT3. The constant value is 9.

DDCEEFM3

The recording technology is EEFMT3. The constant value is 10.

EFMT3 and EEFMT3 support for LISTCAT

The LISTCAT command is enhanced to display the new values associated with the RECORDING parameter for VOLUME entries.

EFMT3 and EEFMT3 subparameters in List tape volume entries sample output

```

LISTCAT -
  VOLUMEENTRIES
  ALL
IDCAMS  SYSTEM SERVICES                                TIME: 11:29:12      09/02/05
PAGE    2
                                LISTING FROM CATALOG -- SYS1.VOLCAT.V0
VOLUME-ENTRY----V0A2991
  DATA-VOLUME
  LIBRARY-----ATLIB02      RECORDING-----EEFMT3      ERROR-STATUS-----NOERROR      CREATION-
DATE-2008-04-02                                     MEDIA-TYPE-----MEDIAx      USE-ATTRIBUTE----SCRATCH      ENT-EJ-
DATE----- (NULL)                                     COMPACTON----- (YES)                                     LAST-
MOUNTED----- (NULL)                                SP-ATTRIBUTE-----NONE      WRITE-PROTECTED--- (NULL)      LAST-
WRITTEN----- (NULL)                                SHELF-LOC----- (NULL)
LOCATION-----LIBRARY
EXPIRATION----- (NULL)
OWNER----- (NULL)
IDCAMS  SYSTEM SERVICES                                TIME: 11:29:12      09/02/08
PAGE    3
                                LISTING FROM CATALOG -- SYS1.VOLCAT.VGENERAL
                                THE NUMBER OF ENTRIES PROCESSED WAS:
                                AIX -----0
                                ALIAS -----0
                                CLUSTER -----0
                                DATA -----0
                                GDG -----0
                                INDEX -----0
                                NONVSAM -----0
                                PAGESPACE -----0
                                PATH -----0
                                SPACE -----0
                                USERCATALOG -----0
                                TAPELIBRARY -----0
                                TAPEVOLUME -----1
                                TOTAL -----1
                                THE NUMBER OF PROTECTED ENTRIES SUPPRESSED WAS 0
IDC0001I FUNCTION COMPLETED, HIGHEST CONDITION CODE WAS 0
IDCAMS  SYSTEM SERVICES                                TIME: 11:29:12      09/02/08
PAGE    4

IDC0002I IDCAMS PROCESSING COMPLETE. MAXIMUM CONDITION CODE WAS 0

```

Note: MEDIAx represents either MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10.

Chapter 17. Tape drive and tape volume allocation modifications for 3592 Model E06

Changes made to device support, storage management subsystem (SMS), and Multiple Virtual Storage (MVS) device allocation enable you to allocate the tape drives and tape volumes. Within an IBM tape library environment, your system can fully recognize all supported media types and recording technologies.

Device support modifications

z/OS DFSMS device support provides hardware device-specific code, which allows tape drives, tape volumes, and DASD to interface with z/OS DFSMS. Specifically, it provides:

- The interfacing exits to the input/output supervisor (IOS) and EXCP device support code
- Error recovery procedure routines
- Services to acquire and log statistical and error data
- Services to acquire and display device states
- Utilities for functions like initializing tapes

You can use the MVS DEVSERV command to request basic status information on a device, a group of devices, or storage control units. You can use the QTAPE parameter of the DEVSERV command to display tape device information. Use DEVSERV QTAPE to display the real device type and the emulated device type.

With the DEVSERV QTAPE MED (medium) option, you can display information for the device type, media type, and cartridge volume serial number.

The syntax of the DEVSERV QTAPE command with the MED option is as follows:

DS QT,xxxx,MED,nnn

xxxx

Represents a three-digit or a four-digit device number in hexadecimal format.

nnn

Stands for the number of devices, starting at the address xxxx, for which the DEVSERV command displays the MED information. The value nnn is optional and can be any decimal number from 1 to 256, with 1 as the default value.

DEVSERV QTAPE will display '3592E06' for the real device type, where E06 is the drive model, if the underlying physical device is a 3592 Model E06 (TS1130). If the MEDIUM option is specified for DEVSERV QTAPE command, the real device type will be displayed as '3592-3E'.

Figure 6 on page 117 shows the output of DS QT,960 when a TS1130 (3592 Model E06) tape drive emulates a 3590 Model B1x tape drive.

```
11.20.46 SYSTEM1          DS QT,960
11.20.46 SYSTEM1          IEE459I 11.20.46 DEVSERV QTAPE 760
UNIT DTYPE DSTATUS CUTYPE DEVTYPE CU-SERIAL DEV-SERIAL ACL LIBID
0960 3590   ON-RDY  3592J70 3592E06* 0178-00030 0178-00030
```

Figure 6. DS QT,960 output

Figure 7 on page 118 shows the output of DS QT,960,MED when a TS1130 (3592 Model E06) tape drive emulates a 3590 Model B1x tape drive.

```

11.21.21 SYSTEM1          ds qt,960,MED
11.21.21 SYSTEM1          IEE459I 11.21.21 DEVSERV QTAPE 763
UNIT RDTYPE  EDTYPE EXVLSR INVLSR RMEDIA  EMEDIA      WWID
0960 3592-3E 3590-1      1P0694 9          3

```

Figure 7. DS QT,960,MED output

A bit DFVTJAG3 is added to the IHADFVT mapping macro that maps the data facilities vector table. When this bit is set, it indicates that all of the software support for the 3592 Model E06 (TS1130) drive is on the system. This bit is set by the enabling module IECTEPTF, if it is installed.

The IECUCBCX mapping macro is changed to support the TS1130:

- The new EPI value is X'14' - REALJAG3_EMUL3590
- A new data key shred support bit is defined in flag byte 7 (UCBCXFL7) UCBCX_SHRED EQU X'40'

The tape initialization (INITT) and rekeying (REKEY) functions of the IEHINITT Utility now allow an alphanumeric volsr to be specified for SER keyword when NUMBTAPE is specified. (Previously, if more than one tape was specified in NUMBTAPE, the volume serial number of the first tape had to be all numeric.) The volume serial number can now be specified as alphanumeric, with the requirement that the last one to six characters be numeric. z/OS will increment the numeric suffix of the volume serial number by one for each additional tape. For example, VOL100 is incremented to VOL101, V19999 is incremented to V20000, and 123456 is incremented to 123457.

The following rules apply when the value specified for NUMBTAPE is greater than 1:

- When the numeric suffix exceeds its incremental limit, IEHINITT will process up to the largest number allowed for the numeric suffix and issue a warning message. For example:

```
SER=TOM991, NUMBTAPE=10
```

In this example, the maximum value of the numeric suffix 991 is 999, therefore, up to nine tapes are processed. The tenth tape is ignored and the following new message is issued:

```
IEH641I THE NUMERIC SUFFIX OF THE SERIAL NUMBER EXCEEDED POSSIBLE MAXIMUM VALUE -
THE LAST VOLUME PROCESSED WAS 'volser'
```

In this example, the “volser” indicated would be TOM999. An exception to this rule is when the serial number is all numeric and an overflow occurs, the serial number is still allowed to wrap around (Serial number 999999 is incremented to 000000).

- When the last character is alphabetic, the following updated message will be issued.

```
Existing message:
IEH623E INVALID SERIAL NUMBER. SERIAL NUMBER MUST BE ALL NUMERIC WHEN VALUE
SPECIFIED FOR NUMBTAPE IS GREATER THAN 1
```

```
Changed message:
IEH623E INVALID SERIAL NUMBER. AT LEAST ONE OR MORE RIGHTMOST CHARACTERS MUST
BE NUMERIC WHEN NUMBTAPE IS GREATER THAN 1
```

The following parameter keywords for IEHINITT have been updated:

SER=serial number

specifies the volume serial number of the first or only tape to be labeled. Specify up to six characters. For IBM standard labeled (SL) tapes, the serial number cannot contain blanks, commas, apostrophes, equal signs, or special characters other than periods, hyphens, dollar signs, pound signs, and at signs ('@'). ISO/ANSI labeled tapes (AL) may contain any valid ISO/ANSI 'a' type character as described under the OWNER keyword. However, if any non-alphanumeric character (including a period or a hyphen) is present, delimiting apostrophes must be included. You cannot use a blank as the first character in a volume serial number. When NUMBTAPE keyword is specified with a value greater than 1, the volume serial number must be all numeric or the last one to six characters of the volume serial number must be numeric.

When a volume serial number is all numeric, it is increased by one for each additional tape (Note: Serial number 999999 is increased to 000000).

When a volume serial number is alphanumeric, only the numeric suffix is increased by one for each additional tape (Serial number VOL100 is increased to VOL101, T19999 is increased to T20000, and 100A01 is increased to 100A02). In the case where the numeric suffix exceeds its incremental maximum value, IEHINITT processes up to the largest serial number allowed for the numeric suffix and the warning message IEH641I is issued. (For example, SER=TOM991, NUMBTAPE=10 – Up to nine volumes are processed and the last volume is TOM999.)

NUMBTAPE={n|1}

specifies the number of tapes to be processed according to the specifications made in this control statement. The value n represents a number from 1 to 255. If more than one tape is specified, the volume serial number of the first tape must be all numeric or the last one to six characters must be numeric.

The DDR Swap Exit handles swaps involving the 3592 Model E06 drive and the new recording formats EFMT3 and EEFMT3. Appropriate rules are also put in place for handling a lower technology EFMT1, EFMT2, or EEFMT2 request on a 3592 Model E06 to a 3592 Model J or E05 (as appropriate and as consistent with past 3592 support). Table 17 on page 119 shows a summary of what swaps are allowed.

Table 17. Format swaps allowed for TS1130			
Format	From Device	Allowed to device	Notes
EFMT1	3592-J 3592-2 3592-2E	3592-J 3592-2 3592-2E	Swap to a 3592-3E not allowed
EFMT1	3592-3E	3592-J 3592-2 3592-2E 3592-3E	Swap allowed from 3592-3E to any 3592 type device
EFMT1	3592-3E and Write attempted RC-RQC=x'2420'	3592-J 3592-2 3592-2E 3592-3E	
EFMT2	3592-2 3592-2E 3592-3E	3592-2 3592-2E 3592-3E	Swap allowed to a 3592-2, 3592-2E or 3592-3E
EEFMT2	3592-2E 3592-3E	3592-2E 3592-3E	Swap allowed to an encryption-capable drive
EFMT3 EEFMT3	3592-3E	3592-3E	Swap allowed only to 3592-3E

IOS000I Message with Encryption Failure

If an encryption-related key exchange between the drive and the key manager fails, an IOS000I message is issued indicating that an encryption failure has occurred:

```
IOS000I 07C2,7D,IOE,06,0600,,**,J1G150,ENCREADA 594
804008C022402751 0806FF0000131415 0017181900000092 2004E82061C42111
ENCRYPTION FAILURE
CU=08 DRIVE=131415 EKM=171819
```

Note: The preceding values for CU, DRIVE, and EKM generically represent the byte positions in sense data where the errors would be reported.

The control unit (CU), DRIVE, and Encryption Key Manager (EKM) error codes are from sense bytes 08, 13-15, and 17-19, respectively. For example:

```
IOS000I 0BD0,60,IOE,01,0E00,,**,JJC046,ATNCMP1
804C08C022402751 0001FF0000000000 0005EE3100000092 2004E82061BA2111
ENCRYPTION FAILURE
CU=00 DRIVE=000000 EKM=05EE31
```

In this example, the error was reported by the Encryption Key Manager (EKM).

For an EKM failure, refer to the Problem Determination section of the *IBM System Storage Tape Encryption Key Manager, Introduction, Planning, and User's Guide*, GA76-0418. When looking up the EKM failure, use the last two bytes of the error code (for example, EE31 in the example above).

For a control unit failure, refer to the *IBM System Storage TS1120/TS1130 Tape Drive and Controller Operator Guide 3592 Models J1A, E05, E06, EU6, J70 and C06*, GA32-0556. [Table 30 on page 210](#) contains error codes for control unit failures.

Table 18. Error codes for control unit failures		
Error Code	Description	Recovery Action
00	Not a control unit reported failure	Refer to the EKM and drive error codes reported in the IOS000I message for failure information.
01	The EKM was not available for an out-of-band key exchange.	Verify the EKM that the control unit is configured to use and also verify the state of that EKM. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).
02	Timeout for an out-of-band key exchange	The EKM may have gone down mid-sequence, or there may be a network problem. Verify the state of the EKM and the TCP/IP network. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).
03	An in-band key exchange was canceled by the host.	Check for an IOS628E message for further information as to why the in-band proxy may have canceled the key exchange. For additional information on these error codes, see z/OS UNIX System Services Messages and Codes .

For more detailed information about the drive-reported conditions, and also about the EKM-reported conditions, see the Problem Determination section of the *IBM System Storage TS3500 Tape Library Operator Guide*, GA32-0560.

If there are multiple error codes reported, start with the EKM error code.

In addition, any system-managed tape library scratch tape that receives the IOS000I ENCRYPTION FAILURE message along with an IEC512 I/O ERR, remains in a scratch status, but is updated in the Tape Control Data Base (TCDB) with a VOLUME ERROR STATUS of I/O ERROR. This causes it to be placed in the software error category, and the tape is unusable until the I/O ERROR condition is cleared through manual intervention (for example, use ISMF volume ALTER from scratch. Scratch moves the volume from the software error category back to the scratch category). Periodically, use the DISPLAY SMS,LIBRARY command with DETAIL to display the number of scratch volumes in the software error category.

SMS modifications

SMS automates and centralizes storage management. It automatically assigns service requirements and attributes to data when that data is created. SMS configuration services validate, for example, the recording technology value that ISMF specifies in data class definitions.

SMS will support a new recording technology EFMT3 and EEFMT3.

In an IBM tape library environment (automated or manual), use ISMF to specify the new recording formats (EFMT3 and EEFMT3) and for media interchange (EFMT2 and EEFMT2). Also remember that even though the TS1130 (3592 Model E06) tape drive can read in the EFMT1 format, it cannot write in that format.

The recording technology attribute and the performance scaling or performance segmentation options can also be specified and used outside of the system-managed tape library environment.

In support of the TS1130 tape drives, SMS configuration services are updated to validate the recording technology values EFMT3 and EEFMT3.

In Data Class

With SMS, the system obtains information about the attributes of a data set from the data class for the data set.

When using encryption, any data set attributes you specify on these DD parameters override the corresponding attributes in the data class for the data set:

- KEYLABL1 (key label 1)
- KEYENCD1 (encoding for key label 1)
- KEYLABL2 (key label 2)
- KEYENCD2 (encoding for key label 2)

Overriding Attributes Defined in the Data Class

For a new data set, you can override the data class attributes defined in the data class for the data set by coding one or more of these DD parameters:

- KEYLABL1 (key label 1)
- KEYENCD1 (encoding for key label 1)
- KEYLABL2 (key label 2)
- KEYENCD2 (encoding for key label 2)

MVS device allocation modifications

MVS device allocation helps prioritize and select tape drives to meet the needs of application programs or system functions. Batch (JCL) or dynamic (SVC99) allocation makes these device needs known to MVS device allocation. MVS device allocation selects the appropriate devices and serializes them for the requester to use. It can also request that appropriate volumes be mounted on the allocated devices. It accomplishes these tasks by interfacing with SMS, DEVSERV, OAM, MSGDISP, and other system components.

MVS device allocation currently supports multiple types of tape devices. Within an IBM tape library environment, MVS device allocation considers media types and recording technologies when allocating tape drives and tape volumes. For the TS1130 tape drive, the dynamic allocation (SVC 99) volume interchange text unit (DALINCHG) allows you to specify EFMT2, EEFMT2, EFMT3, or EEFMT3 for the recording technology and MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 for the media type.

See [Table 19 on page 122](#) for DALINCHG parameter values appropriate for the TS1130.

Table 19. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types

Parameter Value	Media Type	Recording Technology
A5	MEDIA5	EEFMT3
95	MEDIA5	EFMT3
85	MEDIA5	EEFMT2
75	MEDIA5	EFMT2
05	MEDIA5	No format
A6	MEDIA6	EEFMT3
96	MEDIA6	EFMT3
86	MEDIA6	EEFMT2
76	MEDIA6	EFMT2
06	MEDIA6	No format
A7	MEDIA7	EEFMT3
97	MEDIA7	EFMT3
87	MEDIA7	EEFMT2
77	MEDIA7	EFMT2
07	MEDIA7	No format
A8	MEDIA8	EEFMT3
98	MEDIA8	EFMT3
88	MEDIA8	EEFMT2
78	MEDIA8	EFMT2
08	MEDIA8	No format
A9	MEDIA9	EEFMT3
99	MEDIA9	EFMT3
89	MEDIA9	EEFMT2
79	MEDIA9	EFMT2
09	MEDIA9	No format
AA	MEDIA10	EEFMT3
9A	MEDIA10	EFMT3
8A	MEDIA10	EEFMT2
7A	MEDIA10	EFMT2
0A	MEDIA10	No format

Related reading:

- See *z/OS MVS System Commands* for more information on the DEVSERV QTAPE command.
- See *z/OS MVS Programming: Authorized Assembler Services Guide* for more information about the DALINCHG parameter.

- See [z/OS DFSMS Installation Exits](#) for more information about the IECUCBCX mapping macro.

JCL DD statement parameters and equivalent text units for TS1130

The JCL DD statement parameters and equivalent text units for TS1130 are unchanged from those for the TS1120. See “JCL DD statement parameters and equivalent text units for TS1120” on page 214.

DSNAME Allocation Text Units for TS1130

The DSNAME allocation text units for TS1130 are unchanged from those for the TS1120. See “DSNAME Allocation Text Units for TS1120” on page 215.

Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1130

Volume Interchange Specification - Key = '006F'

DALINCHG specifies the media type and track recording technique required for system-managed tape library allocation. Whenever possible, IBM suggests that you use an installation-defined DATACLAS construct name to control cartridge media type and track recording technique. Use this key only when it is not possible to use a pre-defined DATACLAS construct because of the dynamic nature of the program and because the program must control the media type and track recording technique. Contact your storage administrator before using this key.

Note: To specify DALINCHG, your program must be APF-authorized, in supervisor state, or running in PSW key 0-7. The specification of DALINCHG will be ignored if a non-system-managed tape volume is allocated.

When you code this key, # and LEN must be one. These PARM values are new for the TS1130:

95

Enterprise Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

96

Enterprise WORM Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

97

Enterprise Economy Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

98

Enterprise Economy WORM Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

99

Enterprise Extended Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

9A

Enterprise Extended WORM Cartridge Tape 3592 requested; Enterprise Format 3 recording technology requested.

A5

Enterprise Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

A6

Enterprise WORM Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

A7

Enterprise Economy Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

A8

Enterprise Economy WORM Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

A9

Enterprise Extended Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

AA

Enterprise Extended WORM Cartridge Tape 3592 requested; Enterprise Encrypted Format 3 recording technology requested.

Chapter 18. ISMF modifications for TS1130 tape drive

In ISMF, these applications are modified to support the two new recording formats EFMT3 and EEFMT3:

- Data class define and alter panels
- Mountable tape volume list panel

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information on the ISMF tape library management application.
- See *z/OS DFSMSdfp Storage Administration* for additional information about data classes and the ISMF data class panels.

Data class define and alter panels

A data class is a set of data set allocation attributes and associated values. You can define, alter, display, and list a data class by using the ISMF data class panels. In addition to the previously available values, you can now specify the E3 value for the recording technology attribute EFMT3, and the EE3 value for the recording technology attribute EEFMT3 on the data class define/alter panel. For EEFMT3 (or the media interchange recording format EEFMT2), an existing panel is displayed for the user to enter the Key Labels and Encoding Mechanisms. The existing Performance Scaling and Performance Segmentation data class options, applicable with MEDIA5 and MEDIA9, can also be used with the new recording formats EFMT3 and EEFMT3.

Mountable tape volume list panel

On the mountable tape volume list, the value EFMT3 and EEFMT3 can appear in column 9, RECORDING TECHNOLOGY.

Chapter 19. OCE modifications for TS1130 tape drive

The z/OS DFSMS Open/Close/End-of-Volume (OCE) component is a set of system routines that builds the control block structure that connects the application, access method, and the operating system. OCE modifications for the TS1130 tape drive 3592 Model E06 include support for the EFMT3 and EEFMT3 recording technologies.

Related reading:

- See [z/OS DFSMS Using Data Sets](#) and [z/OS DFSMS Using Magnetic Tapes](#) for additional information about the OCE routines.
- See [z/OS DFSMS Installation Exits](#) for more information on OCE installation exit parameter lists.
- See [z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries](#) for more information on tape volume records.

Overview

Two new recording formats, EFMT3 and EEFMT3, are supported by the TS1130 tape drive (3592 Model E06). The new recording formats are higher density formats that increase cartridge capacities. For media interchange, the TS1130 drive is downward write compatible with EFMT2 and EEFMT2, and downward read compatible with EFMT1, EFMT2, and EEFMT2. EFMT3 is the default recording technology. The drive also supports the existing MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10. The TS1130 tape drive 3592 Model E06 is only supported in 3590-1 Model B emulation.

SMS Managed Tape

An SMS managed cartridge Tape Volume Record (TVR) is updated by OPEN and EOVS with the new recording technology when opened for output to the first file (beginning of tape) on a 3592 Model E06 drive.

Recording Technology Conflict

OPEN and EOVS resolve the incompatible track conflict when an EFMT3 or EEFMT3 formatted cartridge is mounted on 3592 Model J1A or on 3592 Model E05 drive during OPEN OUTPUT file sequence 1. The load point label structure is rewritten at the drive capable recording technology using the existing volume serial number obtained from the drive sense data.

Multiple Recording Format Capability

When a data set is opened for OUTPUT, file sequence 1, DISP=NEW, OPEN processing will be enhanced to recognize the data class recording technology specification and will explicitly direct the 3592 Model E06 to record in the appropriate recording format. By default, the 3592 Model E06 will record in the non-encrypted up-level format EFMT3 unless explicitly changed to record in another format. However, to account for the default setting being changed at the drive, OPEN processing will always send down the recording format specified in data class, and if a recording format is not explicitly specified, EFMT3 will be used.

When writing from BOT (file sequence 1, DISP=OLD or DISP=SHR), since this processing does not go through the data class ACS routine, OPEN processing needs to determine if encryption had previously been used (EEFMT2 or EEFMT3) and ensure that encryption is requested for this next usage of the tape. So if the previous usage of the tape was encrypted, OPEN will explicitly set the new encryption format (EEFMT3) and will obtain and pass the volume's existing key management-related information to the drive (key label and encoding mechanism). This is similar to the support that was put in place with the 3592 Model E05 encryption support in handling the encryption format EEFMT2. This is also consistent with

today's 3592 Model E05 drives where on reuse, if encryption was not used, the highest non-encryption recording format is specified.

Cartridge Reuse with DISP=OLD|SHR

Cartridge reuse occurs when writing from BOT file sequence 1 with a disposition of DISP=OLD or DISP=SHR. When the mounted cartridge is encrypted, OPEN processing will set the recording technology to EEFMT3 and pass the volume's existing key labels and encoding mechanism to the drive. Additionally, when the mounted MEDIA5 or MEDIA9 cartridge is Performance Scaled or Performance Segmented OPEN will ensure the cartridge maintains the same characteristic on reuse.

OCE Tape Installation Exits

The IFGTEP macro maps the tape log data. [Table 34 on page 223](#) describes the IFGTEP fields for mapping the installation exit main parameter list.

Table 20. IFGTEP fields for the installation exit main parameter list		
Field name	Length and type	Description
TEPMRECTK	Fixed(8)	Recording technology of the mounted volume in binary. 9 - EFMT3 10 - EEFMT3

Multiple Recording Format Capability

For both system managed and standalone environments, during OPEN OUTPUT, file sequence 1, DISP=NEW, OPEN will retrieve the DATACLASS to determine which recording technology (EFMT3 or EEFMT3 or interchange formats EFMT2 or EEFMT2) should be used. For the prevailing recording format, OPEN will issue a command to enable it from load point. In fact, whenever the tape is to be written from load point, OPEN OUTPUT and EOVS will issue a command for the existing or prevailing recording technology. By default EFMT3 is requested.

IEZDEB (second DEB extension)

OPEN processing will set new IEZDEB bit DEB2XEE3 if the cartridge is encrypted in the EEFMT3 format. OPEN will also set new bit DEB2XENC if the cartridge is encrypted (in either EEFMT2 or EEFMT3 encryption format). OPEN will set existing IEZDEB bit DEB2XEEF if the cartridge is encrypted in the EEFMT2 format (for both the 3592 Model E05 and the 3592 Model E06).

```
DEB2XEEF - 3592-E05/E06 WRITING IN EEFMT2 RECTECH  
DEB2XEE3 - 3592-E06 WRITING IN EEFMT3 RECTECH  
DEB2XENC - TAPE CARTRIDGE ENCRYPTED
```

OPEN will also set new bit DEB2XEF2 if the cartridge, on a 3592 Model E06, is written in the lower recording format EFMT2. This is similar to the existing DEB2XEF1 bit that indicates that the cartridge, on a 3592 Model E05, is written in the lower recording format EFMT1.

```
DEB2XEF2 - 3592-E06 WRITING IN EFMT2 RECTECH
```

Chapter 20. DFSMSDss considerations for the TS1130 tape drive

DFSMSDss, a z/OS functional component, allows you to copy, move, dump, and restore data sets and volumes. DFSMSDss is the primary data mover of DFSMS.

This topic describes considerations for using DFSMSDss with the encryption capable TS1130 tape drive, as follows:

- [“DFSMSDss handling of hardware encryption” on page 129.](#)
- [“Updates to the DFSMSDss Application Programming Interface” on page 129.](#)

DFSMSDss handling of hardware encryption

Using TS1130 tape drives does not require changes to your installation's DFSMSDss jobs. When at least one of the output devices is encrypting data and you request software encryption, DFSMSDss overrides software encryption request for the output devices that encrypt data, and does not write to the output devices that do not encrypt data. To indicate that the tape device is encrypting data, DFSMSDss sets to one the following bits in the ADREID0 mapping: the EI26TWHE bit for the Volume Output Notification Exit (EXIT26), and the EI06THWE bit for the Write Physical Tape Exit (EXIT06). If you do not request software encryption, DFSMSDss can write to multiple output devices some of which are encrypting data in the hardware and some are not. DFSMSDss continues to inform your application whether a tape device is encrypting data and if all of the data is processed. For more information on how DFSMSDss handles hardware encryption, see [“Planning to use hardware encryption for dump tapes” on page 231.](#)

Updates to the DFSMSDss Application Programming Interface

In support of the TS1130 tape drive the following new fields are added to the ADREID0 data area to allow an installation-supplied program to determine whether a tape device is encrypting data:

EI00SWNCRYPT

DFSMSDss sets this bit on to indicate that software encryption is requested. You can reference this bit, but you should not change it.

EI00CANSFE

You can set this bit on to indicate that software encryption is to be cancelled. DFSMSDss honors this bit only when the EI00SWNCRYPT bit is turned on.

EI00MIXDEV

You can set this bit on to indicate that the data is to be written to a mixture of devices where some are encrypting the data and some are not. DFSMSDss honors this bit only when the EI00SWNCRYPT bit is turned on.

[Table 21 on page 129](#) shows the ADREID0 mapping.

Table 21. ADREID0 Mapping					
Offsets		Type	Len	Name (Dim)	Description
Dec	Hex				
0	(0)	STRUCTURE	16	EIREC00	
0	(0)	UNSIGNED	1	EI00SBPL	SHARED SUBPOOL NUMBER
1	(1)	BITSTRING	1	EI00FLGS	STARTUP FLAGS
		1...		EI00SENQ	SHORT VTOC ENQUEUE
		.1..		EI00NONF	DO NOT ALLOW IGWNOTIF CALL

Table 21. ADREID0 Mapping (continued)

Offsets		Type	Len	Name (Dim)	Description
Dec	Hex				
2	(2)	..1.	6	EI00NOLK	DO NOT PERFORM ADRLOCK ENQUEUE OR DEQUEUE
		...1		EI00NENQ	NO INPUT VOLUME SERIALIZATION. VALID DURING PHYSICAL COPY AND DUMP FUNCTION STARTUPS
	 1...		EI00BSEC	BYPASS SECURITY VERIFICATION FOR DATA SETS ON THE VOLUME DURING COPY FULL/TRACKS, DUMP FULL/TRACKS, AND RESTORE FULL/TRACKS FUNCTION STARTUPS
	1..		EI00MVOLRECOV	1=CALLER IS PERFORMING A MULTI-VOLUME RECOVERY USING PHYSICAL DATA SET RESTORE AND IT IS ACCEPTABLE FOR DFSMSDSS TO SCRATCH PREALLOCATED TARGET DATA SETS THAT ARE NOT THE CORRECT SIZE
	1.		EI00BSER	1=BYPASS SERIALIZATION OF THE DATA SETS BEING RESTORED DURING A PHYSICAL DATA SET RESTORE OPERATION
	1		*	RESERVED
8	(8)	CHARACTER	1	EI00SVOL	SOURCE VOLSER. VALID DURING COPY FULL/TRACKS, DUMP FULL/TRACKS, AND RESTORE FULL/TRACKS FUNCTION STARTUPS. FOR RESTORE, THIS FIELD CONTAINS THE VOLSER OF THE INPUT VOLUME WHERE THE DUMP DATA SET RESIDES
		BITSTRING		EI00FLG2	SECOND FLAG AREA
		1...		EI00SWNCRYPT	SOFTWARE ENCRYPTION WAS REQUESTED (RSA OR KEYPASSWORD WAS SPECIFIED)
		.1..		EI00CANSFE	CANCEL SOFTWARE ENCRYPTION
		..1.		EI00MIXDEV	MIXTURE OF DEVICES; SOME ARE PERFORMING HARDWARE ENCRYPTION AND OTHERS ARE NOT.
		...1 1111		*	RESERVED
9	(9)	CHARACTER	7	*	RESERVED
				*	RESERVED

Chapter 21. DFSMSHsm considerations for the TS1130 tape drive

DFSMSHsm, a z/OS functional component, automatically manages low activity and inactive data in both system-managed and non-system-managed environments. DFSMSHsm also provides automatic backup and recovery of active data in those environments.

DFSMSHsm can use the TS1130 tape drive (3592 Model E06, 3592-3E) for all functions. DFSMSHsm normally uses non-WORM media (MEDIA5, MEDIA7, MEDIA9) for non-ABARS functions. DFSMSHsm uses all media, including WORM (MEDIA6, MEDIA8 and MEDIA10) for ABARS processing. DFSMSHsm can use the WORM media for non-ABARS processing if specifically allowed by your installation.

This topic describes these considerations for using DFSMSHsm with the TS1130 tape drive:

- [“Modifying your SMS data classes” on page 131](#)
- [“Modifying your dump classes” on page 131](#)
- [“Input tape utilization” on page 132](#)
- [“Requesting information for encrypted volumes and tapes” on page 132](#)
- [“Requesting information for dump volumes” on page 133](#)
- [“Specifying esoteric tape unit names to DFSMSHsm” on page 134](#)
- [“Tape Hardware Emulation” on page 134](#)
- [“Specifying how much of a tape DFSMSHsm uses” on page 134](#)
- [“Using tape device naming conventions” on page 135](#)
- [“Output tape selection” on page 135](#)
- [“Output tape utilization” on page 135](#)
- [“Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives” on page 137](#)
- [“Recovering overwritten encrypted tapes” on page 137](#)
- [“DFSMSHsm tips” on page 137.](#)

Modifying your SMS data classes

To use tape hardware encryption, you must modify your SMS data class definitions to request encryption from the encryption-capable tape drives.

Modifying your dump classes

The method for requesting encryption depends on whether you plan to use hardware encryption or host-based encryption, as follows:

- To request hardware encryption for a dump class, specify it in the SMS data class for the dump data.
- To request host-based encryption for a dump class, use the DFSMSHsm `DEFINE DUMPClass(ENCRYPT)` command. With `ENCRYPT`, include the `RSA` or `KEYPASSWORD` subparameters to specify the type of host-based encryption. `ENCRYPT(NONE)` specifies host-based encryption should not be done.

If your dump classes are currently defined to use host-based encryption (and possibly host-based compression before encryption), it is recommended that you remove the host-based encryption requests from any dump classes for which you plan to use tape hardware encryption.

During the process of migrating your dump classes to use hardware encryption, you might have some dump classes that are still defined to use host-based encryption, while their associated SMS data classes are defined to use tape hardware encryption. Here, DFSMSDss ignores requests for host-based encryption

for these tape volumes and, instead, uses hardware encryption. This processing allows you to complete the migration to hardware encryption without having to modify your dump-requesting jobs. However, removing host-based encryption requests from a dump class when tape hardware encryption is also requested can avoid confusion concerning which process is active.

Note:

1. To determine whether hardware encryption or host-based encryption was used for a particular tape volume, check the associated dump volume record (DVL).
2. If more than one dump class is specified (creating more than one dump copy), those dump classes specify host-based encryption, each dump class has a unique data class assigned, and some but not all of the associated data classes request tape hardware encryption, then all dump copies will fail. In other words, tape hardware encryption can override host-based encryption for all dump classes associated with a source volume or none of the dump classes, but it cannot override a subset of those dump classes.

Related reading:

- For more information on the DEFINE DUMPCCLASS command, see [*z/OS DFSMSdfp Storage Administration*](#).

Input tape utilization

In an SMS environment, the choice of an input drive for a particular tape is controlled by the library and is transparent to DFSMSHsm.

In a non-SMS environment, the choice of drives is controlled by the unit name recorded in the tape's CDS records. This unit name is the name of the original output unit selected by the installation, or its generic equivalent. In a mixed non-SMS environment where more than one tape technology is associated with a generic unit name, you must use esoteric names for the output unit and its associated input unit.


DFSMSHsm can use MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 as input. The MEDIA5, MEDIA6, MEDIA7, and MEDIA8 tapes may be in either the EFMT1, EFMT2, EEFMT2, EFMT3, or EEFMT3 recording technology. The MEDIA9 and MEDIA10 tapes can only be in the EFMT2, EEFMT2, EFMT3, or EEFMT3 recording technology. The choice of the correct recording technology when mounted on a 3592-E06 is transparent to DFSMSHsm.

Requesting information for encrypted volumes and tapes

New values EFMT3 and EEFMT3 are added to the SELECT parameter of the DFSMSHsm LIST TTOC command to allow you to list tape volumes with and without tape hardware encryption.

This shows a portion of the syntax for the LIST TTOC command:

N: TTOC SELECT Optional Parameters

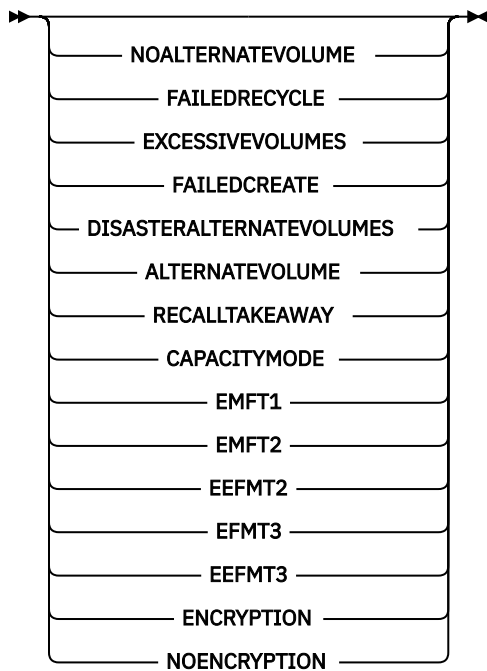

Related reading:

For more information on the LIST TTOC command, see [z/OS DFSMSdfp Storage Administration](#).

Displaying EFMT3 and EEFMT3 formatted volumes

You can use the LIST TTOC command to list volumes based on the recording technology used. To list all volumes recorded in EFMT3 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EFMT3) ODS(ttoc.out.dataset)
```

To list all volumes recorded in EEFMT3 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EEFMT3) ODS(ttoc.out.dataset)
```

Displaying encrypted tape volumes

You can use the LIST TTOC command to list tape volumes that were encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(ENCRYPTION) ODS(ttoc.out.dataset)
```

You can also use the LIST TTOC command to list tape volumes that were not encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(NOENCRYPTION) ODS(ttoc.out.dataset)
```

Requesting information for dump volumes

For a list of the information for a specific dump volume managed by DFSMSShsm, specify the LIST command with the DUMPVOLUME(*volser*) parameter. If the volume was tape hardware encrypted, the ENC field will indicate THW.

For a list of the information for the dump volumes of the requested status managed by DFSMSShsm, specify the LIST command with the DUMPVOLUME parameter without the volume serial number. Instead, include a status parameter such as AVAILABLE, UNAVAILABLE, EXPIRED, UNEXPIRED, or

NORETENTIONLIMIT. The command lists the volumes in alphanumeric sequence by volume serial number.

Related reading:

For more information on the LIST DUMPVOLUME command, see [z/OS DFSMSdfp Storage Administration](#).

Specifying esoteric tape unit names to DFSMSHsm

When using the SETSYS USERUNITTABLE command to specify esoteric tape unit names to DFSMSHsm, note that DFSMSHsm rejects mixed combinations of device names in an esoteric group, with these exceptions:

- It allows the use of both 3480 and 3480X device names in a single group. Improved Data Recording Capability (IDRC), however, is not used with such a group because all devices in the group are treated as 3480s. If an esoteric group associated only with 3480Xs exists, 3480s should not be added to it, because the data already written using this esoteric tape unit name may create IDRC incompatibilities.
- 3592-1, 3592-2, and 3592-2E tape units are allowed into the same esoteric since they share common write formats. 3592-2, 3592-2E, and 3592-3E tape units are allowed into the same esoteric since they also share common write formats. It is up to the user to ensure the drives in a mixed esoteric will be used with a common recording technology. For example, if any 3592-1 drives are included, then all drives in the esoteric must use EMFT1 for output. If the esoteric mixes 3592-2 and 3592-2E drives, then all drives must be set up to use EFMT1 or EFMT2. If the esoteric contains mixed 3592-3E and 3592-2E tape units, then all drives must be set up to use EFMT2 or EEFMT2, the write formats they have in common.

Note:

1. If DFSMSHsm rejects an esoteric tape unit name, it does not reject the rest of the valid esoteric names specified in the USERUNITTABLE command. Those names are now recognized by DFSMSHsm as valid esoteric tape unit names. Each time you specify USERUNITTABLE, the valid esoteric tape unit names identified with this parameter replace any esoteric tape unit names identified through a previous USERUNITTABLE parameter of the SETSYS command.

Related reading:

- For more information on the SETSYS command, see [z/OS DFSMSdfp Storage Administration](#).

Tape Hardware Emulation

- The 3592-E06, as with the 3592-E05, always runs in emulation mode as a 3590-B1x tape drive.
- The 3590-E1x, 3590-H1x, and the 3592-J1A drives emulate either a 3490-E1x or 3590-B1x.

Specifying how much of a tape DFSMSHsm uses

For 3592 devices: | to data on a MEDIA5 or MEDIA9 tape, consider using the 3592 performance scaling feature. In DFSMSHsm, performance scaling applies in both tape libraries and standalone environments.

Performance scaling uses 20% of the physical space on each tape and keeps data sets closer together and closer to the initial load point. Performance scaling permits the same amount of data to exist on a larger number of tapes, allowing more input tasks to run concurrently. With performance scaling, you can effectively increase the "bandwidth" of operations that read data in from tape.

In contrast, performance segmentation allows the use of most of the physical media, while enhancing performance for the first and last portions of the tape.

Related reading:

- For more information about implementing DFSMSHsm tape environments, see [z/OS DFSMSdfp Storage Administration](#).

Using tape device naming conventions

Table 22 on page 135 shows the hardware (marketing device name) and software (MVS generic device name) names for 3592 tape devices. The MVS generic device names are also the names used by the job control language (JCL) to communicate with the z/OS operating system. Use the MVS generic name or your installations esoteric name in any JCL statements or DFSMSHsm commands that specify device names.

Table 22. Tape device naming conventions		
Device description	Hardware name	Generic MVS name
3592-3E <ul style="list-style-type: none">Enterprise recording format EFMT1 (readonly), EFMT2, EEFMT2, EFMT3, EEFMT3IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10)Always in "emulation mode" as a 3590B device.	3592-E06	3590-1
3592-2E <ul style="list-style-type: none">Enterprise recording format: EFMT1, EFMT2, EEFMT2IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10)Always in "emulation mode" as a 3590B device.	3592-E05	3590-1
3592-2 <ul style="list-style-type: none">Enterprise recording format: EFMT1, EFMT2IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10)Always in "emulation mode" as a 3590B device.	3592-E05	3590-1
3592-J <ul style="list-style-type: none">Enterprise recording format: EFMT1IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8)In "emulation mode" as a 3590B device (or 3490E tape drives with MEDIA5 tape cartridge media only). In a system-managed tape library environment (manual or automated), only 3590B emulation is supported.	3592-J1A	3590-1

Output tape selection

DFSMSHsm can select TS1130 tape drives (3592-3E) for output in SMS and non-SMS tape environments.

Output tape utilization

DFSMSHsm writes to 97% of the capacity of MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 tapes unless otherwise specified by the installation. Other percentages can be specified through the SETSYS TAPEUTILIZATION command, depending on the particular needs of the installation.

Scratch Tapes

The 3592-E06 can utilize scratch MEDIA5, MEDIA7, and MEDIA9 tapes for all DFSMSHsm functions. It can also utilize scratch MEDIA 6, MEDIA8, and MEDIA10 tapes for ABARS. The 3592-E06 can write in EFMT3, EEFMT3, EFMT2, and EEFMT2 recording technologies. The recording technology used on scratch media is controlled by the data class assigned to the tape by the ACS routines. If no recording technology is specified the default of EFMT3 is used.

The ACS routines often use the single file format tape data set name to make the data class selection. This control is transparent to DFSMSHsm.

Partial Tapes

When the 3592-E06 uses a partial tape for output, the existing data on tape may be in either the EFMT2, EEFMT2, EFMT3, or EEFMT3 recording technologies. The tape will be extended in the same format. The choice of the correct recording technology will be transparent to DFSMSHsm. MEDIA6, MEDIA8, and MEDIA10 tapes are normally (unless patched by the customer) only used by ABARS and only as scratch tapes.

The 3592-J1A and 3592-E05 might also use these same partial tapes. The 3592-1 will not select EFMT2, EEFMT2, EFMT3, or EEFMT3 partial tapes. The 3592-2 will not select EEFMT2, EFMT3, or EEFMT3 partial tapes. The 3592-2E will not select EFMT3 or EEFMT3 partial tapes. The 3592-E06 will not select EFMT1 partial tapes.

Input tape utilization

DFSMSHsm can utilize MEDIA5, MEDIA7, and MEDIA9 as input for all functions and additionally use MEDIA6, MEDIA8, and MEDIA10 with the ABARS function. The MEDIA5, MEDIA6, MEDIA7, and MEDIA8 tapes may be in either the EFMT1, EFMT2, EEFMT2, EFMT3, or EEFMT3 recording technology. The MEDIA9 and MEDIA10 tapes can only be in the EFMT2, EEFMT2, EFMT3, or EEFMT3 recording technology. The choice of the correct recording technology when they are mounted on a 3592-E06 will be transparent to DFSMSHsm.

Reuse Capacity

The current scheme has one reuse capacity for each media type regardless of the recording technology. This encourages media used with multiple recording technologies to move from older to newer technologies. This scheme will continue with 3592-E06.

Mixed Device Esoteric Units

Keeping with the philosophy of allowing only write compatible tape devices to coexist in the same esoteric, 3592-E06 drives will be allowed in the same esoteric with 3592-E05 drives (both encryption capable and non-encryption capable) but not allowed in the same esoteric with 3592-J1A drives. The read-only compatibility between the 3592-E06 and 3592-J1A (of the EFMT1 format) does not meet the write-compatibility requirements for a mixed esoteric. In a stand-alone (non IBM library) tape environment, the user must make sure all drives in a mixed esoteric will use a recording technology they have in common when they write data to tape. For 3592-E05 and 3592-E06 drives the common recording technologies for read and write are EFMT2 and EEFMT2.

Conversion of tapes from D/T3490 to D/T3590

You can re-addvol partial D/T3490 tapes created by 3592-J1A drives to D/T3590 tapes associated with 3592-E06 unit names. The tapes will be marked full so the 3592-E06 drives do not try to extend them and they can only be mounted for input.

Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives

You might encounter a situation in which you need to use the 3590-1 generic unit when it contains a mixture of 3590 devices that cannot share tapes. If so, you must use other means, such as SMS ACS routines, to keep these drives separate, and you can use this patch to disable the DFSMSHsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.1.....)
```

You can use this patch to re-enable the DFSMSHsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.0.....)
```

By default, checking is enabled for non-SMS tape allocations.

A non-SMS tape allocation for a generic unit 3590-1 containing mixed track technologies causes DFSMS to issue message ARC0030I. Here, DFSMSHsm allows the allocation to continue, but a tape/tape unit mismatch can result in an OPEN failure.

DFSMSHsm does not issue message ARC0030I for a mix of 3592-1, 3592-2, and 3592-2E tape units, nor for a mix of 3592-2, 3592-2E, and 3592-3E tape units, since they can write using a common recording technology.

Recovering overwritten encrypted tapes

Recovery of overwritten encrypted tape volumes might not be possible; the tape recovery process described in the topic "Case 6: Overwritten Migration Tape" of [z/OS DFSMSdfp Storage Administration](#) does not work for an encrypted tape.

DFSMSHsm tips

See “DFSMSHsm tips” on [page 307](#) for some tips that you might find helpful when using DFSMSHsm with the TS1130 tape drive.

Chapter 22. DFSMSrmm modifications for TS1130 tape drive

DFSMSrmm is a feature of z/OS. It manages all tape media, such as cartridge system tapes and 3420 reels, and other removable media that you define to it. The DFSMSrmm modifications for the TS1130 tape drive include updates to:

- EDGINERS ERASE
- DFSMSrmm TSO subcommands
- REXX variables of the TSO subcommand
- API structured field introducers
- Mapping macros fields

Related reading:

- See *z/OS DFSMSrmm Managing and Using Removable Media* for the complete syntax of the DFSMSrmm ADDVOLUME subcommand, the DFSMSrmm CHANGEVOLUME subcommand, the DFSMSrmm SEARCHVOLUME subcommand, DFSMSrmm return codes and reason codes, and REXX variables.
- See *z/OS DFSMSrmm Application Programming Interface* for further information about the DFSMSrmm API.
- See *z/OS DFSMSrmm Implementation and Customization Guide* and *z/OS DFSMSrmm Reporting* for additional information about DFSMSrmm mapping macros.


EDGINERS ERASE function

The EDGINERS ERASE function now optionally exploits new hardware capability to perform a 'data key shred' for encrypted tape volumes instead of using a secure data erase. If the 'data key shred' is not possible, a secure data erase is performed instead.

The ERASE release action can now be configured to selectively perform a shred, a secure data erase, or a combination of the two. When the ERASE release action is pending for an encrypted tape volume, and the volume is mounted for ERASE on an encryption capable tape drive, and the appropriate ERASE option is selected, the EDGINERS utility attempts a 'shred' action on the volume. 'Shred' removes the EEDK structures on the tape. This renders the data incapable of being decrypted. EDGINERS ERASE processing also supports options to use a combination of secure data erase with shred, or to force a secure data erase even for encrypted volumes.

EXEC Parameters for EDGINERS

[Figure 8 on page 140](#) describes the EXEC parameters.

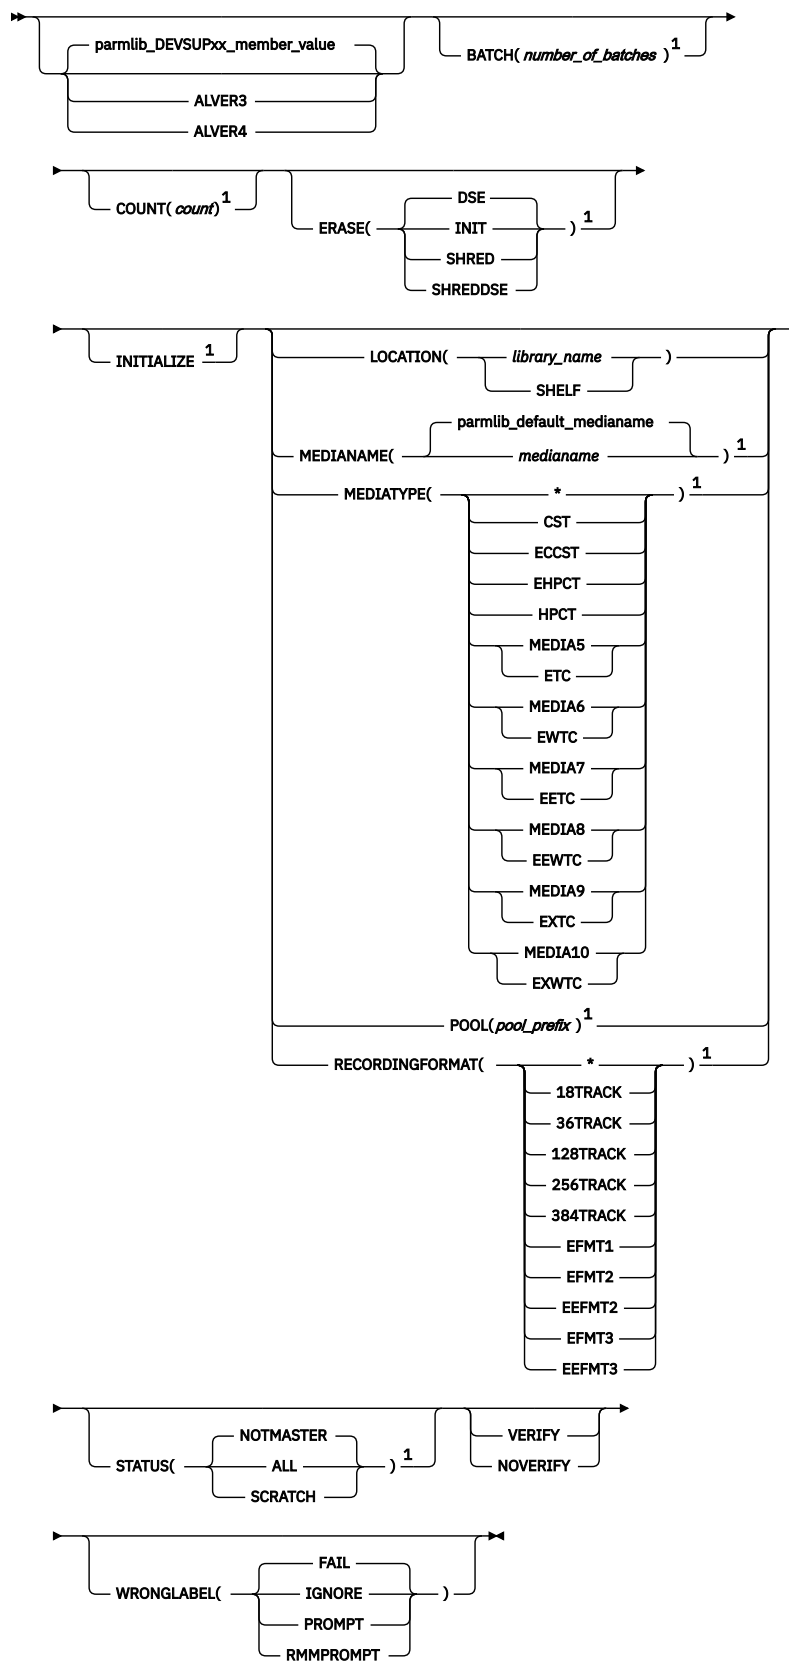

Notes:

¹ Specify this parameter for automatic processing.

Figure 8. EDGINERS EXEC Parameters

ERASE(DSE|INIT|SHRED|SHREDDSE)

Use ERASE to request that DFSMSrmm selects volumes that have the erase action pending. If automatic processing is in effect but ERASE is not specified then DFSMSrmm will only select volumes with the initialize action pending. When you specify ERASE, DFSMSrmm performs automatic processing.

ERASE can be specified either as ERASE or as **ERASE(value)**. Specifying ERASE without a value (that is, as ERASE) is the same as specifying ERASE(DSE). You can optionally specify one of the following values for ERASE to select the action to be performed by the tape drive:

DSE

Specifies that a Data Secure Erase (DSE) should be attempted. This exploits the tape drive hardware capability to erase data from the volume. This is the default value if the ERASE parameter is omitted or specified without a value.

INIT

Specifies that an ERASE action equates to an INIT action; no secure erase is attempted and the volume is relabelled as if the INIT action had been requested.

SHRED

For encrypted volumes, this value specifies that the Data Key should be made unusable by the drive. For non-encrypted volumes the DSE action is attempted.

SHREDDSE

For encrypted volumes, this value specifies that the Data Key should be made unusable by the drive, and that any non-encrypted residual data on the volume should be subject to DSE. For non-encrypted volumes, the DSE action is attempted.

RECORDINGFORMAT(*| 18TRACK | 36TRACK | 128TRACK | 256TRACK | 384TRACK | EFMT1 | EFMT2 | EEFMT2 | EFMT3 | EEFMT3)

Use RECORDINGFORMAT to specify a subset of volumes for automatic processing. RECORDINGFORMAT specifies the basic recording format for tape volumes.

EEFMT3

Data has been written to the volume in EEFMT3 (enterprise encrypted format 3) recording format. A recording format of EEFMT3 is valid with MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.

EFMT3

Data has been written to the volume in EFMT3 (enterprise format 3) recording format. A recording format of EFMT3 is valid with MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.

SYSIN Commands for EDGINERS

Use the SYSIN commands for manual processing. You must use separate SYSIN commands for each volume you want initialized or erased. The format of the SYSIN commands and operator replies are shown in [Figure 9 on page 142](#).

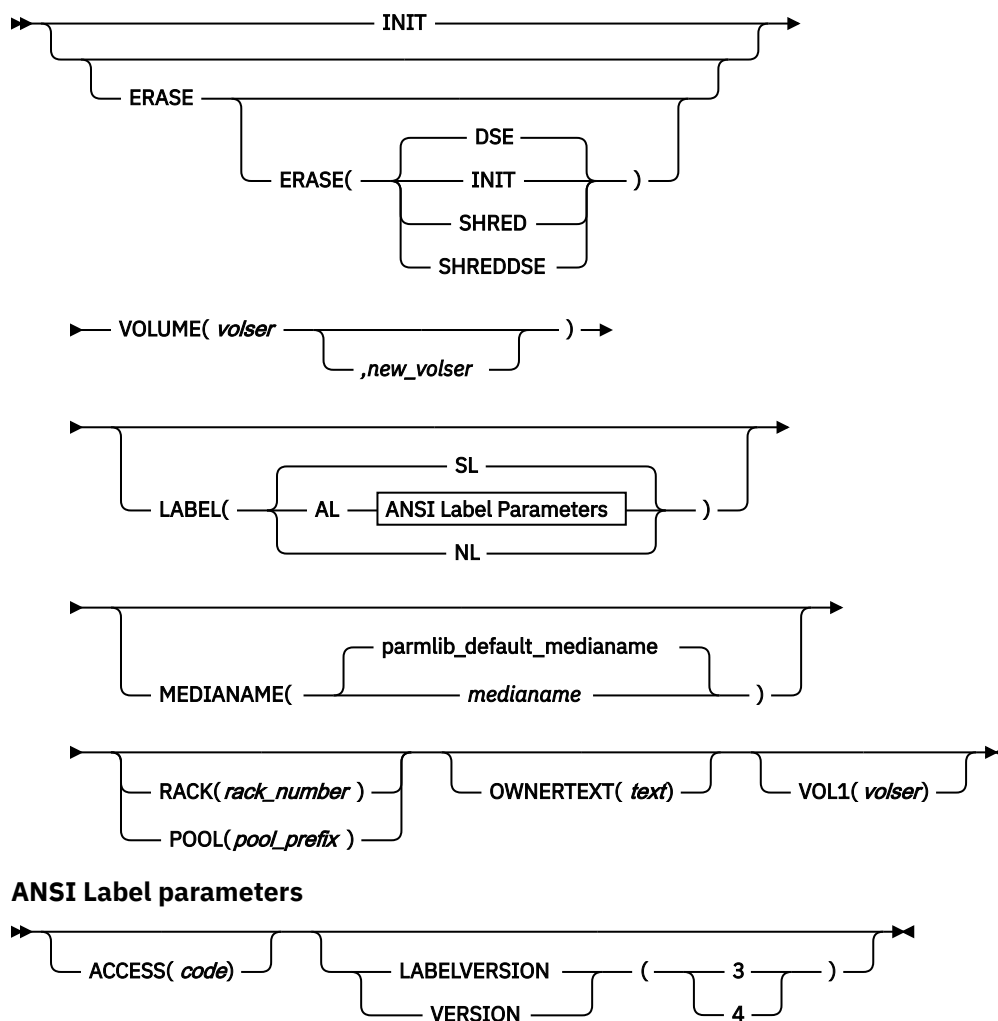


Figure 9. EDGINERS SYSIN Commands

ERASE

Specify ERASE to security erase a volume and write a new label on it.

You must specify either ERASE or INIT.

ERASE(DSE|INIT|SHRED|SHREDDSE)

Use the ERASE operand on an ERASE command to tailor the ERASE action to be performed.

You can optionally specify the ERASE operand of the ERASE command to specify a value for ERASE to select the action to be performed by the tape drive for the ERASE action. The following values can be specified:

DSE

Specifies that a Data Secure Erase (DSE) should be attempted. This exploits the tape drive hardware capability to erase data from the volume. This is the default value for the ERASE operand.

INIT

Specifies that an ERASE action equates to an INIT action; no secure data erase is attempted and the volume is relabelled as if the INIT action had been requested.

SHRED

For encrypted volumes, this value specifies that the Data Key should be made unusable by the drive. For non-encrypted volumes the DSE action is attempted.

SHREDDSE

For encrypted volumes, this value specifies that the Data Key should be made unusable by the drive, and that any non-encrypted residual data on the volume should be subject to DSE. For non-encrypted volumes, the DSE action is attempted.


DFSMSrmm TSO subcommands

This section describes the updates to these DFSMSrmm TSO subcommands:

- ADDVOLUME
- CHANGEVOLUME
- SEARCHVOLUME
- ADDDATASET
- CHANGEDATASET
- LISTDATASET
- LISTVOLUME

ADDVOLUME

The ADDVOLUME TSO subcommand adds volumes to the DFSMSrmm control data set. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the ADDVOLUME TSO subcommand.

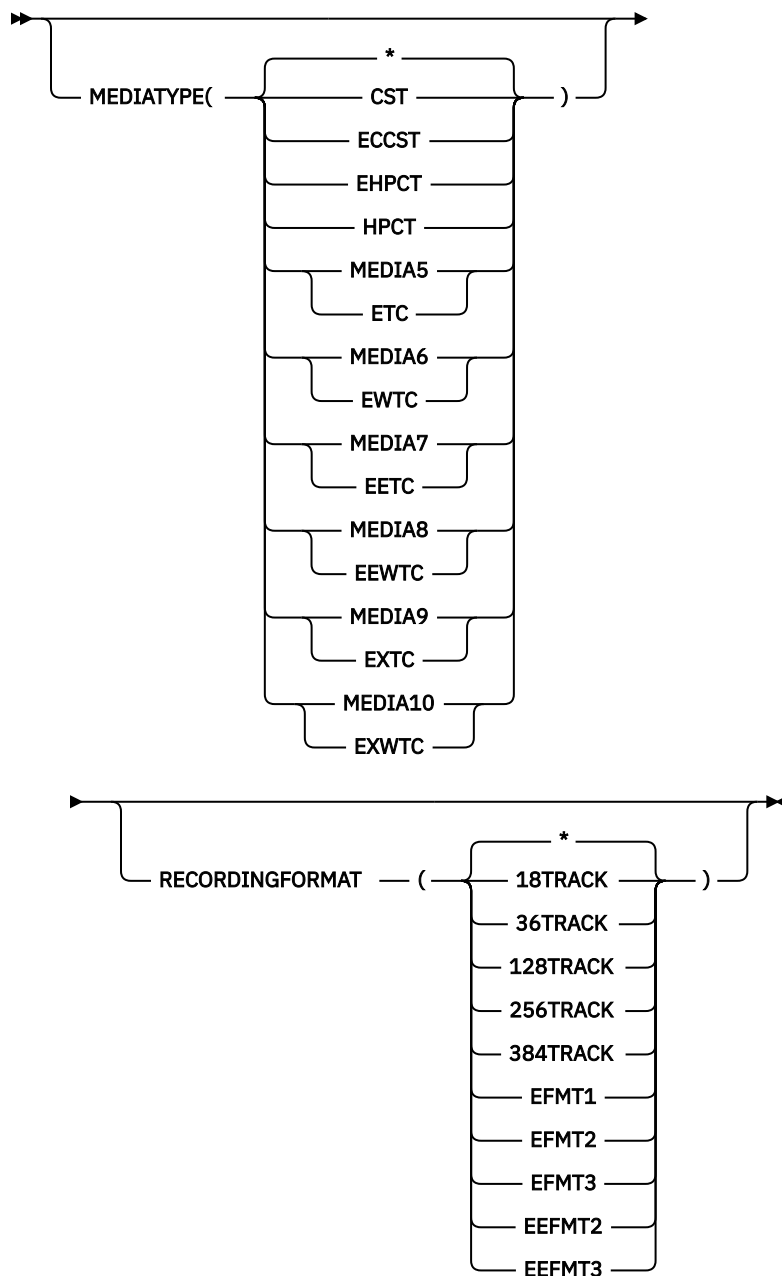

EFMT3

Data has been written to the volume in EFMT3 (enterprise format 3) recording format. A recording format of EFMT3 is valid with **MEDIATYPE**(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.


EEFMT3

Data has been written to the volume in EEFMT3 (enterprise encrypted format 3) recording format. A recording format of EEFMT3 is valid with **MEDIATYPE**(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.

To use the EFMT3 and the EEFMT3 recording technology, you must specify the **MEDIATYPE**(MEDIA5/ETC, MEDIA6/EWTC, MEDIA7/EETC, MEDIA8/EEWTC, MEDIA9/EXTC, or MEDIA10/EXWTC) operand of the **ADDVOLUME** TSO subcommand.

CHANGEVOLUME

The CHANGEVOLUME TSO subcommand updates details for a volume defined to DFSMSrmm. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the CHANGEVOLUME TSO subcommand.

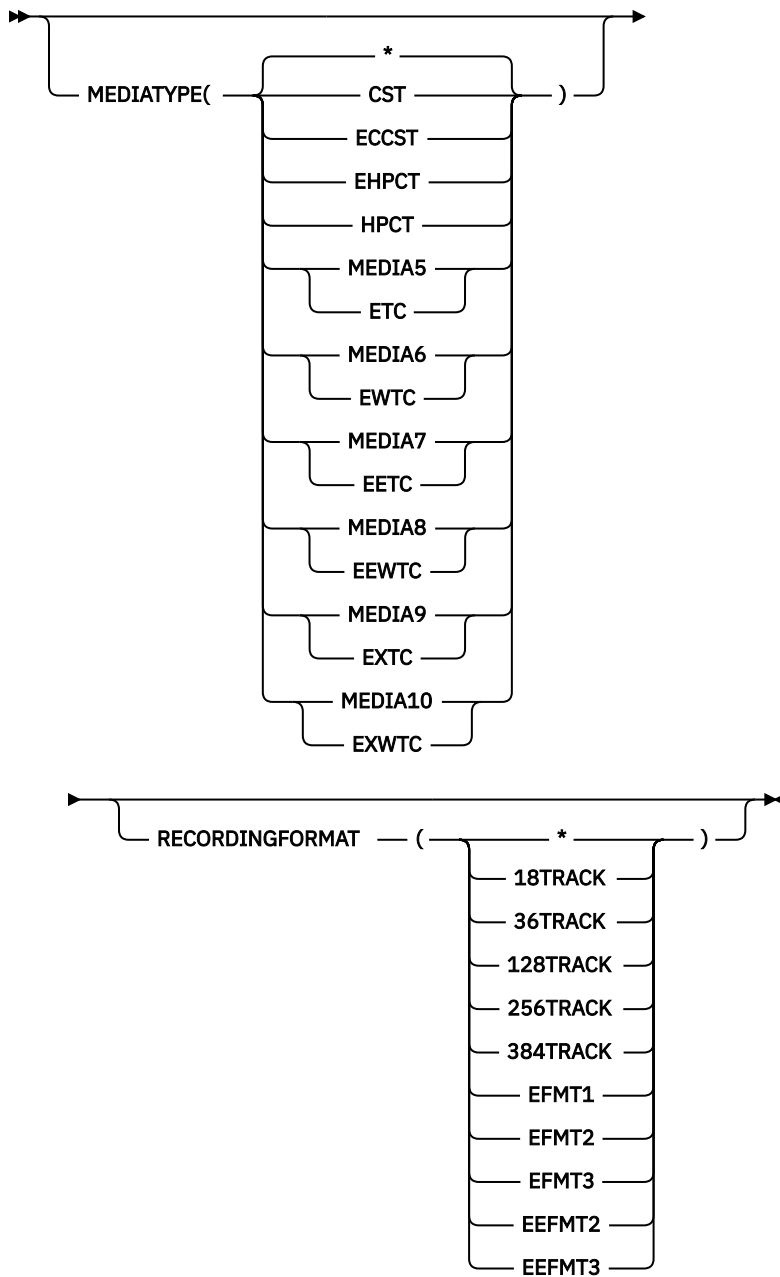

EFMT3

Data has been written to the volume in EFMT3 (enterprise format 3) recording format. A recording format of EFMT3 is valid with MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.


EEFMT3

Data has been written to the volume in EEFMT3 (enterprise encrypted format 3) recording format. A recording format of EEFMT3 is valid with MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10) only.

To use the EFMT3 and the EEFMT3 recording technology, you must specify the MEDIATYPE(MEDIA5|ETC, MEDIA6|EWTC, MEDIA7|EETC, MEDIA8|EEWTC, MEDIA9|EXTC, or MEDIA10|EXWTC) operand of the CHANGEVOLUME TSO subcommand.

SEARCHVOLUME

You can use the SEARCHVOLUME TSO subcommand to obtain a list of volumes that match selection criteria that you specify. Specify EEFMT3 to limit your search to volumes that are written in the EEFMT3 recording technology. You can also specify a particular media type, such as MEDIA9, to then further limit your search. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the SEARCHVOLUME TSO subcommand.

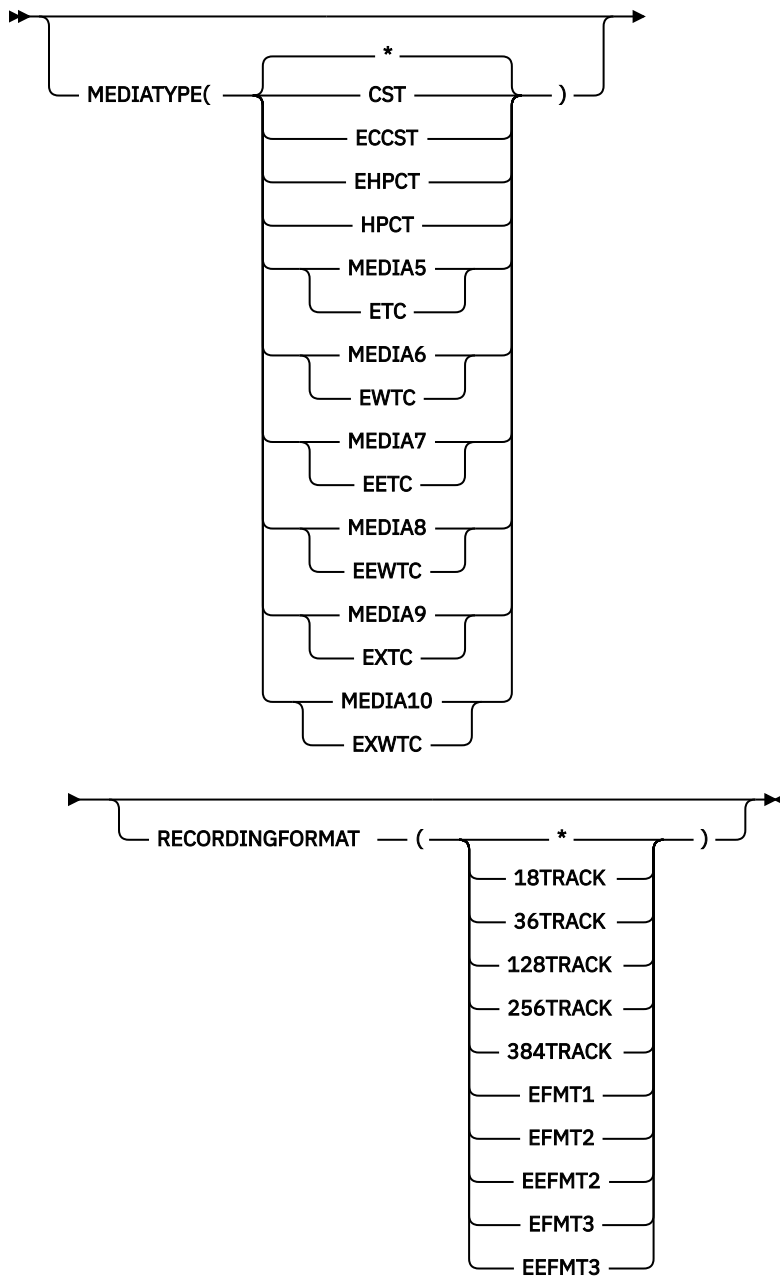

ADDDATASET

Use the ADDDATASET TSO subcommand to manually define a data set on a volume to DFSMSrmm. The volume on which the data set resides must have either master or user status.

BLKCOUNT(*number_of_blocks*)

Specifies the number of data blocks used by the data set. The value corresponds to that recorded in the data set's End of File label. The minimum allowable decimal value is 0; the maximum allowable decimal value is 99999999. DFSMSrmm uses BLKCOUNT, together with BLKSIZE, to calculate the approximate size of the data set and the sum of all data set sizes to set the volume usage. If you do not use BLKCOUNT, DFSMSrmm cannot list the space used for the data set or volume when you request it. The default value is 0.

Note: The total block count cannot be set or changed by subcommand. It is set based on information recorded during CLOSE processing.

BLKSIZE(*block_size*)

Specifies the block size of the data set. The minimum allowable decimal value is 0; the maximum allowable decimal value is 999999. DFSMSrmm uses BLKSIZE together with BLKCOUNT to calculate the approximate size of the data set and the sum of all data set sizes to set the volume usage. If you do not use BLKSIZE, DFSMSrmm cannot report space usage. The default value is 0.

CHANGEDATASET

Use the CHANGEDATASET TSO subcommand to update information about data sets defined to DFSMSrmm.

BLKCOUNT(*number_of_blocks*)

Specifies number of data blocks used by the data set. The value corresponds to that recorded in the data set's End of File label. The minimum allowable decimal value is 0; the maximum allowable decimal value is 99999999. DFSMSrmm uses BLKCOUNT together with BLKSIZE to calculate the data set's approximate size and the sum of all data set sizes to set the volume usage.

Note: The total block count cannot be set or changed by subcommand. It is set based on information recorded during CLOSE processing.

BLKSIZE(*block_size*)

Specifies the data set's block size. The minimum allowable decimal value is 0; the maximum allowable decimal value is 999999. DFSMSrmm uses BLKSIZE together with BLKCOUNT to calculate the data set's approximate size and the sum of all data set sizes to set the volume usage. If the volume is OCE recorded, you can only specify this operand if you are authorized to use the FORCE operand.

LISTDATASET

You can use the LISTDATASET TSO subcommand to display information that is recorded by DFSMSrmm for a single data set. In addition to the previously displayed information, LISTDATASET now also displays the data set size .

To request information recorded by DFSMSrmm for the data set ADSM.BFS on volume MAA269, issue the command:

```
RMM LISTDATASET 'ADSM.BFS' volume(MAA269)
```

DFSMSrmm displays information such as that shown:

```
Data set name = ADSM.BFS
Volume       = MAA269           Physical file sequence number = 1
Owner        =                  Data set sequence = 1
Create date  = 04/29/2008 Create time = 17:51:00 System ID      = EDS1
Expiration date = 05/29/2008 Original expir. date =
Block size    = 262144          Block count      = 1
Data set size(KB) = 256
Percent of volume = 0           Total block count = 1
Logical Record Length = 0       Record Format    = U
Date last written = 04/29/2008 Date last read   = 04/29/2008
Job name       = ADSM           Last job name  = ADSM
Step name      = ADSM           Last step name = ADSM
Program name   = DMSERV         Last program name = DMSERV
DD name        = SYS00325       Last DD name   = SYS00325
Device number  = 05C2           Last Device number = 05C2
```

Management class	=	ATLHSMT	VRS management value	=	
Storage group	=	MAS3LIB1	VRS retention date	=	05/01/2008
Storage class	=	MEDIA3	VRS retained	=	NO
Data class	=	ATLHSM	ABEND while open	=	NO
			Catalog status	=	UNKNOWN

LISTVOLUME

You can use the LISTVOLUME TSO subcommand to display information that is recorded by DFSMSrmm for a single volume. In addition to the previously displayed information, LISTVOLUME now also displays the volume usage in either KB or MB, as appropriate. You must specify a volume serial number.

To request all the information recorded by DFSMSrmm for the encrypted volume with serial number JJC024, issue the command:

```
RMM LISTVOLUME JJC024 ALL
```

DFSMSrmm displays information such as that shown:

```
Volume information:
Volume = JJC024 VOL1 = Rack = JJC024 Owner = RMMUSER
Type = PHYSICAL Stacked count = 0 Jobname = D016216J
Worldwide ID =
Creation: Date = 06/28/2008 Time = 04:49:14 System ID = W98MVS2
Assign: Date = Time = System ID = W98MVS2
Expiration date = 09/02/2008 Original =
Retention date = Set retained = NO
Data set name = RMMUSER.TEST.CBR
Volume status:
Status = USER Availability = Label = SL
Current label version = Required label version =
Media information:
Density = IDRC Type = EETC Format = EEFT3 Compaction = YES
Special attributes = NONE Vendor =
Encryption Key Labels: Method:
1=wcc1 LABEL
2=wcc2 LABEL
Action on release:
Scratch immediate = N Expiry date ignore = N
Scratch = Y Replace = N Return = N Init = N Erase = N Notify = N
Actions pending:
Scratch = N Replace = N Return = N Init = N Erase = N Notify = N
Storage group =
Loan location = Account = T,H,IOM,,SYSPROG
Description =
Security class = Description =
Access information:
Owner access = ALTER Volume access = NONE Last change = *OCE
VM use = N MVS use = Y
Access list:
Statistics:
Number of data sets = 2 Data set recording= ON
Volume usage(MB)= 2 Use count = 3
Capacity(MB) = 2 Percent full = 0
Date last read = 08/28/2006 Date last written = 08/28/2006
Drive last used = 0FA0 Write mount count = 2
Volume sequence = 1 Media name = 3480
Previous volume = Next volume =
Product number = Level = V R M
Feature code =
Error counts:
Temporary read = 0 Temporary write = 0
Permanent read = 0 Permanent write = 0
Store information:
Movement tracking date = Intransit = N
In container = Move mode = AUTO
Location: Current Destination Old Required Home
Name = ATL15393 ATL15393
Type = AUTO AUTO
Bin number =
Media name =
```

DFSMSrmm REXX variables

You can use the REXX variables to obtain volume information. The variables produced by the SEARCHVOLUME subcommand are stem variables.

Table 23. Changed TSO subcommand REXX variables

Variable Name	Subcommands	Contents	Format
EDG@BLKC	LD	Number of data set blocks	Numeric: 10 characters
EDG@DSS6	LD	Data set size	Character: Two concatenated fields, <i>factor</i> and <i>value</i> ; where <i>factor</i> is KB, MB, GB, or blank; and <i>value</i> is 0 to 9999999999. For example, GB720.
EDG@MEDR	LV SV	Recording technology	One of *, 18TRK, 36TRK, 128TRK, 256TRK, 384TRK, EFMT1, EFMT2, EEFMT2, EFMT3, and EEFMT3
EDG@USEM	LV	Volume usage (KB)	Numeric: -1 to 9999999999. -1 indicates that USE6 should be used.
EDG@USE6	LV	Volume usage (Application written data)	Character: Two concatenated fields, <i>factor</i> and <i>value</i> ; where <i>factor</i> is KB, MB, GB, or blank; and <i>value</i> is 0 to 9999999999. For example, GB720.

DFSMSrmm structured field introducers

The DFSMSrmm application programming interface (API) returns data as structured fields in an output buffer that you define. Structured fields consist of a structured field introducer (SFI) and the data. SFIs describe the type, length, and other characteristics of the data.

All Structured Field Introducers (SFIs) have this format:

Bytes

Description

0-1

2-byte length: SFI length plus data length

2-4

3-byte identifier: SFI ID (hexadecimal)

5

1-byte type modifier: Type of SFI

- 0 = 8-byte, fixed-length SFI

6

1-byte (Reserved)

7

1-byte data type: Type of data, if any, that follows the SFI

- 0=Undefined (no data)
- 1=Character (fixed-length)
- 2=Bit(8) (1-byte flag, multiple bits can be on)
- 3=Binary(8) (1-byte (hex) value)
- 4=Binary(15) (2-byte (hex) value)
- 5=Binary(32) (unsigned 4-byte (hex) value)

- 6=Binary(64) (unsigned 8-byte (hex) value)
- 7=Character (variable-length)
- 8=Compound SFI (multiple related values, see [“Compound SFI” on page 150.](#))
- 9=(4 bytes) Packed decimal Julian date: yyyydddC
- A=(4 bytes) Packed decimal time format: hhmmssC

Table 40 on page 242 shows the structured field introducers that support TS1130 tape drives.

Table 24. Changed structured field introducers					
Name	Number	Type	Length	Value	Subcommands
DSS6	X'82B030'	Compound (Binary(8) Factor, Binary(64) Value)	22	Data set size factor: 0=bytes 1=KB 2=MB 3=GB Value: Minimum value = 0.	LD SD(e)
MEDR	X'857000'	Binary(8)	9	Recording technology: 0=NON-CARTRIDGE 1=18TRK 2=36TRK 3=128TRK 4=256TRK 5=384TRK 6=EFMT1 7=EFMT2 8=EEFMT2 9=EFMT3 10=EEFMT3	LV SV LC
USEM	X'8AE000'	Binary(32)	12	Volume usage (KB): Min 0, Max 4294967295. 4294967295 indicates that USE6 must be used.	LV SV(e)
USE6	X'8AE030'	Compound (Binary(8) Factor, Binary(64) Value)	22	Volume usage factor: 0=bytes 1=KB 2=MB 3=GB Value: Minimum value = 0.	LV SV(e)

Compound SFI

A compound SFI includes multiple values each with own data type and length.

Compound type:

1

Factored. A Binary(8) value combined with a second field containing a count. The second field is identified by a data type.

Factor values:

0

Bytes (unfactored)

1

KB

2

MB

3

GB

4

TB

and so on.

Compound SFIs follow this structure;

Byte Count

Description

8

Standard SFI including 1 byte data type identifier (X'08')

1

Compound type identifier; 1 = Factored; 2 self describing fields where the first is the factor used, and the second is the resultant value

1

Length of the first field, including this byte

1

Data type identifier

n

First data field as identified by the preceding data type field; for example Binary(8)

1

Length of the next field, including this byte

1

Data type identifier

n

Next data field as identified by the preceding data type field; for example Binary(64)

DFSMSrmm macros

Table 41 on page 242 shows the changes made to DFSMSrmm mapping macros for TS1130 tape drives.

Table 25. DFSMSrmm mapping macro changes

Mapping Macro	Function	Updates
EDGRDEXT	Maps the data set name record in the DFSMSrmm extract data set.	MB fields.
EDGRVEXT	Maps the volume records in the DFSMSrmm extract data set.	Recording technology values: EFMT3, EEFMT3. MB fields.
EDGRXEXT	Maps the extended data set records in the DFSMSrmm extract data set.	Recording technology values: EFMT3, EEFMT3. MB fields.
EDGCLREC	Maps the DFSMSrmm conversion library record.	Recording technology values: EFMT3, EEFMT3. 64 bit fields.
EDGSVREC	Maps the DFSMSrmm SMF volume records.	Recording technology values: EFMT3, EEFMT3. 64 bit fields.
EDGSDREC	Maps the data set information.	64 bit fields.
EDGSMFSY	Maps the SMF record symbols used with DFSORT.	Recording technology values: EFMT3, EEFMT3.
EDGEEXTSY	Maps the extract data set symbols used with DFSORT.	Recording technology values: EFMT3, EEFMT3.

Creating Reports

You can create reports that include data set size, volume usage, and capacity. Data set size and volume usage are available in both KB and factored values. If you are using existing KB values, these fields have a maximum value of 9 999 999 999 KB, or approximately, 9 TB. For larger tape volume capacities and improvements in compression, use the fields that contain values that are factored. Initially, these are in MB, but they can also be factored to TB as tape capacity increases. If you are reporting on small data sets (where the data sets size or volume capacity used is so small that you need to see the KB values), do not use the fields that contain values that are factored. If a KB byte field is no longer large enough to contain the value, the value is set to '-1'. This indicates that the factored fields should be used instead. When reporting from SMF records, data set size and volume use are recorded in 64 bit fields in KB only.

Chapter 23. EREP modifications for 3592 Model E06

Environmental Recording, Editing, and Printing (EREP) program is a diagnostic application program that runs under MVS, VM, and VSE. It generates and prints reports from error recording data set (ERDS) records. With these reports, IBM service representatives can determine the existence, nature, and location of a problem.

This topic describes changes to the TAPE subsystem exception report, emulated device summary report, and TAPE Media Informational Messages (MIMs) of the EREP program to support 3592 Model E06 tape drives.

TAPE subsystem exception report

In the following TAPE subsystem exception report, EREP reports a temporary ORB record in support of 3592 Model E06 tape drives.

TAPE SUBSYSTEM EXCEPTION REPORT						REPORT DATE 220 05				
						PERIOD FROM 076 02				
						TO 077 02				
*** SEQUENCE BY PROBABLE FAILING UNIT ***										
PROBABLE FAILING UNIT	DEVICE TYPE/ VOLID	FAILURE AFFECT		CPU	DEVNO /CUA	SIMS	MIMS	OBR PERM TEMP		
						-----TOTALS-----				
LIBRARY						TOTAL	0	0	0	1
	3570-CXX	LIBRARY INFORMATIONAL DATA		00	07C2	0	0	0	1	
DEVICE						TOTAL	0	0	2	1
	3590-H1X	LIBRARY DRIVE NOT UNLOADED		02	0C24	0	0	1	0	
	3592-J1X	WORM OVERWRITE REJECTED		03	0C27	0	0	0	1	
	3592-E05	LIBRARY DRIVE NOT UNLOADED		00	1B90	0	0	0	1	
	3592-E06	LIBRARY DRIVE NOT UNLOADED		00	1B90	0	0	0	1	

Figure 10. TAPE subsystem exception report

Emulated device summary report

In the following emulated device summary report, a 3592-E06 tape drive emulates a 3590-B1X tape drive.

3590 DEVICE SUMMARY		REPORT DATE 295 07	
		PERIOD FROM 195 06	
		TO 195 06	
DEVICE ADDRESS	REAL / EMULATED DEVICE TYPE		
0FA2	3592-J1X / 3490-CXX		
0FA3	3592-E05 / 3590-B1X		
0FA4	3592-E06 / 3590-B1X		

Figure 11. Emulated device summary report

TAPE Media Informational Messages (MIMs)

TAPE Media Informational Messages (MIMs) now support 3592 Model E06 tape drives, as shown in the following figure.

```

TAPE MEDIA INFORMATION MESSAGES (MIMS)                                REPORT DATE 028 97
                                                                    PERIOD FROM 023 97
                                                                    TO    028 97

*****
VOLUME-JANZ01  DEVICE-0883  DATE-023/90  TIME-06:54:49:45
* D/T-3590-B11      S/N 0113-00001
* SERVICE ALERT      REFCODE-0057  MEDIA IDENTIFIER-0021  FORMAT IDENTIFIER-00
* DATA DEGRADED IN PARTITION 1229
* REFERENCE MEDIA MAINTENANCE PROCEDURE 57

VOLUME-JANZ98  DEVICE-08A9  DATE-023/90  TIME-15:35:30:19
* D/T-359-A00       S/N 0113-23456
* SERIOUS ALERT      REFCODE-0000  MEDIA IDENTIFIER-0073  FORMAT IDENTIFIER-00
* EXCEPTION 00
* REFERENCE MEDIA MAINTENANCE PROCEDURE 00

VOLUME-JANZ99  DEVICE-08A9  DATE-023/90  TIME-15:35:30:19
* D/T-3590/3490EMU   S/N 0113-23456
* SERIOUS ALERT      REFCODE-0000  MEDIA IDENTIFIER-0073  FORMAT IDENTIFIER-00
* EXCEPTION 00
* REFERENCE MEDIA MAINTENANCE PROCEDURE 00

VOLUME-SL0001  DEVICE-0DC1  DATE-297/07  TIME-08:39:56:05
* D/T-3592-E06       S/N 0000-00000
* SERVICE ALERT      REFCODE-1011  MEDIA IDENTIFIER-0120  FORMAT IDENTIFIER-01
* EXCEPTION 10
* REFERENCE MESSAGE CODE 10

```

Figure 12. TAPE Media Informational Messages (MIMs)

Chapter 24. JES3 modifications for TS1130 tape drive

JES3, a z/OS MVS subsystem, manages resources and work flow before and after jobs are processed. You can enable JES3 to allocate TS1130 (3592 Model E06) tape drives and tape volumes in an SMS-managed IBM tape library environment (automated or manual) for 3590 Model B emulation only. To do so, you need to specify at least one of these library device group (LDG) names in your JES3plex. An LDG is a predefined set of tape subsystems within a JES3plex.

LDMsssss

Includes any encryption-enabled 3592 Model E06 devices with the library indicated by serial number sssss.

LDGdddd

Includes any encryption-enabled 3592 Model E06 devices (dddd=359M) in any library in the JES3plex.

Chapter 25. OAM modifications for TS1130 tape drive

The Object Access Method (OAM) is a component of DFSMSdfp. OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. You can also use OAM's object support to manage objects on DASD, tape, and optical volumes.

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information about using OAM to manage tape volumes and tape libraries.
- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support* for additional information about using OAM to manage the data on tape volumes.
- See *z/OS MVS System Messages, Vol 4 (CBD-DMO)* for explanations and appropriate actions for CBRxxxxx messages.

OAM library support

OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. This topic describes the OAM library support functions that have been changed for use with the TS1130 tape drives. The enhancements include support for two new recording formats, EFMT3 and EEFMT3.

These steps should be considered when planning to use the new 3592-3E drives:

1. Define the new devices using HCD.
2. Modify your ACS routines to select tape storage groups and libraries with 3592 Model E06 (3592-3E) devices.
3. Add, as appropriate, data classes to use EFMT3 and EEFMT3 on the new 3592-3E drives.
4. Specify, as appropriate (for the EEFMT3 recording format), the key labels and encoding mechanism for each label.
5. Specify, as appropriate, the read-compatible special attribute indicator for EFMT1 formatted volumes. OAM will use the read-compatible special attribute indicator (TDSSPEC) in the tape configuration database (TCDB) or usage of the LABEL=(,IN) on the DD statement of JCL to determine if an EFMT1 formatted volume is eligible to be read by a 3592-3E device.
6. Contact your tape management system vendor to obtain their support and any modified installation exits.

LCS external services changes

External Services supports the TS1130 tape drive media types, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10, and the new recording technologies EFMT3 and EEFMT3. It also supports, for media interchange, the older recording technologies EFMT1, EFMT2 and EEFMT2. Also, remember that the TS1130 (3592 Model E06) tape drive can only read the EFMT1 recording format and, as previously indicated, only if the read-compatible special attribute indicator is set, will a 3592-3E device be considered eligible for an EFMT1 formatted volume. The following functions are supported:

- Change use attribute
- Query volume residence
- Test volume eligibility
- Eject a volume
- Manual cartridge entry

Note:

- The MEDIA5, MEDIA6, MEDIA7, and MEDIA8 media types are valid with the EFMT1, EFMT2, EEFMT2, EFMT3, and EEFMT3 recording technologies.
- The MEDIA9 and MEDIA10 media types are valid only with the EFMT2, EEFMT2, EFMT3, and EEFMT3 recording technologies.
- In general, in an environment sharing the TCDB at different software levels, if a lower-level system without appropriate support attempts to perform one of the CBRXLCS functions using a volume that has EFMT3 or EEFMT3 recording technology, the request fails with existing return code LCSFAIL (12) and existing reason code LCSFNSUP (310).

OAM installation exits changes

These installation exits support EFMT3 and EEFMT3 recording technology:

- Change use attribute (CBRUXCUA) installation exit: Tape recording technology fields have been updated with EFMT3 and EEFMT3.
- Cartridge entry (CBRUXENT) installation exit: Tape recording technology fields have been updated with EFMT3 and EEFMT3.
- Cartridge eject (CBRUXEJC) installation exit: Tape recording technology fields have been updated with EFMT3 and EEFMT3.
- Volume not in library (CBRUXVNL) installation exit: Tape recording technology fields have been updated with EFMT3 and EEFMT3. For additional information regarding this exit, refer to [“Volume not in library installation exit enhancement”](#) on page 322.

Operator command support changes

Volumes with EFMT3 and EEFMT3 recording technology are only displayed on systems with full TS1130 tape drive support installed.

These operator tasks have been changed in support of the TS1130 tape drive.

- The DISPLAY SMS,VOLUME command displays the new EFMT3 and EEFMT3 recording technology, as appropriate, in the output display for CBR1180I (OAM tape volume status).
- The LIBRARY DISPDV command displays 3592-3E for the TS1130 tape drive in the output display for CBR1220I (Tape drive status).
- The LIBRARY SETCL command allows MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 to be set for a TS1130 tape drive that supports a cartridge loader.

Mount processing change

A TS1130 (3592 Model E06) tape drive is able to read in the five 3592 recording formats (EFMT1, EFMT2, EEFMT2, EFMT3, and EEFMT3), but can only write in four of the recording formats (EFMT2, EEFMT2, EFMT3, and EEFMT3). For a DISP=OLD request (or DISP=MOD treated as OLD), preference is given to the lower technology devices first. For an EFMT2 recorded volume, preference is given to the base Model E05 and then to the encryption-capable 3592 Model E05 and then to the 3592 Model E06. For an EEFMT2 request, preference is given to the encryption-capable 3592 Model E05, and then to the 3592 Model E06.

If the read-compatible special attribute indicator is enabled for an EFMT1 formatted volume, preference is given to the 3592 Model J1A, followed by the 3592 Model E05, then the encryption-capable 3592 Model E05, and then the 3592 Model E06. OAM will use the read-compatible special attribute indicator (TDSSPEC) in the tape configuration database (TCDB) or usage of the LABEL=(,,IN) on the DD statement of JCL to determine if an EFMT1 formatted volume is eligible to be read by a 3592 Model E06 device. If the read-compatible special attribute is not set for an EFMT1 volume, preference is given to the 3592 Model J1A, then the 3592 Model E05, and then the encryption-capable 3592 Model E05.

For a DISP=NEW request, a TS1130 tape drive is considered eligible for an EFMT2 or EEFMT2 request, as well as for the new EFMT3 and EEFMT3 requests. If a media type is not specified, for an EFMT3 or EEFMT3 scratch request, the preference is MEDIA9 followed by MEDIA5 and then MEDIA7, enabling the higher capacity cartridges to be selected first.

OAM macro changes

Table 42 on page 251 describes changes to OAM mapping macros and installation exit parameter lists in support of TS1130 tape drives.

Table 26. OAM mapping macro changes		
The macro	that maps	has these changes.
CBRTDSI	the tape device selection information (TDSI)	TDSEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE TDSEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE * ENCRYPTED FORMAT 3 (EEFMT3) DEVICE
CBRTVI	the tape volume information	TVIEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE TVIEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE * ENCRYPTED FORMAT 3 (EEFMT3) DEVICE
CBRUXCPL	the change use attribute installation exit parameter list	UXCEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE UXCEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 3 (EEFMT3) DEVICE
CBRUXEPL	the cartridge entry installation exit parameter list	UXEEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE UXEEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 3 (EEFMT3) DEVICE
CBRUXJPL	the cartridge eject installation exit parameter list	UXJEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE UXJEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 3 (EEFMT3) DEVICE
CBRUXNPL	the volume not in library installation exit parameter list	UXNEFMT3 EQU 9 READ/WRITE ON ENTERPRISE * FORMAT 3 (EFMT3) DEVICE UXNEEFMT3 EQU 10 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 3 (EEFMT3) DEVICE

Cartridge entry processing

When a volume is entered into an IBM automated or manual tape library, the cartridge entry installation exit (CBRUXENT) is invoked to approve or deny an enter request, and to set or verify the recording technology to be associated with a volume.

If a volume TCDB record does not exist for the entry of a private MEDIA5, MEDIA6, MEDIA7, or MEDIA8 volume and there is no applicable recording technology being provided by the library's entry default data class, EFMT1 is passed to the exit. If the exit returns with a recording technology for a MEDIA5, MEDIA6, MEDIA7, or MEDIA8 volume, and it is not EFMT1, EFMT2, EEFMT2, EFMT3, or EEFMT3, the specification is considered invalid, and the exit is disabled.

If a volume TCDB record does not exist for the entry of a private MEDIA9 or MEDIA10 volume, and there is no applicable recording technology being provided by the library's entry default data class, EFMT2 is passed to the exit. If the exit returns with a recording technology for a MEDIA9 or MEDIA10 volume and it is not EFMT2, EEFMT2, EFMT3, or EEFMT3, the specification is considered invalid and the exit is disabled.

If a volume TCDB record does not exist for the entry of a private MEDIA 5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10 volume and the volume is being entered as a scratch volume, UNKNOWN will be passed to the exit and will be assigned when the volume is used during job processing.

If a TCDB volume record exists and the volume's recording technology or media type is not supported on the system processing the volume, in an ATLD, the volume is left in the library manager insert category to be processed by a system with appropriate support.

The cartridge entry installation exit (CBRUXENT) is passed via register 1, the pointer to a parameter list mapped by CBRUXEPL.

OAM object tape support

In a stand-alone environment, the SETOAM TAPEUNITNAME parameter in the CBROAMxx member of PARMLIB can be specified using an esoteric that contains TS1130 (3592-3E) tape drives. In the stand-alone environment, 3592 Model J, 3592 Model E05 (not encryption capable), 3592 Model E05 (encryption capable), and 3592 Model E06 drives need to be separated in their own unique esoteric to prevent allocating a 3592-J, 3592-2, or 3592-2E drive for a volume written with EFMT3 or EEFMT3 recording technology, because EFMT3 and EEFMT3 are only compatible with 3592-3E drives. In an IBM tape library environment, the SETOAM DATACLASS parameter at the storage group (or global level) can be used to specify a wanted recording technology and ensure allocating an appropriate drive.

The ERDS Physical ID (EPI) value for the 3592-3E drive is a hex '14' and is stored in the Db2 TAPEVOL table of the OAM Optical Configuration Database (OCDB) for a volume written in EFMT2, EEFMT2, EFMT3, or EEFMT3 by a 3592-3E drive, and displayed, as appropriate, in the volume display.

KB tracking

Today, OAM's object support records the following values in the DB2 TAPEVOL table in kilobytes:

- The capacity of the tape volume.
- The free space on the tape volume.
- The number of logical bytes written to a tape volume.
- The number of physical bytes written to a tape volume.
- The number of logical bytes deleted from a tape volume.

These fields have the potential to overflow their existing FIXED(31) fields using current capacities, especially those that deal with logical KBs. To resolve the potential overflow of these fields in the DB2 TAPEVOL table, five new columns will be added that are FIXED(31) fields (using INTEGER) to account for the number of overflow KBs (in 2GB increments). The overflow field will indicate the number of times the existing FIXED(31) field overflows and 64-bit arithmetic will be used in the calculations and in storing the overflow information. For example:

- A tape volume has 2147983647 KB logically written to it. This value is more than a FIXED(31) field will hold in KBs, which is 2147483647.
- Dividing the KB written by 2GB (2147483648) will result in the number of overflow KBs (in 2GB increments) as well as the remainder resulting from the division. In this example, the overflow value will be 1 and the remainder from the division will be 499,999:

$$2147983647 / 2147483648 = 1 \text{ with a remainder of } 499,999$$

- The current column in the DB2 TAPEVOL table that represents the amount of data logically written to the tape volume in KB will be 499,999.
- To determine the amount of data on the tape volume (in KB) for the existing DB2 TAPEVOL table fields that have overflow potential (CAPACITY, FRESpace, NUMLKBW, NumpKBW and NUMLKBDE), verify there is a value in the associated overflow field (CAPACITYO, FRESpaceO, NUMLKBWO, NUMLKPWO and NUMLKBDEO):
 - If there is no value in the associated overflow field, the value in the existing field represents the total number of kilobytes.
 - If there is a value in the associated overflow field, multiply the overflow value that is associated with the amount of data logically written to the tape volume by 2GB (2147983648) and then add the

result of the multiplication to the value in the current FIXED(31) field that represents the amount of KB logically written to the tape volume.

- The new overflow column that represents the number of 2GB's written to the tape volume will be 1.

The D SMS,VOL(*volser*) operator command output will be modified to display the tape capacity in KB followed by a 'K' if the capacity is less than 2GB, and will display the capacity in MB followed by an 'M' if the capacity is equal to or greater than 2GB. Messages that report on the KB values as message inserts are updated. IPCS modifications reflect new fields that are added to OAM macros as a result of this support. New sample members are added to the new DB2 overflow-related columns in the DB2 TAPEVOL table.

When inspecting the capacity and free space displayed via the D SMS,VOL(*volser*) operator command, if the capacity or free space is less than 2GB, it will be displayed in KB followed by a 'K'. If the capacity or free space is equal to or greater than 2GB, it will be displayed in MB, followed by an 'M'.

Sample Jobs

A new DB2® migration job, CBRSMKBO, is added to the existing TAPEVOL table, as well as updates to CBRSAMPL, to add KB overflow columns.

CBRSMKBO

```
//CBRSMKBO JOB MSGLEVEL=(1,1),MSGCLASS=A
//*****
//*
//* $SEG(SMKBO) COMP(DBM) PROD(OAM):
//*
//* OAM DB2 Database Migration Job (for OAM TAPEVOL table).
//*
//* CBRSMKBO
//*
//* This job performs the migration of the TAPEVOL table to the
//* new version of the TAPEVOL table supporting the new 3592-3E tape
//* capacity. The new capacity may overflow existing fields that track KB of
//* data on tape volumes. The new columns will contain overflow values that
//* will allow the larger tape capacities to be used.
//*
//* This job will:
//* 1. Add 5 new columns to the existing TAPEVOL table: The columns
//* are:
//* 1. CAPACITYO - overflow column for tape capacity (CAPACITY).
//* 2. FRESPEAO - overflow column for free space (FRESPEAO).
//* 3. NUMLKBWO - overflow column for Logical KB written (NUMLKBW).
//* 4. NUPKBWO - overflow column for Physical KB written (NUPKBW).
//* 5. NUMLKBDEO - overflow column for Logical KB deleted (NUMLKBDE).
//* 2. Place labels in existing TAPEVOL table for the new columns.
//*
//*
//*
//* It is recommended that you create a DB2 image copy of the
//* existing TAPEVOL table prior to executing this
//* migration job for recovery purposes.
//*
//* Before running this job, you must change the following:
//*
//* 1. Change the name in the DSN SYSTEM(DB2) statement to
//* the name of the DB2 Subsystem in your installation.
//*
//* 2. Change the PLAN name (DSNTIA71) in the RUN statement to
//* match your current DB2 version and release level.
//*
//* 3. Change the data set name in the RUN statement
//* LIB('DB2MINI.V7R1M0.RUNLIB.LOAD') phrase to the data set name used
//* in your installation for the DB2 RUNLIB.LOAD data set.
//*
//*
//* CHANGE ACTIVITY:
//* $L0=xxxxxx xxx YYMMDD TUCxxx: Initial Release
//*
//*****
//*****
```

```

/* Alter the TAPEVOL table to add the new overflow column definitions
/*****
//ALTERTAB EXEC PGM=IKJEFT01,DYNAMNBR=20,COND=(4,LT)
//SYSTSPRT DD SYSOUT=*
//SYSTSIN DD *
DSN SYSTEM(DB2)
RUN PROGRAM(DSNTIAD) PLAN(DSNTIA71) -
LIB('DB2MINI.V7R1M0.RUNLIB.LOAD')
//SYSPRINT DD SYSOUT=*
//SYSUDUMP DD SYSOUT=*
//SYSIN DD *

ALTER TABLE TAPEVOL ADD CAPACITYO INTEGER NOT NULL WITH DEFAULT;
ALTER TABLE TAPEVOL ADD FRESPEAO INTEGER NOT NULL WITH DEFAULT;
ALTER TABLE TAPEVOL ADD NUMLKBWO INTEGER NOT NULL WITH DEFAULT;
ALTER TABLE TAPEVOL ADD NUMPKBWO INTEGER NOT NULL WITH DEFAULT;
ALTER TABLE TAPEVOL ADD NUMLKBDEO INTEGER NOT NULL WITH DEFAULT;
COMMIT;
/*
/*****
// Place labels in table for new columns
/*****
//LABELTAB EXEC PGM=IKJEFT01,DYNAMNBR=20,COND=(4,LT)
//SYSTSPRT DD SYSOUT=*
//SYSTSIN DD *
DSN SYSTEM(DB2)
RUN PROGRAM(DSNTIAD) PLAN(DSNTIA71) -
LIB('DB2MINI.V7R1M0.RUNLIB.LOAD')
//SYSPRINT DD SYSOUT=*
//SYSUDUMP DD SYSOUT=*
//SYSIN DD *

LABEL ON TAPEVOL
(CAPACITYO IS 'CAPACITY_OVERFLOW',
FRESPEAO IS 'FREE_SPACE_OVERFLOW',
NUMLKBWO IS 'LOGICAL_KBS_WRITTEN_OVERFLOW',
NUMPKBWO IS 'PHYSICAL_KBS_WRITTEN_OVERFLOW',
NUMLKBDEO IS 'LOGICAL_KBS_DELETED_OVERFLOW');
COMMIT;
/*

```

Object tape migration considerations

If you choose to encrypt your object data, any partially filled non-encrypted tape volumes associated with an object storage group that you want to encrypt, should be marked full and not writable, so they are not selected. This is important because at the volume level all of the data on the tape is either encrypted or non-encrypted, and a mix of the two cannot reside on the same tape.

In the past, when migrating to a new drive model with a new recording technology using media types that could also be used at a lower-level recording technology, you marked your partially filled volumes as full or not writable and new write requests were done at the new recording technology. Since the 3592 Model E06 is downward write compatible with the 3592 Model E05, this same concern does not exist for EFMT2/EEFMT2; however, since the 3592 Model E06 is not downward write compatible with the EFMT1 format, customers need to mark any partially filled tapes 'full' or 'not writable' as they migrate to the newer 3592 drive technology and no longer have any devices capable of writing EFMT1.

These items should be considered when planning to use 3592-3E drives:

If the 3592-3E devices are in an IBM tape library:

1. Follow the steps listed in [“OAM library support” on page 249](#) for OAM Library Support.
2. Add new data classes, specifying EFMT3 and EEFMT3 recording technologies.
3. Review ACS routines for STORE, or CTRANS, or both environments for any changes that might be necessary to ensure proper class assignment.

If the TS1130 (3592 Model E06) devices are not in an IBM tape library, use device esoterics for STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the Object storage groups that are to use the new devices. It is important to separate in an esoteric the different 3592 devices to prevent allocating an inappropriate device for a volume written in the EFMT3 or EEFMT3 recording technology. Add new TAPEUNITNAME with the new device esoteric to the STORAGEGROUP statements in

the CBROAMxx PARMLIB member for object storage groups or object backup storage groups that use the new devices.

All partially filled EFMT1 volumes belonging to a storage group with 3592-3E devices assigned need to be marked 'full' or 'not writeable' as the 3592-3E device is not downward write-compatible with the EFMT1 recording format. This prevents a 3592-3E device from being selected to write an EFMT1 tape volume.

Coexistence and full support systems must have the new NUMPKBWO, NUMLKBWO, NUMLKBDEO, FRESPEAO and CAPACITYO columns added to the TAPEVOL table in the Optical Configuration Database (OCDB). Run the CBRSMKBO Db2 Database Migration sample JCL to add the columns. After the new columns have been added, run CBRPBIND. In an OAMplex, since the Db2 tables are shared, only one system in the OAMplex needs to run CBRSMKBO to add the new TAPEVOL table columns but all the systems in the OAMplex need to run CBRPBIND.

Object tape volume management support

The TS1130 tape drive supports the existing 3592 media types (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10), including special handling of WORM (MEDIA6, MEDIA8, and MEDIA10) tape volumes that have expired. You cannot recycle WORM tape volumes because they cannot be written from load point.

Chapter 26. MVS IOS support for TS1130 tape drive

MVS IOS support for the TS1130 tape drive is unchanged from that for the TS1120 tape drive. See [Chapter 39, “MVS IOS support for TS1120 tape drive,” on page 253](#) (which has been updated in this edition) for more information.

Part 3. Encryption-capable TS1120 tape drive

Chapter 27. Introduction for encryption-capable TS1120 tape drive

Data encryption is an important tool for protecting against the possible misuse of confidential information that could occur should tapes be lost or stolen. Unless the possessor of the tape has the required key, any encrypted data on the tape will remain confidential and will be unreadable.

This topic describes the IBM System Storage encryption-capable TS1120 (3592 Model E05, 3592-2E) tape drives and the z/OS software support needed to use them.

Encryption-capable TS1120 tape drive

All new TS1120 tape drives and any older 3592 Model E05 drives that have been updated by a chargeable field upgrade (Feature Code 5592) are capable of encryption. If the encryption capability is needed, an IBM Customer Engineer must enable the encryption feature of the drives. Drives that do not have the encryption feature enabled will report as today's 3592 Model E05 (3592-2) and when the feature is enabled, will report as (3592-2E). When the encryption feature has been enabled, the host considers the encryption-enabled drives as being encryption-capable. References in this document to "encryption-capable," means that the encryption feature in the drive had been enabled and the drive is capable of encrypting. In other documents, this may be referred to as "encryption-enabled."

The encryption-capable TS1120 tape drive provides, in addition to the ability to read and write encrypted data tapes, the same high capacity, performance, reliability, and host connectivity provided by the non-encryption capable 3592 Model E05 tape drive. Specifically, the encryption-capable TS1120 tape drive offers these features:

- Creates tapes for archive files.
- Optionally creates encrypted tapes.
- Backs up and restores systems in case of system or disk storage problems.
- Stores high-speed, high-capacity sequential application data sets.
- Stores temporary data sets.
- Satisfies off-site data storage for disaster recovery.
- Provides data interchange with other systems that use 3592 Model E05 (TS1120) or 3592 Model J1A subsystems.
- Supports WORM (write once, read many) tape data cartridges whose data cannot be altered.

The advantages of the encryption-capable TS1120 tape drive over other encryption methods, such as host-based software encryption, are that it:

- Permits full performance of the tape device when encryption is enabled.
- Permits encryption to be performed after compression.
- Avoids performance penalties in the host.

Tape encryption for TS1120

The encryption-capable TS1120 tape drive supports encryption of media tape cartridges. The z/OS DFSMS support for tape subsystem encryption allows you to specify by data class that data is to be encrypted when stored on encryption-capable TS1120 tape drives. In addition to this, the key label-related information that is used to encrypt the data key (of a tape cartridge) can be specified through the DD statement (JCL, dynamic allocation and TSO ALLOCATE), data class or Encryption Key Manager component for the Java platform (EKM) defaults. The communication path to the Encryption Key Manager (EKM) is across TCP/IP with the choice to go either in-band or out-of-band for the key management flow. With out-of-band key management, the communication path to the Encryption Key Manager is handled

by the control unit going directly to the Encryption Key Manager. Then for in-band key management, the communication path to the Encryption Key Manager is handled across ESCON/FICON with a new IOS proxy interface then handling the key exchange (across TCP/IP) with the Encryption Key Manager.

An encryption-capable TS1120 tape drive records in the existing non-encryption enterprise format 1 (EFMT1) and enterprise format 2 (EFMT2) recording formats and also records in the encryption specific recording format (enterprise encrypted format 2 (EEFMT2)). The EEFMT2 recording format is supported across all of the 3592 media types (MEDIA5 – MEDIA10). Even though the encryption-capable TS1120 tape drive can record in a lower density (EFMT1) and a higher density (EFMT2) recording format, an encrypted version of the lower recording format (EFMT1) is not supported. Only the higher recording format (EFMT2) will be supported with an encrypted version (EEFMT2). The existing Performance Scaling and Performance Segmentation data class options, applicable with MEDIA5 and MEDIA9, can also be used with the new encryption format EEFMT2. The capacities of EMFT2 and EEFMT2 written tapes are the same.

When writing from the beginning of tape (BOT), an encryption-capable TS1120 tape drive will, by default, record in the non-encryption recording format (EFMT2). Depending on the host platform and its encryption enablement mechanism, this default can be changed at the drive. However, under z/OS and OPEN processing (file sequence 1, DISP=NEW), unless explicitly requested through data class to record in the lower recording format (EFMT1) or the new encryption format (EEFMT2), the non-encryption format EFMT2 will be assumed and explicitly set during OPEN processing. When writing from the beginning of the tape (file sequence 1, DISP=OLD), since this processing does not go through the data class ACS routine, OPEN processing will determine if the previous usage of the tape was encrypted and if encrypted, OPEN will explicitly set the EEFMT2 format with the volume's existing key management-related information being used by the drive to encrypt the data.

For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the Encryption Key Manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.

In the encryption-capable TS1120 tape drive environment (whether system-managed or not), when writing from the beginning of tape (file sequence 1, DISP=NEW), to request encryption format, EEFMT2 is specified in data class. OPEN processing passes key management-related information (such as the key labels) to the drive for subsequent communication with the Encryption Key Manager.

To select encryption for a cartridge, do these steps:

1. Define a data class that requests encryption.
2. Modify or create ACS routines to associate the tape output functions using encryption with a data class that requests encryption.
3. Specify the appropriate key labels either through the DD statement (JCL, dynamic allocation, or TSO allocate), data class, or by using Encryption Key Manager established defaults.

Key management for TS1120

Key Management consists of a number of elements including:

- A key store where the keys to encrypt and decrypt the data key are securely kept and readily available.
- An Encryption Key Manager (EKM) that communicates with the drive through the designated key management path (in-band or out-of-band).
- Ability of the tape drive to request and process (with the Encryption Key Manager) key management information.
- A management interface for configuring and managing the Encryption Key Manager (EKM).

Key store for TS1120

A key store is where the keys (to encrypt and decrypt the data key) are securely kept such that they are available when data needs to be encrypted or decrypted. The Encryption Key Manager uses Java APIs to retrieve and store the key information. The Encryption Key Manager (EKM) allows for the use of hardware or software based key stores that are JCE compliant. In this first release of the Encryption Key Manager, these key stores are supported under z/OS: JCEKS, JCERACFKS, JCE4758KS (JCECCA KS), JCE4758RACFKS (JCECCARACFKS). The first two key stores are software based and the last two are hardware based. The hardware based key stores under z/OS then have a tie to the existing z/OS Integrated Cryptographic Service Facility (ICSF). In addition to the key stores above, these key stores are also available if the key store resides outside of z/OS (in the distributed environment): JCEKS, IBMi5OSkeystore, and PKCS11IMPLKS. The first two key stores are software based and the last one is hardware based. When multiple key stores are available on the system, you may configure which key store to use. The key store can also take advantage of hardware for protecting keys so that the keys are always protected under the hardware master key and the key values never appear in the clear in system memory. Access control to the key store is controlled by z/OS access controls.

Encryption Key Manager (EKM) for TS1120

For an encrypted tape cartridge, the cartridge stores not only the encrypted user data, but also critical key management-related information needed to interact with the Encryption Key Manager (EKM). The Encryption Key Manager (EKM) communicates over TCP/IP connections with the tape drive (in-band or out-of-band) to provide the key information required by the tape drive to encrypt or decrypt the data. This TCP/IP connection needs to be secure, and the security can be achieved either by physical security or with IP security protocols, such as VPN. The method for securing this TCP/IP connection relies on existing system capabilities and is outside the scope of the key management system.

The Encryption Key Manager (EKM) is a common platform application written in JAVA that runs under the Java Virtual Machine (JVM). The EKM then interfaces with an existing key store, which under z/OS may be one of the hardware based key stores (JCE4758KS (JCECCA KS) or JCE4758RACFKS (JCECCARACFKS)) that work with the Integrated Cryptographic Service Facility (ICSF), or it may be one of the software based key stores (JCEKS or JCERACFKS). If the EKM resides outside of the z/OS environment, then the JCEKS and IBMi5OSkeystore software based key stores or the PKCS11IMPLKS hardware based key store may be used.

When the encryption capable tape drive needs a key to perform an encrypted write, a data key is generated by the EKM. The data key used to encrypt the data on a tape cartridge is itself encrypted (using the public key of a public/private key pair) with either one or two key encrypting keys (KEKs) stored in the key stores. The KEKs are maintained by the EKM through an existing key store and are pointed to by the appropriate KEK label, also referred to as the key label. The EEDKs are then passed from the EKM to the drive and stored in the tape cartridge. The drive cannot decrypt the EEDKs (it can only store them), so the data key it is to use for decryption is also passed to the drive in another encrypted form that the drive can decrypt. On a subsequent mount of the cartridge, the drive passes the EEDKs to the EKMs so the Encryption Key Manager can extract the data key that was used. The EKM then passes that data key back to the drive in another encrypted form the drive can decrypt. The EEDKs can only be decrypted by an Encryption Key Manager that is connected to a key store that possesses the right key information (the private keys associated with the KEK labels).

You may use multiple encrypting tape drives and configure a single key management server to be used across these tape drives. Conversely, for redundancy, an encrypting tape drive may be configured to communicate with more than one tape key management server (both a primary and a secondary key management server). In this case, both key management servers are assumed to be capable of handling key requests from the tape drive. This implies that the key management servers are configured identically and are using the same set of public/private key pair information to encrypt and decrypt the data key.

When writing from load point, if two different key labels are specified, both key labels must be defined to the key store and accessible to the Encryption Key Manager (EKM). This ensures that both EEDK structures can be properly built by the EKM and stored on the tape cartridge. When reading a volume, only one of the two EEDK structures previously stored on the tape cartridge needs to be able to be unwrapped

by the Encryption Key Manager. As part of this process the EKM will communicate with the key store to unwrap the encrypted data key stored on the cartridge in the EEDK structure.

The encoding mechanism (label or public key hash), provides instructions that the Encryption Key Manager (EKM) will use to build the EEDKs that are stored on the tape cartridge. The "Label" encoding mechanism indicates that the key label itself is to be stored as part of the EEDK structure on the tape cartridge, whereas the "public key hash" encoding mechanism indicates that a hash of the public key referenced by the key label is to be stored on the cartridge rather than the key label itself. Storing the hash value rather than the key label itself allows for greater flexibility when tape cartridges are exported to another location, especially if that location may be using a different key label (than the originating site) to refer to the same key.

The role of DFSMS and policy management is to indicate to the drive, during OPEN processing (file sequence 1, DISP=NEW) that the mounted tape volume is to be encrypted (as indicated through the SMS data class policy and the specification of EEFMT2 for the recording format). OPEN processing will also pass to the drive critical key management-related information such as the key encrypting key (KEK) labels and the encoding mechanism (label or public key hash) specified through data class or through the DD statement (JCL, dynamic allocation or TSO ALLOCATE). The values specified through the DD statement will override any data class specification. If the key-management-related information is not specified through the DD statement or data class, Encryption Key Manager established defaults will be used that can be specified on both a global and a drive level.

The drive's request for the data key and the passing of key management-related information can be done in-band between the drive and the Encryption Key Manager (through the control unit and host across ESCON/FICON) or it can be done out-of-band (through the control unit across TCP/IP). However, because the Encryption Key Manager (EKM) only has a TCP/IP interface, in-band communication to the EKM is handled by a new z/OS proxy interface. The proxy interface receives the request from the drive across ESCON/FICON and then interfaces with the established EKM for that system across TCP/IP. The z/OS proxy then communicates back to the drive (through the control unit across ESCON/FICON) providing the key management-related information that the drive needs. Under z/OS, the recommended communication path to the EKM is in-band across ESCON/FICON under the same system that initiated the read or write request. The EKM itself, however, can reside on that same z/OS system, on another z/OS system, or even on another platform's server. Out-of-band key management, from the control unit across TCP/IP, can be used to communicate with an EKM running under a z/OS system or somewhere else. By default, the control unit will use out-of-band key management unless otherwise changed by default or by explicit host command. With the interface to the EKM being across TCP/IP, you have, based on your TCP/IP infrastructure and key management requirements, a number of different configuration options available, for both in-band and out-of-band key management. If in-band key management is to be used, the existing IOS PARMLIB member IECIOSxx (or the SETIOS EKM command) must be updated to specify the TCP/IP-related information needed to direct the z/OS proxy to the desired Encryption Key Manager (primary and secondary).

In-band proxy for TS1120

The in-band z/OS proxy allows key management information to be exchanged with a tape drive over existing ESCON/FICON, instead of requiring the deployment of a secondary IP network. The reliability and physical security of the existing I/O attachments is one reason that you may choose to use the in-band key management path to the Encryption Key Manager. The z/OS proxy interface communicates with the tape drive (through the control unit) in the current data path and then uses a TCP/IP connection to communicate with the Encryption Key Manager.

Note: APAR OA22271 added support for IPv6. This support was added after the initial tape encryption support for the TS1120.

Management interfaces for TS1120

You will need to configure whether to use a direct TCP/IP connection between the storage devices and the Encryption Key Manager (out-of-band) or configure to use the in-band proxy. Under z/OS the in-band proxy is defined using the IECIOSxx PARMLIB member (or the SETIOS EKM command).

For z/OS tapes, you can configure whether to encrypt or not based on data class definitions. Furthermore, for z/OS you may specify the key labels through data class or through the DD statement (JCL, dynamic allocation, or TSO ALLOCATE). In addition to this, Encryption Key Manager assigned defaults can also be used if the key labels are not provided through z/OS.

For tapes that will be encrypted or decrypted, you must define and keep track of the key information to be used. For information on key management and the role of the Encryption Key Manager (EKM), refer to *IBM System Storage Tape Encryption Key Manager, Introduction, Planning, and User Guide*, GA76-0418.

Key label specifications for TS1120

When the first file sequence on a tape is written and encryption is requested, up to two key encrypting key (KEK) labels can be specified, enabling the data key to be encrypted with two different keys. One of the keys may be used for local (on-site) usage and the second may be used for export (off-site) purposes.

Note: When the specified key labels are being used for export purposes, remember that the encryption key manager requires that at least one of the key encrypting key (KEK) labels specified has to have a private key associated with it. This allows the creator of the tape to also decrypt the data key (and the data) in case of an emergency.

Key label specifications can be specified by:

- Data class (using new ISMF panel fields)
- DD statement (JCL or dynamic allocation, using new keywords KEYLABL1, KEYENCD1 and KEYLABL2, KEYENCD2)
- TSO ALLOCATE command (using new keywords KEYLABL1, KEYENCD1 and KEYLABL2, KEYENCD2)

However specified, key label specifications consist of either one or two key labels, and their associated encoding mechanisms. The *key label* specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data encryption key. The *encoding mechanism* specifies how the label for the key encrypting key specified by the key label (input) is encoded by the Encryption Key Manager and stored on the tape cartridge. The two encoding mechanisms are:

H

the label for the key encrypting key is to be encoded as a hash of the public key

L

the label for the key encrypting key is to be encoded as the specified label

Rules for key labels :

1. Specification of the key labels are optional and are only applicable with DISP=NEW, file sequence 1 and are otherwise ignored. If the key labels are not specified, either through the DD statement or through data class, externally specified Encryption Key Manager defaults will be used.
2. Specification of the key labels does not by itself enable encryption. Encryption must be enabled by a data class that specifies the encryption format EEFM2. Whether the data on a tape cartridge is encrypted or not is then determined when an encryption capable device is allocated and the first file sequence on the tape is written.

Note: In the system-managed environment, specification of the encryption format EEFM2 will not only request that the encryption format be used, but will also steer allocation to an encryption capable device. In the stand-alone (non-system managed) environment, encryption capable devices must be specified through the UNIT parameter to ensure that an encryption capable device is allocated, with specification of the encryption format EEFM2 then being used to request the encryption format.

3. One or both key labels may be specified. If a key label is specified, then its encoding mechanism must also be specified and if an encoding mechanism is specified, then its corresponding key label must also be specified. If only one key label is specified, specification of key label 1 or key label 2 is allowed; it doesn't have to be specified as key label 1.
4. If only one key label is specified, the same key label and encoding mechanism is used to generate both EEDKs that are stored on the tape.

5. The key labels must come from the same source; either the DD statement, data class, or the externally specified Encryption Key Manager defaults. The key labels specified on the DD statement will override the key labels specified through data class which will then override any externally specified Encryption Key Manager defaults.
6. The key label can be up to 64 characters, with blanks padding the field on the right. The character string supported is a subset of EBCDIC code page 037. The characters supported are those that map to the portable ASCII characters represented in international standard ISO 646-IRV (US ASCII), which includes numeric, alphabetic, national, and special characters, along with additional punctuation-type characters. National variants of ISO 646 provide for internationalization of the character string. ISO 646-IRV (US ASCII) is a subset of ISO 8859-1 (Latin Alphabet No. 1). The translation from EBCDIC to ASCII and syntax validation of the character string specified occurs at the control unit, and as such, the character set supported stays within the boundaries of 7-bit ASCII and can be successfully handled by the Encryption Key Manager and key store, which both use UTF-8 encoding. From a host perspective, the key label is considered a free form field (binary token) with no validation checking other than to remove leading blanks. The key label syntax is not validated until it is sent to the control unit on a mount request using the specified key label with the control unit then removing trailing blanks. The specified alphabetic characters will be treated as case insensitive by the key store and, therefore, in order for key labels to be unique, they should differ by more than just their case. Refer to the key store documentation and the tooling available for creating the key labels for any additional requirements or restrictions.

Volume label support for TS1120

With the exception of the volume label structure for the first file sequence, all data on a tape cartridge will be encrypted under the same data key. The volume label for the first file sequence (IBM standard tape label (SL) or ANSI standard label (AL)) will be encrypted using a key known to all encryption capable 3592 drives. Circumstances may arise where you no longer know what key encrypting keys (KEKs) were used to encrypt the data key that is stored on a tape cartridge. Without this knowledge, the externally encrypted data keys (EEDKs) cannot be unwrapped and without the data key, the data itself cannot be decrypted. To help with this situation, z/OS (during OPEN processing), will request that the drive use a key known to all encryption capable 3592 drives when writing all recognized volume label records (VOL1, HDR1, HDR2, and so on). Even though the volume label, for the first file sequence, is still encrypted on the tape cartridge, by using a key known to all encryption capable 3592 drives, the volume label information can be decrypted and returned without going through the Encryption Key Manager (for example, by using an existing utility such as DITTO). Knowing the volume label information can then help to determine what key labels were used. Perhaps you used a unique key label for a particular application or for a particular data set name. Having this information available enables the volume label information to be read while still protecting the encrypted data on the tape cartridge.

Volume recovery for TS1120

Events can occur where there is a need to recover data located beyond the logical end-of-data (EOD) mark of a tape cartridge. For example, a volume that was accidentally scratched and is now being reused from the beginning of tape (BOT). When this happens with unencrypted data, you can sometimes use a recovery utility to try to salvage as much of the remaining data on the tape as possible. With encrypted data, access to the previous set of keys (EEDK structures) is critical to this recovery process. Because saving the existing EEDK structures on the tape could introduce a security exposure, the default operation of the drive is to destroy the existing EEDK structures on the tape. When the EEDKs have been destroyed, encrypted data cannot be recovered beyond the newly written EOD mark. However, any data previously written in a non-encrypted format that was not overwritten with encrypted data is still potentially recoverable.

Re-keying support for TS1120

When the first file sequence on a tape is written and encryption is requested, up to two key encrypting key (KEK) labels can be specified enabling the data key (DK) to be encrypted with two different keys. One of the keys may be used for local (on-site) usage, and the second may be used for export (off-site) purposes.

A mechanism is being provided through the drive and the encryption key manager (EKM) that will enable the data key (DK) to be re-encrypted with new key encrypting keys (using new key labels), generating new EEDKs. This enables a tape cartridge to be re-keyed without having to rewrite the data to another volume.

Note: z/OS support for re-keying is provided by APAR OA20076. Re-keying is initiated through the IEHINITT utility with a new REKEY option.

Media support for encryption-capable TS1120 tape drives

The encryption-capable TS1120 tape drive reads and writes in the new recording format EEFMT2 (enterprise encrypted format 2), as well as EFMT1 (enterprise format 1) and EFMT2 (enterprise format 2). EEFMT2 records data in an encrypted format. EEFMT2 provides the same capacity as EFMT2. The IBM System Storage encryption-capable TS1120 tape drive uses these IBM System Storage family of tape media:

- MEDIA5 - The IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) physical media. Provides an uncompressed capacity of 500 GB with EFMT2 or EEFMT2 (300 GB with EFMT1) and compressed capacity of 1500 GB with EFMT2 or EEFMT2 (900 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA6 - The IBM TotalStorage Enterprise WORM Tape Cartridge (MEDIA6) physical media. Provides an uncompressed capacity of 500 GB with EFMT2 or EEFMT2 (300 GB with EFMT1) and compressed capacity of 1500 GB with EFMT2 or EEFMT2 (900 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA7 - The IBM TotalStorage Enterprise Economy Tape Cartridge (MEDIA7) physical media. Provides an uncompressed capacity of 100 GB with EFMT2 or EEFMT2 (60 GB with EFMT1) and compressed capacity of 300 GB with EFMT2 or EEFMT2 (180 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA8 - The IBM TotalStorage Enterprise Economy WORM Tape Cartridge (MEDIA8) physical media. Provides an uncompressed capacity of 100 GB with EFMT2 or EEFMT2 (60 GB with EFMT1) and compressed capacity of 300 GB with EFMT2 or EEFMT2 (180 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA9¹ - The IBM TotalStorage Enterprise Extended Tape Cartridge (MEDIA9) physical media. MEDIA9 requires the EFMT2 or EEFMT2 recording format, and provides an uncompressed capacity of 700 GB and compressed capacity of 2100 GB assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA10¹ - The IBM TotalStorage Enterprise Extended WORM Tape Cartridge (MEDIA10) physical media. MEDIA10 requires the EFMT2 or EEFMT2 recording format, and provides an uncompressed capacity of 700 GB and compressed capacity of 2100 GB assuming a 3:1 compression ratio, depending on the type of data written.

You can use the encryption-capable TS1120 tape drive in the stand-alone environment or the tape library environment (automated or manual). Currently, the encryption-capable TS1120 tape drive does not have a cartridge loader.

Support for the encryption-capable TS1120 tape drive will be provided at z/OS V1R4 ² and later releases, however support for MEDIA9 and MEDIA10 requires z/OS V1R5 or later releases. Support for the encryption-capable TS1120 tape drive will be delivered in multiple stages with support for z/OS V1R6 and V1R7 being available first (refer to enabling APAR OA15685). For z/OS V1R8, refer to enabling APAR OA17562 and for z/OS V1R4 and V1R5, refer to enabling APAR OA18111.

¹ Software support of the new media, MEDIA9 and MEDIA10, is available with the support of the 3592 Model E05, however the media itself will be available at a later GA.

² Support for the encryption-capable TS1120 tape drive will be provided at z/OS V1R4 with the z/OS V1R4 z990 exploitation support feature installed, or at OS.e V1R4 with the z/OS.e V1R4 z990 coexistence update feature installed.

Software support of the new media, MEDIA9 and MEDIA10, is available with the support of the encryption-capable TS1120 tape drive, however the media itself will be available at a later GA.

Note:

1. If no recording technology has been specified for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10, EFMT2 is the default recording technology. If EFMT1, EFMT2, or EEFMT2 is needed for interchange purposes, it can be specified through data class. This applies to both the stand-alone and to the system-managed tape library environments.
2. To enable the EEFMT2 formatted cartridges to be relabelled/reused from load point on a 3592 Model J1A (3592-1) or an existing 3592 Model E05 (3592-2), drive microcode updates are required on these drives. This is particularly important in a system-managed tape library environment, because common scratch pools are used across the media types.
3. For an encrypted tape cartridge, the cartridge stores both the encrypted user data and the critical key management-related information needed to interact with the Encryption Key Manager when decrypting data on the cartridge. A mix of data written in encrypted and non-encrypted formats is not supported on the same tape cartridge. Whether the data on a cartridge is written in encrypted format is determined during OPEN processing, when the first file sequence on the tape is written. If the first file written to a tape is in the encrypted format; all subsequent files written to that same tape cartridge will be written in the encrypted format. All files written to a cartridge in the encrypted format are encrypted using the same data key. The exception to this is the volume label structure for the first file sequence, which is encrypted using a key known to all encryption capable 3592 drives, which means it is effectively in the clear.
4. The encryption-capable TS1120 tape drive optionally provides performance scaling by using only 20 percent of the full capacity on a MEDIA5 or MEDIA9 cartridge. The default is to use the cartridge's full capacity. The performance scaling option is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
5. The encryption-capable TS1120 tape drive optionally provides performance segmentation. Performance segmentation divides the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. This option is available on MEDIA5 and MEDIA9 tapes, but is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media. The performance segmentation option is mutually exclusive with the performance scaling option.
6. The encryption-capable TS1120 tape drive emulates only 3590 Model B1x tape drives (all 3592 tape cartridge media are supported in this emulation mode) in the standalone and in the system-managed tape library environment (manual or automated).
7. The encryption-capable TS1120 tape drive is supported by the 3592 Model J70 and C06 tape controllers, with either ESCON or FICON attachment.
8. The encryption-capable TS1120 tape drive coexists with 3490E, 3590, and 3592 Model J1A, and the non-encryption capable 3592 Model E05 devices in the 3494 automated tape library.
9. The encryption-capable TS1120 tape drive coexists with 3592 Model J1A and the non-encryption capable 3592 Model E05 devices in the 3584 automated tape library.
10. The encryption-capable TS1120 tape drive coexists with 3490, 3490E, 3590, and 3592 Model J1A, and the non-encryption capable 3592 Model E05 devices in a manual tape library.
11. The encryption-capable TS1120 tape drive cannot use the MEDIA3 or MEDIA4 cartridges used in 3590 tape drives.
12. The encryption-capable TS1120 tape drive also supports special modes that cause it to behave as a 3592 Model J1A (and therefore foregoing its encryption capabilities). When an encryption-capable TS1120 tape drive is attached to a J70 or C06 control unit that also has 3592 Model J1A devices, the encryption-capable TS1120 tape drive will appear to the host as a non-encryption-capable 3592 Model J1A, thus ensuring that all devices attached to the same control unit are homogeneous and have the same behaviors.
13. For the system-managed tape support (automated or manual), though a mix of TS1120 (3592 Model E05) tape drives can coexist in the same library, under the same control unit, the TS1120 tape drives must be homogeneous and support the same capabilities. 3592 Model E05 devices that are enabled

for encryption cannot coexist in the same control unit with 3592 Model E05 devices that are not encryption capable.

Related reading:

- See *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555, for additional information.

Performance scaling and segmentation for TS1120

The encryption-capable TS1120 tape drive supports performance scaling and performance segmentation of media tape cartridges. These functions allow you to optimize performance for MEDIA5 and MEDIA9 cartridges; a cartridge can be defined for performance scaling or performance segmentation, but not both.

Performance scaling, also known as capacity scaling, is a function that allows you to contain data in a specific fraction of the tape, yielding faster locate and read times. Performance scaling for the encryption-capable TS1120 tape drive limits the data written to the first 20% (the optimally scaled performance capacity) of the cartridge. To select performance scaling for a cartridge, do these steps:

1. Define a data class that requests performance scaling.
2. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling.

The encryption-capable TS1120 tape drive also divides the tape into longitudinal segments. Using this capability, it is possible to segment the tape into two segments, one as a fast access segment to be filled first, and the other as additional capacity to be filled after. Performance segmentation also avoids the drop in data rate sometimes seen on non-segmented target tapes as they are reaching full capacity. If you decide to use the performance segmentation attribute, do these steps:

1. Define a data class that requests performance segmentation.
2. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation.

Using EFMT1, the MEDIA5 cartridge can be segmented into a 60 GB fast access segment and a 200 GB slower access segment.

Using EFMT2 or EEFMT2, the MEDIA5 cartridge can be segmented into a 100 GB fast access segment and a 333 GB slower access segment. The MEDIA9 cartridge can be segmented into a 140 GB fast access segment and a 466 GB slower access segment.

z/OS software support for the encryption-capable TS1120 tape drive

Use z/OS software with the encryption-capable TS1120 tape drive to protect your data with the IBM System Storage family of tape media and the EEFMT2 recording technology. Table 27 on page 177 describes the software support changes for the new encryption-capable TS1120 tape drive.

Table 27. Components that provide software support for the encryption-capable TS1120 tape drive	
Component	Function
DFSMSdfp AMS	AMS commands, CREATE VOLUMEENTRY, ALTER VOLUMEENTRY, DCOLLECT, and LISTCAT are changed to support the new EEFMT2 recording technology for encryption. One new subparameter, EEFMT2, for the parameter RECORDING, has been added for CREATE VOLUMEENTRY and ALTER VOLUMEENTRY. AMS allows the use of the new EEFMT2 recording technology, as well as the printing and displaying of information about the recording technology.

Table 27. Components that provide software support for the encryption-capable TS1120 tape drive (continued)

Component	Function
DFSMSdfp Device Services	Device Services manages the IBM System Storage Tape System devices.
DFSMSdfp ISMF	The ISMF Data Class Application and Mountable Tape Volume Application panels have been enhanced to allow the specification of a new value (EE2 for EEFMT2) in the Recording Technology Format field. A new panel (DGTDCDC8) will be displayed to allow the specification of key labels and encoding mechanisms.
DFSMSdfp NaviQuest	NaviQuest sample jobs and CLISTs have been updated to support tape encryption in the data class.
DFSMSdfp OAM	OAM tape library support allows the use of the new EEFMT2 recording technology and IBM System Storage family of tape media in the IBM 3494 and 3584 Automated Tape library and in the manual tape library. OAM object tape support allows the use of encryption-capable TS1120 tape drives and media for object-related activity.
DFSMSdfp OCE/IFGOJES3	OCE/IFGOJES3 allows the use of the new EEFMT2 recording technology.
DFSMSdfp SMS	SMS allows the use of the new EEFMT2 recording technology. You can specify a data class to require data encryption (EEFMT2) with media types MEDIA5 through MEDIA10. You can also use a data class to specify two new key labels and two new corresponding key encoding mechanisms. Specification of the key labels is optional and is only valid with DISP=NEW and file sequence number 1. Otherwise, it is ignored.
DFSMSdss	DFSMSdss ensures that encrypted data dumped to an encryption-capable TS1120 tape drive will not be doubly encrypted, unless the user makes specific arrangements for double-encryption. DFSMSdss Stand Alone Restore will not read a dump data set that resides on an encrypted tape.

Table 27. Components that provide software support for the encryption-capable TS1120 tape drive (continued)

Component	Function
DFSMSHsm	<p>DFSMSHsm allows the use of encryption-capable TS1120 tape drives and media for all DFSMSHsm tape related functions:</p> <p>LIST command The LIST TTOC SELECT parameters have been extended to take new values EEFMT2 (or EE2), ENCRYPTION (or ENCRYPTED), and NOENCRYPTION (or NOTENCRYPTED).</p> <p>Tape hardware encryption for DFSMSHsm Dump The DFSMSHsm Dump function can now use tape hardware encryption to encrypt dump output. If DUMPCLASS specifies host based encryption (and possibly host based compaction before encryption, known as HWCOMP), but the associated data class specifies tape hardware encryption, DFSMSdss will ignore the request for host based encryption and honor instead the request for tape hardware encryption. The volume's associated DVL record will show whether tape hardware encryption or host based encryption was done.</p> <p>The LIST DUMPVOL(vol) output includes a new value of THW for the ENC heading indicating the data is Tape Hardware Encrypted.</p> <p>For z/OS V1R8 and above, LIST COPYPOOL shows a value of THW for a Tape Hardware Encrypted tape.</p>
DFSMSrmm	DFSMSrmm records the Key Labels and their encoding mechanism in the Volume record.
DFSORT	DFSORT works without change with the IBM System Storage Tape System devices.
EREP	EREP provides unique device type information for encryption-capable TS1120 tape drives when formatting LOGREC records.
z/OS Multiple Virtual Storage (MVS) Allocation	MVS Allocation allows specification of the key labels. It also allows the use of the new EEFMT2 recording technology when using the Dynamic Allocation Text Unit DALINCHG.

Table 27. Components that provide software support for the encryption-capable TS1120 tape drive (continued)

Component	Function
z/OS Multiple Virtual Storage (MVS) IOS	<p>MVS IOS has been updated to support Key Management:</p> <p>In-band Key Management If in-band key management is being used, the existing IOS PARMLIB member IECIOSxx will be updated specifying the TCP/IP related information needed to direct the ESCON/ FICON proxy to the appropriate Encryption Key Manager. In this case, encryption key management (in-band) is defined for the system through the IOS PARMLIB member.</p> <p>IOS Proxy Sockets Initialization You can optionally specify the DNS name or IP address of an Encryption Key Manager (EKM) that will provide the key management functions for the system. The EKM can be designated with a new keyword in the IECIOSxx SYS1.PARMLIB member or as a keyword on the SETIOS operator command.</p> <p>IECIOSXX Parmlib and SETIOS Commands You can use the EKM subcommand in parmlib or in the SETIOS console command to specify the host name of the Encryption Key Manager (primary and secondary).</p>
z/OS Multiple Virtual Storage (MVS) Scheduler/SJF	MVS Scheduler/SJF validates the JCL DD keywords KEYLABL1, KEYLABL2, KEYENCD1, and KEYENCD2, if used.

Using encryption-capable TS1120 tape drives in an IBM tape library environment

z/OS DFSMS provides device allocation and media management in the 3494 and 3584 automated or manual tape library environments for encryption-capable TS1120 tape drives. This full support is required when encryption-capable TS1120 tape drives are installed in an IBM tape library environment. Encryption-capable TS1120 tape drives can coexist in the same library with TS1120 drives that are not encryption-capable, as well as 3950 Model B1x, 3590 Model E1x, 3590 Model H1x and 3592 Model J1A drives. However, depending on the library type and model, certain device types may only be supported in certain libraries. For example, the IBM 3584 automated tape library supports only the 3592 family of tape drives.

Inside an IBM tape library, only 3590 Model B1x emulation is supported. The system-managed tape library support recognizes the device as its real device type instead of its emulated device type; this enables "real" and emulated 3590 Model B1x tape drives to coexist and be properly managed in the same IBM tape library.

To request WORM media in a system-managed tape library environment and to ensure that WORM media is only used when explicitly requested, if a WORM scratch volume is to be used, media types MEDIA6, MEDIA8, or MEDIA10 must be explicitly specified through data class. For the 3592 Model E05, if a media type is not specified through data class, MEDIA9 is the primary scratch media type, MEDIA5 is the alternate scratch media type if there are no MEDIA9 scratch volumes available, and MEDIA7 is the second alternate scratch media if there are no MEDIA9 or MEDIA5 scratch volumes available.

Before using the new encryption-capable TS1120 tape drive, ensure that all existing 3592 Model J1A and E05 drives in the library are upgraded to recognize and enable cartridges formatted for EFMT2 or EEFMT2 to be relabelled/reused on the 3592 Model J1A and E05 drives. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

Using encryption-capable TS1120 tape drives in a stand-alone environment

Encryption-capable TS1120 tape drives emulate already-supported tape devices. To use these drives in a nonlibrary environment, you must manage mixed media and resolve drive allocation ambiguities between encryption-capable TS1120 tape drives, and other 3590 Model B1x emulated devices. This is because the emulated device type is recorded in the data set records of user catalogs. You must manage media and device allocation according to your installation's storage management policies. You must separate real and emulated device types.

Before using the new encryption-capable TS1120 tape drive, ensure that all existing 3592 Model J1A and E05 drives are upgraded to recognize and enable cartridges formatted for EFMT2 or EEFMT2 to be relabelled/reused on the 3592 Model J1A and E05 drives. Otherwise, job failures might occur with a drive with the incorrect microcode load being allocated.

Recommendation: Use a manual tape library, DFSMSrmm, third-party tape management software, or write your own applications when using encryption-capable TS1120 tape drives in a stand-alone environment.

Resolving recording technology conflicts for TS1120

3592 Model J1A devices, 3592 Model E05 devices that are not encryption-capable, and encryption-capable TS1120 tape drives can all write to MEDIA5-MEDIA8 media types. However, conflicts occur when an EEFMT2 formatted cartridge is mounted on a 3592 tape drive that is not encryption-capable and is being relabelled/reused.

The OPEN and EOVR routines can resolve these recording technology conflicts if you meet these conditions:

- Set OPEN for output to the first file
- Specify VOLNSNS=YES in the DEVSUPxx member of PARMLIB
- Position the tape cartridge at the load point.

If these conditions are met and if the cartridge has an internal *volser* recorded in its volume control region, OPEN and EOVR routines rewrite the VOL1 label with the volume identifier in the sense data.

Note: To enable this support, make sure that the 3592 Model J1A devices and any 3592 Model E05 devices that are not encryption-capable are at the appropriate microcode level, so that an up-level volume can have its volume identifier returned in the sense data.

For additional information about resolving recording technology conflicts, see [*z/OS DFSMS Using Magnetic Tapes*](#) and [*z/OS DFSMS Installation Exits*](#).

Implementation considerations for using encryption-capable TS1120 tape drives

Consider these implementation tasks for using DFSMS software support for encryption-capable TS1120 tape drives.

- For non-specific mount requests in a stand-alone (non-SMS) tape environment, there are no automatic system controls for WORM cartridges. This can result in inadvertent and irreversible writes to WORM media. Using the tape management system pooling support to set up pools to select WORM versus R/W tape media and selecting economy length, standard length, or extended length cartridges help to guarantee that the correct media type is mounted.

In addition, SMS data class policies can be used to control WORM mounts for stand-alone, non-specific mount requests. There are two ways to enforce the data class media policy:

- Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=ALLMEDIATY. ALLMEDIATY enforces all data class media policies for all stand-alone scratch mounts.
- Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=MEDIA5PLUS. MEDIA5PLUS ensures data class media policies for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 are enforced for stand-alone scratch mounts.
- In the manual tape library (SMS) environment, WORM scratch mounts can be managed through the tape management system pooling support instead of data class. The DEVSUPxx keyword, MTL_NO_DC_WORM_OK, allows a WORM scratch volume to be used, even if it was not explicitly requested through data class.
- For the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9), use the performance scaling attribute specified through the ISMF data class application if you want to select optimal performance scaling for certain types of jobs and applications. The default setting is to use the tape to its full capacity. This can be specified for tape allocations that are inside or outside an IBM tape library environment.
- For the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9), use the performance segmentation attribute specified through the ISMF data class application if you want to divide the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. The performance segmentation option is mutually exclusive with the performance scaling option.
- If you have mixed 3590-1 devices in a non-SMS environment, you need to define a unique esoteric name for each recording technology. Identify the esoteric names to DFSMSHsm using the SETSYS USERUNITTABLE(*esoteric1:esoteric1, esoteric2:esoteric2...*) command to ensure that the correct device type is requested when the tape is mounted for input or output. If your installation uses SMS-managed tape devices or has a single 3590-1 recording technology, you do not need to define an esoteric for those devices; you might need to specify that DFSMSHsm allows mixed devices in the 3590-1 generic name (see APAR OW57282).
- In the stand-alone (non-SMS) environment, perform these implementation steps:
 1. Define data classes or alter existing data classes to:
 - As appropriate, specify either EE2 (EEFMT2 recording format) for encryption or use the media interchange recording technology specification (E1) to request that the lower recording format EFMT1 be used. By default, when writing from load point, EFMT2 is used by the encryption-capable TS1120.
 - Optionally specify key labels (valid only with DISP=NEW and file sequence number 1) and corresponding key encoding mechanisms.
 - Use the performance scaling attribute or performance segmentation attribute with the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9).
 - To take advantage of the data class media enforcement support enabled through DEVSUPxx (ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS).
 2. Update the ACS routine to assign the appropriate data class construct.
 3. Validate and activate the new or modified SMS configuration.
- In an IBM tape library environment, perform these implementation steps:
 1. Define data classes or alter existing data classes to:
 - As appropriate, specify either EE2 (EEFMT2 recording format) for encryption or use the media interchange recording technology specification (E1) to request that the lower recording format EFMT1 be used. By default, when writing from load point, EFMT2 is used by the encryption-capable TS1120.
 - Optionally specify key labels (valid only with DISP=NEW and file sequence number 1) and corresponding key encoding mechanisms.

- Use the performance scaling attribute or performance segmentation attribute with the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9).
 - To take advantage of the data class media enforcement support enabled through DEVSUPxx (ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS).
2. Define or alter existing tape storage group constructs.
 3. Update ACS routines to direct allocation to appropriate 3592 devices and media.
 4. Validate and activate the new or modified SMS configuration.
 5. Update parmlib member DEVSUPxx (as appropriate) with the MEDIAx parameters (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10) specifying the library partitioning category codes.

Related reading:

See Chapter 28, “Migration to the software support for encryption-capable TS1120 tape drives,” on [page 185](#) for migration information and implementation information.

Chapter 28. Migration to the software support for encryption-capable TS1120 tape drives

DFSMS software support for the encryption-capable TS1120 tape drive addresses media management and data allocation in an IBM 3494 Automated Tape Library, in an IBM 3584 Automated Tape Library, and in the manual tape library (MTL). You can manage media and allocate data to appropriate non-library (stand-alone) drives through separation of the real and emulating drives, third-party tape management software, or user-written applications. You can use the encryption-capable TS1120 tape drive on systems that are running z/OS V1R4 and above. However, to use media types MEDIA9 and MEDIA10, z/OS V1R5 and above must be used.

This topic outlines the tasks and associated procedures that must be performed to migrate to software support for the encryption-capable TS1120 tape drive in these environments:

- Stand-alone environment
- IBM tape library environment
- HSMplex
- OAMplex
- OCE (Open / Close / End-of-Volume)
- RMMplex

Understanding coexistence considerations for encryption-capable TS1120

Coexistence support for the encryption-capable TS1120 tape drive is provided at z/OS V1R4 and above by installing the needed full-support PTFs without the Device Services enabling PTF. However, with the encryption support for z/OS V1R4, V1R5, and V1R8 being delivered after the GA of z/OS V1R6 and V1R7, in some cases, separate coexistence APARs are also available for V1R4, V1R5, and V1R8. In addition to this, existing device services support prevents the encryption-capable TS1120 tape drives from coming online on a system that does not have all of the full-support PTFs installed. Installation of the Device Services enabling PTF brings in all of the needed full-support PTFs. Device services will provide coexistence support to allow the encryption-capable TS1120 tape drive to come online, but until the full support is installed, it will appear to the host as a 3592-2 without encryption capability. You must install the needed coexistence support on systems that will not have all of the encryption-capable TS1120 tape drive support installed. See [Table 28 on page 186](#) for a discussion of the coexistence PTFs that may be needed. For past discussion of the 3592 Model J1A and its coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model J1A” on page 335](#). For past discussion of the 3592 Model E05 and its coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model E05” on page 265](#).

Review the coexistence migration tasks described in these topics:

Table 28. Coexistence migration tasks for encryption-capable TS1120 tape drives

Environment	Coexistence Considerations
Stand-Alone	<p>As described in Chapter 27, “Introduction for encryption-capable TS1120 tape drive,” on page 169, z/OS DFSMS and related licensed programs provide full support for the encryption-capable TS1120 tape drive and MEDIA5, MEDIA6, MEDIA7, and MEDIA8 with z/OS V1R4 and above, with support for media types MEDIA9 and MEDIA10 being provided with z/OS V1R5 and above. The encryption-capable TS1120 tape drive support enables the tape drives to operate in the stand-alone environment in 3590 Model B1x emulation and to coexist with other emulated tape drives. However, prior to using the new encryption-capable TS1120 tape drive, ensure that all existing 3592 Model J1A and all existing (base support) 3592 Model E05 tape drives have their microcode upgraded to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused on the 3592 Model J1A and the base 3592 Model E05. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In the stand-alone (non-system managed environment), IBM recommends that all the 3592 Model E05 devices under the same control unit be homogeneous for easier separation and management, even though the control unit allows a mix of 3592 Model E05 devices (encryption capable and non-encryption capable).</p>

Table 28. Coexistence migration tasks for encryption-capable TS1120 tape drives (continued)

Environment	Coexistence Considerations
IBM Tape Library	<p>As described in Chapter 27, “Introduction for encryption-capable TS1120 tape drive,” on page 169, z/OS DFSMS and related licensed programs provide full support for the encryption-capable TS1120 tape drive and MEDIA5, MEDIA6, MEDIA7, and MEDIA8, with z/OS V1R4 and above, with support for media types MEDIA9 and MEDIA10 being provided with z/OS V1R5 and above. The system-managed tape library support allows the tape drives to operate in an ATL or MTL environment as 3590 Model B1x devices, providing device allocation and tape media management support. As appropriate for the library type and model, this support allows the encryption-capable TS1120 tape drive to coexist with other emulated 3590-1 tape drives in the same tape library. However, prior to using the new encryption-capable TS1120 tape drive, ensure that all existing 3592 Model J1A and all existing (base support) 3592 Model E05 tape drives have their microcode upgraded to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused on the 3592 Model J1A and the base 3592 Model E05. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p> <p>In addition to this, in the system-managed tape library environment, all 3592 Model E05 drives under the same control unit must have the same recording format capabilities and report under the same ERDS physical identifier (EPI). So if one of the 3592 Model E05 devices has encryption enabled then all of the 3592 Model E05 devices under that same control unit must also have encryption enabled. This ensures that all of the devices under the same control unit are homogeneous and that each device under the same control unit is capable of handling the request.</p> <p>A tape configuration database (TCDB) with EEFMT2 volume records can coexist with lower-level systems. Coexistence support is provided at z/OS V1R4 and above to enable, during job processing, a scratch volume that was previously written with an up-level recording format to be used by a lower-level system that does not recognize the recording format. Because there is only one scratch pool per media type and that scratch pool can be used across systems at different levels of support, this support ignores the recording format that the volume was previously written in and enables the scratch volume to be used on the lower-level system (refer to coexistence APAR OA17573).</p>

Table 28. Coexistence migration tasks for encryption-capable TS1120 tape drives (continued)

Environment	Coexistence Considerations
DFSMSdfp Device Services/AOM	<p>Coexistence is provided in the Device Service Exit for z/OS V1R4 and above. This allows an encryption-capable 3592 Model E05 drive to come online as a non-encryption capable 3592 Model E05, with the EPI value stored as X'12' in the UCB class extension (UCBCXEPI field in IECUCBCX mapping macro). This allows an encryption-capable drive to be used as a non-encryption capable drive on systems that do not have the full function support installed (refer to coexistence APARs OA16116 and OA16117).</p> <p>When the device services full function support APAR is installed, the Device Service Exit will check if the enabling APAR is also installed. If it is, the Device Service Exit will record the EPI value in the UCB class extension as X'13'.</p> <p>The coexistence support will recognize the new EPI value and display the real device type as 3592-2 for DS QTAPE,MED command. The reason is the new encryption-capable 3592 Model E05 drive looks and acts exactly the same as a non-encryption capable drive in coexistence systems that do not have the full function support installed.</p>
HSMplex	<p>In an HSMplex, all systems in the HSMplex should have full support for the 3592-2E tape subsystem before any instance of DFSMShsm uses tape hardware encryption. If any system does not fully support tape hardware encryption in an HSMplex with tape hardware encrypted tapes, a request for tape input can fail because a 3592-2E device is not available on that system.</p>

Table 28. Coexistence migration tasks for encryption-capable TS1120 tape drives (continued)

Environment	Coexistence Considerations
OAMplex	<p>For OAM's object support customers, in addition to the planning steps required for migration to the software support for the encryption-capable TS1120 tape drive tape drives in the stand-alone and IBM tape library environments, there are coexistence considerations your installation must take into account before you install the software in an OAMplex:</p> <ul style="list-style-type: none"> • For the encryption-capable TS1120 tape drive support, OAM object tape coexistence support is provided at z/OS V1R4 and above, through installation of the full support PTF without the device services enabling PTF. • OAM coexistence support prevents lower-level systems from selecting volumes with ERDS Physical Identifier (EPI) values for object write requests that are not supported on that system. • OAM object support has coexistence considerations when running in an OAMplex environment with at least one system with the full support installed and enabled and at least one system without the full support for the new devices installed and enabled. In this mixed support environment, it is possible for a retrieve request to be received for an object that resides on a tape cartridge volume written in the EEFM2 format by a system that does not have the encryption-capable TS1120 tape drive full support installed. Coexistence support is provided that allows OAM to attempt to locate an instance of OAM in the OAMplex where the full support is installed and enabled. If an instance of OAM is found where the request can be processed, the OAM on the system where the request originated will ship the retrieve request, if the object is not greater than 50 MB, to the target system using XCF messaging services. • Once encryption-capable TS1120 tape drive devices are used in an OAMplex environment and objects are written to tape volumes with the new EPI value recorded, it is expected that any OAM on a system where the full support is installed and enabled is eligible for processing requests using that volume. Therefore, encryption-capable TS1120 tape drive devices must be available to all instances of OAM where the full support is installed.
OCE (Open / Close / End-of-Volume)	<p>The FILEE parameter list is now longer to accommodate the possible KEK labels (key labels) and their encoding mechanism. The version of the FILEE parameter list (TEPEVER) has been updated (to a 2) to reflect the longer FILEE parameter list. Before referencing the key-label related fields in the FILEE parameter list, ensure that either the version is set to 2 or the TEPMCRYP bit is "ON". When the TEPMCRYP bit is "ON", the key-label related fields contain pertinent data, otherwise these fields will contain binary zeroes.</p> <p>Coexistence support is added at z/OS V1R4 and above to prevent an encrypted tape from being used on a lower-level system. If an encrypted volume is detected during OPEN processing on a system that does not have all of the encryption support installed, abend code 613-84: 'no software support for the media type or the recording technology' is issued (refer to coexistence APAR OA17479).</p>

Table 28. Coexistence migration tasks for encryption-capable TS1120 tape drives (continued)	
Environment	Coexistence Considerations
RMMplex	For the encryption-capable TS1120 tape drive support, RMM coexistence support is provided at z/OS V1R4 and above, either through installation of the full support RMM PTF without the device services enabling PTF, or by installation of the toleration APAR OA16524. This allows the coexisting system to tolerate tapes written by the encryption-capable TS1120 tape drive in EEFMT2 format and their associated key labels. If client/server is used, APAR OA16523 (preconditioning) is also required and must be installed on all client/server systems before OA16524 toleration is installed on any client/server systems. If you plan to fallback from full function system with encryption function to any other level without encryption, toleration is required on that fallback system also.

Preparing to install the software

Refer to *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555, for hardware requirements. Also refer to the *Encryption Key Manager Introduction, Planning, and User's Guide*, GA76-0418, for Encryption Key Manager requirements.

Coexistence support for the encryption-capable TS1120 tape drive is provided with z/OS V1R4 and above by installing the appropriate full support PTFs without the device services enabling PTF. However, with the encryption support for z/OS V1R4, V1R5, and V1R8 being delivered after the GA of z/OS V1R6 and V1R7, in some cases, separate coexistence APARs are also available for V1R4, V1R5, and V1R8.

Installing the appropriate PTFs

Refer to the 3592 PSP bucket for the APAR and PTF numbers applicable for each release. An enabling PTF exists to provide full device support for the encryption-capable TS1120 tape drive. Installation of the appropriate enabling PTF pulls in all of the needed support PTFs and indicates to the system that all of the needed software support is installed. Support for z/OS V1R6 and z/OS V1R7 will be provided first with support for z/OS V1R8 and z/OS V1R4 and V1R5 following after the initial GA. For z/OS V1R6 and V1R7, refer to enabling APAR OA15685. For z/OS V1R8, refer to enabling APAR OA17562 and for z/OS V1R4 and V1R5, refer to enabling APAR OA18111. With this split GA, in an OAMplex or an HSMplex, before using the encryption-capable TS1120 tape drive, ensure that the appropriate support is available and installed at all of the release levels used in the plex.

In addition, as appropriate for your environment and release level, determine what coexistence PTFs are needed for your environment.

Planning for DFSMS software support for the encryption-capable TS1120 tape drive

The planning steps you must consider to successfully install the encryption-capable TS1120 tape drive software, vary depending upon the tape environment you have installed. Also, remember that the encryption-capable TS1120 tape drive is supported on z/OS V1R4 with media types MEDIA5 through MEDIA8, while media types MEDIA9 and MEDIA10 are supported only on z/OS V1R5 and above. [Table 29 on page 191](#) discusses planning considerations for stand-alone environments (including tape devices installed in vendors' automated tape libraries) and for IBM tape library environments.

Table 29. Encryption-capable TS1120 tape drive planning considerations

Area	Planning Considerations
System customization: stand-alone environment	<ol style="list-style-type: none"> 1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT2. Also, specify, as appropriate, the non-encryption recording formats, EFMT1 or EFMT2. If a encryption-capable TS1120 tape drive is allocated, the default recording format is EFMT2. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Determine which key labels are to be used and how they are specified , data class, the DD statement or Encryption Key Manager established defaults. 3. Determine whether you need help from your tape management system vendor and contact them, if needed. 4. Plan for the installation of the Encryption Key Manager (EKM) and decide which of the supported key stores to use. 5. Plan for the key labels that will be used and the encoding mechanism (label or hash) for each and where the key labels are specified. 6. For in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also, create a z/OS UNIX segment for the IOS address space. 7. Upgrade 3592 Model J1A and 3592 Model E05 drive microcode to enable the drives to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 8. With availability of the new media (MEDIA9 and MEDIA10), determine what microcode updates are needed. Prior to using the new media types (MEDIA9 and MEDIA10), ensure that all 3592 Model E05 drives have had their microcode upgraded in support of the new media types. Otherwise, job failures may occur with a 3592 drive with the wrong microcode level being allocated. 9. Determine which systems should have coexistence support and which systems should have full support. 10. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 11. Determine when to IPL the host machine after installing all necessary PTFs.

Table 29. Encryption-capable TS1120 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: IBM library tape environment	<ol style="list-style-type: none"> 1. Determine which data needs to be encrypted and set up the appropriate data class policy specifying EEFMT2. Also, specify as appropriate, the non-encryption recording formats, EFMT1 or EFMT2. If a encryption-capable TS1120 tape drive is allocated, the default recording format is EFMT2. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Determine which key labels are to be used and how they are specified , data class, the DD statement or Encryption Key Manager established defaults. 3. Determine whether you need help from your tape management system vendor and contact them, if needed. 4. Plan for the installation of the Encryption Key Manager (EKM) and decide which of the supported key stores to use. 5. Plan for the key labels that will be used and the encoding mechanism (label or hash) for each and where the key labels are specified. 6. For in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also, create a z/OS UNIX segment for the IOS address space. 7. Upgrade 3592 Model J1A and 3592 Model E05 microcode to enable the library drives to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 8. With availability of the new media (MEDIA9 and MEDIA10), determine what microcode updates are needed. Prior to using the new media types (MEDIA9 and MEDIA10), ensure that all 3592 Model E05 drives have had their microcode upgraded in support of the new media types. Otherwise, job failures may occur with a 3592 drive with the wrong microcode level being allocated. 9. Identify the installation exit changes that are needed. 10. Determine which systems should have coexistence support and which systems should have full support. 11. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 12. Determine when to IPL the host machine after installing all necessary PTFs.

Table 29. Encryption-capable TS1120 tape drive planning considerations (continued)

Area	Planning Considerations
System customization: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new encryption-capable TS1120 tape drive devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the system customization planning steps listed for a stand-alone environment. b. Determine the esoteric or generic device names that need to be added to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Determine whether to use the global keyword DSNWITHSGNAME on the SETOAM statement in the CBROAMxx member of PARMLIB to append the object storage group name to the OAM object tape data set names. See “Object tape data set low-level qualifier enhancement” on page 396 for additional information. d. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new encryption format EEFT2. 2. If you install the new encryption-capable TS1120 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the system customization planning considerations listed for an IBM tape library environment. b. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices and the new encryption format EEFT2. 3. In addition, if you install the new encryption-capable TS1120 tape drive devices in an OAMplex: <ol style="list-style-type: none"> a. Ensure that the new encryption-capable TS1120 tape drive devices are available to all instances of OAM where the full support software is installed. b. Determine whether systems exist that will require coexistence support. This situation is particularly important in an OAMplex where at least one system has the full-support software installed and enabled, and at least one system will not have all of the support installed or enabled. Coexistence support is needed if not all of the systems in the OAMplex will be at the same full-support level. c. To provide this coexistence support, as appropriate for the support and the release level, install the OAM full-support PTF without the enabling PTF or any separate coexistence support PTF. d. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.
System customization: DFSMSHsm	See “Implementation considerations for using encryption-capable TS1120 tape drives” on page 181 and “DFSMSHsm tips” on page 230 .

Table 29. Encryption-capable TS1120 tape drive planning considerations (continued)

Area	Planning Considerations
Storage administration: stand-alone tape environment	<ol style="list-style-type: none"> 1. Determine how to setup your tape management systems pooling support to separate rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also to separate the standard, economy, and extended length cartridges, as appropriate for their job and application usage. 2. Review the usage of the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA, (optional) to ensure that the media type mounted is the media type requested through data class. This can be used in conjunction with the tape management systems pooling support as an additional safety check. 3. Review the existing SMS data class media policies to ensure compatibility with existing tape scratch pool policies before enabling the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA. 4. Review the existing SMS data class recording technology policies to ensure that data set policies set to EFMT1 are being appropriately used. If a encryption-capable TS1120 tape drive is allocated and the specified data class indicates EFMT1, the drive will record in the lower recording technology. 5. Determine the data class updates that are needed to request the appropriate recording format for the encryption-capable TS1120 tape drives. If an encryption-capable TS1120 tape drive is allocated, the default recording format is EFMT2 (non-encryption). 6. Determine if media should use performance segmentation, with a fast access segment to be filled first, and a slower access segment to be filled after. If you decide to use the performance segmentation attribute (available with MEDIA5 and MEDIA9 tape cartridges only, and mutually exclusive with performance scaling), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance segmentation. b. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation. 7. Determine if media should be used at full capacity or scaled for optimal performance. If you decide to use the performance scaling attribute (available with MEDIA5 and MEDIA9 tape cartridges only), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance scaling. b. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling. 8. Determine how to allocate media to appropriate nonlibrary drives. Consider using the IBM manual tape library. You can also separate the real drives from the emulating drives, use third-party tape management software, or use customer-written applications. 9. Identify any needed changes to the hardware configuration definition (HCD) to define the new devices.

Table 29. Encryption-capable TS1120 tape drive planning considerations (continued)

Area	Planning Considerations
Storage administration: IBM tape library environment	<ol style="list-style-type: none"> 1. Review the usage of the DEVSUPxx PARMLIB option, MTL_NO_DC_WORM_OK, if the WORM cartridges in the manual tape library environment will be mounted through use of the tape management systems pooling support versus a data class WORM media specification. 2. Determine the 3592 media usage of rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also the usage of the standard, economy, and extended length cartridges. Then make the appropriate data class definition updates to select the appropriate media type. WORM media can only be used if explicitly requested through data class. 3. Review ACS routines for changes needed in selecting tape storage groups and libraries that have the new encryption-capable TS1120 tape drive devices. 4. Determine the data class updates that are needed to use the recording technology, media type, and performance scaling or performance segmentation data class attribute (performance scaling or segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 5. Identify any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member.
Storage administration: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new encryption-capable TS1120 tape drive devices in a stand-alone environment, follow the storage administration planning steps listed for a stand-alone environment. 2. If you install the new encryption-capable TS1120 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the storage administration planning steps listed for an IBM tape library environment. b. Review ACS routines for STORE or CTRANS environments and make any changes needed to ensure proper class assignment. 3. If you install the new encryption-capable TS1120 tape drive devices in an OAMplex, you must make the devices available to all instances of OAM where the full support is installed.

Implementing this change could affect these areas of your processing environment:

Area	Considerations
Storage Administration	<p>For the new 3592 media support (MEDIA9 and MEDIA10), these NaviQuest sample jobs have been changed for this function:</p> <ul style="list-style-type: none"> • ACBJBAD1 is the sample job used to define, alter, or display a data class. • ACBJBAIL is the sample job to generate data class list and a data class report. • ACBJBAIN is the sample job to generate data class report from a saved list. <p>ISMF panels have been changed. See z/OS DFSMSdfp Storage Administration for information about the ISMF panel changes. See Chapter 31, “ISMF modifications for encryption-capable TS1120 tape drive,” on page 219 for information about ISMF support for the encryption-capable TS1120 tape drive.</p>
Operations	<p>These commands have been updated with this support:</p> <ul style="list-style-type: none"> • DEVSERV QTAPE • DISPLAY IOS,EKM • DISPLAY SMS,VOLUME • IDCAMS ALTER VOLUMEENTRY • IDCAMS CREATE VOLUMEENTRY • IDCAMS DCOLLECT • IDCAMS LISTCAT • LIBRARY DISPDRV • SETIOS EKM
Auditing	None.
Application development	<p>The mapping macros and installation exits listed have been changed for this function.</p> <ul style="list-style-type: none"> • CBRTDSI - Maps the Tape Device Selection Information • CBRTVI - Maps the Tape Volume Information • CBRUXCPL - Installation Exit CBRUXCUA Parameter List • CBRUXEPL - Installation Exit CBRUXENT Parameter List • CBRUXJPL - Installation Exit CBRUXEJC Parameter List • CBRUXNPL - Installation Exit CBRUXVNL Parameter List • DALINCHG - Dynamic Allocation DALINCHG Text Unit • EDGXMLAP - DFSMSrmm XML schema file • IECUCBCX - Maps the Tape UCB Device Class extension • IEFSJKEY - SJF / Dynamic Allocation Keys • IFGTEP - Maps the installation exit main parameter list • IEZDEB - Maps the data extent block (DEB) • IHADFVT - Maps the data facilities vector table

Area	Considerations
Diagnostic procedures	<p>The messages listed have been changed for this support.</p> <ul style="list-style-type: none"> • ADR518I • ADR519E • ADR992E • ADY513I • ARC0030I • CBR0119I • CBR1083I • CBR1180I • CBR1220I • CBR6419I • IEC026I • IEC147I • IEC205I • IEC211I • IGF513I • IOS000I • IOS0631I • IOS085I • IOS090I • IOS099I • IOS0627E • IOS0628E
Automation products	None.
General use	For DFSMSrmm, use the RMM subcommands ADDVOLUME, CHANGEVOLUME, and SEARCHVOLUME to specify the recording technology EEFMT2 and the key labels KEYLABEL1/KEYENCODE1 and KEYLABEL2/KEYENCODE2.

Implementing the DFSMS software support for the encryption-capable TS1120 tape drive

To implement the encryption-capable TS1120 tape drive software support, perform the system-level and application-level tasks listed in the following tables. **Required** tasks apply to any DFSMS installation enabling the function. **Optional** tasks apply to only specified operating environments or to situations where there is more than one way to set up or enable the function. For more details on the procedures associated with a given task, see the reference listed.

System-level tasks	Condition	Procedure reference
<p><i>Stand-alone tape environment</i></p> <ol style="list-style-type: none"> 1. Implement the data class policy specifying EEFMT2. Also, specify as appropriate, the non-encryption recording formats, EFMT1 or EFMT2. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Install the Encryption Key Manager (EKM) and set up the key store it will use. 3. Create the data classes or the DD statements (or use Encryption Key Manager defaults) to specify the key labels and their encoding mechanism (label or hash). 4. For in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also create a z/OS UNIX segment for the IOS address space. 5. Upgrade 3592 Model J1A and 3592 Model E05 microcode to enable the drives to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 6. Ensure that the required microcode updates for the new media (MEDIA9 and MEDIA10) have been made. Prior to using the new media types (MEDIA9 and MEDIA10), ensure that all 3592 Model E05 drives have had their microcode upgraded in support of the new media types. Otherwise, job failures may occur with a 3592 drive with the wrong microcode level being allocated. 7. Make the required installation exit changes. 8. Make any needed changes to the HCD to define the new devices. 9. If more than one recording technology is used for the same device type, create a unique esoteric for each of the recording technologies. Use the esoteric unit names in DFSMSHsm to direct allocations uniquely to each group of devices. 10. If performance scaling or performance segmentation is used (available with MEDIA5 and MEDIA9 tape cartridges only), update or create ACS routines to assign a data class to tape output functions. For example, for DFSMSHsm, you can filter on single file tape data set names used by DFSMSHsm functions. Define the data class with the performance scaling or performance segmentation attribute. 11. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of encryption-capable TS1120 tape drive drives exclusively because the EEFMT2 recording technology is not compatible with other recording technologies. 12. Install coexistence PTFs as appropriate. 13. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support • z/OS HCD User's Guide • z/OS DFSMSHsm Implementation and Customization Guide

System-level tasks	Condition	Procedure reference
<p><i>IBM tape library environment</i></p> <ol style="list-style-type: none"> 1. Implement the data class policy specifying EEFMT2. Also, specify as appropriate, the non-encryption recording formats, EFMT1 or EFMT2. Also, modify or create ACS routines to associate the tape output functions with a data class that has the appropriate recording format specified. 2. Install the Encryption Key Manager (EKM) and set up the key store it will use. 3. Create the data classes or the DD statements (or use Encryption Key Manager defaults) to specify the key labels and their encoding mechanism (label or hash). 4. For in-band key management, update the IOS PARMLIB member (IECIOSxx) using the new EKM command. Also create a z/OS UNIX segment for the IOS address space. 5. Upgrade 3592 Model J1A and 3592 Model E05 microcode to enable the library drives to recognize and enable the EEFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. 6. Ensure that the required microcode updates for the new media (MEDIA9 and MEDIA10) have been made. Prior to using the new media types (MEDIA9 and MEDIA10), ensure that all 3592 Model E05 drives have had their microcode upgraded in support of the new media types. Otherwise, job failures may occur with a 3592 drive with the wrong microcode level being allocated. 7. Make the required installation exit changes. 8. Define or alter existing data class constructs as appropriate, to specify the EEFMT2 recording technology, MEDIA5, MEDIA6, MEDIA7, or MEDIA8, MEDIA9, or MEDIA10 media type, and the performance attributes (performance scaling or performance segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 9. Define or alter existing storage group constructs to include libraries with the new encryption-capable TS1120 tape drive devices. 10. Update ACS routines to direct allocation to the encryption-capable TS1120 tape drive device as requested. 11. Validate and activate any new or modified SMS configuration. 12. Make any needed changes to the HCD to define the new devices. 13. To define the partitioning category code for MEDIA5 MEDIA6, MEDIA7, or MEDIA8, MEDIA9, or MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 14. When systems are sharing a library with 3592 Model E05 (encryption-capable) installed, install coexistence PTFs as appropriate. 15. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries • z/OS HCD User's Guide • z/OS DFSMSdftp Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>OAM object tape environment</i></p> <p>The migration steps that you must take in tape environments that use OAM objects vary depending upon the type of environment that is installed:</p> <ol style="list-style-type: none"> If you install the new encryption-capable TS1120 tape drive devices in an OAMplex: <ol style="list-style-type: none"> Make the new encryption-capable TS1120 tape drive devices available to all instances of OAM where the full support software is installed. Install coexistence PTFs as appropriate. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). If you install the new encryption-capable TS1120 tape drive devices in an IBM tape library: <ol style="list-style-type: none"> Follow the migration steps listed for an IBM tape library environment. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. Make the needed changes to ACS routines for ALLOC, STORE, or CTRANS environments. If you install the new encryption-capable TS1120 tape drive devices in a stand-alone environment: <ol style="list-style-type: none"> Follow the migration steps listed for a stand-alone environment. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of encryption-capable TS1120 tape drive drives exclusively because the EFMT2 recording technology is not compatible with other recording technologies. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). Make the needed changes to ACS routines for ALLOC, STORE and CTRANS environments. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new encryption format EEFT2. 	Required	<p>z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support</p>
<p><i>DFSMSHsm tape environment</i></p> <p>DFSMSHsm allows the specification of tape unit names using either generic or esoteric names. Installations that have a mixture of non-SMS-managed 3590 devices defined under the 3590-1 generic name, need to perform these steps:</p> <ol style="list-style-type: none"> Define a unique esoteric for each recording technology. Use the SETSYS USERUNITTABLE command to define these esoteric names to DFSMSHsm. This also applies to mixed devices in the 3490 generic. Installations that use SMS-managed tape devices or have a single 3590-1 recording technology, do not need to define an esoteric for those devices. However, if you have a mixed SMS-managed 3590 environment, please review APAR OW57282. 	Required	<ul style="list-style-type: none"> z/OS DFSMSHsm Implementation and Customization Guide z/OS DFSMSHsm Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>Setting up DFSMSHsm to use WORM output tapes for ABACKUP</i></p> <p>In a SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.</p> <p>In a non-SMS tape environment, the default allows tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUPxx parameter, ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS, is used, then the data class must request the appropriate media type for it to be successfully mounted.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
Application-level tasks	Condition	Procedure reference
<p>For programs that use dynamic allocation and cannot take advantage of predefined data class definitions, set the PARM for the DALINCHG text unit key in DALINCHG to specify the media type and recording technology for system-managed tape library allocations.</p>	Optional	z/OS MVS Programming: Authorized Assembler Services Guide

Chapter 29. Access method services (AMS) modifications

This topic describes changes to the access method services (AMS) commands to support the new recording technique for encryption. These commands are changed.

- “ALTER VOLUMEENTRY” on page 281
- “CREATE VOLUMEENTRY” on page 287
- “DCOLLECT” on page 290
- “LISTCAT” on page 292



Attention: Use these AMS commands only to recover from tape volume catalog errors. Because AMS cannot change the library manager inventory in an automated tape library, use ISMF for normal tape library alter functions.

Related reading:

For explanations of all the parameters used with the AMS commands and additional examples, refer to *z/OS DFSMS Access Method Services Commands*.

Enterprise Encrypted Format 2 (EEFMT2)

EEFMT2 recording format is used to specify that the data on the tape is recorded in the encryption format.

EEFMT2 Support for ALTER VOLUMEENTRY

Use the AMS ALTER VOLUMEENTRY command to modify the attributes for an existing tape volume entry.

The ALTER VOLUMEENTRY command allows recording fields in the volume records of a tape library to be altered with a subparameter of EEFMT2 with these rules:

- EEFMT2 subparameter indicates Read/Write on an EEFMT2 track device.
- EEFMT2 subparameter of RECORDING is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 or MEDIA10. The use of MEDIA1 through MEDIA4 produces an IDC3226I error message being generated twice, once for EEFMT2 and once for the media type. The generation of the two IDC3226I error messages indicates an incompatibility between the EEFMT2 subparameter and the media type displayed.

EEFMT2 subparameter for ALTER VOLUMEENTRY

RECORDING(18TRACK|36TRACK|128TRACK|256TRACK| 384TRACK|EFMT1|EFMT2|EEFMT2|UNKNOWN)

This shows the EEFMT2 subparameter associated with the RECORDING parameter for ALTER VOLUMEENTRY

EEFMT2 Support for CREATE VOLUMEENTRY

The CREATE VOLUMEENTRY command allows the recording field in the volume records of a tape library to be created with a subparameter of EEFMT2 with these rules:

- EEFMT2 subparameter indicates READ/WRITE on an EEFMT2 device.
- EEFMT2 is only allowed with media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10. Any use of MEDIA1 through MEDIA4 produces an IDC3226I error message being displayed twice, once for EEFMT2 and once for the media in question. The double display indicates an incompatibility between the EEFMT2 subparameter and the media type displayed.

- If MEDIA5, MEDIA6, MEDIA7, or MEDIA8 are specified and RECORDING is not specified, default to EFMT1 for RECORDING value.
- If MEDIA9 or MEDIA10 are specified and RECORDING is not specified, default to EFMT2 for RECORDING value.

EEFMT2 subparameter for CREATE VOLUMEENTRY

RECORDING(18TRACK|36TRACK|128TRACK|256TRACK| 384TRACK|EFMT1|EFMT2|EEFMT2|UNKNOWN)

This shows the EEFMT2 subparameter associated with the RECORDING parameter for CREATE VOLUMEENTRY.

EEFMT2 Support for DCOLLECT

The DCOLLECT command has values added to its definitions for DDCRECTE to allow the constant DDCEEFM2 for EEFMT2 devices.

EEFMT2 subparameter for DCOLLECT

DDCRECTE(DDCRTNUL | DDC18TRK | DDC36TRK | DDC128TK | DDC256TK| DDC384TK| DDCEFMT1 | DDCEFMT2 | DDCEEFM2)

DDCEEFM2

The recording technology is EEFMT2. The constant value is 8.

EEFMT2 Support for LISTCAT

The LISTCAT command is enhanced to display the new value associated with the RECORDING parameter for VOLUME entries.

EEFMT2 subparameter in List tape volume entries sample output

```

LISTCAT -
  VOLUMEENTRIES
  ALL
IDCAMS  SYSTEM SERVICES                TIME: 11:29:12      09/02/05
PAGE    2
LISTING FROM CATALOG -- SYS1.VOLCAT.V0
VOLUME-ENTRY----V0A2991
  DATA-VOLUME
  LIBRARY-----ATLIB02      RECORDING-----EEFMT2      ERROR-STATUS-----NOERROR      CREATION-
DATE-2002-04-02
  MEDIA-TYPE-----MEDIAx      USE-ATTRIBUTE----SCRATCH      ENT-EJ-
DATE----- (NULL)
  STORAGE-GROUP---*SCRTCH*    COMPACTION----- (YES)
MOUNTED----- (NULL)
  CHECKPOINT----- (NULL)    SP-ATTRIBUTE-----NONE      WRITE-PROTECTED--- (NULL)      LAST-
WRITTEN----- (NULL)
  LOCATION-----LIBRARY      SHELF-LOC----- (NULL)
EXPIRATION----- (NULL)
  OWNER----- (NULL)
IDCAMS  SYSTEM SERVICES                TIME: 11:29:12      09/02/05
PAGE    3
LISTING FROM CATALOG -- SYS1.VOLCAT.VGENERAL
  THE NUMBER OF ENTRIES PROCESSED WAS:
    AIX -----0
    ALIAS -----0
    CLUSTER -----0
    DATA -----0
    GDG -----0
    INDEX -----0
    NONVSAM -----0
    PAGESPACE -----0
    PATH -----0
    SPACE -----0
    USERCATALOG -----0
    TAPELIBRARY -----0
    TAPEVOLUME -----1
    TOTAL -----1
  THE NUMBER OF PROTECTED ENTRIES SUPPRESSED WAS 0
IDC0001I FUNCTION COMPLETED, HIGHEST CONDITION CODE WAS 0
IDCAMS  SYSTEM SERVICES                TIME: 11:29:12      09/02/05
PAGE    4

IDC0002I IDCAMS PROCESSING COMPLETE. MAXIMUM CONDITION CODE WAS 0

```

Note: MEDIAx represents either MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10.

Chapter 30. Tape drive and tape volume allocation modifications for encryption-capable TS1120 tape drive

Changes made to device support, storage management subsystem (SMS), and Multiple Virtual Storage (MVS) device allocation enable you to allocate the tape drives and tape volumes. Within an IBM tape library environment, your system can fully recognize all supported media types and recording technologies. This topic explains these changes:

- [“Device support modifications” on page 207](#)
- [“DD statement changes” on page 211](#)
- [“SMS modifications” on page 212](#)
- [“MVS device allocation modifications” on page 213](#)

Device support modifications

z/OS DFSMS device support provides hardware device-specific code, which allows tape drives, tape volumes, and DASD to interface with z/OS DFSMS. Specifically, it provides:

- The interfacing exits to the input/output supervisor (IOS) and EXCP device support code
- Error recovery procedure routines
- Services to acquire and log statistical and error data
- Services to acquire and display device states
- Utilities for functions like initializing tapes

You can use the MVS DEVSERV command to request basic status information on a device, a group of devices, or storage control units. You can use the QTAPE parameter of the DEVSERV command to display tape device information. Use DEVSERV QTAPE to display the real device type and the emulated device type.

With the DEVSERV QTAPE MED (medium) option, you can display information for the device type, media type, and cartridge volume serial number.

The syntax of the DEVSERV QTAPE command with the MED option is as follows:

DS QT,xxxx,MED,nnn

xxxx

Represents a three-digit or a four-digit device number in hexadecimal format.

nnn

Stands for the number of devices, starting at the address xxxx, for which the DEVSERV command displays the MED information. The value nnn is optional and can be any decimal number from 1 to 256, with 1 as the default value.

[Figure 20 on page 295](#) shows the display content when you issue the DEVSERV QTAPE MED command.

```

-----
----      DS QT MED Display Content      ----
-----

IEE459I          DEVSERV QTAPE
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID X

```

Figure 13. DEVSERV QTAPE MED display content

```

X UNIT   - tape device address
RDTYPE  - real device type
EDTYPE  - emulated device type
EXVLSR  - external volume serial of cartridge
INVLSR  - internal volume serial of cartridge
RMEDIA  - real media type of the volume mounted on the drive
EMEDIA  - emulated media type of the volume mounted on the drive
WWID    - world-wide identifier or world-wide unique cartridge identifier

```

Note:

1. EDTYPE, EXVLSR, INVLSR, RMEDIA, EMEDIA, and WWID are blank if information is not available.
2. Valid values for RMEDIA and EMEDIA are:

- 1=CST
- 2=EC-CST
- 3=3590 STD length tape
- 4=3590 EXT length tape
- 5=3592 Enterprise Tape Cartridge
- 6-W=3592 Enterprise WORM Tape Cartridge
- 7=3592 Enterprise Economy Tape Cartridge
- 8-W=3592 Enterprise Economy WORM Tape Cartridge
- 9=3592 Enterprise Extended Tape Cartridge
- 10-W=3592 Enterprise Extended WORM Tape Cartridge

RMEDIA and EMEDIA are blank when the media type is not defined or cannot be determined.

These examples show sample output and messages of the DEVSERV QTAPE command, and DEVSERV QTAPE with the MED option command.

Figure 14 on page 208 shows the output of DS QT,962,MED when an encryption-capable 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0962 3592-2E 3590-1          10-W    3  85804D003C00000BC211CA0C

```

Figure 14. DS QT,962,MED output

Figure 15 on page 208 shows the output of DS QT,940,MED when a non-encryption-capable 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0940 3592-2 3590-1 003700          9      3

```

Figure 15. DS QT,940 output

Figure 16 on page 209 shows the output of DS QT,960 when a 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```
IEE459I 17.04.39 DEVSERV QTAPE 502
UNIT DTYPE DSTATUS CUTYPE DEVTYPE CU-SERIAL DEV-SERIAL ACL LIBID
0960 3590 ON-RDY 3592J70 3592E05* 0178-09F8A 0178-09F8A
```

Figure 16. DS QT,DA0 output

Figure 17 on page 209 displays the message that is issued when the input device address is valid, but the device is not a Model B1x, Model E1x, Model H1x, 3592 Model J, 3592 Model E05, or 3490E drive.

```
IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
0B60(10) Y
**** (10) - UNSUPPORTED DEVICE TYPE
```

Figure 17. DS QT,B60,MED message

Y Reason Code 10, UNSUPPORTED DEVICE TYPE, is shown when the device type given is not a Model B1x, Model E1x, Model H1x, 3592 Model J, 3592 Model E05, or 3490E drive.

Figure 18 on page 209 shows the message and reason code 11 that you receive if the input device address and device type are valid, but the device is not ready.

```
IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
0DA0(11) Z
**** (11) - DEVICE NOT READY
```

Figure 18. DS QT,DA0,MED message

A bit DFVTCRYP is added to the IHADFVT mapping macro that maps the data facilities vector table. When set, it indicates that all of the software support for the encryption-capable 3592 Model E05 drive is on the system. This bit will be set by the enabling module IECTEPTF if it is installed.

System-wide DEVSUPxx parmlib member options control and manage media type selection for Automatic Tape Library (ATL) partitioning: MEDIA5=xxxx, MEDIA6=xxxx, MEDIA7=xxxx, MEDIA8=xxxx, MEDIA9=xxxx, and MEDIA10=xxxx where xxxx is a 4-digit hexadecimal category code.

The IECUCBCX mapping macro is changed to support the encryption-capable 3592 Model E05 tape drive. The EPI values are:

- X'13'--REALJAG2_ENCRYPT

With MSGDISP macro interface, you can specify the message to be displayed and how to display it on magnetic tape devices that have displays. The parameter keyword, MEDIATYPE, can be used with the MOUNT and DEMOUNT keywords to indicate what media type to mount for scratch mounts on MTL devices. The value is specified as a quoted literal, unquoted literal, the address of a 1-byte field containing the value, or the name of the addressable field containing the value. Current valid values for MEDIATYPE are 1 through 10.

Currently there is a single byte limitation for the MEDIATYPE parameter keyword which passes an EBCDIC character representing the media type. This macro will be modified to allow specification of a value up to 10 via the MEDIATYPE keyword, but allowing for future media type values up to 255.

Valid and invalid specifications for MEDIA10 are described as follows:

VALID specifications

Literal (unquoted)

MEDIATYPE=10

ADCON

MEDIATYPE=A(HEX10) where HEX10 is defined as X'0A'

Register

MEDIATYPE=(3) where Reg 3 first has to be loaded with the address of HEX10 (e.g., LA R3,HEX10)

RX Format

MEDIATYPE=HEX10

INVALID specifications

Quoted Literal

MEDIATYPE='10'

Unquoted Literal

MEDIATYPE=A

ADCON

MEDIATYPE=A(CharA) where CharA is defined as EBCDIC 'A'

Register

MEDIATYPE=(3) where Reg 3 is first loaded with the address of CharA

RX Format

MEDIATYPE=CharA

IOS000I Message with Encryption Failure

If an encryption-related key exchange between the drive and the key manager fails, an IOS000I message is issued indicating that an encryption failure has occurred:

```
IOS000I 07C2,7D,IOE,06,0600,,**,J1G150,ENCREADA 594
804008C022402751 0806FF0000131415 0017181900000092 2004E82061C42111
ENCRYPTION FAILURE
CU = 08 DRIVE = 131415 EKM = 171819
```

The control unit (CU), DRIVE, and Encryption Key Manager (EKM) error codes are from sense bytes 08, 13-15, and 17-19, respectively. For example:

```
IOS000I 0BD0,60,IOE,01,0E00,,**,JJC046,ATNCMP1
804C08C022402751 0001FF0000000000 0005EE3100000092 2004E82061BA2111
ENCRYPTION FAILURE
CU=00 DRIVE=000000 EKM=05EE31
```

In this example, the error was reported by the Encryption Key Manager (EKM).

For an EKM failure, refer to the Problem Determination section of the *IBM System Storage Tape Encryption Key Manager, Introduction, Planning, and User's Guide*, GA76-0418. When looking up the EKM failure, use the last two bytes of the error code (for example, EE31 in the example above).

For a control unit failure, refer to the *IBM System Storage TS1120 Tape Drive and Controller Operator Guide*, GA32-0556. [Table 30 on page 210](#) contains error codes for control unit failures.

Table 30. Error codes for control unit failures		
Error code	Description	Recovery action
00	Not a control unit reported failure	Refer to the EKM and drive error codes reported in the IOS000I message for failure information.

Table 30. Error codes for control unit failures (continued)		
Error code	Description	Recovery action
01	The EKM was not available for an out-of-band key exchange.	Verify the EKM that the control unit is configured to use and also verify the state of that EKM. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).
02	Timeout for an out-of-band key exchange	The EKM may have gone down mid-sequence, or there may be a network problem. Verify the state of the EKM and the TCP/IP network. However, if the intent was to use in-band key management, use the EKM subcommand of the IECIOSxx PARMLIB member or the SETIOS command to specify your key manager(s).
03	An in-band key exchange was canceled by the host.	Check for an IOS628E message for further information as to why the in-band proxy may have canceled the key exchange. For additional information on these error codes, see z/OS UNIX System Services Messages and Codes .

The *The IBM System Storage TS1120 Tape Drive SCSI Reference*, GA32-0562, lists the sense key, ASC, and ASCQ combinations that are reported for encryption conditions, along with a one-line description.

For more detailed information about the drive-reported conditions, and also about the EKM-reported conditions, see the Problem Determination section of the *IBM System Storage TS3500 Tape Library Operator Guide*, GA32-0560.

If there are multiple error codes reported, start with the EKM error code.

In addition, any system-managed tape library scratch tape that receives the IOS000I ENCRYPTION FAILURE message along with an IEC512 I/O ERR, remains in a scratch status, but is updated in the Tape Control Data Base (TCDB) with a VOLUME ERROR STATUS of I/O ERROR. This causes it to be placed in the software error category, and the tape is unusable until the I/O ERROR condition is cleared through manual intervention (for example, use ISMF volume ALTER from scratch. Scratch moves the volume from the software error category back to the scratch category). Periodically, use the DISPLAY SMS,LIBRARY command with DETAIL to display the number of scratch volumes in the software error category.

DD statement changes

This topic describes the changes to the DD statement in support of the encryption-capable TS1120 tape drive tape drive.

Use the DATACLAS parameter to specify a data class for a new data set. The storage administrator at your installation defines the names of the data classes you can code on the DATACLAS parameter. These keyword parameters (data class parameters) are added to the DD statement:

- KEYLABL1
- KEYLABL2
- KEYENCD1
- KEYENCD2

Parameter field

Keyword parameter	Value	Purpose
KEYLABL1='mykeylabel1'	1- 64 characters	Specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key.
KEYLABL2='mykeylabel2'	1- 64 characters	Specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key.
KEYENCD1=L H	1 character L = label H = public key hash	Specifies how the label for the key encrypting key specified by the key label 1 is encoded by the Encryption Key Manager and stored on the tape cartridge.
KEYENCD2=L H	1 character L = label H = public key hash	Specifies how the label for the key encrypting key specified by the key label 2 is encoded by the Encryption Key Manager and stored on the tape cartridge.

Overrides

Any data set attributes you specify on the new DD parameters override the corresponding attributes in the data class for the data set:

- KEYLABL1 (key label 1)
- KEYENCD1 (encoding for key label 1)
- KEYLABL2 (key label 2)
- KEYENCD2 (encoding for key label 2)

SMS modifications

SMS automates and centralizes storage management. It automatically assigns service requirements and attributes to data when that data is created. SMS configuration services validate, for example, the recording technology value that ISMF specifies in data class definitions.

MEDIA9 and MEDIA10 will only be supported from z/OS DFSMS V1R5 and above.

SMS will support a new recording technology EEFMT2

In an IBM tape library environment (automated or manual), use ISMF to specify the:

- EFMT1 recording technology attribute
- EFMT2 recording technology attribute
- EEFMT2 recording technology attribute
- Media type of MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10
- Performance scaling or performance segmentation option, if the media type is MEDIA5 or MEDIA9. Media types MEDIA6, MEDIA7, MEDIA8, and MEDIA10 are not scalable or segmentable.

The recording technology attribute and the performance scaling or performance segmentation options can also be specified and used outside of the system-managed tape library environment.

In support of the encryption-capable 3592 Model E05 tape drives, SMS configuration services are updated to validate the recording technology value EEFMT2 and are also updated to handle the new key label-related information.

In Data Class

With SMS, the system obtains information about the attributes of a data set from the data class for the data set.

Any data set attributes you specify on these new DD parameters override the corresponding attributes in the data class for the data set:

- KEYLABL1 (key label 1)
- KEYENCD1 (encoding for key label 1)
- KEYLABL2 (key label 2)
- KEYENCD2 (encoding for key label 2)

Overriding Attributes Defined in the Data Class

For a new data set, you can override the data class attributes defined in the data class for the data set by coding one or more of these new DD parameters:

- KEYLABL1 (key label 1)
- KEYENCD1 (encoding for key label 1)
- KEYLABL2 (key label 2)
- KEYENCD2 (encoding for key label 2)

MVS device allocation modifications

MVS device allocation helps prioritize and select tape drives to meet the needs of application programs or system functions. Batch (JCL) or dynamic (SVC99) allocation makes these device needs known to MVS device allocation. MVS device allocation selects the appropriate devices and serializes them for the requester to use. It can also request that appropriate volumes be mounted on the allocated devices. It accomplishes these tasks by interfacing with SMS, DEVSERV, OAM, MSGDISP, and other system components.

MVS device allocation currently supports multiple types of tape devices. Within an IBM tape library environment, MVS device allocation considers media types and recording technologies when allocating tape drives and tape volumes. The dynamic allocation (SVC 99) volume interchange text unit (DALINCHG) allows you to specify EFMT1 for the recording technology and MEDIA5, MEDIA6, MEDIA7, or MEDIA8 for the media type and EFMT2 or EEFMT2 for the recording technology and MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 for the media type. Specification of MEDIA9 or MEDIA10 is only supported on z/OS V1R5 and above.

See [Table 31 on page 213](#) for DALINCHG parameter values.

Table 31. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types		
Parameter value	Media type	Recording technology
85	MEDIA5	EEFMT2
75	MEDIA5	EFMT2
65	MEDIA5	EFMT1
05	MEDIA5	No format
86	MEDIA6	EEFMT2
76	MEDIA6	EFMT2
66	MEDIA6	EFMT1
06	MEDIA6	No format
87	MEDIA7	EEFMT2

Table 31. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types (continued)

Parameter value	Media type	Recording technology
77	MEDIA7	EFMT2
67	MEDIA7	EFMT1
07	MEDIA7	No format
88	MEDIA8	EEFMT2
78	MEDIA8	EFMT2
68	MEDIA8	EFMT1
08	MEDIA8	No format
89	MEDIA9	EEFMT2
79	MEDIA9	EFMT2
09	MEDIA9	No format
8A	MEDIA10	EEFMT2
7A	MEDIA10	EFMT2
0A	MEDIA10	No format

Related reading:

- See [z/OS MVS System Commands](#) for more information on the DEVSERV QTAPE command.
- See [z/OS MVS Programming: Authorized Assembler Services Guide](#) for more information about the DALINCHG parameter.
- See [z/OS DFSMS Installation Exits](#) for more information about the IECUCBCX mapping macro.

JCL DD statement parameters and equivalent text units for TS1120

Use this table to convert a JCL DD statement into dsname allocation text units. The table lists JCL DD statement parameters in alphabetical order, along with the equivalent verb code 01 text unit key and mnemonic. Some JCL DD statement parameters have multiple text unit keys associated with them. In these cases, the same JCL DD statement is repeated in the table for each text unit key associated with it.

Table 32. JCL DD Statement Parameters and Equivalent Text Units			
JCL DD statement parameter	Text unit mnemonic	Text unit key	Described in:
KEYENCD1	DALKYC1	8025	“Key Encode 1 Specification - Key = '8025'” on page 215
KEYENCD2	DALKYC2	8026	“Key Encode 2 Specification - Key = '8026'” on page 216
KEYLABL1	DALKYL1	8023	“Key Label 1 Specification - Key = '8023'” on page 215
KEYLABL2	DALKYL2	8024	“Key Label 2 Specification - Key = '8024'” on page 215
Note: References to previous DD statements are not supported.			

DSNAME Allocation Text Units for TS1120

Most of the information that can be specified on a JCL DD statement can also be specified in text units for the dsname allocation function (verb code '01'). These text units are listed in [Table 33 on page 215](#) and described on the pages that follow.

Table 33. Verb code 01 (dsname allocation) – text unit keys, mnemonics, and functions		
Hex text Unit key	Mnemonic	Dsname allocation function
8023	DALKYL1	Specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key.
8024	DALKYL2	Specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key.
8025	DALKYC1	Specifies how the label for the key encrypting key specified by DALKYL1 for this DD is to be encoded by the Encryption Key Manager and stored on the tape cartridge.
8026	DALKYC2	Specifies how the label for the key encrypting key specified by DALKYL2 for this DD is to be encoded by the Encryption Key Manager and stored on the tape cartridge.

Key Label 1 Specification - Key = '8023'

DALKYL1 specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key. When you code this key, # must be one, LEN is the length of the key label, up to a maximum of 64, and PARM contains the key label.

Example: To specify the key label in DALKYL1 as "KEY.LABEL1", code:

KEY	#	LEN	PARM
8023	0001	000A	D2 C5 E8 4B D3 C1 C2 C5 D3 F1

Key Label 2 Specification - Key = '8024'

DALKYL2 specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key. When you code this key, # must be one, LEN is the length of the key label, up to a maximum of 64, and PARM contains the key label.

Example: To specify the key label in DALKYL2 as "KEY.LABEL2", code:

KEY	#	LEN	PARM
8024	0001	000A	D2 C5 E8 4B D3 C1 C2 C5 D3 F2

Key Encode 1 Specification - Key = '8025'

DALKYC1 specifies how the label for the key encrypting key specified by DALKYL1 for this DD is to be encoded by the Encryption Key Manager and stored on the tape cartridge. When you code this key, # must be one, LEN must be one, and PARM contains either an "H" or an "L", as follows:

- H: DALKYL1 is encoded as a hash of the public key.
- L: DALKYL1 is encoded as the key label.

Example: To specify that the key label in DALKYL1 is encoded via hash ("H"), code:

KEY	#	LEN	PARM
8025	0001	0001	C8

Key Encode 2 Specification - Key = '8026'

DALKYC2 specifies how the label for the key encrypting key specified by DALKYL2 for this DD is to be encoded by the Encryption Key Manager and stored on the tape cartridge. When you code this key, # must be one, LEN must be one, and PARM contains either an "H" or an "L" as follows:

H: DALKYL2 is encoded as a hash of the public key.

L: DALKYL2 is encoded as the key label.

Example: To specify that the key label in DALKYL2 is encoded via hash ("H"), code:

KEY	#	LEN	PARM
8026	0001	0001	C8

Verb Code 01 - Non-JCL Dynamic Allocation Functions for TS1120

Volume Interchange Specification - Key = '006F'

DALINCHG specifies the media type and track recording technique required for system-managed tape library allocation. Whenever possible, IBM suggests that you use an installation-defined DATACLAS construct name to control cartridge media type and track recording technique. Use this key only when it is not possible to use a pre-defined DATACLAS construct because of the dynamic nature of the program and because the program must control the media type and track recording technique. Contact your storage administrator before using this key.

Note: To specify DALINCHG, your program must be APF-authorized, in supervisor state, or running in PSW key 0-7. The specification of DALINCHG will be ignored if a non-system-managed tape volume is allocated.

When you code this key, # and LEN must be one. These PARM values are new:

85

3592 Enterprise Tape Cartridge requested; Enterprise Encrypted Format 2 recording technology requested.

86

3592 Enterprise WORM Tape Cartridge requested; Enterprise Encrypted Format 2 recording technology requested.

87

3592 Enterprise Economy Tape Cartridge requested: Enterprise Encrypted Format 2 recording technology requested.

88

3592 Enterprise Economy WORM Tape Cartridge requested; Enterprise Encrypted Format 2 recording technology requested.

89

3592 Enterprise Extended Tape Cartridge requested; Enterprise Encrypted Format 2 recording technology requested.

8A

3592 Enterprise Extended WORM Tape Cartridge requested; Enterprise Encrypted Format 2 recording technology requested.

MVS Data Areas

These data areas have been updated:

216 z/OS: z/OS DFSMS Software Support for IBM System Storage TS1140, TS1130, and TS1120 Tape Drives (3592)

- IEF SIOTX
- IEF SJDKY
- IEF ZB4D2
- JFCB
- SJKEY

Chapter 31. ISMF modifications for encryption-capable TS1120 tape drive

In ISMF, these applications are modified to support tape subsystem encryption (new recording technology and new key labels):

- Data class define and alter panels
- Mountable tape volume list panel

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information on the ISMF tape library management application.
- See *z/OS DFSMSdjp Storage Administration* for additional information about data classes and the ISMF data class panels.

Data class define and alter panels for TS1120

A data class is a set of data set allocation attributes and associated values. You can define, alter, display, and list a data class by using the ISMF data class panels. In addition to the previously available values, you can now specify the EE2 value for the recording technology attribute EEFMT2 on the data class define/alter panel. A new panel is displayed for the user to enter the Key Labels and Encoding Mechanisms. The existing Performance Scaling and Performance Segmentation data class options, applicable with MEDIA5 and MEDIA9, can also be used with the new encryption format EEFMT2.

Key specification terminology:

Key Label

Specifies the label for the key encrypting key used by the Encryption Key Manager. The key encrypting key is used to encrypt the data (encryption) key.

The key label value can be specified up to 64 characters containing alphanumeric, national or special characters with some additional characters also being allowed. It is treated as a free form field on input and validity checked by the control unit when the key label is first used and converted from EBCDIC to ASCII. The characters specified through ISMF must map to ASCII characters X'20' to X'7E'.

Encoding Mechanism

Specifies how the label for the key encrypting key specified by the key label (input) is encoded by the Encryption Key Manager and stored on the tape cartridge.

- **L** = encoded as the specified label
- **H** = encoded as a hash of the public key

Mountable tape volume list panel

On the mountable tape volume list, the value EEFMT2 can appear in column 9, RECORDING TECHNOLOGY.

Chapter 32. OCE modifications for encryption-capable TS1120 tape drive

The z/OS DFSMS Open/Close/End-of-Volume (OCE) component is a set of system routines that builds the control block structure that connects the application, access method, and the operating system. OCE modifications for the encryption-capable TS1120 tape drive include support for the EEFMT2 encryption technology and passing encryption key information to the tape drive.

Related reading:

- See [z/OS DFSMS Using Data Sets](#) and [z/OS DFSMS Using Magnetic Tapes](#) for additional information about the OCE routines.
- See [z/OS DFSMS Installation Exits](#) for more information on OCE installation exit parameter lists.
- See [z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries](#) for more information on tape volume records.
- See Chapter 56, “OCE modifications for 3592 Model J,” on page 371 for more information on the existing WORM tape support.
- See [z/OS MVS System Messages, Vol 7 \(IEB-IEE\)](#) for more information on message IEC205I.

Overview

Tape subsystem encryption is supported through a hardware encryption feature of the encryption-capable TS1120 tape drive. This encryption feature requires both hardware and microcode updates. MEDIA5 - MEDIA10 support a recording format EEFMT2 (encrypted) in addition to EFMT1 and EFMT2. EEFMT2 is compatible with both performance segmentation and performance scaling. EFMT2 is the default recording technology. EEFMT2 and EFMT1 must be requested through SMS data class. When EEFMT2 is requested, OPEN passes the key encoding mechanism and key labels obtained from SMS to the drive. The key labels are used by the Encryption Key Manager (EKM) to create externally encrypted data keys (EEDKs) which are stored on the cartridge in drive-only accessible areas.

SMS Managed Tape

An SMS managed cartridge Tape Volume Record (TVR) in the tape configuration data base (TCDB) is updated by OPEN and EOVS with the EEFMT2 recording technology when the TVR is opened for OUTPUT, DISP=NEW to the first file (beginning of tape).

Recording Technology Conflict

OPEN and EOVS resolve the recording technology conflicts when an EEFMT2 formatted cartridge is mounted on 3592 Model J1A or on a non-encryption enabled 3592 Model E05. If the volume serial in sense facility is active (such as VOLNSNS=YES is specified in DEVSUPxx), the load point volume label structure is rewritten by the existing volume serial number obtained from the returned sense data.

Multiple Recording Format Capability

For both system managed and standalone environments, during OPEN OUTPUT, file sequence 1, DISP=NEW, OPEN retrieves the assigned data class to determine these situations:

- If EFMT1 or EEFMT2 is requested.
- If the default EFMT2 is to be used.

For the prevailing recording format, OPEN issues a command to the drive to enable the recording format from the load point.

Note: When the tape is written from load point, OPEN OUTPUT and EOv issues a command to the drive for the existing/prevaling recording technology.

Encryption and key labels

During the OPEN processing, when a data set is opened for OUTPUT, file sequence 1, DISP=NEW, if an encryption enabled 3592 Model E05 is allocated and the assigned data class indicates EEFMT2, the OPEN processing obtains the key encrypting key (KEK) labels and the key encoding mechanism (label or hash) by using SMS services. OPEN passes the KEK labels and key encoding type to the drive. If this key label-related information is not specified, OPEN does not pass any key label-related information. This operation results in using the defined Encryption Key Manager (EKM) established defaults. For the encrypted cartridges, DISP=OLD (and also DISP=SHR) and file sequence 1 (reuse from loadpoint), the OPEN processing directs the drive to

- reuse the existing KEK labels and to use the encryption recording format (EEFMT2).

Encryption is supported for SL (IBM standard), AL (ANSI standard), NL (no labels) and NSL (non standard). For labeled tapes (SL- IBM standard or AL - ANSI standard), OPEN indicates to the drive that a key known to all encryption capable 3592 drives is to be used for the load point volume label.

It is during OPEN processing (file sequence 1, open for OUTPUT) where the key exchange between the drive and the encryption key manager (EKM) takes place, and it is also the point in time in which the drive writes the EEDK structures on the tape. As a result of these encryption-related activities, expect more time to be spent in OPEN processing with more time appearing between the mount message and the tape on (IEC705I) message.

OPEN sets the IEZDEB bit DEB2XEEF to indicate cartridge is encrypted.

It is also during OPEN processing where an indicator is sent to the control unit to indicate whether in-band or out-of-band key management should be used.

During the CLOSE processing, for an encrypted volume, the key encrypting key (KEK) labels and encoding mechanism are passed to the File End on Volume tape installation exit. Therefore, the tape management system can record the key labels associated with the volume. CLOSE processing obtains the key labels from the drive to pass them to the tape management system through the File End on Volume Tape Installation Exit.

During the EOv processing, for an encrypted volume, the key encrypting key (KEK) labels and the key encoding method are obtained from the drive to ensure that the same encryption information applies to each volume of the multi-volume data set and passes this information to the drive on the subsequent mount.

In these situations, no additional changes are needed (other than to indicate in-band or out-of-band key management). The drive automatically detects that the volume is encrypted and initiates a key request with the Encryption Key Manager to have the externally encrypted data key (EEDK) decrypted.

- When an existing data set is opened for INPUT (read).
- When an existing data set is opened for OUTPUT and appended (DISP=MOD).
- When an additional file sequence is written to the volume.

The key labels and encoding type are stored in an extended information segment type 7 of the SMF14/15 record. This output is the macro for the SMF14/15 change:

```
*          THIS DESCRIBES THE KEK LABELS AND ENCODING
*          MECHANISMS FOR A TAPE DATA ENCRYPTED DATA SET.
*          THIS SECTION HAS A TYPE OF 7.
*
SMF14ENC EQU *          TAPE ENCRYPTION DATA SECTION
SMF14KL1 DS CL64' '      KEY LABEL 1
SMF14CD1 DS CL1' '        ENCODING MECHANISM FOR KEY LABEL 1
SMF14KL2 DS CL64' '      KEY LABEL 2
SMF14CD2 DS CL1' '        ENCODING MECHANISM FOR KEY LABEL 2
```

In addition to these SMF 14/15 fields, APAR OA19502 added the field SMF14KET. This field displays the key exchange time in hundredths of seconds. The key exchange (encryption overhead) time is only applicable for the SMF 15 output record and only for non-parallel open processing when writing file sequence 1 from loadpoint. Otherwise this value is set to zero.

Media Support

The OCE routines also include the IFGTEP macro with several fields for mapping installation exit parameter lists. Values that can be returned are: EFMT1, EFMT2, and EEFMT2 in TEPMRECTK recording technology, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 in TEPMMEDT media type.

OCE tape installation exits

The IFGTEP macro maps the tape log data. [Table 34 on page 223](#) describes the IFGTEP fields for mapping the installation exit main parameter list.

<i>Table 34. IFGTEP fields for the installation exit main parameter list</i>		
Field name	Length and type	Description
TEPMRECTK	8 (integer)	Recording technology of the mounted volume in binary. 8 - EEFMT2
TEPMMEDT	8 (integer)	Media type of the mounted volume in binary.

The IFGTEP macro maps the tape log data. [Table 35 on page 223](#) describes the IFGTEP fields for mapping the installation exit file end on volume parameter list.

<i>Table 35. IFGTEP fields for the installation exit file end on volume parameter list</i>		
Field name	Length and type	Description
TEPEKEK1	64 (character)	KEK label 1
TEPEKEK2	64 (character)	KEK label 2
TEPEKCD1	1 (character)	Key encoding mechanism associated with KEK label 1: L - Label, H - Hash
TEPEKCD2	1 (character)	Key encoding mechanism associated with KEK label 2: L - Label, H - Hash

Note:

1. The version of the FILEE parameter list (TEPEVER) is also updated (to a 2) to accommodate the longer FILEE parameter list.
2. For a given mount, the tape drive obtains (from the Encryption Key Manager) and stores the key management-related information for subsequent access. When returning this information to the drive, if the encoding mechanism for one or both of the EEDKs is a "hash", the Encryption Key Manager always tries to resolve the "hash" value in an EEDK to its corresponding key label value and returns only the hash value if the key label cannot be resolved.
3. If the returned key label from the Encryption Key Manager is only available as a hash value, the control unit automatically converts the returned hash value to printable EBCDIC and returns this value as the 64-CHAR key label (padded on the right with blanks X'40'). The returned hash value can be up to 56 bytes in length. This value is then passed to the file end on volume exit along with the character string *HASH* appended to the end of the character string in bytes 59-64. For example:

OCE Messages

During OPEN processing, when a data set is opened for OUTPUT, existing message IEC205I externalizes each Key Label and the associated encoding mechanism. If the returned key label is a hash value, *HASH* is appended to the returned value.

The returned encoding mechanism indicates how the key label is recorded by the encryption key manager (EKM) and stored on the tape cartridge. It does not necessarily reflect how the key label itself is being returned and displayed in the key label fields. If an encoding mechanism of "hash" is used, the encryption key manager (EKM) will always try and return its associated key label, and only if it can't, will a "hash" value be returned and displayed in the IEC205I message.

This is an example of the IEC205I message:

```
IEC205I SYSUT2,ATNCMP1,STEP1,FILESEQ=1, COMPLETE VOLUME LIST,
DSN=ATL.TESTJOB.EE2,VOLS=J11986,
LISTED VOL(S) HAVE BEEN DATA ENCRYPTED,KL1CD:L,KL2CD:L,
KL1=dfsmskeylabel1,KL2=dfsmskeylabel2,TOTALBLOCKS=1
```

OCE Encryption Abends

During OPEN and EOVS processing, errors associated with encryption support result in OPEN IEC147I 613-88 or EOVS IEC026I 637-88.

- 613-88 encryption IO error during OPEN.
- 637-88 encryption IO error during EOVS.

During OPEN processing, existing IEC147I, abend code 613-84, is enhanced to also account for an up-level recording format. This abend code is also issued if an encrypted volume is being used on a down-level system that does not have all of the encryption support installed.

- 613-84 no software support for the media type or the recording technology.

During CLOSE processing, errors associated with encryption support will result in CLOSE IEC211I 314-10.

- 314-10 encryption IO error during CLOSE.

Chapter 33. DFSMSHsm considerations for the encryption-capable TS1120 tape drive

DFSMSHsm, a z/OS functional component, automatically manages low activity and inactive data in both system-managed and non-system-managed environments. DFSMSHsm also provides automatic backup and recovery of active data in those environments.

DFSMSHsm can use the encryption-capable TS1120 tape drive (3592 Model E05, 3592-2E) for all functions. DFSMSHsm normally uses non-WORM media (MEDIA5, MEDIA7, MEDIA9) for non-ABARS functions. DFSMSHsm uses all media, including WORM (MEDIA6, MEDIA8 and MEDIA10) for ABARS processing. DFSMSHsm can use the WORM media for non-ABARS processing if specifically allowed by your installation.

This topic describes these considerations for using DFSMSHsm with the encryption-capable TS1120 tape drive:

- [“Modifying your SMS data classes” on page 225](#)
- [“Modifying your dump classes” on page 225](#)
- [“Input tape utilization” on page 226](#)
- [“Requesting information for encrypted volumes and tapes” on page 226](#)
- [“Requesting information for dump volumes” on page 227](#)
- [“Specifying esoteric tape unit names to DFSMSHsm” on page 228](#)
- [“Tape Hardware Emulation” on page 228](#)
- [“Specifying how much of a tape DFSMSHsm uses” on page 228](#)
- [“Using tape device naming conventions” on page 228](#)
- [“Output tape selection” on page 229](#)
- [“Output tape utilization” on page 229](#)
- [“Allowing DFSMSHsm to use the 3590-1 generic unit when it contains mixed track technology drives” on page 230](#)
- [“Recovering overwritten encrypted tapes” on page 230](#)
- [“DFSMSHsm tips” on page 230.](#)

Modifying your SMS data classes

To use tape hardware encryption, you must modify your SMS data class definitions to request encryption from the encryption-capable tape drives.

Modifying your dump classes

With the support for the encryption-capable TS1120 tape drive, hardware encryption joins software (or host-based) encryption as another means of encrypting your installation's dump data. As a result, the method for requesting encryption now depends on whether you plan to use hardware encryption or host-based encryption, as follows:

- To request hardware encryption for a dump class, specify it in the SMS data class for the dump data.
- To request host-based encryption for a dump class, use the DFSMSHsm `DEFINE DUMPCLASS(ENCRYPT)` command. With `ENCRYPT`, include the `RSA` or `KEYPASSWORD` subparameters to specify the type of host-based encryption. `ENCRYPT(NONE)` specifies host-based encryption should not be done.

If your dump classes are currently defined to use host-based encryption (and possibly host-based compression before encryption), it is recommended that you remove the host-based encryption requests from any dump classes for which you plan to use tape hardware encryption.

During the process of migrating your dump classes to use hardware encryption, you might have some dump classes that are still defined to use host-based encryption, while their associated SMS data classes are defined to use tape hardware encryption. Here, DFSMSdss ignores requests for host-based encryption for these tape volumes and, instead, uses hardware encryption. This processing allows you to complete the migration to hardware encryption without having to modify your dump-requesting jobs. However, removing host-based encryption requests from a dump class when tape hardware encryption is also requested can avoid confusion concerning which process is active.

Note:

1. To determine whether hardware encryption or host-based encryption was used for a particular tape volume, check the associated dump volume record (DVL).
2. If more than one dump class is specified (creating more than one dump copy), those dump classes specify host-based encryption, each dump class has a unique data class assigned, and some but not all of the associated data classes request tape hardware encryption, then all dump copies will fail. In other words, tape hardware encryption can override host-based encryption for all dump classes associated with a source volume or none of the dump classes, but it cannot override a subset of those dump classes.

Related reading:

- For more information on the DEFINE DUMPCCLASS command, see [z/OS DFSMSdfp Storage Administration](#).

Input tape utilization

DFSMSHsm can use MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 as input.

In an SMS environment, the choice of an input drive for a particular tape is controlled by the library and is transparent to DFSMSHsm.

In a non-SMS environment, the choice of drives is controlled by the unit name recorded in the tape's CDS records. This unit name is the name of the original output unit selected by the installation, or its generic equivalent. In a mixed non-SMS environment where more than one tape technology is associated with a generic unit name, you must use esoteric names for the output unit and its associated input unit.


You can use MEDIA5, MEDIA7, and MEDIA9 tapes as input for all DFSMSHsm functions. Besides these media types, you can also use MEDIA6, MEDIA8, and MEDIA10 tapes for ABARS processing.

Requesting information for encrypted volumes and tapes

New values EEFMT2, ENCRYPTION (or ENCRYPTED), and NOENCRYPTION (or NOTENCRYPTED) are added to the SELECT parameter of the DFSMSHsm LIST TTOC command to allow you to list tape volumes with and without tape hardware encryption.

This shows a portion of the syntax for the LIST TTOC command:

N: TTOC SELECT Optional Parameters

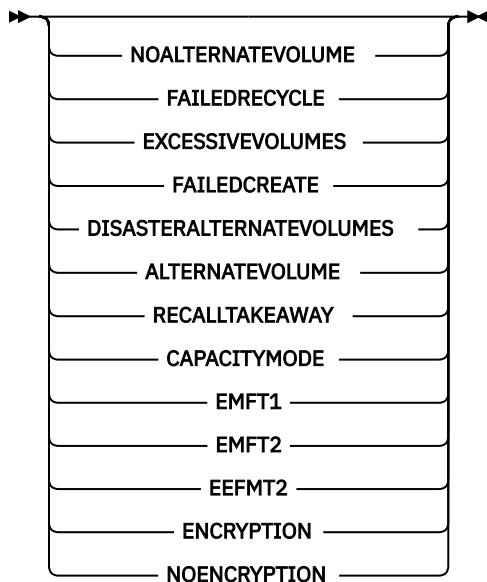

Related reading:

For more information on the LIST TTOC command, see [z/OS DFSMSdfp Storage Administration](#).

Displaying EEFMT2 formatted volumes

You can use the LIST TTOC command to list volumes based on the recording technology used. To list all volumes recorded in EEFMT2 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EEFMT2) ODS(ttoc.out.dataset)
```

Displaying encrypted tape volumes

You can use the LIST TTOC command to list tape volumes that were encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(ENCRYPTION) ODS(ttoc.out.dataset)
```

You can also use the LIST TTOC command to list tape volumes that were not encrypted through hardware encryption. To do so, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(NOENCRYPTION) ODS(ttoc.out.dataset)
```

Requesting information for dump volumes

For a list of the information for a specific dump volume managed by DFSMSHsm, specify the LIST command with the DUMPVOLUME(*volser*) parameter. If the volume was tape hardware encrypted, the ENC field will indicate THW.

For a list of the information for the dump volumes of the requested status managed by DFSMSHsm, specify the LIST command with the DUMPVOLUME parameter without the volume serial number. Instead, include a status parameter such as AVAILABLE, UNAVAILABLE, EXPIRED, UNEXPIRED, or NORETENTIONLIMIT. The command lists the volumes in alphanumeric sequence by volume serial number.

Related reading:

For more information on the LIST DUMPVOLUME command, see [z/OS DFSMSdfp Storage Administration](#).

Specifying esoteric tape unit names to DFSMSHsm

When using the SETSYS USERUNITTABLE command to specify esoteric tape unit names to DFSMSHsm, note that DFSMSHsm rejects mixed combinations of device names in an esoteric group, with these exceptions:

- You can have a mix of 3480 and 3480X device names in the same esoteric group. You cannot, however, use Improved Data Recording Capability (IDRC) with such a group because all devices are treated as 3480s.
- You can have a mix of 3592-1, 3592-2 and 3592-2E device names in the same esoteric group. Here, you must ensure that the drives in the esoteric group can write using the same recording technology. For example, if you include a 3592-1 drive, all other drives in the esoteric must use EMFT1 for output. If the esoteric mixes 3592-2 and 3592-2E drives, all drives must be set-up to use EFMT1 or EFMT2 recording technology.

Note:

1. If an esoteric group associated only with 3480Xs exists, 3480s should not be added to it, because the data already written using this esoteric tape unit name might create IDRC incompatibilities.
2. If DFSMSHsm rejects an esoteric tape unit name, it does not reject the rest of the valid esoteric names specified in the USERUNITTABLE command. Each time you specify USERUNITTABLE, the valid esoteric tape unit names identified with this parameter replace any esoteric tape unit names identified through a previous use of the SETSYS USERUNITTABLE command.

Related reading:

- For more information on the SETSYS command, see [z/OS DFSMSdfp Storage Administration](#).

Tape Hardware Emulation

- An encryption-capable TS1120 or 3592-E05 tape drive always runs in emulation mode as a 3590-B1x tape drive.
- The 3590-E1x, 3590-H1x, and the 3592-J1A drives emulate either a 3490-E1x or 3590-B1x.

Specifying how much of a tape DFSMSHsm uses

For 3592 devices: If your installation requires very fast access to data on a MEDIA5 or MEDIA9 tape, consider using the 3592 performance scaling feature. In DFSMSHsm, performance scaling applies in both tape libraries and standalone environments.

Performance scaling uses 20% of the physical space on each tape and keeps data sets closer together and closer to the initial load point. Performance scaling permits the same amount of data to exist on a larger number of tapes, allowing more input tasks to run concurrently. With performance scaling, you can effectively increase the "bandwidth" of operations that read data in from tape.

In contrast, performance segmentation allows the use of most of the physical media, while enhancing performance for the first and last portions of the tape.

Related reading:

- For more information about implementing DFSMSHsm tape environments, see [z/OS DFSMSdfp Storage Administration](#).

Using tape device naming conventions

Table 36 on page 229 shows the hardware (marketing device name) and software (MVS generic device name) names for 3592 tape devices. The MVS generic device names are also the names used by the job control language (JCL) to communicate with the z/OS operating system. Use the MVS generic name or your installations esoteric name in any JCL statements or DFSMSHsm commands that specify device names.

Table 36. Tape device naming conventions		
Device description	Hardware name	Generic MVS name
3592-2E <ul style="list-style-type: none"> Enterprise recording format: EFMT1, EFMT2, EEFMT2 IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10) Always in “emulation mode” as a 3590 Model B device. 	3592-E05	3590-1
3592-2 <ul style="list-style-type: none"> Enterprise recording format: EFMT1, EFMT2 IBM TotalStorage Enterprise tape cartridge (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10) Always in “emulation mode” as a 3590 Model B device. 	3592-E05	3590-1

Output tape selection

DFSMSHsm can select encryption-capable TS1120 tape drives (3592-2E) for output in SMS and non-SMS tape environments. DFSMSHsm performs all of its allocation requests through these standard dynamic allocation interfaces:

Output to Scratch Tapes

The 3592-2E tape drive is selected through data class or DALINCHG in an SMS environment and through an esoteric or generic unit name in a non-SMS environment.

The new EEFMT2 format is selected through data class or DALINCHG in an SMS environment. In a non-SMS environment only data class can be used to select EEFMT2.

An empty MEDIA9 or MEDIA10 tape cannot be selected for output on a 3592-1 tape drive.

Output to Partial Tapes

When the 3592-2E uses a partial tape for output, the tape might have been written in the EFMT1, EFMT2, or EEFMT2 recording formats. It is then extended in the same format. MEDIA9 and MEDIA10 partial tapes are always recorded using EFMT2 or EEFMT2 technology.

The 3592-1 and 3592-2 might also use these partial tapes. If a tape was initially written by a 3592-2E, it might have been written in the EFMT1, EFMT2, or EEFMT2 recording formats. If the tape was written in EFMT1, it can be selected by a 3592-1 for extension. If the tape was written in EFMT1 or EFMT2, it can be selected by a 3592-2 for extension.

Output tape utilization

DFSMSHsm writes to 97% of the capacity of MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 tapes unless otherwise specified by the installation. Other percentages can be specified through the SETSYS TAPEUTILIZATION command, depending on the particular needs of the installation. DFSMSHsm uses the reported cartridge type on the physical device to determine the tape's capacity.

ACS Routines

Because the 3592-2E can write in three recording formats (EFMT1, EFMT2 or EEFMT2), you must modify your installation's ACS routines to select the recording format to be used on empty media (through the data class assigned to the tape) if you want the 3592-2E drives to use EFMT1 or EEFMT2.

For duplexed tapes, ensure that the data class selects the same media type and recording technology for the original and the alternate copy. Not doing so can result in failure when the duplex tape is mounted for output, or when using the alternate copy after a tape replace. If different media or machine types are needed for the original and alternate tapes, see APARs OW52309, OA04821, and OA11603 for more information.

Allowing DFSMShsm to use the 3590-1 generic unit when it contains mixed track technology drives

You might encounter a situation in which you need to use the 3590-1 generic unit when it contains a mixture of 3590 devices that cannot share tapes. If so, you must use other means, such as SMS ACS routines, to keep these drives separate, and you can use this patch to disable the DFSMShsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.1.....)
```

You can use this patch to re-enable the DFSMShsm compatibility checking:

```
PATCH .MCVT.+3D5 BITS(.0.....)
```

By default, checking is enabled for non-SMS tape allocations.

A non-SMS tape allocation for a generic unit 3590-1 containing mixed track technologies causes DFSMS to issue message ARC0030I. Here, DFSMShsm allows the allocation to continue, but a tape/tape unit mismatch can result in an OPEN failure.

DFSMShsm does not issue message ARC0030I for a mix of 3592-1, 3592-2 and 3592-2E tape units.

Recovering overwritten encrypted tapes

Recovery of overwritten encrypted tape volumes might not be possible; the tape recovery process described in the topic "Case 6: Overwritten Migration Tape" of [z/OS DFSMSdfp Storage Administration](#) does not work for an encrypted tape.

DFSMShsm tips

See “[DFSMShsm tips](#)” on page 307 for some tips that you might find helpful when using DFSMShsm with the encryption-capable TS1120 tape drive.

Chapter 34. DFSMSdss considerations for the encryption-capable TS1120 tape drive

DFSMSdss, a z/OS functional component, allows you to copy, move, dump, and restore data sets and volumes. DFSMSdss is the primary data mover of DFSMS/MVS.

This topic describes considerations for using DFSMSdss with the encryption-capable TS1120 tape drive, as follows:

- [“Planning to use hardware encryption for dump tapes” on page 231](#)
- [“DFSMSdss handling of dump encryption requests” on page 232](#)
- [“DFSMSdss Stand Alone Restore program” on page 233](#)
- [“Updates to the Dump Volume Output Notification Exit \(Exit 26\)” on page 233.](#)

Planning to use hardware encryption for dump tapes

Using encryption-capable TS1120 tape drives does not require changes to your installation's DFSMSdss jobs. It does, however, require changes to your installation's data classes and DFSMSShsm dump classes, as described previously in this information. These considerations are briefly summarized here for the awareness of DFSMSdss administrators.

System volumes such as SYSRES should not be dumped to an encrypted tape data set. Because the DFSMSdss Stand Alone Restore program does not support restoring data from encrypted tape volumes, any encrypted system volume will not be able to be restored using the DFSMSdss Stand Alone Restore program.

Reviewing changes to SMS data classes

Using an encryption-capable TS1120 tape drive requires changes to your SMS data class definitions, as described in [Chapter 33, “DFSMSShsm considerations for the encryption-capable TS1120 tape drive,” on page 225.](#)

For tapes that require software (or host-based) encryption, ensure that your dump-requesting jobs use only tape drives that are not enabled for hardware encryption. To do so, check the data classes of the output ddnames to ensure that the jobs do not specify a data class that requests encryption from the encryption-capable tape drives.

Reviewing changes to DFSMSShsm dump classes

If your DFSMSShsm dump classes are currently defined to use host-based encryption (and possibly host-based compression before encryption), it is recommended that you remove the host-based encryption requests from any dump classes for which you plan to use hardware encryption. These steps are described in [Chapter 33, “DFSMSShsm considerations for the encryption-capable TS1120 tape drive,” on page 225.](#)

Over time, as you migrate your DFSMSShsm dump classes to use hardware encryption, you might still have dump classes that are defined to use host-based encryption, while their associated data classes are defined to use hardware encryption. Here, DFSMSdss ignores requests for host-based encryption for tape volumes and, instead, uses hardware encryption. This processing allows you to complete the migration to hardware encryption without having to modify your DFSMSdss jobs.

If you no longer require host-based encryption for any of your tape volumes, remove the host-based encryption requests from all of your DFSMSShsm dump classes. Thereafter, your jobs can write to a mixture of encrypting tape devices and non-encrypting tape devices without incurring informational messages. This setup allows you to encrypt tapes that are to be sent off-site, while retaining unencrypted tapes on-site for disaster recovery purposes.

DFSMSdss handling of dump encryption requests

With this support, hardware encryption joins software (or host-based) encryption as a means of encrypting your installation's tape volumes. Because DFSMSdss avoids performing double encryption of tape data, you must determine which type of encryption, if any, is to be used for your tape volumes. DFSMSdss prevents you from combining both types of encryption to perform double encryption of tape volumes.

Table 37 on page 232 shows how DFSMSdss handles potential double encryption requests, specified through the DFSMSdss DUMP command.

Table 37. DFSMSdss handling of dump encryption requests	
Dump encryption request	DFSMSdss action
Your DUMP command specifies host-based encryption (through the RSA or KEYPASSWORD keywords), and all of the available tape drives are encryption-capable tape drives. Your request might also specify host-based compression (through the HWCMPRESS keyword).	<ul style="list-style-type: none">• DFSMSdss issues informational message ADR518I to indicate that hardware encryption was used instead of host-based encryption• DFSMSdss ignores the compression request, if any.
Your DUMP command specifies host-based encryption and one or more of the available tape drives are not enabled for hardware encryption. Your request might also specify host-based compression.	<ul style="list-style-type: none">• DFSMSdss issues error message ADR519E to indicate that one or more of the available tape drives cannot perform hardware encryption. To avoid performing double encryption of data, DFSMSdss uses only encryption-capable tape drives. DFSMSdss issues error message ADR324E to list the unused output devices.• DFSMSdss ignores the compression request, if any.• DFSMSdss continues processing the DUMP request as long as there are usable tape drives. On completion, DFSMSdss ends the task with return code 8.
Your DUMP command does not specify host-based encryption and all of the available tape drives are encryption-capable tape drives. Your request might also specify host-based compression.	<ul style="list-style-type: none">• Encryption-capable tape drives perform encryption• DFSMSdss performs host-based compression, if requested.
Your DUMP command does not specify host-based encryption and one or more of the available tape drives are not enabled for hardware encryption. Your request might also specify host-based compression.	<ul style="list-style-type: none">• DUMP requests for encryption-capable tape drives are encrypted by the tape drive hardware• DUMP requests for non-encrypting tape drives are processed without encryption of any type• DFSMSdss performs host-based compression, if requested.

If double encryption is required

In the unlikely event that your installation requires double encryption for a dump data set, you can use this procedure:

1. Request host-based encryption for the data set and write it to a non-encrypting output device
2. Use the DFSMSdss COPYDUMP command to copy the dump data set to an encrypting tape device.

To restore the double-encrypted dump data set, use the DFSMSDss RESTORE command. The encryption capable tape drive decrypts the dump data set and then DFSMSDss performs host-based decryption for the data set.

DFSMSDss Stand Alone Restore program

You cannot use the DFSMSDss Stand Alone Restore program with an encrypted tape. If you attempt to do so, DFSMSDss issues message ADY513I to indicate that the dump data set resides on an encrypted tape and thus, cannot be read with the Stand Alone Restore program. DFSMSDss also issues message ADY509D to prompt the operator to continue or end the function.

Similarly, you cannot use the DFSMSDss BUILDSEA command to build a stand-alone image on an encrypted tape. If encryption is to be used in the encryption-capable TS1120 tape drive, DFSMSDss fails your request with message ADR992E.

Updates to the Dump Volume Output Notification Exit (Exit 26)

If an application requests host-based encryption through the DFSMSDss application programming interface (API), and DFSMSDss overrides the encryption request, DFSMSDss uses the Volume Output Notification Exit (Exit 26) to notify the caller. To indicate that the output tape volume used hardware encryption, DFSMSDss sets the EI26TWHE bit to one in the ADREID0 mapping.

If applicable, review your Exit 26 routine for updates to use the EI26TWHE bit. [Table 38 on page 233](#) shows the ADREID0 mapping.

Table 38. ADREID0 mapping					
Offsets		Type	Len	Name (Dim)	Description
Dec	Hex				
0	(0)	STRUCTURE	128	EIREC26	
0	(0)	BITSTRING	4	EI26TYPE	EXIT TYPE
		1...		EI26VOL	OUTPUT VOLUME NOTIFICATION
		.1...		EI26TERM	OUTPUT VOLUME TERMINATED
		.1...		EI26ROCE	BWO R0 COUNT ERROR
		...1		EI26VCLO	OUTPUT VOLUME CLOSE - ONLY FOR DASD OUTPUTS DURING LOGICAL DUMP OPERATIONS
	 1...		EI26TWHE	WHEN SET TO 1, THE OUTPUT TAPE VOLUME WILL USE HARDWARE ENCRYPTION.
	xxx		*	UNUSED
0	(0)	BITSTRING	3	*	RESERVED FOR EXPANSION
4	(4)	CHARACTER	64	EI26DSN	DSNAME IF EI26ROCE = '1'B
68	(44)	UNSIGNED	1	EI26DSNL	LENGTH OF DSNAME
69	(45)	UNSIGNED	3	*	RESERVED FOR ALIGNMENT
72	(48)	CHARACTER	8	EI26DDN	OUTPUT DDNAME IF EI26VOL, EI26TERM, OR EI26VCLO SET
80	(50)	CHARACTER	6	EI26VSER	VOLSER - PRESENT IF EI26VOL, EI26TERM, EI26VCLO SET
86	(56)	CHARACTER	2	*	RESERVED FOR ALIGNMENT
88	(58)	UNSIGNED	4	EI26VTRC	RETURN FOR VOLUME TERM AND VOLUME CLOSE
92	(5C)	ADDRESS	36	*	RESERVED FOR EXPANSION

Chapter 35. DFSMSrmm modifications for encryption-capable TS1120 tape drive

DFSMSrmm is a feature of z/OS. It manages all tape media, such as cartridge system tapes and 3420 reels, and other removable media that you define to it.

This topic describes the updates to these DFSMSrmm TSO subcommands:

- ADDVOLUME
- CHANGEVOLUME
- SEARCHVOLUME




It also lists the changed REXX variables of the TSO subcommand, API structured field introducers, and mapping macros fields.

Related reading:

- See [*z/OS DFSMSrmm Managing and Using Removable Media*](#) for the complete syntax of the DFSMSrmm ADDVOLUME subcommand, the DFSMSrmm CHANGEVOLUME subcommand, the DFSMSrmm SEARCHVOLUME subcommand, DFSMSrmm return codes and reason codes, and REXX variables.
- See [*z/OS DFSMSrmm Application Programming Interface*](#) for further information about the DFSMSrmm API.
- See [*z/OS DFSMSrmm Implementation and Customization Guide*](#) and [*z/OS DFSMSrmm Reporting*](#) for additional information about DFSMSrmm mapping macros.

ADDVOLUME

The ADDVOLUME TSO subcommand adds volumes to the DFSMSrmm control data set. This diagram shows the syntax of the MEDIATYPE operand, the RECORDINGFORMAT operand, the KEYLABEL1 and KEYENCODE1 operands, and the KEYLABEL2 and KEYENCODE2 operands for the ADDVOLUME TSO subcommand.

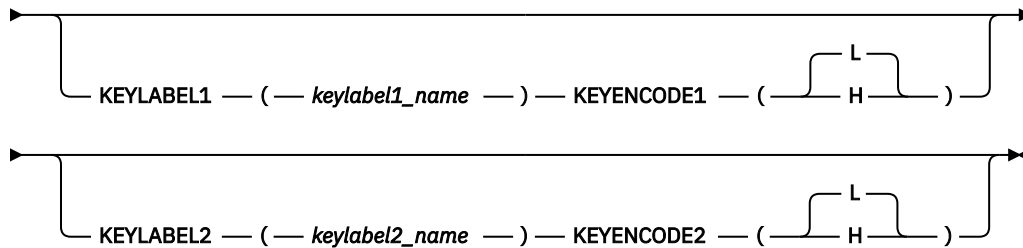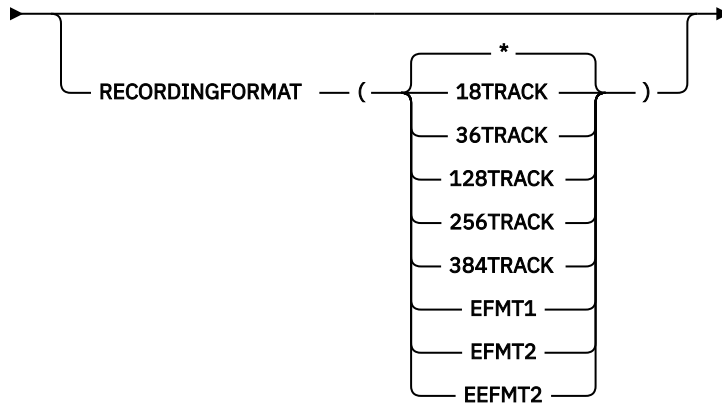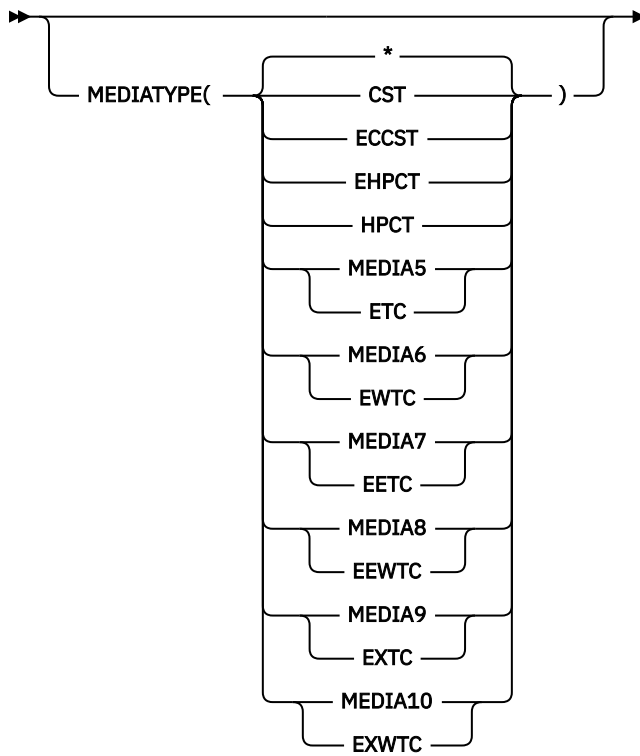

KEYLABEL1(*keylabel1_name*)

Specifies the key encryption key label number 1 for a non-scratch volume that is encrypted. A key label is 1-to-64 characters with blanks padding the field on the right. A key label contains alphanumeric, national, or special characters with some additional characters also allowed. Enclose it in single quotation marks if it contains any blanks or special characters.

When a volume is rewritten in a non-encryption format, DFSMSrmm does not clear the encryption key label related fields. Instead, the fields continue to be displayed until the volume is reused from scratch, or a release action causes them to be cleared.

When you specify this optional operand, you can also specify a value for the key encoding mechanism using the KEYENCODE1 operand.

KEYLABEL2(*keylabel2_name*)

Specifies the key encryption key label number 2 for a non-scratch volume that is encrypted. A key label is 1-to-64 characters with blanks padding the field on the right. A key label contains alphanumeric, national, or special characters with some additional characters also allowed. Enclose it in single quotation marks if it contains any blanks or special characters.

When a volume is rewritten in a non-encryption format, DFSMSrmm does not clear the encryption key label related fields. Instead, the fields continue to be displayed until the volume is reused from scratch, or a release action causes them to be cleared.

When you specify this optional operand, you can also specify a value for the key encoding mechanism using the KEYENCODE2 operand.

KEYENCODE1

Specifies the encoding mechanism used for KEYLABEL1.

L

Label

H

Public key hash

The default value is L.

KEYENCODE2

Specifies the encoding mechanism used for KEYLABEL2.

L

Label

H





Public key hash

The default value is L.

To use the EFMT2 and the EEFMT2 recording technology, you must specify the MEDIATYPE(MEDIA5/ETC, MEDIA6/EWTC, MEDIA7/EETC, MEDIA8/EEWTC, MEDIA9/EXTC, or MEDIA10/EXWTC) operand of the ADDVOLUME TSO subcommand.

CHANGEVOLUME

The CHANGEVOLUME TSO subcommand updates details for a volume defined to DFSMSrmm. This diagram shows the syntax of the MEDIATYPE operand, the RECORDINGFORMAT operand, the KEYLABEL1/NOKEYLABEL1 and KEYENCODE1 operands, and the KEYLABEL2/NOKEYLABEL2 and KEYENCODE2 operands for the CHANGEVOLUME TSO subcommand.

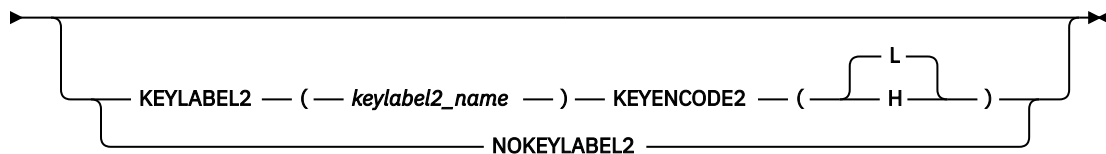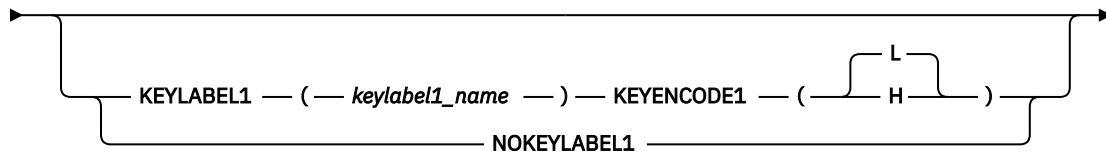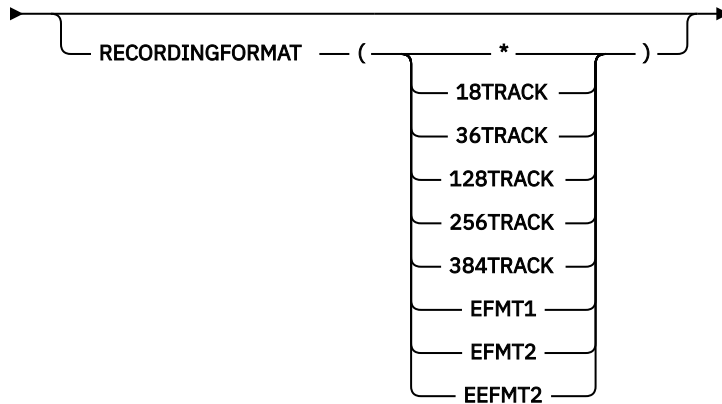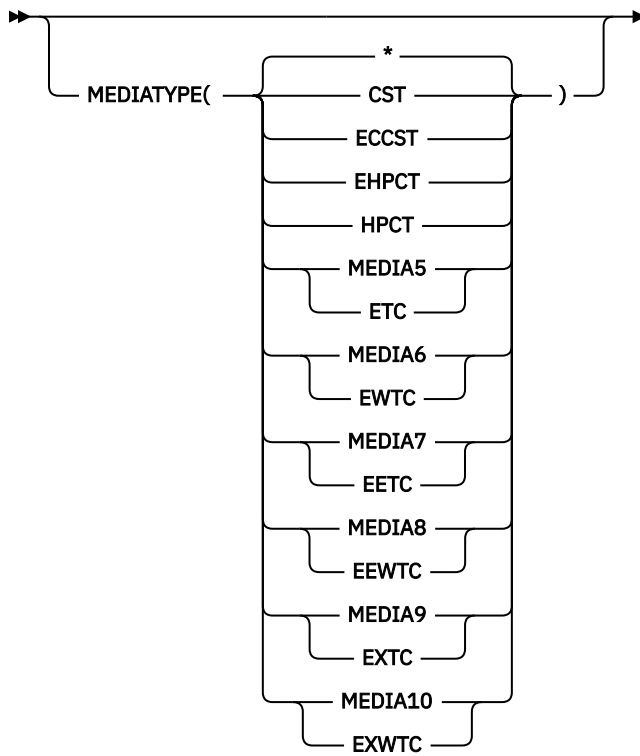

KEYLABEL1(*keylabel1_name*)

Specifies the key encryption key label number 1 for a non-scratch volume that is encrypted. A key label is 1-to-64 characters with blanks padding the field on the right. A key label contains alphanumeric, national, or special characters with some additional characters also allowed. Enclose it in single quotation marks if it contains any blanks or special characters.

When a volume is rewritten in a non-encryption format, DFSMSrmm does not clear the encryption key label related fields. Instead, the fields continue to be displayed until the volume is reused from scratch, or a release action causes them to be cleared.

When you specify this optional operand, you can also specify a value for the key encoding mechanism using the KEYENCODE1 operand.

KEYLABEL1 is mutually exclusive with NOKEYLABEL1.

KEYLABEL2(*keylabel2_name*)

Specifies the key encryption key label number 2 for a non-scratch volume that is encrypted. A key label is 1-to-64 characters with blanks padding the field on the right. A key label contains alphanumeric, national, or special characters with some additional characters also allowed. Enclose it in single quotation marks if it contains any blanks or special characters.

When a volume is rewritten in a non-encryption format, DFSMSrmm does not clear the encryption key label related fields. Instead, the fields continue to be displayed until the volume is reused from scratch, or a release action causes them to be cleared.

When you specify this optional operand, you can also specify a value for the key encoding mechanism using the KEYENCODE2 operand.

KEYLABEL2 is mutually exclusive with NOKEYLABEL2.

KEYENCODE1

Specifies the encoding mechanism used for KEYLABEL1.

L

Label

H

Public key hash

The default value is L.

KEYENCODE2

Specifies the encoding mechanism used for KEYLABEL2.

L

Label

H

Public key hash

The default value is L.

NOKEYLABEL1

Specify the NOKEYLABEL1 operand to clear an existing key encryption key label number 1 and encoding mechanism.

NOKEYLABEL1 is mutually exclusive with KEYLABEL1.

NOKEYLABEL2

Specify the NOKEYLABEL2 operand to clear an existing key encryption key label number 2 and encoding mechanism.


NOKEYLABEL2 is mutually exclusive with KEYLABEL2.

To use the EFMT2 and the EEFMT2 recording technology, you must specify the MEDIATYPE(MEDIA5/ETC, MEDIA6/EWTC, MEDIA7/EETC, MEDIA8/EEWTC, MEDIA9/EXTC, or MEDIA10/EXWTC) operand of the CHANGEVOLUME TSO subcommand.

SEARCHVOLUME

You can use the SEARCHVOLUME TSO subcommand to obtain a list of volumes that match selection criteria that you specify. Specify EEFMT2 to limit your search to volumes that are written in the EEFMT2 recording technology. You can also specify a particular media type, such as MEDIA9, to then further limit

your search. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the SEARCHVOLUME TSO subcommand.

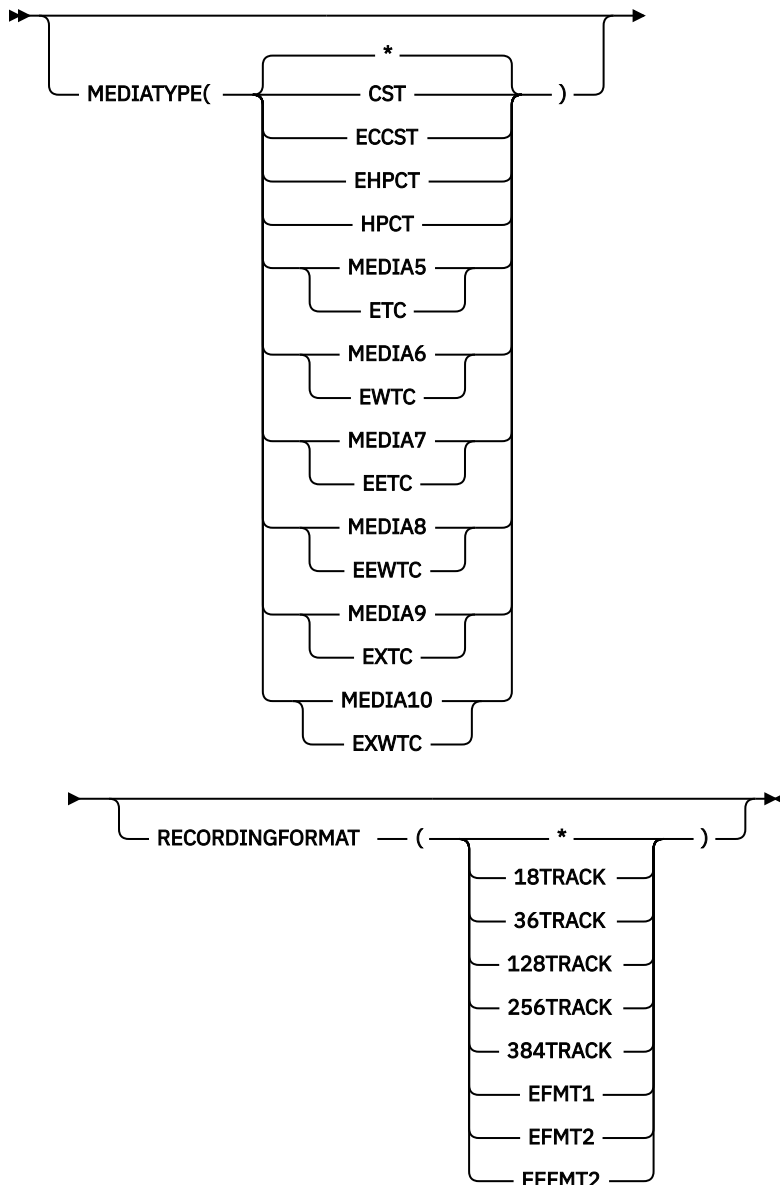

LISTVOLUME

You can use the LISTVOLUME TSO subcommand to display information that is recorded by DFSMSRmm for a single volume. You must specify a volume serial number.

To request all the information recorded by DFSMSRmm for the encrypted volume with serial number JJC024, issue the command:

```
RMM LISTVOLUME JJC024 ALL
```

DFSMSRmm displays information such as that shown:

```
Volume information:
Volume = JJC024 VOL1 = Rack = JJC024 Owner = RMMUSER
Type = PHYSICAL Stacked count = 0 Jobname = D016216J
Worldwide ID =
Creation: Date = 08/28/2006 Time = 04:49:14 System ID = W98MVS2
Assign: Date = Time = System ID = W98MVS2
Expiration date = 09/02/2006 Original =
```

```

Retention date =          Set retained = NO
Data set name = RMMUSER.TEST.CBR
Volume status:
Status = USER      Availability =          Label = SL
Current label version =          Required label version =
Media information:
Density = IDRC Type = EETC      Format = EEFMT2      Compaction = YES
Special attributes = NONE      Vendor =
Encryption Key Labels:
1=wcc1                      Method:
2=wcc2                      LABEL
                          LABEL
Action on release:
Scratch immediate = N Expiry date ignore = N
Scratch = Y Replace = N Return = N Init = N Erase = N Notify = N
Actions pending:
Scratch = N Replace = N Return = N Init = N Erase = N Notify = N
Storage group =
Loan location =          Account = T,H,IOM,,,SYSPROG
Description =
Security class =          Description =
Access information:
Owner access = ALTER Volume access = NONE Last change = *OCE
VM use = N MVS use = Y
Access list:
Statistics:
Number of data sets = 2      Data set recording= ON
Volume usage(Kb)= 2      Use count = 3
Volume capacity = 59232      Percent full = 0
Date last read = 08/28/2006 Date last written = 08/28/2006
Drive last used = 0FA0      Write mount count = 2
Volume sequence = 1      Media name = 3480
Previous volume =          Next volume =
Product number =          Level = V R M
Feature code =
Error counts:
Temporary read = 0      Temporary write = 0
Permanent read = 0      Permanent write = 0
Store information:
Movement tracking date =          Intransit = N
In container =          Move mode = AUTO
Location: Current      Destination Old      Required      Home
Name = ATL15393
Type = AUTO
Bin number =
Media name =

```

DFSMSrmm REXX variables

You can use the REXX variables to obtain volume information. The variables produced by the SEARCHVOLUME subcommand are stem variables.

Table 39. Changed TSO subcommand REXX variables

Variable Name	Subcommands	Contents	Format
EDG@MEDR	LV SV	Recording technology	One of *, 18TRK, 36TRK, 128TRK, 256TRK, 384TRK, EFMT1, EFMT2, and EEFMT2
EDG@KEL1	LV	Key encryption key label 1	1 to 64 characters
EDG@KEL2	LV	Key encryption key label 2	1 to 64 characters
EDG@KEM1	LV	Key encoding mechanism for key label 1	LABEL or HASH
EDG@KEM2	LV	Key encoding mechanism for key label 2	LABEL or HASH

DFSMSrmm structured field introducers

The DFSMSrmm application programming interface (API) returns data as structured fields in an output buffer that you define. Structured fields consist of a structured field introducer (SFI) and the data. SFIs describe the type, length, and other characteristics of the data.

Table 40 on page 242 shows the structured field introducers that support encryption-capable TS1120 tape drive tape drives.

Table 40. Changed structured field introducers

Name	Number	Type	Length	Value	Subcommands
MEDR	X'857000'	Binary(8)	9	Media type: 0=NON-CARTRIDGE 1=18TRK 2=36TRK 3=128TRK 4=256TRK 5=384TRK 6=EFMT1 7=EFMT2 8=EEFMT2	LV, SV
KEL1	X'83F500'	Character (variable length)	72	Key encryption key label 1	LV, SV(e)
KEL2	X'83F505'	Character (variable length)	72	Key encryption key label 2	LV, SV(e)
KEM1	X'83F520'	Character (variable length)	13	Key encoding mechanism for key label 1: LABEL or HASH	LV, SV(e)
KEM2	X'83F525'	Character (variable length)	13	Key encoding mechanism for key label 2: LABEL or HASH	LV, SV(e)

DFSMSrmm macros

Table 41 on page 242 shows the changes made to DFSMSrmm mapping macros for encryption-capable TS1120 tape drive tape drives.

Table 41. DFSMSrmm mapping macro changes

Mapping macro	Function	Updates
EDGEXTSY	Maps the extract data set symbols used with DFSORT.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: LABEL or HASH Key encryption key label 2. Key encoding mechanism for key label 2: LABEL or HASH
EDGRVEXT	Maps the volume records in the DFSMSrmm extract data set.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: LABEL or HASH Key encryption key label 2. Key encoding mechanism for key label 2: LABEL or HASH
EDGRXEXT	Maps the extended data set records in the DFSMSrmm extract data set.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: LABEL or HASH Key encryption key label 2. Key encoding mechanism for key label 2: LABEL or HASH

Table 41. DFSMSrmm mapping macro changes (continued)

Mapping macro	Function	Updates
EDGSMFSY	Maps the SMF record symbols used with DFSORT.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: L=LABEL H=HASH. Key encryption key label 2. Key encoding mechanism for key label 2: L=LABEL H=HASH.
EDGSVREC	Maps the DFSMSrmm SMF volume records.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: L=LABEL H=HASH. Key encryption key label 2. Key encoding mechanism for key label 2: L=LABEL H=HASH.
EDGCLREC	Maps the DFSMSrmm conversion library record.	Recording technology values: EFMT1, EFMT2, EEFMT2. Key encryption key label 1. Key encoding mechanism for key label 1: L=LABEL H=HASH. Key encryption key label 2. Key encoding mechanism for key label 2: L=LABEL H=HASH.

Chapter 36. EREP modifications for encryption-capable TS1120 tape drive

Environmental Recording, Editing, and Printing (EREP) program is a diagnostic application program that runs under MVS, VM, and VSE. It generates and prints reports from error recording data set (ERDS) records. With these reports, IBM service representatives can determine the existence, nature, and location of a problem.

EREP reports display the encryption-capable TS1120 tape drive as "3592-E05". For examples of EREP reports showing this model type, see [Chapter 48, "EREP modifications for 3592 Model E05," on page 315](#).

Chapter 37. JES3 modifications for encryption-capable TS1120 tape drive

JES3, a z/OS MVS subsystem, manages resources and work flow before and after jobs are processed. You can enable JES3 to allocate encryption-enabled 3592 Model E05 tape drives and tape volumes in an SMS-managed IBM tape library environment (automated or manual) for 3590 Model B emulation only. To do so, you need to specify at least one of these library device group (LDG) names in your JES3plex. An LDG is a predefined set of tape subsystems within a JES3plex.

LDLsssss

Includes any encryption-enabled 3592 Model E05 devices with the library indicated by serial number sssss.

LDGdddd

Includes any encryption-enabled 3592 Model E05 devices (dddd=359L) in any library in the JES3plex.

Chapter 38. OAM modifications for encryption-capable TS1120 tape drive

The Object Access Method (OAM) is a component of DFSMSdfp. OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. You can also use OAM's object support to manage objects on DASD, tape, and optical volumes.

Related reading:

- See [*z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries*](#) for additional information about using OAM to manage tape volumes and tape libraries.
- See [*z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support*](#) for additional information about using OAM to manage the data on tape volumes.
- See [*z/OS MVS System Messages, Vol 4 \(CBD-DMO\)*](#) for explanations and appropriate actions for CBRxxxxx messages.

OAM library support

OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. This topic describes the OAM library support functions that have been changed for use with the encryption-capable TS1120 tape drives. The enhancements include support for a new recording format EEFM2. The EEFM2 recording technology is supported starting with z/OS V1R4. Support for MEDIA9 and MEDIA10 media types, added with the base 3592 Model E05 support, begins with z/OS V1R5; therefore, any mention of MEDIA9 or MEDIA10 media types with this support applies to z/OS V1R5 and above.

These steps should be considered when planning to use the new 3592-2E drives:

1. Define the new devices using HCD.
2. Modify your ACS routines to select tape storage groups and libraries with 3592 Model E05 (encryption capable) devices.
3. Add, as appropriate, data classes to use EEFM2 on the new 3592-2E drives.
4. Specify, as appropriate, the key labels and encoding mechanism for each label.
5. Contact your tape management system vendor to obtain their support and any modified installation exits.

LCS external services changes

LCS External Services supports the applicable encryption-capable TS1120 tape drive media types, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10, and the recording technologies, EFMT1, EFMT2, and EEFM2, for these functions:

- Change use attribute
- Query volume residence
- Test volume eligibility
- Eject a volume
- Manual cartridge entry

Note:

- The MEDIA5, MEDIA6, MEDIA7, and MEDIA8 media types are valid with the EFMT1, EFMT2, and EEFM2 recording technologies.

- The MEDIA9 and MEDIA10 media types are valid only with the EFMT2 and EEFMT2 recording technologies.
- In general, in an environment sharing the TCDB at different software levels, if a lower-level system without appropriate support attempts to perform one of the CBRXLCS functions using a volume that has EEFMT2 recording technology, the request fails with existing return code LCSFAIL (12) and existing reason code LCSFNSUP (310).
- Coexistence support is provided at z/OS V1R4 and above to enable, during job processing, a scratch volume that is previously written with an up-level recording format to be used by a lower-level system that does not recognize the recording format. Because there is only one scratch pool per media type and that scratch pool can be used across systems at different levels of support, this support ignores the scratch volume's previous recording format and enables the scratch volume to be used on the lower-level system.

OAM installation exits changes

These installation exits support EEFMT2 recording technology:

- Change use attribute (CBRUXCUA) installation exit: Tape recording technology fields have been updated with EEFMT2.
- Cartridge entry (CBRUXENT) installation exit: Tape recording technology fields have been updated with EEFMT2.
- Cartridge eject (CBRUXEJC) installation exit: Tape recording technology fields have been updated with EEFMT2.
- Volume not in library (CBRUXVNL) installation exit: Tape recording technology fields have been updated with EEFMT2. For additional information regarding this exit, refer to [“Volume not in library installation exit enhancement”](#) on page 322.

Operator command support changes

Volumes with EEFMT2 recording technology are only displayed on systems with full encryption-capable TS1120 tape drive support installed.

These operator tasks have been changed in support of the encryption-capable TS1120 tape drive.

- The DISPLAY SMS,VOLUME command displays the new EEFMT2 recording technology.
- The LIBRARY DISPD RV command displays 3592-2E for the encryption-capable TS1120 tape drive in the output display for CBR1220I (Tape drive status).
- The LIBRARY SETCL command allows MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 to be set for an encryption-capable TS1120 tape drive that supports a cartridge loader.

Mount processing change

Since an encryption-capable TS1120 tape drive is able to read and write in the three 3592 recording formats (EFMT1, EFMT2, and EEFMT2), for a DISP=OLD request (or DISP=MOD treated as OLD), for an EFMT1 recorded volume, preference is given to the 3592 Model J1A, then to the base 3592 Model E05, and then to the encryption-capable TS1120 tape drive. For an EFMT2 request, preference is given to the 3592 Model E05 and then to the encryption capable 3592 Model E05. For a DISP=NEW request, an encryption-capable TS1120 tape drive is considered eligible for an EFMT1 and an EFMT2 request, as well as for the new EEFMT2 request. If a media type is not specified, for an EEFMT2 scratch request, the preference is MEDIA9 followed by MEDIA5 and then MEDIA7, enabling the higher capacity cartridges to be selected first.

OAM macro changes

[Table 42 on page 251](#) describes changes to OAM mapping macros and installation exit parameter lists in support of encryption-capable TS1120 tape drives.

Table 42. OAM mapping macro changes		
The macro	that maps	has these changes.
CBRTDSI	the tape device selection information (TDSI)	TDSEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE * ENCRYPTED FORMAT 2 (EEFMT2) DEVICE
CBRTVI	the tape volume information	TVIEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 2 (EEFMT2) DEVICE TVIREVV EQU 11 REVISION LEVEL
CBRUXCPL	the change use attribute installation exit parameter list	UXCEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 2 (EEFMT2) DEVICE
CBRUXEPL	the cartridge entry installation exit parameter list	UXEEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 2 (EEFMT2) DEVICE
CBRUXJPL	the cartridge eject installation exit parameter list	UXJEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 2 (EEFMT2) DEVICE
CBRUXNPL	the volume not in library installation exit parameter list	UXNEEFMT2 EQU 8 READ/WRITE ON ENTERPRISE ENCRYPTED FORMAT 2 (EEFMT2) DEVICE .

Cartridge entry processing

When a volume is entered into an IBM automated or manual tape library, the cartridge entry installation exit (CBRUXENT) is invoked to approve or deny an enter request, and to set or verify the recording technology to be associated with a volume.

If a volume TCDB record does not exist for the entry of a private MEDIA5, MEDIA6, MEDIA7, or MEDIA8 volume and there is no applicable recording technology being provided by the library's entry default data class, EFMT1 is passed to the exit; UNKNOWN might be passed for a scratch volume. If the exit returns with a recording technology for a MEDIA5, MEDIA6, MEDIA7, or MEDIA8 volume, and it is not EFMT1, EFMT2, or EEFMT2 (UNKNOWN is also allowed for a scratch volume), the specification is considered invalid, and the exit is disabled.

If a volume TCDB record does not exist for the entry of a private MEDIA9 or MEDIA10 volume, and there is no applicable recording technology being provided by the library's entry default data class, EFMT2 is passed to the exit; UNKNOWN might be passed for a scratch volume. If the exit returns with a recording technology for a MEDIA9 or MEDIA10 volume and it is not EFMT2 or EEFMT2 (UNKNOWN is also allowed for a scratch volume), the specification is considered invalid and the exit is disabled.

If a TCDB volume record exists and the volume's recording technology or media type is not supported on the system processing the volume, in an ATLDS, the volume is left in the library manager insert category to be processed by a system with appropriate support. The cartridge entry installation exit (CBRUXENT) is passed via register 1, the pointer to a parameter list mapped by CBRUXEPL.

If CBRXLCS FUNC=MCE is used to enter a volume into an MTL and its existing TCDB record has EEFMT2 recording technology or an unsupported media type (MEDIA9/MEDIA10, V1R4 system) and the software does not support the recording technology or the media type, the request fails with existing return code LCSFAIL (12) and existing reason code LCSFNSUP (310). If the CBRUXENT exit returns a unsupported recording technology or media type, the entry of the volume also fails.

OAM object tape support

In a stand-alone environment, the SETOAM TAPEUNITNAME parameter in the CBROAMxx member of PARMLIB can be specified using an esoteric that contains encryption-capable TS1120 (3592-2E) tape drives. In the stand-alone environment, 3592 Model J, 3592 Model E05 (not encryption capable), and 3592 Model E05 (encryption capable) drives need to be separated in their own unique esoteric in order to prevent allocating a 3592-J or 3592-2 drive for a volume written with EEFMT2 recording technology, because EEFMT2 is only compatible with 3592-2E drives. You can use the SETOAM DATACLASS parameter to specify EEFMT2 recording format to encrypt data, or specify non-encryption formats (EFMT1 or EFMT2). If no recording technology is specified, the default recording format for the TS1120 drives is EFMT2 when writing from load point. In an IBM tape library environment, the SETOAM DATACLASS parameter at the storage group (or global level) can be used to specify a desired recording technology and ensure allocating an appropriate drive.

The ERDS Physical ID (EPI) value for the 3592-2E drive is a hex '13' and is stored in the DB2 TAPEVOL table of the OAM Optical Configuration Database (OCDB) for a volume written in EFMT1, EFMT2, or EEFMT2 by a 3592-2E drive, and displayed, as appropriate, in the volume display. For the encryption-capable TS1120 tape drive (always in 3590 emulation mode), OAM derives the media type and capacity from the control unit. If EEFMT2 recording technology is used to write on the volume, the MEDIA5 and MEDIA6 capacity is 488281088 KB. The MEDIA7 and MEDIA8 economy capacity is 97655808 KB. The MEDIA9 and MEDIA10 extended capacity is 700 GB.

Object tape migration considerations

If you choose to encrypt your object data, any partially filled non-encrypted tape volumes associated with an object storage group that you want to encrypt, should be marked full and not writable, so they are not selected. This is important because at the volume level all of the data on the tape is either encrypted or non-encrypted, and a mix of the two cannot reside on the same tape.

In the past, when migrating to a new drive model with a new recording technology using media types that could also be used at a lower-level recording technology, you marked your partially filled volumes as full or not writable and new write requests were done at the new recording technology. When migrating from 3592-J or 3592-2 drives to 3592-2E drives, volumes written with EFMT1 or EFMT2 recording technology and not filled to capacity do not need to be marked as full or not writable. Data can be extended using the EFMT1 or EFMT2 recording technology on the encryption-capable TS1120 tape drive.

These items should be considered when planning to use 3592-2E drives:

If the 3592-2E devices are in an IBM tape library:

1. Follow the steps listed in [“OAM library support” on page 249](#) for OAM Library Support.
2. Add new data classes, specifying EEFMT2 recording technology.
3. Review ACS routines for STORE, or CTRANS, or both environments for any changes that may be necessary to ensure proper class assignment.

If the 3592 Model E05 (encryption capable) devices are not in an IBM tape library, use device esoterics for STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the Object storage groups that are to use the new devices. It is important to separate in an esoteric or generic the 3592 Model J devices and 3592 Model E05 (not encryption capable) from 3592 Model E05 (encryption capable) devices to prevent allocating an inappropriate drive for a volume written in EEFMT2 recording technology. Add new TAPEUNITNAME with the new device esoteric to the STORAGEGROUP statements in the CBROAMxx PARMLIB member for object storage groups or object backup storage groups that use the new devices.

Object tape volume management support

The encryption-capable TS1120 tape drive supports the existing 3592 media types (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10), including special handling of WORM (MEDIA6, MEDIA8, and MEDIA10) tape volumes that have expired. You cannot recycle WORM tape volumes because they cannot be written from load point.

Chapter 39. MVS IOS support for TS1120 tape drive

This topic describes changes to the IOS parmlib member and the MVS system commands to enable in-band key management for the encryption-capable TS1120 tape drive.

Related reading:

- For information about the IECIOSxx parmlib member, see [z/OS MVS Initialization and Tuning Reference](#)
- For information about MVS commands, see [z/OS MVS System Commands](#)

Changes to MVS parmlib members

A new parameter, EKM, is added to the IECIOSxx parmlib member in support of the encryption-capable TS1120 tape drive. With the EKM parameter, you can specify options for the Encryption Key Manager on your system. Refer to [z/OS MVS Initialization and Tuning Reference](#) for information on the IECIOSxx parmlib member.

Changes to MVS system commands

These MVS operator commands are updated in support of the encryption-capable TS1120 tape drive:

- DISPLAY IOS,EKM command
 - Displays the host names for the primary and secondary Encryption Key Manager (EKM).
 - Displays the maximum number of TCP/IP connections to the EKM, and the maximum number of permanent connections that can exist during EKM processing.
 - Verifies the EKM connectivity.
- SETIOS EKM command
 - Specifies the host names for the primary and secondary encryption key manager.
 - Specifies the maximum number of TCP/IP connections to the EKM, and the maximum number of permanent connections that can exist during EKM processing.

For more information about the DISPLAY IOS or SETIOS commands, see [z/OS MVS System Commands](#).

Other administration tasks in support of MVS in-band tape encryption

In-band tape encryption requires that the IOS address space has security permissions for a USS segment. The USS segment is only for TCP/IP connectivity; UID(0) or super user ability is not required. Depending on the security product running on your system, take one of these actions to obtain the security permission:

- In RACF, issue:

```
ADDUSER IOSAS OMVS(UID(xxxx) HOME('/ '))
```

where xxxx is an unique user id

- In CA-Top Secret Security for z/OS or eTrust, issue:

```
TSO TSS ADD(IOSAS) UID(xxxx) HOME('/ ')
```

where xxxx is an unique user id.

- In CA-ACF2 Security for z/OS authorization, issue:

```
TSO ACF INSERT IOSAS NAME(IOSAS ID) UID(yyyy) HOME(/)
```

where yyyy is a unique user id.

If a USS segment is not available at the time of tape encryption, this message is issued:

```
IOS628E ENCRYPTION ON DEVICE dddd HAS FAILED DUE TO OMVS SEGMENT FAILURE
```

Note: After adding the USS segment for the IOS address space, an IPL is needed for the new IOSAS segment to take affect.

IOS Proxy Retry Logic

When attempting to communicate with the primary Encryption Key Manager, the IOS proxy interface may retry several times before switching over to the secondary Encryption Key Manager. While these retries are occurring, the job may appear to have hung. Before cancelling the job, ensure that enough time is allowed because of these retry attempts that may be occurring on the primary Encryption Key Manager and also the secondary Encryption Key Manager. Typically, each retry attempt may take around 3 minutes with two retry attempts on the primary Encryption Key Manager before the IOS proxy interface attempts to connect to the secondary Encryption Key Manager. Similar logic is then in place with the secondary Encryption Key Manager. Once the IOS proxy interface has switched to the secondary Encryption Key Manager, it will always attempt to communicate with the primary Encryption Key Manager on subsequent communications. However, in this case, only one (shortened) attempt is made to communicate with the primary Encryption Key Manager before going back to the secondary Encryption Key Manager. If the IOS proxy interface cannot communicate with the primary Encryption Key Manager, even though the job may have been successful, message IOS627E is issued in the job log and in the system log alerting you to a potential problem with the primary Encryption Key Manager.

Part 4. 3592 Model E05 (also referred to as the TS1120)

Chapter 40. Introduction for 3592 Model E05

This topic describes the IBM System Storage Tape System 3592 Model E05 tape drives and the z/OS software support needed to use them.

IBM System Storage Tape System 3592

The IBM System Storage Tape System 3592 provides high capacity, performance, and reliability, along with a wide range of host connectivity. Specifically, the IBM System Storage Tape System 3592 offers these features:

- Creates tapes for archive files.
- Backs up and restores systems in case of system or disk storage problems.
- Stores high-speed, high-capacity sequential application data sets.
- Stores temporary data sets.
- Satisfies off-site data storage for disaster recovery.
- Provides data interchange with other systems that use 3592 subsystems.
- Supports WORM (write once, read many) tape data cartridges whose data cannot be altered.

3592 Model E05 tape drive

The IBM System Storage Tape System 3592 Model E05 tape drive reduces data storage costs by increasing media capacity. The 3592 Model E05 reads and writes in the new recording format EFMT2 (enterprise format 2) as well as EFMT1 (enterprise format 1). EFMT2 provides almost double the capacity of EFMT1. The IBM System Storage Tape System 3592 uses these IBM System Storage Tape System family of tape media for a 3592 Model E05:

- MEDIA5 - The IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) physical media. Provides an uncompressed capacity of 500 GB with EFMT2 (300 GB with EFMT1) and compressed capacity of 1500 GB with EFMT2 (900 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA6 - The IBM TotalStorage Enterprise WORM Tape Cartridge (MEDIA6) physical media. Provides an uncompressed capacity of 500 GB with EFMT2 (300 GB with EFMT1) and compressed capacity of 1500 GB with EFMT2 (900 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA7 - The IBM TotalStorage Enterprise Economy Tape Cartridge (MEDIA7) physical media. Provides an uncompressed capacity of 100 GB with EFMT2 (60 GB with EFMT1) and compressed capacity of 300 GB with EFMT2 (180 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA8 - The IBM TotalStorage Enterprise Economy WORM Tape Cartridge (MEDIA8) physical media. Provides an uncompressed capacity of 100 GB with EFMT2 (60 GB with EFMT1) and compressed capacity of 300 GB with EFMT2 (180 GB with EFMT1) assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA9 - The IBM TotalStorage Enterprise Extended Tape Cartridge (MEDIA9) physical media. MEDIA9 requires the EFMT2 recording format, and provides an uncompressed capacity of 700 GB and compressed capacity of 2100 GB assuming a 3:1 compression ratio, depending on the type of data written.
- MEDIA10 - The IBM TotalStorage Enterprise Extended WORM Tape Cartridge (MEDIA10) physical media. MEDIA10 requires the EFMT2 recording format, and provides an uncompressed capacity of 700 GB and compressed capacity of 2100 GB assuming a 3:1 compression ratio, depending on the type of data written.

You can use the 3592 Model E05 tape drive in the stand-alone environment or the tape library environment (automated or manual). Currently, the 3592 Model E05 tape drive does not have a cartridge loader.

Support for the 3592 Model E05 is provided at z/OS V1R4 or later releases, however support for MEDIA9 and MEDIA10 requires z/OS V1R5 or later releases.

Software support of the new media, MEDIA9 and MEDIA10, is available with the support of the 3592 Model E05, however the media itself will be available at a later GA.

The 3592 Model E05 tape drive offers these features:

- If no recording technology has been specified for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10, EFMT2 is the default recording technology.
- When writing from load point, the default recording technology of the 3592 Model E05 is EFMT2. If EFMT1 is needed for interchange purposes, it can be specified through data class. This applies to both the stand-alone and to the system-managed tape library environments.
- To enable the EFMT2 formatted cartridges to be relabelled/reused from load point on a 3592 Model J1A, a microcode update is required on the 3592 Model J1A.
- The 3592 Model E05 optionally provides performance scaling by using only the first 20 percent full capacity on a MEDIA5 or MEDIA9 cartridge. The default is to use the cartridge's full capacity. This performance scaling option is available on MEDIA5 and MEDIA9 tapes and is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
- The 3592 Model E05 optionally provides performance segmentation. Performance segmentation divides the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. This option is available on MEDIA5 and MEDIA9 tapes and is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media. The performance segmentation option is mutually exclusive with the performance scaling option.
- The 3592 Model E05 emulates only 3590 Model B1x tape drives (all 3592 tape cartridge media supported in this emulation mode) in standalone and in a system-managed tape library environment (manual or automated).
- The 3592 Model E05 supports only the 3592 Model J70 tape controller, with either ESCON or FICON attachment.
- The 3592 Model E05 coexists with 3490E, 3590, and 3592 Model J1A devices in the 3494 automated tape library.
- The 3592 Model E05 coexists with 3592 Model J1A in the 3584 automated tape library.
- The 3592 Model E05 coexists with 3490, 3490E, 3590, and 3592 Model J1A devices in a manual tape library.

The 3592 Model E05 tape drive is always in emulation mode as a 3590 Model B1x device. The 3592 Model E05 cannot use the MEDIA3 or MEDIA4 cartridges used in 3590 tape drives.

The 3592 Model E05 also supports special modes that enable a 3592 Model E05 to behave as a 3592 Model J1A. When a 3592 Model E05 is attached to a J70 control unit that also has 3592 Model J1A devices, the 3592 Model E05 will appear to the host as a 3592 Model J1A, thus ensuring that all devices attached to the same control unit are homogeneous and have the same behaviors.

Related reading:

- See *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555, for additional information.

Write Once, Read Many (WORM)

The write-once, read-many (WORM) function of tape data storage is accomplished on the 3592 Model E05 by a combination of microcode controls in the drive, and a special WORM tape cartridge (MEDIA6, MEDIA8 or MEDIA10). All 3592 drives are capable of reading and writing WORM cartridges.

When the drive senses that a cartridge is a WORM cartridge, the microcode prohibits the changing or altering of user data already written on the tape. The microcode keeps track of the last appendable point on the tape by means of an overwrite-protection pointer stored in the cartridge memory (CM). Statistical Analysis and Reporting System (SARS) data can be written and updated on WORM tapes because the SARS data is not in the user area of the tape. Each WORM cartridge is identified using a world-wide unique cartridge identifier (WWCID), which is permanent and locked, providing another level of security for data that must be maintained. This permanent locked information is stored in both the cartridge CM and on the tape itself, and can also be associated with the unique barcode VOLSER.

Note: In some publications, the world-wide unique cartridge identifier (WWCID) may also be referred to as the world-wide identifier (WWID).

While overwriting of data on a WORM cartridge is not allowed, appending is permitted under certain conditions. These operations are allowed:

- Appending an additional labeled file following the final file on a tape volume. This overwrites the final tape mark of a final pair of tape marks followed by a header label group for the file to be appended. Appending is only permitted where the trailer label group begins with a record that starts with EOF rather than EOV. EOV indicates that a file has been extended to a different volume.
- Appending an additional unlabeled file following the final file on a tape volume. This overwrites the final tape mark of a final pair of tape marks followed by the user file to be appended.
- Appending additional records to the final labeled file on a tape volume. This overwrites the final trailer label group and the tape mark immediately prior to the final trailer label group followed by the final file's user data records. Appending is only permitted where the trailer label group begins with a record that starts with EOF rather than EOV.
- Appending additional records to the final unlabeled file on a tape volume. This overwrites the final tape mark or pair of tape marks immediately following the last user data record of the unlabeled file.
- Relabeling a tape volume when only a header label group has been written and no user data records nor trailer label group has been written. This rewrites the header label group, including volume labels and remaining initial header label group records, where volume identification and other fields in the header label group may be changed. This is prohibited if the header label group was followed by a trailer label group, user data records, or more than two tape marks because user data is never overwritten.

Header label groups and trailer label groups are recognized when all records within them conform to either IBM Standard or ANSI Standard label definitions. Any record with a prefix not recognized as conforming to these standards is assumed to be a user data record and causes overwriting of the entire label group to be prohibited. Double tape marks are assumed to occur only after the final recorded unlabeled file or the final label group on a tape. More than two adjacent tape marks indicate a null structure, such as a null user data file, between the first two of the multiple adjacent tape marks. For this reason, no more than two final tape marks are overwritten in any attempt to append.

In addition, the 3592 drive permits certain normal error recovery actions to succeed when writing to a volume that had been previously interrupted due to some equipment, connectivity, or power malfunction. In particular, in ESCON and FICON attachment environments, certain channel error recovery programs are supported via a mode of operation where the ESCON or FICON controller simulates the rewriting of records. The simulation of rewriting of records presents the appearance at the host of successful rewrites of logical records. The simulation succeeds only if the actual record already recorded on the medium precisely matches the record sent to the 3592 drive from the host.

Performance scaling and segmentation for 3592

The 3592 Model E05 supports performance scaling and performance segmentation of media tape cartridges. These functions allow you to optimize performance for MEDIA5 and MEDIA9 cartridges; a cartridge can be defined for performance scaling or performance segmentation, but not both.

Performance scaling, also known as capacity scaling, is a function that allows you to contain data in a specified fraction of the tape, yielding faster locate and read times. Performance scaling for the 3592 Model E05 limits the data written to the first 20% (the optimally scaled performance capacity) of the cartridge. To select performance scaling for a cartridge, do these steps:

1. Define a data class that requests performance scaling.
2. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling.

The 3592 Model E05 tape drive also divides the tape into longitudinal segments. Using this capability, it is possible to segment the tape into two segments, one as a fast access segment to be filled first, and the other as additional capacity to be filled after. If you decide to use the performance segmentation attribute, do these steps:

1. Define a data class that requests performance segmentation.
2. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation.

Performance segmentation can also be used with the 3592 Model J1A with MEDIA5, as can performance scaling.

With the 3592 Model E05 and EFMT2, the MEDIA5 cartridge can be segmented into a 100 GB fast access segment and a 333 GB slower access. With the 3592 Model J1A and EFMT1 (or the 3592 Model E05 and EFMT1), the MEDIA5 cartridge can be segmented into a 60 GB fast access segment and a 200 GB slower access segment. The segmented capacities of the extended length cartridge, MEDIA9, is 700 GB.

With a segmented cartridge still having only one physical partition and one EOV indicator, data can only be written to the slower access segment after the fast access segment has been filled. Once the fast access segment has been filled, any data written will continue into the slower access segment. However, if an application wishes to manage what data is placed in which segment, the application will need to manually track and fill the fast access segment before it can place less frequently accessed data in the slower access segment. IBM application control and management of what data is placed in which segment is not being addressed with this support.

The segmentation format may be of benefit if the amount of data written to a tape cartridge is typically between the economy and longer-length cartridge capacities, with data written in the first segment having faster access times. Additionally, for customers that tend to utilize the full capacity of the cartridge, the segmentation format can be used to maximize performance benefits. Otherwise, with the native format using all of the tape cartridge's wraps, performance degradation can occur when data is written to the last few wraps of the tape.

z/OS software support for the 3592 Model E05 tape drive

Use z/OS software with the 3592 Model E05 to increase your data storage capacity with the IBM System Storage family of tape media and the EFMT2 recording technology. [Table 43 on page 260](#) describes z/OS DFSMS components, Multiple Virtual Storage (MVS) Device Allocation, Environmental Recording, Editing, and Printing (EREP), DFSORT, and JES3 that provide software support for the 3592 Model E05.

<i>Table 43. Components that provide software support for the 3592 Model E05 tape drive</i>	
Component	Function
AMS	AMS allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media for volumes as well as the printing and displaying of information about the recording technology and media type.
Device Services	Device Services manages the IBM System Storage Tape System 3592 devices.
DFSORT	DFSORT works without change with the IBM System Storage Tape System 3592 devices.
EREP	EREP provides device type information when formatting LOGREC records.

Table 43. Components that provide software support for the 3592 Model E05 tape drive (continued)

Component	Function
DFSMSHsm	DFSMSHsm allows the use of 3592 devices and media for DFSMSHsm-related activities. Customers can choose to limit the data written to the first 20% (the optimally scaled performance capacity) of the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 and MEDIA9) by using the data class performance scaling attribute. Alternatively, customers can choose to divide MEDIA5 and MEDIA9 cartridges into a fast access segment to be filled first, and a slower access segment to be filled after, using the performance segmentation attribute. These options are not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
ISMF	ISMF allows the use of 3592 devices and media in the ISMF Data Class Application, Mountable Tape Volume Application, and the Tape Library Management Application. In addition, the data class performance scaling attribute, if selected, allows the user to limit the amount of data written to each tape. This applies to MEDIA5 and MEDIA9 tape cartridges and limits the cartridge capacity to 20%. ISMF alternatively allows MEDIA5 and MEDIA9 cartridges to be divided into fast access and slower access segments, using the performance segmentation attribute. The performance scaling and performance segmentation attributes are mutually exclusive for a given cartridge.
z/OS Multiple Virtual Storage (MVS) Allocation	z/OS MVS Allocation allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media when using the Dynamic Allocation Text Unit DALINCHG.
OAM	OAM tape library support allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media in the IBM 3494 and 3584 Automated Tape library and in the manual tape library. OAM object tape support allows the use of 3592 devices and media for object-related activity. Customers can also choose to limit the data written to the first 20% (the optimally scaled performance capacity) of the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 and MEDIA9) by using the data class performance scaling attribute. Alternatively, customers can choose to divide MEDIA5 and MEDIA9 cartridges into a fast access segment to be filled first, and a slower access segment to be filled after, using the performance segmentation attribute. These options are not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.

Table 43. Components that provide software support for the 3592 Model E05 tape drive (continued)

Component	Function
OCE/IFGOJES3	OCE/IFGOJES3 allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media in the stand-alone environment and the tape library environment. New devices can also be used in a tape library that is JES3-managed.
DFSMSrmm	DFSMSrmm allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media. DFSMSrmm records the volume capacity for a volume including the volume capacity when performance scaling or performance segmentation is specified. This applies to the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 and MEDIA9).
SMS	SMS allows the use of the EFMT1 and EFMT2 recording technology and IBM System Storage family of tape media. You can specify the data class performance scaling attribute or the performance segmentation attribute for the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 and MEDIA9). These options are not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.

Using 3592 Model E05 tape drives in an IBM tape library environment

z/OS DFSMS provides device allocation and media management in the 3494 and 3584 automated or manual tape library environments for 3592 Model E05 tape drives. This full support is required when 3592 Model E05 tape drives are installed in an IBM tape library environment. 3592 Model E05 drives can coexist with 3950 Model B1x, 3590 Model E1x, 3590 Model H1x and 3592 Model J1A drives in the same library; however, depending on the library type and model, certain device types may only be supported in certain libraries. For example, the IBM 3584 automated tape library only supports the 3592 family of tape drives.

Inside an IBM tape library, only 3590 Model B1x emulation is supported. The system-managed tape library support recognizes the device as its real device type instead of its emulated device type; this enables "real" and emulated 3590 Model B1x tape drives to coexist and be properly managed in the same IBM tape library.

To request WORM media in a system-managed tape library environment and to ensure that WORM media is only used when explicitly requested, if a WORM scratch volume is to be used, media types MEDIA6, MEDIA8, or MEDIA10 must be explicitly specified through data class. If a media type is not specified through data class, MEDIA9 is the primary scratch media type, MEDIA5 is the alternate scratch media type if there are no MEDIA9 scratch volumes available, and MEDIA7 is the second alternate scratch media if there are no MEDIA9 or MEDIA5 scratch volumes available.

Before using the new 3592 Model E05, ensure that all existing 3592 Model J1A drives in the library are upgraded to recognize and enable EFMT2-formatted cartridges to be relabelled/reused on the 3592 Model J1A. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

Using 3592 Model E05 tape drives in a stand-alone environment

3592 Model E05 tape drives emulate already-supported tape devices. To use these drives in a nonlibrary environment, you must manage mixed media and resolve drive allocation ambiguities between 3592 Model E05 drives, the actual models of drives that are being emulated, and other 3590 Model B1x emulated devices. This is because the emulated device type is recorded in the data set records of user catalogs. You must manage media and device allocation according to your installation's storage management policies. You must separate real and emulated device types.

Before using the new 3592 Model E05, ensure that all existing 3592 Model J1A drives are upgraded to recognize and enable the EFMT2-formatted cartridges to be relabelled/reused on the 3592 Model J1A. Otherwise, job failures might occur with a drive with the incorrect microcode load being allocated.

Recommendation: Use a manual tape library, DFSMSrmm, third-party tape management software, or write your own applications when using 3592 Model E05 tape drives in a stand-alone environment.

Resolving recording technology conflicts for 3592

The 3592 Model J1A and E05 tape drives can both write to MEDIA5-MEDIA8 media types, however conflicts occur, when an EFMT2 formatted cartridge is mounted on a EFMT1-only tape drive and is being relabelled/reused.

The OPEN and EOVS routines can resolve these recording technology conflicts if you meet these conditions:

- Set OPEN for output to the first file
- Specify VOLNSNS=YES in the DEVSUPxx member of PARMLIB
- Position the tape cartridge at the load point.

If these conditions are met and if the cartridge has an internal *volser* recorded in its volume control region, OPEN and EOVS routines rewrite the VOL1 label with the volume identifier in the sense data.

Note: To enable this support, make sure that the 3592 Model J1A devices are at the appropriate microcode level, so that an up-level volume can have its volume identifier returned in the sense data.

For additional information about resolving recording technology conflicts, see [z/OS DFSMS Using Magnetic Tapes](#) and [z/OS DFSMS Installation Exits](#).

Implementation considerations for Using 3592 Model E05 tape drives

Consider these implementation tasks for using DFSMS software support for 3592 Model E05 tape drives.

- For non-specific mount requests in a stand-alone (non-SMS) tape environment, there are no automatic system controls for WORM cartridges. This can result in inadvertent and irreversible writes to WORM media. Using the tape management system pooling support to set up pools to select WORM versus R/W tape media and selecting economy length, standard length, or extended length cartridges help to guarantee that the correct media type is mounted.

In addition, SMS data class policies can be used to control WORM mounts for stand-alone, non-specific mount requests. There are two ways to enforce the data class media policy:

- Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=ALLMEDIATY. ALLMEDIATY enforces all data class media policies for all stand-alone scratch mounts.
 - Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=MEDIA5PLUS. MEDIA5PLUS ensures data class media policies for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 are enforced for stand-alone scratch mounts.
- In the manual tape library (SMS) environment, WORM scratch mounts can be managed through the tape management system pooling support instead of data class. The DEVSUPxx keyword,

MTL_NO_DC_WORM_OK, allows a WORM scratch volume to be used, even if it was not explicitly requested through data class.

- For the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9), use the performance scaling attribute specified through the ISMF data class application if you want to select optimal performance scaling for certain types of jobs and applications. The default setting is to use the tape to its full capacity. This can be specified for tape allocations that are inside or outside an IBM tape library environment. The performance scaling option is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
- For the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9), use the performance segmentation attribute specified through the ISMF data class application if you want to divide the cartridge into a fast access segment and a slower access segment. The fast access segment will be filled first, after which the slower segment will be filled. The performance segmentation option is mutually exclusive with the performance scaling option, and is not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
- If you have mixed 3590-1 devices in a non-SMS environment, you need to define a unique esoteric name for each recording technology. Identify the esoteric names to DFSMSHsm using the SETSYS USERUNITTABLE(*esoteric1:esoteric1, esoteric2:esoteric2...*) command to ensure that the correct device type is requested when the tape is mounted for input or output. If your installation uses SMS-managed tape devices or has a single 3590-1 recording technology, you do not need to define an esoteric for those devices; you might need to specify that DFSMSHsm allows mixed devices in the 3590-1 generic name (see APAR OW57282).
- In the stand-alone (non-SMS) environment, perform these implementation steps:
 1. Define data classes or alter existing data classes to:
 - Use the performance scaling attribute or performance segmentation attribute with the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9).
 - To take advantage of the data class media enforcement support enabled through DEVSUPxx (ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS).
 - As appropriate, use the media interchange recording technology specification (E1) to request that the lower recording format EFMT1 be used. By default, when writing from load point, EFMT2 is used by the 3592 Model E05.
 2. Update the ACS routine to assign the appropriate data class construct.
- In an IBM tape library environment, perform these implementation steps:
 1. Define or alter existing data classes to:
 - Specify the recording technology, media type, performance scaling, and performance segmentation attributes, as appropriate. The performance scaling and segmentation attributes apply to the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5 or MEDIA9). These options are not available on MEDIA6, MEDIA7, MEDIA8, or MEDIA10 tape cartridge media.
 - As appropriate, use the media interchange recording technology specification (E1) to request that the lower recording format EFMT1 be used. By default, when writing from load point, EFMT2 is used by the 3592 Model E05.
 2. Define or alter existing tape storage group constructs.
 3. Update ACS routines to direct allocation to appropriate 3592 devices and media.
 4. Validate and activate the new or modified SMS configuration.
 5. Update parmlib member DEVSUPxx (as appropriate) with the MEDIAx parameters (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10) specifying the library partitioning category codes.

Related reading:

See [Chapter 41, “Migration to the software support for 3592 Model E05 tape drives,”](#) on page 265 for migration information and implementation information.

Chapter 41. Migration to the software support for 3592 Model E05 tape drives

DFSMS software support for the 3592 Model E05 addresses media management and data allocation in an IBM 3494 Automated Tape Library, in an IBM 3584 Automated Tape Library, and in the manual tape library (MTL). You can manage media and allocate data to appropriate nonlibrary drives through separation of the real and emulating drives, third-party tape management software, or user-written applications. You can use the 3592 Model E05 drive on systems that are running z/OS V1R4 and above. However, to use the new 3592 media types, MEDIA9 and MEDIA10, z/OS V1R5 and above must be used.

This topic outlines the tasks and associated procedures that must be performed to migrate to software support for the 3592 Model E05 tape drive in these environments:

- Stand-alone environment
- IBM tape library environment
- OAMplex
- HSMplex

Understanding coexistence considerations for 3592 Model E05

Coexistence support for the 3592 Model E05 is provided at z/OS V1R4 and above by installing the needed full-support PTFs without the Device Services enabling PTF. In addition to this, existing device services support (with APAR OA02207) prevents the 3592 Model E05 devices from coming online on a system that does not have all of the full-support PTFs installed. Installation of the Devices Services enabling PTF brings in all of the needed full-support PTFs. You must install the needed coexistence support on systems that will not have all of the 3592 Model E05 support installed. See [Table 44 on page 266](#) for a discussion of the coexistence PTFs that may be needed. For past discussion of the 3592 Model J1A and its coexistence considerations, refer to [“Understanding coexistence considerations for 3592 Model J1A” on page 335](#).

Note: Full support for the 3592 Model E05 will first be available on z/OS V1R4 and z/OS V1R5 (refer to enabling APAR OA11388) with support for z/OS V1R6 and z/OS V1R7 available after the initial GA (refer to enabling APAR OA13110). Before using the 3592 Model E05, ensure that the appropriate full support and coexistence support is available for all of your system levels. Planned availability for z/OS V1R6 and z/OS V1R7 is year end 2005.

Review the coexistence migration tasks described in these topics:

Table 44. Coexistence migration tasks for 3592 Model E05

Environment	Coexistence considerations
Stand-Alone	<p>As described in Chapter 40, “Introduction for 3592 Model E05,” on page 257, z/OS DFSMS and related licensed programs provide full support for the 3592 Model E05 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8 with z/OS V1R4 and above, with support for the new media types, MEDIA9 and MEDIA10, being provided with z/OS V1R5 and above. The 3592 Model E05 support enables the tape drives to operate in the stand-alone environment in 3590 Model B1x emulation and to coexist with other 3590-1 or 3490 tape drives. However, prior to using the new 3592 Model E05 tape drives, ensure that all existing 3592 Model J1A tape drives have their microcode upgraded to recognize and enable the EFMT2 formatted cartridges to be relabelled/reused on the 3592 Model J1A. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p>
IBM Tape Library	<p>As described in Chapter 40, “Introduction for 3592 Model E05,” on page 257, z/OS DFSMS and related licensed programs provide full support for the 3592 Model E05 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8, with z/OS V1R4 and above, with support for the new media types, MEDIA9 and MEDIA10, being provided with z/OS V1R5 and above. The system-managed tape library support allows the tape drives to operate in an ATL or MTL environment as 3590 Model B1x devices, providing device allocation and tape media management support. As appropriate for the library type and model, this support allows the 3592 Model E05 tape drives to coexist with other 3590-1 tape drives (3590 Model B, E and H and 3592 Model J) in the same tape library. However, prior to using the new 3592 Model E05 tape drives, ensure that all existing 3592 Model J1A tape drives have their microcode upgraded to recognize and enable the EFMT2 formatted cartridges to be relabelled/reused on the 3592 Model J1A. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.</p>

Table 44. Coexistence migration tasks for 3592 Model E05 (continued)

Environment	Coexistence considerations
OAMplex	<p>For OAM's object support customers, in addition to the planning steps required for migration to the software support for the 3592 Model E05 tape drives in the stand-alone and IBM tape library environments, there are coexistence considerations your installation must take into account before you install the software in an OAMplex:</p> <ul style="list-style-type: none"> • For the 3592 Model E05 support, OAM object tape coexistence support is provided at z/OS V1R4 and above, through installation of the full support PTF without the device services enabling PTF. • OAM coexistence support prevents lower-level systems from selecting volumes with ERDS Physical Identifier (EPI) values for object write requests that are not supported on that system and it also prevents MEDIA9 and MEDIA10 volumes from being selected on a system that is not enabled for the new media support. • OAM object support has coexistence considerations when running in an OAMplex environment with at least one system with the full support installed and enabled and at least one system at a release level where the new devices are supported; however, all of the support is not installed and enabled. In this mixed environment, it is possible for a retrieve request to be received for an object, which resides on a tape cartridge volume which was written in the EFMT2 format, by a system that does not have the 3592 Model E05 support installed, or by a system that supports the 3592 Model E05, but does not support the new media types (MEDIA9 or MEDIA10), or both. Coexistence support is provided that allows OAM to attempt to locate an instance of OAM in the OAMplex where the full support is installed and enabled and also, as applicable, to locate an instance of OAM that supports MEDIA9 and MEDIA10. MEDIA9 and MEDIA10 are only supported on z/OS V1R5 and above. If an instance of OAM is found where the request can be processed, the OAM on the system where the request originated will ship the retrieve request to the target system using XCF messaging services. Once 3592 Model E05 devices are used in an OAMplex environment and objects are written to tape volumes with the new EPI value recorded, it is expected that any OAM on a system where the full support is installed and enabled is eligible for processing requests using that volume with the exception of MEDIA9 and MEDIA10 which require z/OS V1R5 or above. Therefore, the devices must be made available to all instances of OAM where the full support is installed.
OCE (Open / Close / End-of-Volume)	<p>In support of the new media types (MEDIA9 and MEDIA10), coexistence support is provided for the new media types on z/OS V1R4 to prevent the new media types from being used on a non-supporting system. With the coexistence support installed, an abend will occur if a MEDIA9 or MEDIA10 volume is mounted on a non-supporting system.</p>
HSMplex	<p>For the 3592 Model E05 support, HSM coexistence support is provided at z/OS V1R4 and above, through installation of the full support HSM PTF without the device services enabling PTF. This allows the coexisting system to reject partial tapes written by the 3592 Model E05 in EFMT2. HSM coexistence support for the new media types (MEDIA9 and MEDIA10) is provided at the z/OS V1R4 level by applying both the OCE and HSM full support PTFs. This will ensure that HSM does not use MEDIA9 or MEDIA10 on a non-supporting system.</p>

Preparing to install the software

See *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555 for hardware requirements.

Coexistence support for the 3592 Model E05 is provided with z/OS V1R4 and above by installing the appropriate full support PTFs without the device services enabling PTF. Coexistence support is also provided for the new media types (MEDIA9 and MEDIA10) at z/OS V1R4 to handle requests for MEDIA9 and MEDIA10 on a non-supporting system. MEDIA9 and MEDIA10 are only supported on z/OS V1R5 and above.

Installing the appropriate PTFs

Refer to the 3592 PSP bucket for the APAR and PTF numbers applicable for each release. An enabling PTF exists to provide full device support for the 3592 Model E05. Installation of the appropriate enabling PTF pulls in all of the needed support PTFs and indicates to the system that all of the needed software support is installed. Support for z/OS V1R4 and z/OS V1R5 will be provided first with support for z/OS V1R6 and z/OS V1R7 following after the initial GA. With this split GA, in an OAMplex or an HSMplex, before using the 3592 Model E05, ensure that the appropriate support is available and installed at all of the release levels used in the plex.

In addition, as appropriate for your environment and release level, determine what coexistence PTFs are needed for your environment.

Planning for DFSMS software support for the 3592 Model E05

The planning steps you must consider to successfully install the 3592 Model E05 software, vary depending upon the tape environment you have installed. Also, remember that the 3592 Model E05 is supported on z/OS V1R4 with the existing media types (MEDIA5 through MEDIA8), however the new media types MEDIA9 and MEDIA10 are only supported on z/OS V1R5 and above. Table 45 on page 268 discusses planning considerations for stand-alone environments (including tape devices installed in vendors' automated tape libraries) and for IBM tape library environments.

Table 45. 3592 Model E05 planning considerations

Area	Planning considerations
System customization: stand-alone environment	<ol style="list-style-type: none">1. Determine whether you need help from your tape management system vendor and contact them, if needed.2. Upgrade 3592 Model J drive microcode to enable the drives to recognize and enable the EFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB.3. With availability of the new media (MEDIA9 and MEDIA10), determine if any microcode updates are needed.4. Determine which systems should have coexistence support and which systems should have full support.5. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.6. Determine when to IPL the host machine after installing all necessary PTFs.

Table 45. 3592 Model E05 planning considerations (continued)

Area	Planning considerations
System customization: IBM library tape environment	<ol style="list-style-type: none"><li data-bbox="501 285 1468 344">1. Determine whether you need help from your tape management system vendor and contact them, if needed.<li data-bbox="501 359 1468 451">2. Upgrade 3592 Model J drive microcode to enable the library drives to recognize and enable the EFMT2 formatted cartridges to be relabelled/reused. Also, ensure that VOLNSNS=YES is in the DEVSUPxx member of PARMLIB.<li data-bbox="501 466 1468 525">3. With availability of the new media (MEDIA9 and MEDIA10), determine if any microcode updates are needed.<li data-bbox="501 539 1166 564">4. Identify the installation exit changes that are needed.<li data-bbox="501 579 1468 638">5. Determine which systems should have coexistence support and which systems should have full support.<li data-bbox="501 653 1468 711">6. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.<li data-bbox="501 726 1427 751">7. Determine when to IPL the host machine after installing all necessary PTFs.

Table 45. 3592 Model E05 planning considerations (continued)

Area	Planning considerations
System customization: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new 3592 Model E05 devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the system customization planning steps listed for a stand-alone environment. b. Determine the esoteric or generic device names that need to be added to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Determine whether to use the global keyword DSNWITHSGNAME on the SETOAM statement in the CBROAMxx member of PARMLIB to append the object storage group name to the OAM object tape data set names. See “Object tape data set low-level qualifier enhancement” on page 396 for additional information. 2. If you install the new 3592 Model E05 devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the system customization planning considerations listed for an IBM tape library environment. b. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. 3. In addition, if you install the new 3592 Model E05 devices in an OAMplex: <ol style="list-style-type: none"> a. Ensure that the new 3592 Model E05 devices are available to all instances of OAM where the full support software is installed. b. Determine whether systems exist that will require coexistence support. This situation is particularly important in an OAMplex where at least one system has the full-support software installed and enabled, and at least one system will not have all of the support installed or enabled. Coexistence support is needed if not all of the systems in the OAMplex are at the same full-support level. c. To provide this coexistence support, as appropriate for the support and the release level, install the OAM full-support PTF without the enabling PTF or any separate coexistence support PTF. d. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.
System customization: DFSMSHsm	See “Implementation considerations for Using 3592 Model E05 tape drives” on page 263 and “DFSMSHsm tips” on page 307 .

Table 45. 3592 Model E05 planning considerations (continued)

Area	Planning considerations
Storage administration: stand-alone tape environment	<ol style="list-style-type: none"> 1. Determine how to setup your tape management systems pooling support to separate rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also to separate the standard, economy, and extended length cartridges, as appropriate for their job and application usage. 2. Review the usage of the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA, (optional) to ensure that the media type mounted is the media type requested through data class. This can be used in the tape management systems pooling support as an additional safety check. 3. Review the existing SMS data class media policies to ensure compatibility with existing tape scratch pool policies before enabling the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA. 4. Review the existing SMS data class recording technology policies to ensure that data set policies set to EFMT1 are being appropriately used. If a 3592 Model E05 is allocated and the specified data class indicates EFMT1, the drive records in the lower recording technology. 5. Determine if media should use performance segmentation, with a fast access segment to be filled first, and a slower access segment to be filled after. If you decide to use the performance segmentation attribute (available with MEDIA5 and MEDIA9 tape cartridges only, and mutually exclusive with performance scaling), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance segmentation. b. Modify or create ACS routines to associate the tape output functions using performance segmentation with a data class that requests performance segmentation. 6. Determine if media should be used at full capacity or scaled for optimal performance. If you decide to use the performance scaling attribute (available with MEDIA5 and MEDIA9 tape cartridges only), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance scaling. b. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling. 7. Determine how to allocate media to appropriate nonlibrary drives. Consider using the IBM manual tape library. You can also separate the real drives from the emulating drives, use third-party tape management software, or use customer-written applications. 8. Identify any needed changes to the hardware configuration definition (HCD) to define the new devices.

Table 45. 3592 Model E05 planning considerations (continued)

Area	Planning considerations
Storage administration: IBM tape library environment	<ol style="list-style-type: none"> 1. Review the usage of the DEVSUPxx PARMLIB option, MTL_NO_DC_WORM_OK, if the WORM cartridges in the manual tape library environment will be mounted through use of the tape management systems pooling support versus a data class WORM media specification. 2. Determine the 3592 media usage of rewritable (MEDIA5, MEDIA7, and MEDIA9) and WORM (MEDIA6, MEDIA8, and MEDIA10) media and also the usage of the standard, economy, and extended length cartridges. Then make the appropriate data class definition updates to select the appropriate media type. WORM media can only be used if explicitly requested through data class. 3. Review ACS routines for changes needed in selecting tape storage groups and libraries that have the new 3592 Model E05 devices. 4. Determine the data class updates that are needed to use the recording technology, media type, and performance scaling or performance segmentation data class attribute (performance scaling or segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 5. Identify any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member.
Storage administration: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new 3592 Model E05 devices in a stand-alone environment, follow the storage administration planning steps listed for a stand-alone environment. 2. If you install the new 3592 Model E05 devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the storage administration planning steps listed for an IBM tape library environment. b. Review ACS routines for STORE or CTRANS environments and make any changes needed to ensure proper class assignment. 3. If you install the new 3592 Model E05 devices in an OAMplex, you must make the devices available to all instances of OAM where the full support is installed.
Implementing this change could affect these areas of your processing environment:	
Area	Considerations
Storage Administration	<p>For the new 3592 media support (MEDIA9 and MEDIA10), these NaviQuest sample jobs have been changed for this function:</p> <ul style="list-style-type: none"> • ACBJBAD1 is the sample job used to define, alter, or display a data class. • ACBJBAIL is the sample job to generate data class list and a data class report. • ACBJBAIN is the sample job to generate data class report from a saved list. <p>ISMF panels have been changed. See z/OS DFSMSdfp Storage Administration for information about the ISMF panel changes. See Chapter 44, “ISMF modifications for 3592 Model E05,” on page 301 for information about ISMF support for the 3592 Model E05.</p>

Area	Considerations
Operations	<p>These commands have been updated with this support:</p> <ul style="list-style-type: none"> • DEVSERV QTAPE • DISPLAY SMS,LIBRARY(<i>libname</i>),DETAIL • DISPLAY SMS,OAM • DISPLAY SMS,VOLUME • IDCAMS ALTER LIBRARYENTRY • IDCAMS ALTER VOLUMEENTRY • IDCAMS CREATE LIBRARYENTRY • IDCAMS CREATE VOLUMEENTRY • IDCAMS DCOLLECT • IDCAMS LISTCAT • LIBRARY DISABLE • LIBRARY DISPDRV • LIBRARY ENTER • LIBRARY SETCL
Auditing	None.
Application development	<p>The mapping macros and installation exits listed have been changed for this function.</p> <ul style="list-style-type: none"> • CBRTDSI - Maps the Tape Device Selection Information • CBRTVI - Maps the Tape Volume Information • CBRUXCPL - Installation Exit CBRUXCUA Parameter List • CBRUXEPL - Installation Exit CBRUXENT Parameter List • CBRUXJPL - Installation Exit CBRUXEJC Parameter List • CBRUXNPL - Installation Exit CBRUXVNL Parameter List • DALINCHG - Dynamic Allocation DALINCHG Text Unit • EDGPL100 - EDGUX100 parameter list • EDGRXEXT - Maps the data set records in the DFSMSrmm extract data set • EDGRVEXT - Maps the volume records in the DFSMSrmm extract data set • EDGSVREC - Maps the DFSMSrmm SMF volume records • IECUCBCX - Maps the Tape UCB Device Class extension • IFGTPEP - Maps the installation exit main parameter list • IHADFVT - Maps the data facilities vector table • MSGDISP - Message display list

Area	Considerations
Diagnostic procedures	<p>The messages listed have been changed for this support.</p> <ul style="list-style-type: none"> • IEA435I • IEC205I • IGF513I • CBR0113I • CBR0114I • CBR0119I • CBR0185I • CBR0203I • CBR1082I • CBR1083I • CBR1084I • CBR1100I • CBR1110I • CBR1180I • CBR1220I • CBR1240I • CBR3660A • CBR4105I • CBR6419I • IGF512I • IGF513I
Automation products	None.
General use	For DFSMSrmm, use the RMM ADDVOLUME subcommand, the RMM CHANGEVOLUME, and the RMM SEARCHVOLUME subcommand for the recording technology EFMT1 and EFMT2 and for the media types MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10.

Implementing the DFSMS software support for the 3592 Model E05

To implement the 3592 Model E05 software support, perform the system-level and application-level tasks listed in these tables. **Required** tasks apply to any DFSMS installation enabling the function.

Optional tasks apply to only specified operating environments or to situations where there is more than one way to set up or enable the function. For more details on the procedures associated with a given task, see the reference listed.

System-level tasks	Condition	Procedure reference
<p><i>Stand-alone tape environment</i></p> <ol style="list-style-type: none"> 1. Make any needed changes to the HCD to define the new devices. 2. If more than one recording technology is used for the same device type, create a unique esoteric for each of the recording technologies. Use the esoteric unit names in DFSMSHsm to direct allocations uniquely to each group of devices. 3. If performance scaling or performance segmentation is used (available with MEDIA5 and MEDIA9 tape cartridges only), update or create ACS routines to assign a data class to tape output functions. For example, for DFSMSHsm, you can filter on single file tape data set names used by DFSMSHsm functions. Define the data class with the performance scaling or performance segmentation attribute. 4. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of 3592 Model E05 drives exclusively because the EFMT2 recording technology is not compatible with other recording technologies. 5. Install coexistence PTFs as appropriate. 6. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support • z/OS HCD User's Guide • z/OS DFSMSHsm Implementation and Customization Guide
<p><i>IBM tape library environment</i></p> <ol style="list-style-type: none"> 1. Define or alter existing data class constructs as appropriate, to specify the EFMT1 or EFMT2 recording technology, MEDIA5, MEDIA6, MEDIA7, or MEDIA8, MEDIA9, or MEDIA10 media type, and the performance attributes (performance scaling or performance segmentation available with MEDIA5 and MEDIA9 tape cartridges only). 2. Define or alter existing storage group constructs to include libraries with the new 3592 Model E05 devices. 3. Update ACS routines to direct allocation to the 3592 Model E05 device as requested. 4. Validate and activate any new or modified SMS configuration. 5. Make any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5 MEDIA6, MEDIA7, or MEDIA8, MEDIA9, or MEDIA10 tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 7. When systems are sharing a library with 3592 Model J devices installed, install coexistence PTFs as appropriate. 8. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries • z/OS HCD User's Guide • z/OS DFSMSdftp Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>OAM object tape environment</i></p> <p>The migration steps that you must take in tape environments that use OAM objects vary depending upon the type of environment that is installed:</p> <ol style="list-style-type: none"> If you install the new 3592 Model E05 devices in an OAMplex: <ol style="list-style-type: none"> Make the new 3592 Model E05 devices available to all instances of OAM where the full support software is installed. Install coexistence PTFs as appropriate. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). IPL the system. If you install the new 3592 Model E05 devices in an IBM tape library: <ol style="list-style-type: none"> Follow the migration steps listed for an IBM tape library environment. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. Make the needed changes to ACS routines for ALLOC, STORE, or CTRANS environments. If you install the new 3592 Model E05 devices in a stand-alone environment: <ol style="list-style-type: none"> Follow the migration steps listed for a stand-alone environment. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of 3592 Model E05 drives exclusively because the EFMT2 recording technology is not compatible with other recording technologies. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). Make the needed changes to ACS routines for ALLOC, STORE and CTRANS environments. 	Required	<p>z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support</p>
<p><i>DFSMSHsm tape environment</i></p> <p>DFSMSHsm allows the specification of tape unit names using either generic or esoteric names. Installations that have a mixture of non-SMS-managed 3590 devices defined under the 3590-1 generic name, need to perform these steps:</p> <ol style="list-style-type: none"> Define a unique esoteric for each recording technology. Use the SETSYS USERUNITTABLE command to define these esoteric names to DFSMSHsm. This also applies to mixed devices in the 3490 generic. Installations that use SMS-managed tape devices or have a single 3590-1 recording technology, do not need to define an esoteric for those devices. However, if you have a mixed SMS-managed 3590 environment, please review APAR OW57282. 	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>Setting up DFSMSHsm to use WORM output tapes for ABACKUP</i></p> <p>In a SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.</p> <p>In a non-SMS tape environment, the default allows tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUPxx parameter, ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS, is used, then the data class must request the appropriate media type for it to be successfully mounted.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
Application-level tasks	Condition	Procedure reference
<p>For programs that use dynamic allocation and cannot take advantage of predefined data class definitions, set the PARM for the DALINCHG text unit key in DALINCHG to specify the media type and recording technology for system-managed tape library allocations.</p>	Optional	z/OS MVS Programming: Authorized Assembler Services Guide

Chapter 42. Access method services (AMS) modifications for 3592 Model E05

This topic describes changes to the access method services (AMS) commands to support the 3592 Model E05 tape drives. These commands are changed.

- “ALTER LIBRARYENTRY” on page 279
- “ALTER VOLUMEENTRY” on page 281
- “CREATE LIBRARYENTRY” on page 284
- “CREATE VOLUMEENTRY” on page 287
- “DCOLLECT” on page 290
- “LISTCAT” on page 292



Attention: Use these AMS commands only to recover from tape volume catalog errors. Because AMS cannot change the library manager inventory in an automated tape library, use ISMF for normal tape library alter functions.

Related reading:

For explanations of all the parameters used with the AMS commands and additional examples, refer to *z/OS DFSMS Access Method Services Commands*.

ALTER LIBRARYENTRY

Use the AMS ALTER LIBRARYENTRY command to modify the attributes for an existing tape library entry.

ALTER LIBRARYENTRY command syntax

The syntax for the AMS ALTER LIBRARYENTRY command is as follows.

Keyword	Operands
ALTER	<div>entryname</div> <div>LIBRARYENTRY</div> <div>[CONSOLENAME(consolename)]</div> <div>[DESCRIPTION(desc)]</div> <div>[LIBDEVTYPE(devtype)]</div> <div>[LIBRARYID(libid)]</div> <div>[LOGICALTYPE{AUTOMATED MANUAL}]</div> <div>[NULLIFY([LIBDEVTYPE][LOGICALTYPE])]</div> <div>[NUMBEREMPTYLOTS(numslots)]</div> <div>[NUMBERSCRATCHVOLUMES(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num))]</div> <div>[NUMBERSLOTS(numslots)]</div> <div>[SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num))]</div>

ALTER LIBRARYENTRY parameters

The NUMBERSCRATCHVOLUMES parameter and the SCRATCHTHRESHOLD parameter include the MEDIA9 and MEDIA10 subparameters for the IBM System Storage family of tape media.

[NUMBERSCRATCHVOLUMES(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num))]

Identifies the total number of MEDIA1, MEDIA2, MEDIA3, MEDIA4, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 scratch volumes currently available in the given tape library.

MEDIA1(num)

The number of Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the number of Enhanced Capacity Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

The number of High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the number of IBM Extended High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA9(num)

Specifies the number of IBM TotalStorage Enterprise Extended Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA10(num)

Specifies the number of IBM TotalStorage Enterprise Extended WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

Abbreviation: NUMSCRV

[SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num))]

Identifies the scratch volume message threshold. When the number of scratch volumes in the tape library falls below the scratch threshold, an operator action message, requesting that scratch volumes be entered into the tape library, is issued to the library's console. When the number of scratch volumes exceeds twice the scratch threshold, the message is removed from the console.

MEDIA1(num)

Specifies the threshold number of Cartridge System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the threshold number of Enhanced Capacity System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

Specifies the threshold number of High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the threshold number of IBM Extended High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the threshold number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the threshold number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA9(num)

Specifies the threshold number of IBM TotalStorage Enterprise Extended Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA10(num)

Specifies the threshold number of IBM TotalStorage Enterprise Extended WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

Abbreviation: SCRTHR

Altering a tape library entry example

This example alters the entry for the tape library ATLLIB1.

```
//ALTERLIB JOB ...
//STEP1 EXEC PGM=IDCAMS
//SYSPRINT DD SYSOUT=A
//SYSIN DD *
  ALTER ATLLIB1 -
    LIBRARYENTRY -
    NUMBEREMPTYLOTS(2574) -
    NUMBERSCRATCHVOLUMES(MEDIA9(500) MEDIA2(400)) -
    SCRATCHTHRESHOLD(MEDIA9(200) MEDIA2(100))

/*
```

This command has these parameters:


- ATLLIB1 is the name of the entry being altered.
- LIBRARYENTRY alters a tape library entry.
- NUMBEREMPTYLOTS sets the number of empty slots to 2574.
- NUMBERSCRATCHVOLUMES sets the current number of scratch volumes available for MEDIA9 to 500 and for MEDIA2 to 400.
- SCRATCHTHRESHOLD sets the threshold number of scratch volumes for MEDIA9 to 200 and for MEDIA2 to 100.

ALTER VOLUMEENTRY

Use the AMS ALTER VOLUMEENTRY command to modify the attributes for an existing tape volume entry.

ALTER VOLUMEENTRY command syntax

The syntax of the ALTER VOLUMEENTRY command is as follows:

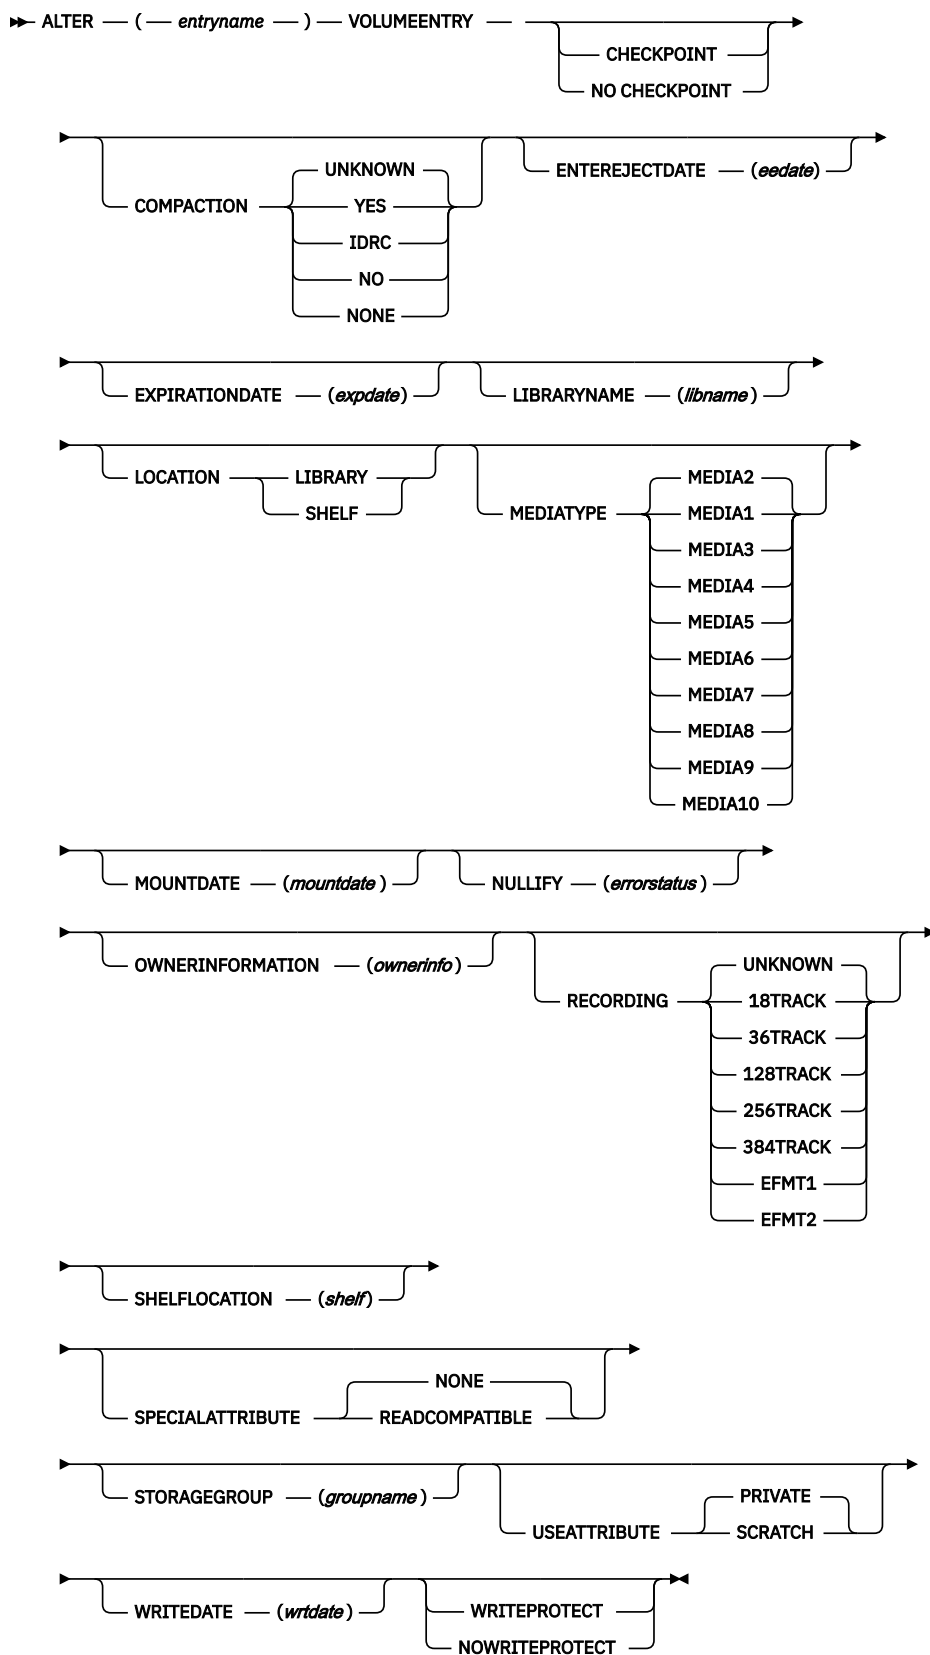

ALTER VOLUMEENTRY parameters

MEDIATYPE and RECORDING are optional parameters. The MEDIATYPE and the RECORDING parameters now include the additional subparameters MEDIA9, MEDIA10, and EFMT2 for the 3592 Model E05 tape drive.

MEDIATYPE{ MEDIA1| MEDIA2 | MEDIA3| MEDIA4| MEDIA5| MEDIA6| MEDIA7| MEDIA8| MEDIA9| MEDIA10}

Identifies the media type of the tape volume. If you do not use this, MEDIATYPE defaults to MEDIA2.

MEDIA1

Specifies that the tape volume is Cartridge System Tape.

MEDIA2

Specifies that the tape volume is Enhanced Capacity System Tape. You cannot use this parameter when SPECIALATTRIBUTE is READCOMPATIBLE or when RECORDING is set to 18TRACK.

MEDIA3

Specifies that the tape volume is High Performance Cartridge Tape.

MEDIA4

Specifies that the tape volume is IBM Extended High Performance Cartridge Tape.

MEDIA5

Specifies that the volume is IBM TotalStorage Enterprise Tape Cartridge.

MEDIA6

Specifies that the volume is IBM TotalStorage Enterprise WORM Tape Cartridge.

MEDIA7

Specifies that the volume is IBM TotalStorage Enterprise Economy Tape Cartridge.

MEDIA8

Specifies that the volume is IBM TotalStorage Enterprise Economy WORM Tape Cartridge.

MEDIA9

Specifies that the volume is IBM TotalStorage Enterprise Extended Tape Cartridge.

MEDIA10

Specifies that the volume is IBM TotalStorage Enterprise Extended WORM Tape Cartridge.

Abbreviation: MTYPE

[RECORDING{18TRACK|36TRACK|128TRACK| 256TRACK|384TRACK|EFMT1|EFMT2|UNKNOWN}]

Identifies the tape recording technology. This parameter can be used only for private tape volumes. The default for scratch tape volumes is UNKNOWN.

18TRACK

Tape was written on an 18-track device and must be read on an 18-track device or a 36-track device.

36TRACK

Tape was written and must be read on a 36-track device.

128TRACK

Tape was written on a 128-track device and must be read on a 128-track, 256-track, or 384-track device.

256TRACK

Tape was written on a 256-track device and must be read on a 256-track device or a 384-track device.

Note: 128TRACK and 256TRACK are valid only with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4).

384TRACK

Tape was written and must be read on a 384-track device.

Note: 384TRACK is valid only with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4).

EFMT1

Tape was written and must be read on an EFMT1 (enterprise format 1) device.

Note: EFMT1 is valid only with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), and (MEDIA8).

EFMT2

Tape was written and must be read on an EFMT2 (enterprise format 2) device.

Note: EFMT2 is valid only with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), (MEDIA8), (MEDIA9), and (MEDIA10).

UNKNOWN

Tape recording technology is unknown. This is the default value for scratch tape volumes.

Abbreviation: REC

Altering a volume entry example

This example of the ALTER VOLUMEENTRY command alters the entry name that describes volume 0A2991.

```
//ALTERVOL JOB ...  
//STEP1 EXEC PGM=IDCAMS  
//SYSPRINT DD SYSOUT=A  
//SYSIN DD *  
    ALTER VOLUMEENTRY(V0A2991) -  
          LIBRARYNAME(ATLIB02) -  
          USEATTRIBUTE(SCRATCH) -  
          MEDIATYPE(MEDIA9) -  
          RECORDING(EFMT2)
```

The parameters that are used in this example are as follows:

- ALTER VOLUMEENTRY indicates that an entry that describes a single volume in a library is being altered.
- V0A2991 specifies that the name of the volume being altered is V0A2991 and that the *volser* is 0A2991.
- LIBRARYNAME specifies that the name of the library with which this volume record is associated is ATLIB02.
- USEATTRIBUTE identifies the volume as being a SCRATCH tape.
- MEDIATYPE specifies the media type as MEDIA9.
- RECORDING specifies the recording technology as EFMT2.

CREATE LIBRARYENTRY

Use the AMS CREATE LIBRARYENTRY command to create a tape library entry. Use it only to recover from tape volume catalog errors.

CREATE LIBRARYENTRY command syntax

The syntax for the CREATE LIBRARY command is:

Keyword	Operands
CREATE	LIBRARYENTRY (NAME (<i>entryname</i>) LIBRARYID(<i>libid</i>)

Keyword	Operands
	[CONSOLENAME(<i>console</i> name)] [DESCRIPTION(<i>desc</i>)] [LIBDEVTYPE(<i>dev</i> type)] [LOGICALTYPE{AUTOMATED MANUAL}] [NUMBEREMPTYLOTS(<i>num</i> slots)] : [NUMBERSCRATCHVOLUMES(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>) MEDIA9(<i>num</i>) MEDIA10(<i>num</i>))]] [NUMBERLOTS(<i>num</i> slots)] [SCRATCHTHRESHOLD(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>) MEDIA9(<i>num</i>) MEDIA10(<i>num</i>))]]

CREATE LIBRARYENTRY parameters

The NUMBERSCRATCHVOLUMES parameter and the SCRATCHTHRESHOLD parameter now include the MEDIA9 and MEDIA10 subparameters for the IBM System Storage family of tape media.

**[NUMBERSCRATCHVOLUMES(MEDIA1(*num*) MEDIA2(*num*) MEDIA3(*num*) MEDIA4(*num*)
MEDIA5(*num*) MEDIA6(*num*) MEDIA7(*num*) MEDIA8(*num*) MEDIA9(*num*) MEDIA10(*num*))]]**

Identifies the total number of MEDIA1, MEDIA2, MEDIA3, MEDIA4, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10 scratch volumes currently available in the given tape library.

MEDIA1(*num*)

Is the number of Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA2(*num*)

Specifies the number of Enhanced Capacity Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA3(*num*)

Is the number of High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA4(*num*)

Specifies the number of IBM Extended High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA5(*num*)

Specifies the number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA6(*num*)

Specifies the number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA7(*num*)

Specifies the number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA8(*num*)

Specifies the number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA9(*num*)

Specifies the number of IBM TotalStorage Enterprise Extended Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA10(num)

Specifies the number of IBM TotalStorage Enterprise Extended WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

Abbreviation: NUMSCRV

[SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num) MEDIA9(num) MEDIA10(num))]

Identifies the scratch volume message threshold. When the number of scratch volumes in the tape library falls below the scratch threshold, an operator action message, requesting that scratch volumes be entered into the tape library, is issued to the library console. When the number of scratch volumes exceeds twice the scratch threshold, the message is removed from the console.

MEDIA1(num)

Specifies the threshold number of Cartridge System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the threshold number of Enhanced Capacity System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

Specifies the threshold number of High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the threshold number of IBM Extended High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the threshold number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the threshold number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA9(num)

Specifies the threshold number of IBM TotalStorage Enterprise Extended Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA10(num)

Specifies the threshold number of IBM TotalStorage Enterprise Extended WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

Abbreviation: SCRTHR

Creating a tape library entry example

The CREATE LIBRARYENTRY command can be used to perform functions shown in this example.

This example creates an entry for a tape library named ATLLIB1.

```
//CREATLIB JOB    ...
//STEP1    EXEC   PGM=IDCAMS
//SYSPRINT DD     SYSOUT=A
//SYSIN    DD     *
           CREATE LIBRARYENTRY -
             (NAME(ATLLIB1) -
```

```
LIBRARYID(12345) -  
LIBDEVTYPE(3494-L10) -  
LOGICALTYPE(AUTOMATED) -  
NUMBERSLOTS(15000) -  
NUMBEREMPTYSLOTS(1000) -  
NUMBERSCRATCHVOLUMES(MEDIA9(500) MEDIA2(400)) -  
SCRATCHTHRESHOLD(MEDIA9(200) MEDIA2(100)) -  
DESCRIPTION('TEST LIBRARY ATLLIB1') -  
CONSOLENAME(TESTCON)
```

/★

The parameters are:


- LIBRARYENTRY creates an entry for a tape library.
- NAME names the tape library ATLLIB1.
- LIBRARYID is the tape library's five-digit hexadecimal serial number, 12345.
- LIBDEVTYPE indicates that the tape library device type is 3494-L10.
- LOGICALTYPE specifies that the tape library is automated.
- NUMBERSLOTS is the total number of slots available in this tape library, 15000.
- NUMBEREMPTYSLOTS is the total number of empty slots currently available, 1000.
- NUMBERSCRATCHVOLUMES is the total number of MEDIA9 scratch volumes (500) and MEDIA2 scratch volumes (400).
- SCRATCHTHRESHOLD is the scratch volume threshold for MEDIA9 tape volumes (200) and MEDIA2 tape volumes is (100). When the number of available scratch volumes decreases to these values, an operator action message is issued to the console.
- DESCRIPTION is the description of the tape library.
- CONSOLENAME specifies that TESTCON is the console name.

CREATE VOLUMEENTRY

Use the AMS CREATE VOLUMEENTRY command to create tape volume entries.

CREATE VOLUMEENTRY command syntax

The syntax of the CREATE VOLUMEENTRY command is as follows:

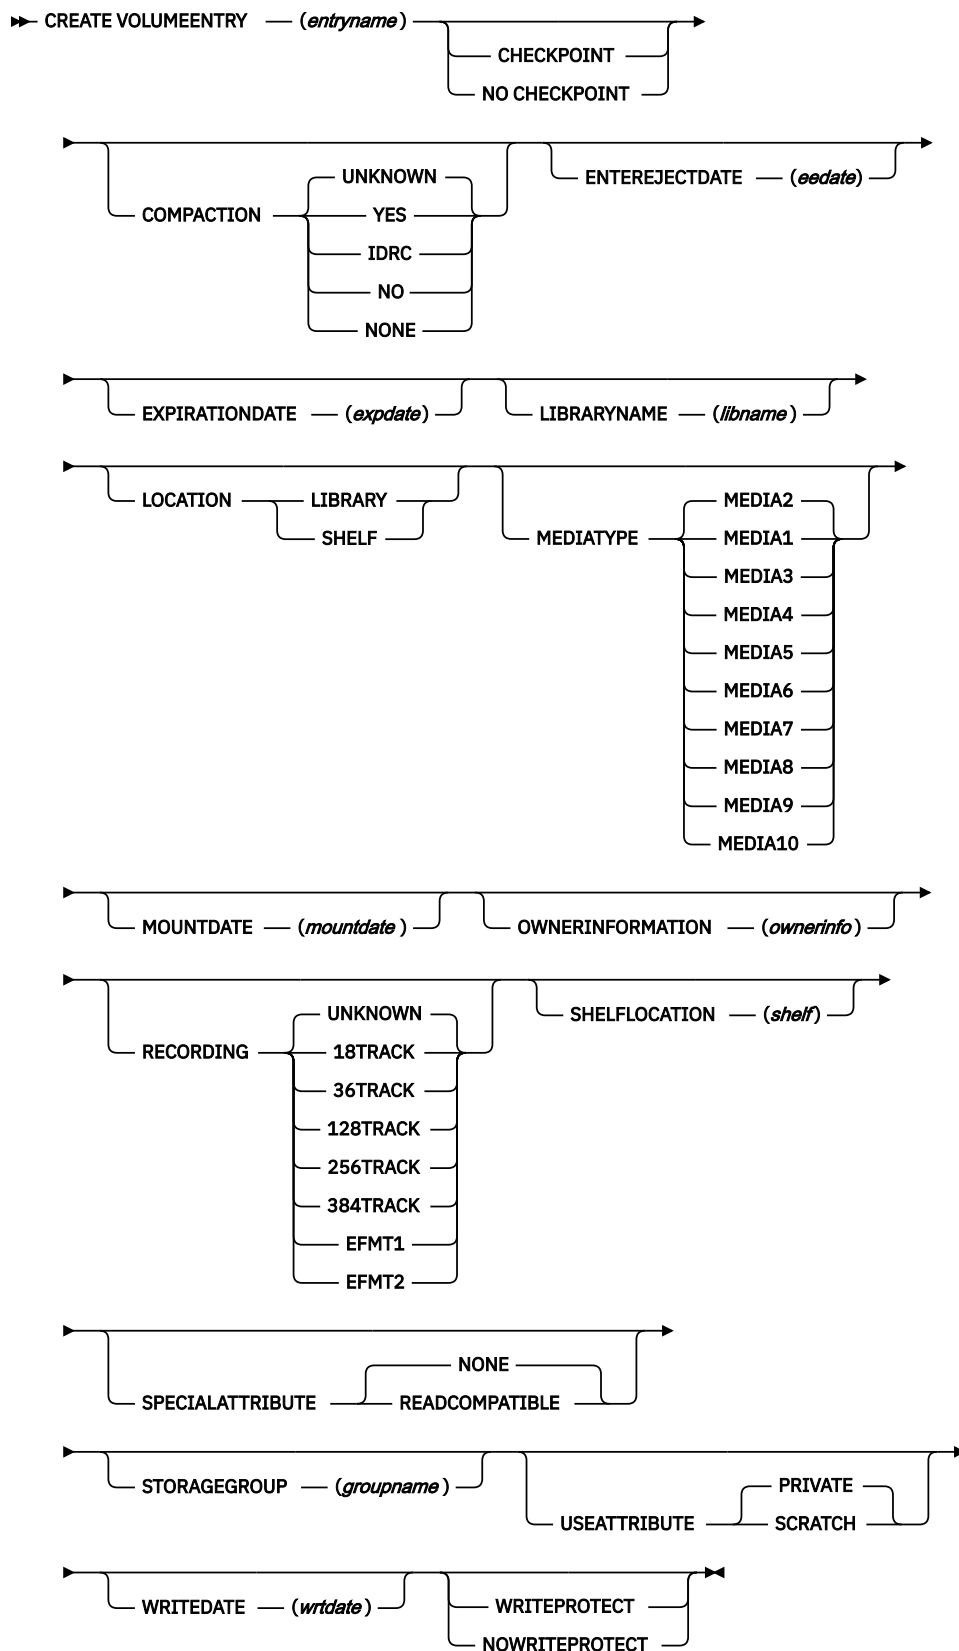

CREATE VOLUMEENTRY parameters

MEDIATYPE and RECORDING are optional parameters. The MEDIATYPE and RECORDING parameters now include the additional subparameters MEDIA9, MEDIA10, and EFMT2.

MEDIATYPE{ MEDIA1| MEDIA2| MEDIA3| MEDIA4| MEDIA5| MEDIA6| MEDIA7| MEDIA8| MEDIA9| MEDIA10}

Identifies the media type of the tape volume. If you do not use this, MEDIATYPE defaults to MEDIA2.

MEDIA1

Specifies that the tape volume is Cartridge System Tape.

MEDIA2

Specifies that the tape volume is Enhanced Capacity System Tape. You cannot use this parameter when SPECIALATTRIBUTE is READCOMPATIBLE, or RECORDING is set to 18TRACK.

MEDIA3

Specifies that the tape volume is High Performance Cartridge Tape.

MEDIA4

Specifies that the tape volume is IBM Extended High Performance Cartridge Tape.

MEDIA5

Specifies that the tape volume is IBM TotalStorage Enterprise Tape Cartridge.

MEDIA6

Specifies that the tape volume is IBM TotalStorage Enterprise WORM Tape Cartridge.

MEDIA7

Specifies that the tape volume is IBM TotalStorage Enterprise Economy Tape Cartridge.

MEDIA8

Specifies that the tape volume is IBM TotalStorage Enterprise Economy WORM Tape Cartridge.

MEDIA9

Specifies that the tape volume is IBM TotalStorage Enterprise Extended Tape Cartridge.

MEDIA10

Specifies that the tape volume is IBM TotalStorage Enterprise Extended WORM Tape Cartridge.

Abbreviation: MTYPE

[RECORDING{18TRACK|36TRACK|128TRACK| 256TRACK|384TRACK|EFMT1|EFMT2|UNKNOWN}]

Identifies the tape recording technology. This parameter can be used only for private tape volumes. The default for scratch tape volumes is UNKNOWN.

18TRACK

Tape was written on an 18-track device and must be read on an 18-track device or a 36-track device.

36TRACK

Tape was written and must be read on a 36-track device.

128TRACK

Tape was written on a 128-track device and must be read on a 128-track, 256-track, or 384-track device.

256TRACK

Tape was written on a 256-track device and must be read on a 256-track device or a 384-track device.

Note: 128TRACK and 256TRACK are valid only with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4).

384TRACK

Tape was written and must be read on a 384-track device.

Note: 384TRACK is valid only with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4).

EFMT1

Tape was written and must be read on an EFMT1 (enterprise format 1) device.

Note: EFMT1 is valid only with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), and (MEDIA8).

EFMT2

Tape was written and must be read on an EFMT2 (enterprise format 2) device.

Note: EFMT2 is valid only with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), (MEDIA8), (MEDIA9), and (MEDIA10).

UNKNOWN

Tape recording technology is unknown. This is the default value for scratch tape volumes.

Abbreviation: REC

Creating a VOLUME entry example

This example of the CREATE VOLUMEENTRY command creates a volume entry for volume 0A2991.

```
//CREATVOL JOB ...
//STEP1 EXEC PGM=IDCAMS
//SYSPRINT DD SYSOUT=A
//SYSIN DD *
CREATE VOLUMEENTRY(V0A2991) -
  LIBRARYNAME(ATLIB02) -
  USEATTRIBUTE(SCRATCH) -
  MEDIATYPE(MEDIA9) -
  RECORDING(EFMT2)
```

The parameters used in this example are as follows:

- CREATE VOLUMEENTRY indicates that an entry describing a single volume in a library is being created.
- V0A2991 specifies that the name of the volume entry being created is V0A2991 and the *volser* is 0A2991.
- LIBRARYNAME specifies that the name of the library with which this volume record is associated is ATLIB02.
- USEATTRIBUTE identifies the volume as being a SCRATCH tape.
- MEDIATYPE specifies the media type as MEDIA9.
- RECORDING specifies the recording technology as EFMT2.

DCOLLECT

The DFSMS Data Collection Facility (DCOLLECT) is a function of access method services. DCOLLECT collects data in a sequential file that you can use as input to other programs or applications.

DCOLLECT command syntax

The syntax of the DCOLLECT command is as follows.

Keyword	Operands
DCOLLECT	{OUTFILE(<i>ddname</i>) OUTDATASET(<i>entryname</i>)} {[VOLUMES(<i>volser</i> [<i>volser</i> . . .])] [BACKUPDATA] [CAPPLANDATA] [EXCLUDEVOLUMES(<i>volser</i> [<i>volser</i> . . .])] [MIGRATEDATA] [SMSDATA(SCDSNAME(<i>entryname</i>) ACTIVE)]

Keyword	Operands
	[STORAGEGROUP(<i>sname</i> [<i>sname</i> . . .])]} [DDCMEDIA{DDCMENUL DDCMEDA1 DDCMEDA2 DDCMEDA3 DDCMEDA4 DDCMEDA5 DDCMEDA6 DDCMEDA7 DDCMEDA8 DDCMEDA9 DDCMED10}] [DDCRECTE{DDCRTNUL DDC18TRK DDC36TRK DDC128TK DDC256TK DDC384TK DDCEfmt1 DDCEfmt2}] [ERRORLIMIT(<i>value</i>)] [EXITNAME(<i>entrypoint</i>)] [MIGRSNAPALL MIGRSNAPERR] [NODATAINFO] [NOVOLUMEINFO] [REPLACE APPEND]

DCOLLECT parameters

The optional DDCMEDIA parameter and the optional DDCRECTE include subparameters for support of the 3592 Model E05 tape drive.

DDCMEDIA(DDCMENUL | DDCMEDA1 | DDCMEDA2 | DDCMEDA3 | DDCMEDA4 | DDCMEDA5 | DDCMEDA6 | DDCMEDA7 | DDCMEDA8 | DDCMEDA9 | DDCMED10)

shows the type and format of the cartridges used for mountable tape data sets used with this data class. It is mapped by one of these attributes:

DDCMENUL

Media type is not specified (NULL). The constant value is 0.

DDCMEDA1

Media type is MEDIA1 (cartridge system tape media). The constant value is 1.

DDCMEDA2

Media type is MEDIA2 (enhanced capacity cartridge tape media). The constant value is 2.

DDCMEDA3

Media type is MEDIA3 (high-performance cartridge tape media). The constant value is 3.

DDCMEDA4

Media type is MEDIA4 (extended high-performance cartridge tape media). The constant value is 4.

DDCMEDA5

Media type is MEDIA5 (Enterprise Tape Cartridge media). The constant value is 5.

DDCMEDA6

Media type is MEDIA6 (Enterprise WORM Tape Cartridge media). The constant value is 6.

DDCMEDA7

Media type is MEDIA7 (Enterprise Economy Tape Cartridge media). The constant value is 7.

DDCMEDA8

Media type is MEDIA8 (Enterprise Economy WORM Tape Cartridge media). The constant value is 8.

DDCMEDA9

Media type is MEDIA9 (Enterprise Extended Tape Cartridge media). The constant value is 9.

DDCMED10

Media type is MEDIA10 (Enterprise Extended WORM Tape Cartridge media). The constant value is 10.

DDCRECTE

(DDCRTNUL | DDC18TRK | DDC36TRK | DDC128TK | DDC256TK | DDC384TK | DDCEFMT1 | DDCEFMT2)

indicates the number of recording tracks on the cartridge used for the mountable tape data sets associated with this data class.

DDCRTNUL

The recording technology is not specified (NULL). The constant value is 0.

DDC18TRK

The recording technology is 18TRACK. The constant value is 1.

DDC36TRK

The recording technology is 36TRACK. The constant value is 2.

DDC128TK

The recording technology is 128TRACK. The constant value is 3.

DDC256TK

The recording technology is 256TRACK. The constant value is 4.

DDC384TK

The recording technology is 384TRACK. The constant value is 5.

DDCEFMT1

The recording technology is EFMT1. The constant value is 6.

DDCEFMT2

The recording technology is EFMT2. The constant value is 7.

DCOLLECT example

Refer to [*z/OS DFSMS Access Method Services Commands*](#) for several examples of how to use the DCOLLECT function in a batch environment.

LISTCAT

Use the AMS LISTCAT command to list catalog entries.

LISTCAT command syntax

The syntax for the LISTCAT command remains the same, but its output can include new MEDIATYPE and RECORDING parameter values. The syntax is as follows:

Keyword	Operands
LISTCAT	[ALIAS] [ALTERNATEINDEX] [CLUSTER] [DATA] [GENERATIONDATAGROUP] [INDEX] [LIBRARYENTRIES(<i>libent</i>)] [NONVSAM] [PAGESPACE] [PATH] [USERCATALOG] [VOLUMEENTRIES(<i>volent</i>)] [CREATION(<i>days</i>)] [ENTRIES(<i>entryname</i> [/ <i>password</i>][<i>entryname</i> [/ <i>password</i>] . . .)] LEVEL(<i>level</i>)] [EXPIRATION(<i>days</i>)] [FILE(<i>ddname</i>)] [LIBRARY(<i>libname</i>)] [NAME HISTORY VOLUME ALLOCATION ALL] [OUTFILE(<i>ddname</i>)] [CATALOG(<i>catname</i>)]

LISTCAT parameters

The volume recording technology and media type are not parameters that can be specified with the LISTCAT command.

List tape volume entries sample output

The LISTCAT command displays the values for the RECORDING parameter and the MEDIATYPE parameter. [Figure 19 on page 294](#) shows EFMT2 as the recording technology and MEDIA9 as the media type used for volume 0A2991.

This example of the LISTCAT command lists all volumes in the ATLIB02 library catalog. The command returns catalog data for only one volume with a volume *entryname* value of V0A2991.

```

LISTCAT -
  VOLUMEENTRIES
  ALL
IDCAMS  SYSTEM SERVICES          TIME: 11:29:12      09/02/05      PAGE      2
                                LISTING FROM CATALOG -- SYS1.VOLCAT.V0

VOLUME-ENTRY---V0A2991
  DATA-VOLUME
  LIBRARY-----ATLIB02      RECORDING-----EFMT2      ERROR-STATUS----NOERROR      CREATION-DATE-2002-04-02
                                MEDIA-TYPE-----MEDIA9      USE-ATTRIBUTE----SCRATCH      ENT-EJ-DATE----- (NULL)
                                COMPACTION----- (YES)      LAST-MOUNTED----- (NULL)
                                SP-ATTRIBUTE-----NONE      WRITE-PROTECTED--- (NULL)      LAST-WRITTEN----- (NULL)
                                SHELF-LOC----- (NULL)      EXPIRATION----- (NULL)
                                OWNER----- (NULL)

IDCAMS  SYSTEM SERVICES          TIME: 11:29:12      09/02/05      PAGE      3
                                LISTING FROM CATALOG -- SYS1.VOLCAT.VGENERAL

  THE NUMBER OF ENTRIES PROCESSED WAS:
    AIX -----0
    ALIAS -----0
    CLUSTER -----0
    DATA -----0
    GDG -----0
    INDEX -----0
    NONVSAM -----0
    PAGESPACE -----0
    PATH -----0
    SPACE -----0
    USERCATALOG -----0
    TAPELIBRARY -----0
    TAPEVOLUME -----1
    TOTAL -----1

  THE NUMBER OF PROTECTED ENTRIES SUPPRESSED WAS 0
IDC0001I FUNCTION COMPLETED, HIGHEST CONDITION CODE WAS 0
IDCAMS  SYSTEM SERVICES          TIME: 11:29:12      09/02/05      PAGE      4

IDC0002I IDCAMS PROCESSING COMPLETE. MAXIMUM CONDITION CODE WAS 0

```

Figure 19. LISTCAT output for 3592 Model E05

The parameters used in this example are as follows:

- VOLUMEENTRIES specifies that information relating to tape volume entries for all volumes in the library are to be listed.
- ALL requires that all information that is associated with the tape volume entries is to be listed.
- LIBRARY specifies that only tape volume entries that are associated with the tape library named ATLIB02 are to be listed.

Chapter 43. Tape drive and tape volume allocation modifications for 3592 Model E05

Changes made to device support, storage management subsystem (SMS), and Multiple Virtual Storage (MVS) device allocation enable you to allocate the tape drives and tape volumes. Within an IBM tape library environment, your system can fully recognize all supported media types and recording technologies. This topic explains these changes:

- “Device support modifications” on page 295
- “SMS modifications” on page 298
- “MVS device allocation modifications” on page 298

Device support modifications

z/OS DFSMS device support provides hardware device-specific code, which allows tape drives, tape volumes, and DASD to interface with z/OS DFSMS. Specifically, it provides:

- The interfacing exits to the input/output supervisor (IOS) and EXCP device support code
- Error recovery procedure routines
- Services to acquire and log statistical and error data
- Services to acquire and display device states
- Utilities for functions like initializing tapes

You can use the MVS DEVSERV command to request basic status information on a device, a group of devices, or storage control units. You can use the QTAPE parameter of the DEVSERV command to display tape device information. Use DEVSERV QTAPE to display the real device type and the emulated device type.

With the DEVSERV QTAPE MED (medium) option, you can display information for the device type, media type, and cartridge volume serial number.

The syntax of the DEVSERV QTAPE command with the MED option is as follows:

DS QT,xxxx,MED,nnn

xxxx

Represents a three-digit or a four-digit device number in hexadecimal format.

nnn

Stands for the number of devices, starting at the address xxxx, for which the DEVSERV command displays the MED information. The value nnn is optional and can be any decimal number from 1 to 256, with 1 as the default value.

Figure 20 on page 295 shows the display content when you issue the DEVSERV QTAPE MED command.

```
-----
----      DS QT MED Display Content      ----
-----

IEE459I          DEVSERV QTAPE
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID  X
```

Figure 20. DEVSERV QTAPE MED display content

X UNIT - tape device address
RDTYPE - real device type
EDTYPE - emulated device type

```

EXVLSR - external volume serial of cartridge
INVLSR - internal volume serial of cartridge
RMEDIA - real media type of the volume mounted on the drive
EMEDIA - emulated media type of the volume mounted on the drive
WWID - world-wide identifier or world-wide unique cartridge identifier

```

Note:

1. EDTYPE, EXVLSR, INVLSR, RMEDIA, EMEDIA, and WWID are blank if information is not available.

2. Valid values for RMEDIA and EMEDIA are:

- 1=CST
- 2=EC-CST
- 3=3590 STD length tape
- 4=3590 EXT length tape
- 5=3592 Enterprise Tape Cartridge
- 6-W=3592 Enterprise WORM Tape Cartridge
- 7=3592 Enterprise Economy Tape Cartridge
- 8-W=3592 Enterprise Economy WORM Tape Cartridge
- 9=3592 Enterprise Extended Tape Cartridge
- 10-W=3592 Enterprise Extended WORM Tape Cartridge

RMEDIA and EMEDIA are blank when the media type is not defined or cannot be determined.

These examples show sample output and messages of the DEVSERV QTAPE command, and DEVSERV QTAPE with the MED option command.

Figure 21 on page 296 shows the output of DS QT,962,MED when a 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0962 3592-2 3590-1          10-W    3      85804D003C0000BC211CA0C

```

Figure 21. DS QT,962,MED output

Figure 22 on page 296 shows the output of DS QT,940,MED when a 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0940 3592-2 3590-1 003700          9      3

```

Figure 22. DS QT,940 output

Figure 23 on page 296 shows the output of DS QT,DA0 when a 3592 Model E05 tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 17.04.39 DEVSERV QTAPE 502
UNIT DTYPE DSTATUS CUTYPE DEVTYPE CU-SERIAL DEV-SERIAL ACL LIBID
0960 3590 ON-RDY 3592J70 3592E05* 0178-09F8A 0178-09F8A

```

Figure 23. DS QT,DA0 output

Figure 24 on page 297 displays the message that is issued when the input device address is valid, but the device is not a Model B1x, Model E1x, Model H1x, 3592 Model J, 3592 Model E05, or 3490E drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
      0B60(10) Y
**** (10) - UNSUPPORTED DEVICE TYPE

```

Figure 24. DS QT,B60,MED message

Y Reason Code 10, UNSUPPORTED DEVICE TYPE, is shown when the device type given is not a Model B1x, Model E1x, Model H1x, 3592 Model J, 3592 Model E05, or 3490E drive.

Figure 25 on page 297 shows the message and reason code 11 that you receive if the input device address and device type are valid, but the device is not ready.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
      0DA0(11) Z
**** (11) - DEVICE NOT READY

```

Figure 25. DS QT,DA0,MED message

A bit DFVTJAG2 is added to the IHADFVT mapping macro that maps the data facilities vector table. When set, it indicates that all of the software support for the 3592 Model E05 drive is on the system. This bit will be set by the enabling module IECTEPTF if it is installed.

System-wide DEVSUPxx parmlib member options control and manage media type selection for Automatic Tape Library (ATL) partitioning: MEDIA5=xxxx, MEDIA6=xxxx, MEDIA7=xxxx, MEDIA8=xxxx, MEDIA9=xxxx, and MEDIA10=xxxx where xxxx is a 4-digit hexadecimal category code.

The IECUCBCX mapping macro is changed to support the 3592 Model E05 tape drive. The EPI values are:

- X'12'--REALJAG2_EMUL3590

With MSGDISP macro interface, you can specify the message to be displayed and how to display it on magnetic tape devices that have displays. The parameter keyword, MEDIATYPE, can be used with the MOUNT and DEMOUNT keywords to indicate what media type to mount for scratch mounts on MTL devices. The value is specified as a quoted literal, unquoted literal, the address of a 1-byte field containing the value, or the name of the addressable field containing the value. Current valid values for MEDIATYPE are 1 through 10.

Currently there is a single byte limitation for the MEDIATYPE parameter keyword which passes an EBCDIC character representing the media type. This macro will be modified to allow specification of a value up to 10 via the MEDIATYPE keyword, but allowing for future media type values up to 255.

Valid and invalid specifications for MEDIA10 are described as follows:

VALID specifications

Literal (unquoted)

MEDIATYPE=10

ADCON

MEDIATYPE=A(HEX10) where HEX10 is defined as X'0A'

Register

MEDIATYPE=(3) where Reg 3 first has to be loaded with the address of HEX10 (e.g., LA R3,HEX10)

RX Format

MEDIATYPE=HEX10

INVALID specifications

Quoted Literal

MEDIATYPE='10'

Unquoted Literal

MEDIATYPE=A

ADCON

MEDIATYPE=A(CharA) where CharA is defined as EBCDIC 'A'

Register

MEDIATYPE=(3) where Reg 3 is first loaded with the address of CharA

RX Format

MEDIATYPE=CharA

SMS modifications

SMS automates and centralizes storage management. It automatically assigns service requirements and attributes to data when that data is created. SMS configuration services validate, for example, the recording technology value that ISMF specifies in data class definitions.

MEDIA9 and MEDIA10 will only be supported from z/OS DFSMS V1R5 and above.

SMS will support a new recording technology EFMT2, 2 new media types MEDIA9 and MEDIA10, and a new segmentation format option called 'Performance Segmentation' in Dataclass. This segmentation format option field is only applicable to media type 5, and the new media type 9. Performance Segmentation is mutually exclusive to the existing performance scaling option which will be verified during SMS validation process. Additionally, the Performance Scaling will also be supported for the new media type 9.

In an IBM tape library environment (automated or manual), use ISMF to specify the:

- EFMT1 recording technology attribute
- EFMT2 recording technology attribute
- Media type of MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10
- Performance scaling or performance segmentation option, if the media type is MEDIA5 or MEDIA9. Media types MEDIA6, MEDIA7, MEDIA8, and MEDIA10 are not scalable or segmentable.

The performance scaling or performance segmentation options can also be specified and used outside of the system-managed tape library environment.

In support of the 3592 Model E05 tape drives, SMS configuration services are updated to validate the recording technology value and the media type value.

MVS device allocation modifications

MVS device allocation helps prioritize and select tape drives to meet the needs of application programs or system functions. Batch (JCL) or dynamic (SVC99) allocation makes these device needs known to MVS device allocation. MVS device allocation selects the appropriate devices and serializes them for the requester to use. It can also request that appropriate volumes be mounted on the allocated devices. It accomplishes these tasks by interfacing with SMS, DEVSERV, OAM, MSGDISP, and other system components.

MVS device allocation currently supports multiple types of tape devices. Within an IBM tape library environment, MVS device allocation considers media types and recording technologies when allocating tape drives and tape volumes. The dynamic allocation (SVC 99) volume interchange text unit (DALINCHG) allows you to specify EFMT1 the recording technology and MEDIA5, MEDIA6, MEDIA7, or MEDIA8 for the media type and EFMT2 for the recording technology and MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 for the media type. Specification of MEDIA9 or MEDIA10 is only supported on z/OS V1R5 and above.

MVS device allocation:

- Allows you to specify the new media types (MEDIA9, MEDIA10) through Dynamic Allocation Text Unit DALINCHG at z/OS v1r5 and greater.

- Allows the new recording format (EFMT2) to be used with existing media types MEDIA5-MEDIA8 (at all supported releases) and the new media types MEDIA9 and MEDIA10 (at z/OS v1r5 and greater).

See [Table 46 on page 299](#) for DALINCHG parameter values.

<i>Table 46. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types</i>		
Parameter value	Media type	Recording technology
75	MEDIA5	EFMT2
65	MEDIA5	EFMT1
05	MEDIA5	No format
76	MEDIA6	EFMT2
66	MEDIA6	EFMT1
06	MEDIA6	No format
77	MEDIA7	EFMT2
67	MEDIA7	EFMT1
07	MEDIA7	No format
78	MEDIA8	EFMT2
68	MEDIA8	EFMT1
08	MEDIA8	No format
79	MEDIA9	EFMT2
09	MEDIA9	No format
7A	MEDIA10	EFMT2
0A	MEDIA10	No format

Related reading:

- See [z/OS MVS System Commands](#) for more information on the DEVSERV QTAPE command.
- See [z/OS MVS Programming: Authorized Assembler Services Guide](#) for more information about the DALINCHG parameter.
- See [z/OS DFSMS Installation Exits](#) for more information about the IECUCBCX mapping macro.

Chapter 44. ISMF modifications for 3592 Model E05

The interactive storage management facility (ISMF) provides a series of applications for storage administrators to define and manage SMS configurations. This topic describes changes to the data class application, the mountable tape volume application, and the tape library management application to support the 3592 Model E05 tape drive.

Related reading:

- See [*z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries*](#) for additional information on the ISMF tape library management application.
- See [*z/OS DFSMSdfp Storage Administration*](#) for additional information about data classes and the ISMF data class panels.

Data class define and alter panels for 3592 Model E05

A data class is a set of data set allocation attributes and associated values. You can define, alter, display, and list a data class by using the ISMF data class panels. The data class define/alter panel has changed to support the 3592 Model E05 tape drives. In addition to the previously available values, you can now specify:

- The E2 value for the recording technology attribute EFMT2.
- The number 9 as the value for the MEDIA9 media type attribute or 10 as the value for the MEDIA10 media type attribute.
- Performance scaling to obtain faster access to data on MEDIA5 or MEDIA9 media. The other media types are not scalable.
- Performance segmentation to obtain faster access to data on MEDIA5 or MEDIA9 media. Performance segmentation divides the cartridge into a fast access segment and a slower access segment. The other media types do not offer performance segmentation.

Mountable tape volume list panel

The mountable tape volume application enables you to create, save, and restore lists of tape cartridge volumes. It generates lists of mountable tape volumes and their characteristics that are based on the criteria you specify. New media types MEDIA9 and MEDIA10 can now appear in column 8, MEDIA TYPE. EFMT2 can appear in column 9, RECORDING TECHNOLOGY.

Tape library management panels

The tape library management application allows you to define, alter, list and display tape libraries. These panels have been changed to support the 3592 Model E05 tape drives.

- On the TAPE LIBRARY DEFINE panel, new Scratch Threshold fields for MEDIA9 and MEDIA10 have been added.
- On the TAPE LIBRARY ALTER/REDEFINE panel, new Scratch Threshold fields for MEDIA9 and MEDIA10 have been added.
- On the TAPE LIBRARY DISPLAY panel, new Scratch Threshold and Scratch Number fields for MEDIA9 and MEDIA10 have been added.
- On the TAPE LIBRARY LIST panel, new columns have been added:
 - MEDIA9 SCR NUM (column 28)
 - MEDIA9 SCR THR (column 29)
 - MEDIA10 SCR NUM (column 30)

- MEDIA10 SCR THR (column 31)
 - Columns previously numbered 28, 29, and 30 are now numbered 32, 33, and 34
 - On page 1 of the TAPE LIBRARY PRINT ENTRY panel, columns previously numbered 28, 29, and 30 are now numbered 32, 33, and 34.
- On page 2 of the TAPE LIBRARY PRINT ENTRY panel, new columns have been added:
- (28) Media9 Scratch Number
 - (29) Media9 Scratch Threshold
 - (30) Media10 Scratch Number
 - (31) Media10 Scratch Threshold
 - On the TAPE LIBRARY SORT ENTRY panel, new columns have been added:
 - (28) Media9 Scratch Number
 - (29) Media9 Scratch Threshold
 - (30) Media10 Scratch Number
 - (31) Media10 Scratch Threshold
 - On the TAPE LIBRARY VIEW ENTRY panel, new columns have been added:
 - (28) Media9 Scratch Number
 - (29) Media9 Scratch Threshold
 - (30) Media10 Scratch Number
 - (31) Media10 Scratch Threshold
 - Columns previously numbered 28, 29, and 30 are now numbered 32, 33, and 34

Chapter 45. OCE modifications for 3592 Model E05

The z/OS DFSMS Open/Close/End-of-Volume (OCE) component is a set of system routines that builds the control block structure that connects the application, access method, and the operating system. OCE modifications include passing the media type and recording technology to DFSMS, DFSMSrmm, OAM/Library Automation Communication Services, and to the tape installation exits. OCE also supports performance scaling and performance segmentation with MEDIA5 and MEDIA9 cartridges and also ensures that performance scaling or performance segmentation persists across all volumes of a multivolume data set. During CLOSE of file sequence 1 on a performance scaled or performance segmented cartridge, performance scaling or performance segmentation is externalized in message IEC205I.

The OCE routines also include the IFGTEP macro with several fields for mapping installation exit parameter lists. Values that can be returned are: EFMT1 and EFMT2 in TEPMRECTK recording technology, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 in TEPMEDT media type.

Related reading:

- See [z/OS DFSMS Using Data Sets](#) and [z/OS DFSMS Using Magnetic Tapes](#) for additional information about the OCE routines.
- See [z/OS DFSMS Installation Exits](#) for more information on OCE installation exit parameter lists.
- See [z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries](#) for more information on tape volume records.
- See [Chapter 56, “OCE modifications for 3592 Model J,” on page 371](#) for more information on the existing WORM tape support.

Overview

In a 3494 automated or manual tape library, and in a standalone environment, the new 3592 Model E05 tape drive is supported only in 3590-1 emulation mode. The 3592 Model E05 introduces a new enterprise format 2 (EFMT2) recording technology. This recording technology is a higher density format that nearly doubles the capacity of the existing EFMT1 3592 Model J1A. The 3592 Model E05 is downward read compatible with existing EFMT1 formatted media, and optionally can be explicitly directed to write from BOT in EFMT1 recording format. The drive appends away from load point using the volume's existing recording format (EFMT1 or EFMT2).

SMS Managed Tape

Tape Volume Record (TVR) of SMS Managed cartridge is updated by OPEN and EOVS with the new underlying recording technology when TVR is opened for output to the first file (beginning of tape) on a 3592 Model E05 drive.

Recording Technology Conflict

OPEN and EOVS resolve the incompatible track conflict when an EFMT2 formatted cartridge is mounted on a lower technology 3592 Model J1A drive during OPEN OUTPUT file sequence 1. The loadpoint label structure is rewritten at the drive capable recording technology using the existing volume serial number that is obtained from the drive sense data.

Dual Recording Capability

For both system managed and standalone environments, during OPEN OUTPUT, file sequence 1, DISP=NEW, OPEN retrieves DATACLASS to determine if the lower recording technology format EFMT1

is requested. For an EFMT1 request OPEN issues drive commands to enable EFMT1 recording technology from loadpoint. This function is supported only on media types from MEDIA5 to MEDIA8.

Segmentation Format

A new performance segmentation option is available through data class policy definitions. Performance Segmentation divides the cartridge into a fast access segment and a slower access segment. The fast access segment is filled first, after which the slower segment is filled. Data class provides a filter criteria such as job name, application program name or dataset name to control whether a tape will be used for full capacity or performance segmentation. For both system managed and standalone environments, during OPEN OUTPUT file sequence 1, DISP=NEW OPEN retrieves DATACLASS to determine if Performance Segmentation is requested. Performance Segmentation is mutual exclusive with Performance Scaling. For a Performance Segmentation request OPEN issues drive commands that enable this option. During CLOSE OUTPUT for file sequence 1 on a performance segmented tape, performance segmentation is externalized in existing message iec205i:

```
IEC205I ddname,jobname,stepname,FILESEQ = nnn, COMPLETE VOLUME LIST |  
EXTEND VOLUME LIST,[DSN=dsn], VOL=volser, [TOTALBLOCKS=mmm], [3490  
EMULATION VOLUMES EXTENDED CAPACITY MODE | 3490 EMULATION VOLUMES  
EXTENDED CAPACITY USED], [PERFORMANCE SEGMENTED | PERFORMANCE SCALED]
```

OPEN OUTPUT either for MOD or EXTEND or for any type OPEN OUTPUT request to file sequence 1 or higher tracks the existing segmentation of the current volume. EOVS OUTPUT processing then enforces this same segmentation across all volumes of a multivolume data set.

Media Support

The 3592 model E05 supports two new media types.

MEDIA9

IBM TotalStorage Enterprise Extended Cartridge

MEDIA10

IBM TotalStorage Enterprise Extended WORM Cartridge.

The capacity of both MEDIA9 and MEDIA10 is 700 GB. OCE recognizes and passes these new media types to SMS, RMM and to the installation tape exits. OCE additionally calls SMS configuration services to obtain and enforce the dataclass policy definitions for the new media types during OPEN OUTPUT, file sequence 1, DISP=NEW.

For HDZ11G0, MEDIA9 and MEDIA10 are not supported. When either of these media types are mounted, OPEN/EOVS will detect IEC147I 613-84 or IEC147I 637-84 respectively with RC84 (The mounted tape media type is not supported at the current system level).

OCE Tape Installation Exits

The IFGTPE macro maps the tape log data. [Table 47 on page 304](#) describes the IFGTPE fields for mapping the installation exit main parameter list.

Table 47. IFGTPE fields for the installation exit main parameter list		
Field name	Length or bit pattern	Description
Field name	Length or bit pattern	Description
TEPMRECTK	FIXED(8)	Recording technology of the mounted volume in binary.
TEPMMEDT	FIXED(8)	Media type of the mounted volume in binary.

Chapter 46. DFSMSHsm modifications for 3592 Model E05

DFSMS hierarchical storage manager (DFSMSHsm), a z/OS functional component, automatically manages low activity and inactive data in both system-managed and non-system-managed environments. DFSMSHsm also provides automatic backup and recovery of active data in the same environments.

This topic describes specific changes to DFSMSHsm support for the new 3592 Model E05 tape drives. DFSMSHsm can use 3592 Model E05 for all functions. The 3592 Model E05 uses existing cartridge media (MEDIA5, MEDIA6, MEDIA7 and MEDIA8) and also supports two new media types: MEDIA9 (700 GB R/W) and MEDIA10 (700 GB WORM). MEDIA9 is available for all DFSMSHsm functions, while MEDIA10 is intended specifically for ABARS processing of ABACKUP tapes.

DFSMSHsm also adds support for enterprise format 2 (EFMT2), a new recording format that is required for using the new MEDIA9 and MEDIA10 cartridge media.

The changes are as follows:

- Planning and installation
- Input tape utilization
- Output tape selection
- Output tape utilization
- Reuse capacity table
- Displaying EFMT2 formatted volumes
- WORM tape cartridge rejection at OPEN time
- Aggregate backup and recovery (ABARS) with WORM tape cartridge

Related reading:

- For more information on the LIST TTOC command, see [z/OS DFSMSHsm Implementation and Customization Guide](#)
- For more information on the SETSYS command, see [z/OS DFSMSdfp Storage Administration](#).
- For more information about implementing DFSMSHsm tape environments, see [z/OS DFSMSdfp Storage Administration](#).

Planning and installation

In an HSMplex, coexisting systems without full support for 3592-E05 should apply the z/OS support PTFs without the enabling PTF. Doing so allows a coexisting system to reject partial tapes written by the 3592-E05 with EFMT2 technology.

Input tape utilization

You can use MEDIA5, MEDIA7, and MEDIA9 tapes as input for all DFSMSHsm functions. Besides these media types, you can also use MEDIA6, MEDIA8, and MEDIA10 tapes for ABARS processing.

MEDIA5, MEDIA6, MEDIA7 and MEDIA8 tapes can be written in either of two recording formats: EFMT1 or EFMT2. The MEDIA9 and MEDIA10 tapes must be written in EFMT2 format.

Output tape selection

DFSMSHsm selects 3592 Model E05 tape drives for output in SMS and non-SMS tape environments. DFSMSHsm performs all of its allocation requests through these standard dynamic allocation interfaces:

- **Non-SMS-managed output tape selection:** If multiple types of tape drives are installed that emulate the 3590 device type, you must define an esoteric name for each model that DFSMSShsm uses. You must then define the esoteric names to DFSMSShsm by using the SETSYS USERUNITTABLE(*esoteric1:esoteric1,esoteric2:esoteric2,...*) command. You must also specify the esoteric names as the unit names for the desired DFSMSShsm functions. If a single type of tape drive is installed that emulates the 3590 device type, or there is a mix of 3592 Model E05 and J1A drives and the E05 drives are set-up to use EFMT1, you do not have to define an esoteric name; instead, you can specify the 3590-1 generic name for the desired DFSMSShsm functions.
- **SMS-managed output tape selection:** DFSMSShsm performs a non-specific allocation; it then finds an acceptable output tape for the already allocated drive. If you use a 3590-1 generic that contains mixed devices, see APAR OW57282 for information about disabling the 3590-1 mixed device checking and the corresponding ARC0030I failure message.

Output tape utilization

DFSMSShsm writes to 97% of the capacity of MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 tapes unless otherwise specified by the installation. Other percentages can be specified through the SETSYS TAPEUTILIZATION command, depending on the particular needs of the installation. DFSMSShsm uses the reported cartridge type on the physical device to determine the tape's capacity.

Scratch tapes

The 3592-E05 can use empty MEDIA5, MEDIA7 or MEDIA9 tapes for all DFSMSShsm functions, and also use empty MEDIA6, MEDIA8, and MEDIA10 tapes for ABARS processing.

Because the 3592-E05 can write in either of two recording formats (EFMT1 or EFMT2) to MEDIA5, MEDIA6, MEDIA7 and MEDIA8 tapes, you must modify your installation's ACS routines to select the recording format to be used on blank media (through the data class assigned to the tape) if you want the 3592 Model E05 drives to use EFMT1.

For duplexed tapes, ensure that the data class selects the same media type and recording technology for the original and the alternate copy. Not doing so can result in failure when the duplex tape is mounted for output, or when using the alternate copy after a tape replace. If different media or machine types are needed for the original and alternate tapes, see APARs OW52309, OA04821 and OA11603 for more information.

Partial tapes

When the 3592-E05 uses a MEDIA5, MEDIA6, MEDIA7 or MEDIA8 partial tape for output, the tape could have been written in either EFMT1 or EFMT2 recording technology. In contrast, MEDIA9 and 10 partial tapes are always recorded using EFMT2 technology. DFSMSShsm automatically determines the format in which a tape is written and extends the tape in the same format.

Reuse capacity table

The reuse capacity table supports MEDIA9 and MEDIA10 tape cartridges for 3592 Model E05 tape drives. DFSMSShsm uses the reuse capacity table to determine the tapes eligible for RECYCLE processing based on capacity for each media type. Each media type has separate reuse capacities for backup and migration (MEDIA10 is available only for ABARS processing of ABACKUP tapes).

Displaying EFMT2 formatted volumes

You can use the LIST TTOC command to list volumes based on the recording technology used. To list all volumes recorded in EFMT1 format, enter the LIST TTOC command as follows:

```
LIST TTOC SELECT(EFMT1)
```

To list all volumes recorded in EFMT2 format, enter the LIST TTOC command as follows:

WORM tape cartridge rejection at OPEN time

DFSMSHsm examines the OEVSWORM field passed by OPEN/EOV processing. The bit is turned on by OPEN/EOV when a WORM tape cartridge has been mounted. If a WORM tape cartridge is mounted for any function other than ABACKUP or ARECOVER, DFSMSHsm returns to OPEN/EOV with RC08, resulting in ABEND913 RC34 and a failure of OPEN. DFSMSHsm fails the function and issues either message ARC0309I (for non-ABARs) or ARC6410E (for an ARECOVER ML2 tape).

Aggregate backup and recovery (ABARs) with WORM tape cartridge

Output for LIST AGGREGATE(agname) has a field labeled WORM. If the version resides on WORM tape cartridge media, WORM=YES. If it does not reside on WORM tape cartridge media, WORM=NO.

DFSMSHsm tips

Here are some tips you might find helpful when using DFSMSHsm with the 3592 Model E05 tape drives.

- In a non-SMS mixed tape hardware environment, where multiple types of tape hardware are used to emulate 3590 devices, it is recommended that you define unique esoterics for each type of tape hardware. This action is necessary to avoid mixing incompatible recording technologies. You can define an esoteric to DFSMSHsm through the SETSYS USERUNITTABLE command, for example:

```
SETSYS UUT(3592E05:3592E05 3590H:3590H)
```

With esoterics defined, you can then direct output to the desired set of drives through the SETSYS command, for example:

```
SETSYS BACKUP(TAPE(3592E05))
```

- If your installation has an excessive number of spanning data sets, consider specifying a larger value in the SETSYS TAPESPANSIZE command. A larger absolute value is needed to represent the same amount of unused capacity on a percentage basis when the tape has a larger total capacity. For example, if you allow 2% of unused tape to avoid tape spanning for a 3590-Hxx device using enhanced media, specify a TAPESPANSIZE of 1200 MB. To allow 2% unused tape for a MEDIA5 tape on a 3592 Model E05 device (no performance scaling), specify a TAPESPANSIZE of 9999 MB. All size calculations for scaled tapes are based upon the scaled size and not the unscaled size.
- If the speed of data access on MEDIA5 or MEDIA9 tape is more important than full use of capacity, consider using performance scaling. Performance scaling uses 20% of the physical capacity on each tape and keeps all data sets closer together and closer to the initial tape load point. If you use performance scaling with the DFSMSHsm duplex function, be sure the original tape and the alternate tape both use performance scaling. Similarly make sure that Tapecopy input tapes and output tapes have the same performance scaling attributes.

Note: Performance scaling is not available on these tape cartridge media: MEDIA6, MEDIA7, MEDIA8, and MEDIA10.

- If your installation is using MEDIA5 tapes with performance scaling, consider using MEDIA7 tapes for high performance functions. The available MEDIA5 tapes could then be used to their full capacity.

Consider performance segmentation as a compromise solution. Performance segmentation increases the performance of data sets in the first twenty percent of the tape's capacity, but also uses the remaining capacity as a slower access segment. Average performance for the tape is increased at the expense of losing a percentage of the MEDIA5 or MEDIA9 overall tape capacity. (You cannot determine which data sets reside in which segment.)

DFSMSHsm recycle processing of 3592 Model E05 tapes can take significantly longer than with smaller tapes because the amount of data moved at the same RECYCLEPERCENT can be much larger. Besides moving more data, the likelihood of a tape takeaway for recall processing increases with the number of data sets still remaining on the tape.

One option for controlling overall recycle run time is the LIMIT(*nnnn*) parameter of recycle. Recycle returns no more than the specified number of tapes to scratch during the current recycle run. Because recycle sorts the tapes based on the amount of valid data still on each volume, the tapes recycled require the least processing time.

Another option to consider is decreasing the ML2RECYCLEPERCENT parameter, the RECYCLEPERCENT parameter, or both. Assume, for example, that your installation uses MEDIA7 tape for ML2 and MEDIA5 tape for backup. If the EFMT1 format is used and you would like no more than 6 GB of data to be moved when an ML2 tape is recycled, set ML2RECYCLEPERCENT(10) because the MEDIA7 can hold 60 GB of data in EFMT1. If your installation uses full capacity for backup tapes and you want no more than 6 GB of data to be moved when a backup tape is recycled, set RECYCLEPERCENT(2) because a MEDIA5 tape can hold 300 GB of data in EFMT1. These examples assume that the ML2 and backup tapes in the installation are filled to capacity because the calculations are based upon the average fullness of marked full tapes on your system (the reuse capacity.)

To determine how much data your current recycle threshold implies, use the reuse capacity associated with the tapes. The current recycle threshold percent multiplied by the reuse capacity gives the maximum amount of data on any of the tapes when they are recycled.

While lowering the recycle threshold reduces recycle processing time and decreases the number of times each tape must be recycled, it may also increase the overall number of tapes needed in your installation. Also, if you have a mix of ML2 or backup tape capacities in need of recycle processing, you may want to recycle tapes with the RANGE parameter and use the appropriate recycle threshold for the tape capacities in the range.

In an SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.

In a non-SMS tape environment, the default is to allow tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUP parameter ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS is used, the data class must request the appropriate media type for it to be successfully mounted.

- Consider using the Fast Subsequent Migration function to reduce the need to RECYCLE these high-capacity tapes.
- For a Sysplex environment, consider using the Common Recall Queue to optimize mounts of migration tapes.
- AUDIT MEDIACONTROLS for a FAILEDCREATE situation usually only needs to look at the last few files on a tape. If it is available for your system level, make sure Audit APAR OA04419 is applied.
- The 3592 Model E05 tape drive is used in 3590 emulation mode only; never 3490. The 3592 Model J1A can operate in 3490 emulation mode only when using MEDIA5 for output.

Chapter 47. DFSMSrmm modifications for 3592 Model E05

DFSMSrmm is a feature of z/OS. It manages all tape media, such as cartridge system tapes and 3420 reels, and other removable media that you define to it.

DFSMSrmm performs these functions to support the 3592 Model E05 tape drives:

- Records the recording technology, as appropriate
- Records the media type
- Manages WORM tapes

This topic describes the updates to these DFSMSrmm TSO subcommands:

- ADDVOLUME
- CHANGEVOLUME
- SEARCHVOLUME


It also lists the changed REXX variables of the TSO subcommand, API structured field introducers, and mapping macros fields.

Related reading:

- See [*z/OS DFSMSrmm Managing and Using Removable Media*](#) for the complete syntax of the DFSMSrmm ADDVOLUME subcommand, the DFSMSrmm CHANGEVOLUME subcommand, the DFSMSrmm SEARCHVOLUME subcommand, DFSMSrmm return codes and reason codes, and REXX variables.
- See [*z/OS DFSMSrmm Application Programming Interface*](#) for further information about the DFSMSrmm API.
- See [*z/OS DFSMSrmm Implementation and Customization Guide*](#) and [*z/OS DFSMSrmm Reporting*](#) for additional information about DFSMSrmm mapping macros.

ADDVOLUME

The ADDVOLUME TSO subcommand adds volumes to the DFSMSrmm control data set. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the ADDVOLUME TSO subcommand.

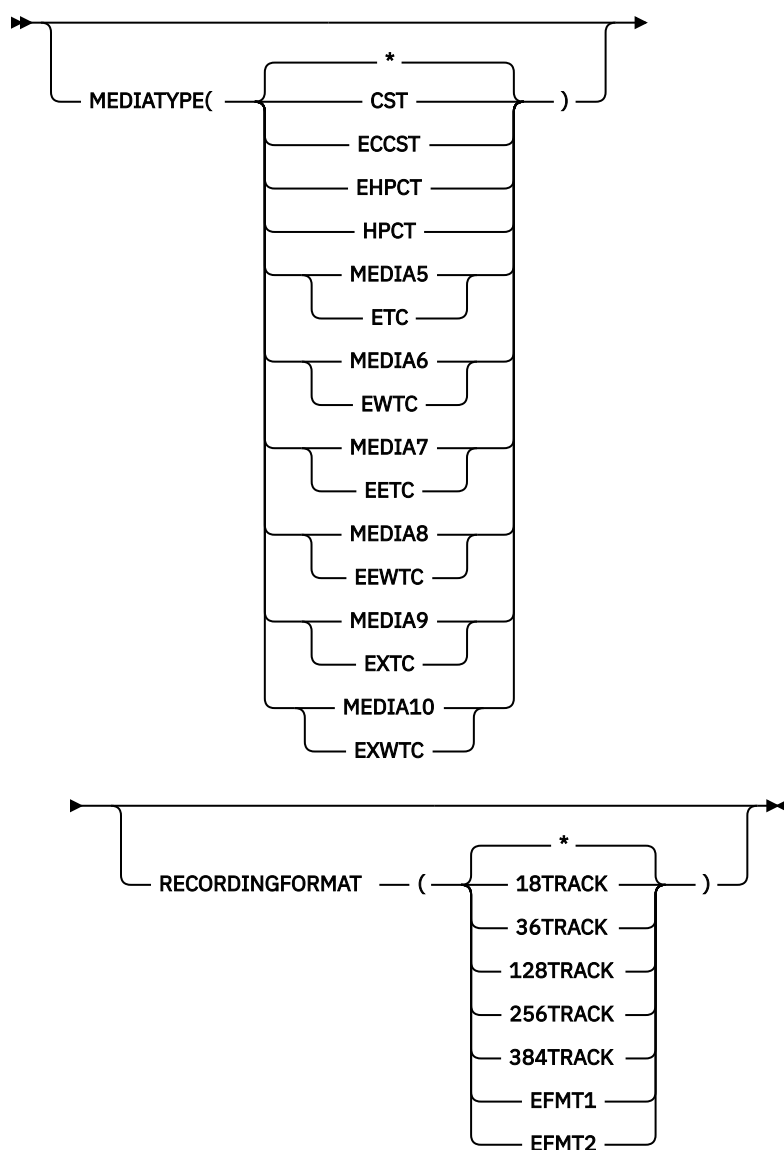

To use the EFMT2 recording technology, you must specify the MEDIATEPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10) operand of the ADDVOLUME TSO subcommand.

Note: DFSMSrmm uses its own media names for MEDIA1 through MEDIA4 and optionally uses its own media names for MEDIA5 through MEDIA10. DFSMSrmm uses these names in output for RMM LISTVOLUME subcommand requests and from any REXX EXECs you might have written. [Table 48 on page 310](#) lists these DFSMSrmm media names.

Table 48. DFSMSrmm media names


Media name	DFSMSrmm media name
MEDIA1	CST
MEDIA2	ECCST
MEDIA3	HPCT
MEDIA4	EHPCT
MEDIA5	ETC
MEDIA6	EWTC

Table 48. DFSMSrmm media names (continued)

Media name	DFSMSrmm media name
MEDIA7	EETC
MEDIA8	EEWTC
MEDIA9	EXTC
MEDIA10	EXWTC

CHANGEVOLUME


The CHANGEVOLUME TSO subcommand updates details for a volume defined to DFSMSrmm. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the CHANGEVOLUME TSO subcommand.

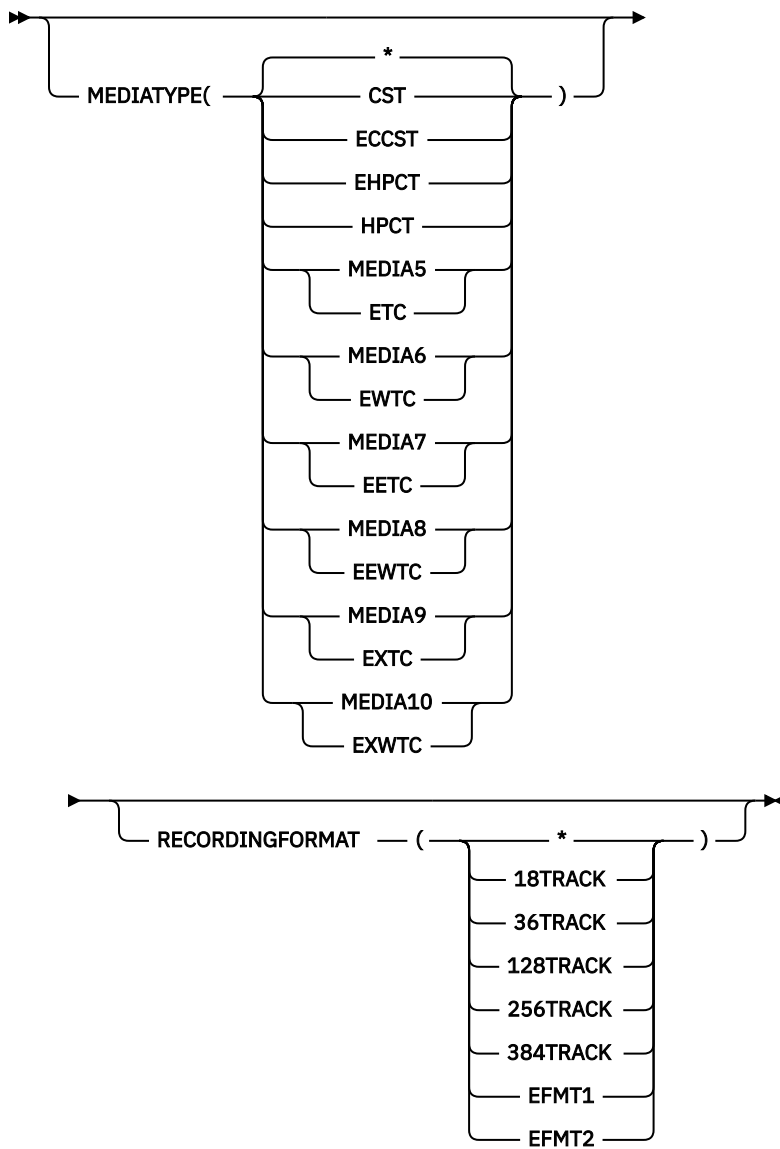

To use the EFMT2 recording technology, you must specify the MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, or MEDIA10) operand of the CHANGEVOLUME TSO subcommand.

SEARCHVOLUME

You can use the SEARCHVOLUME TSO subcommand to obtain a list of volumes that match selection criteria that you specify. Specify EFMT2 to limit your search to volumes that are written in the EFMT2 recording technology. You can also specify a particular media type, such as MEDIA9, to then further limit your search. This diagram shows the syntax of the MEDIATYPE operand and the RECORDINGFORMAT operand for the SEARCHVOLUME TSO subcommand.

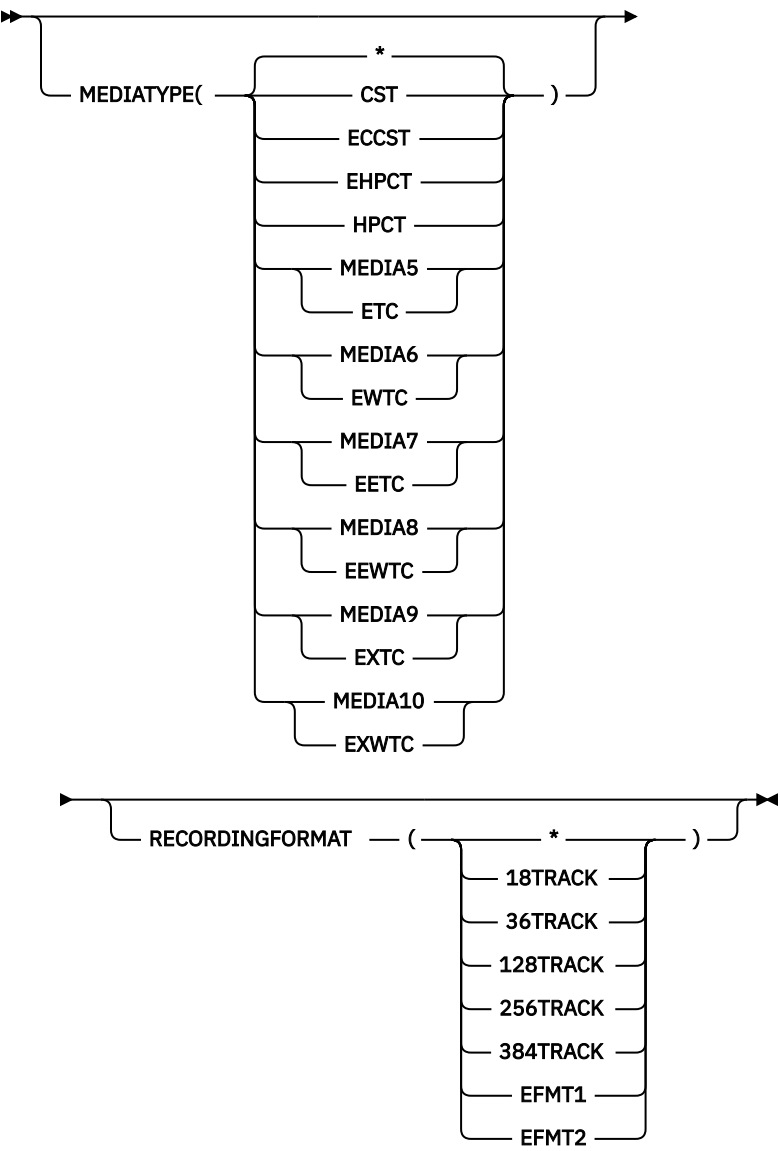

DFSMSrmm REXX variables

You can use the REXX variables to obtain volume information. The variables produced by the SEARCHVOLUME subcommand are stem variables.

Table 49. Changed TSO subcommand REXX variables

Variable name	Subcommands	Contents	Format
EDG@MEDR	LV SV	Recording technology	One of *, NON-CARTRIDGE, 18TRK, 36TRK, 128TRK, 256TRK, 384TRK, EFMT1, and EFMT2

Table 49. Changed TSO subcommand REXX variables (continued)

Variable name	Subcommands	Contents	Format
EDG@MEDT	LV SV	Tape media type	One of *, CST, ECCST, EHPCT, HPCT, ETC, EWTC, EETC, EEWTCT, EXTC, and EXWTC

DFSMSrmm structured field introducers

The DFSMSrmm application programming interface (API) returns data as structured fields in an output buffer that you define. Structured fields consist of a structured field introducer (SFI) and the data. SFIs describe the type, length, and other characteristics of the data.

Table 50 on page 313 shows the structured field introducers that support 3592 Model E05 tape drives.

Table 50. Changed structured field introducers

Name	Number	Type	Length	Value	Subcommands
MEDR	X'857000'	Binary(8)	9	Media type: 0=NON-CARTRIDGE 1=18TRK 2=36TRK 3=128TRK 4=256TRK 5=384TRK 6=EFMT1 7=EFMT2	LV, SV
MEDT	X'858000'	Binary(8)	9	Media type: 0=UNDEFINED 1=CST 2=ECCST 3=HPCT 4=EHPCT 5=ETC/ MEDIA5 6=EWTC/MEDIA6 7=EETC/ MEDIA7 8=EEWTC/MEDIA8 9=EXTC/ MEDIA9 10=EXWTC/MEDIA10	LV, SV

DFSMSrmm macros

Table 51 on page 313 shows the changes made to DFSMSrmm mapping macros for 3592 Model E05 tape drives.

Table 51. DFSMSrmm mapping macro changes

Mapping macro	Function	Updates
EDGEXTSY	Maps the extract data set symbols used with DFSORT.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGRVEXT	Maps the volume records in the DFSMSrmm extract data set.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGRXEXT	Maps the data set records in the DFSMSrmm extract data set.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGSMFSY	Maps the SMF record symbols used with DFSORT.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGSVREC	Maps the DFSMSrmm SMF volume records.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGCLREC	Maps the data set records in the DFSMSrmm extract data set.	Media type values: ETC, EWTC, EETC, EEWTC, EXTC, EXWTC, and recording technology values: EFMT1, EFMT2.
EDGPL100	Maps the DFSMSrmm installation exit, EDGUX100, parameter list.	Fields PL100_TDSI1 and PL100_TDSI2 are renamed by adding _OLD to the names. Use PL100_TDSI field instead.

Volume Not in Library Support

In the past, for all calls to the CBRUXVNL exit, the supplied sample code linked to EDGLCSUX to retrieve the DFSMSrmm information for the volume. Now, calls to EDGLCSUX can be made only when it is determined that the request is for a tape volume. However, exit customization may be required in order to get complete benefit from this new support. The new input fields in CBRUXNPL are used during the job setup call to the exit to make an informed decision. The decision is added to CBRUXVNL and is partly selectable via conditional assembly to enable easy customization by you. An informed decision can be made when catalog information is available that confirms whether a volume is a tape or not. By default, the initial call to EDGLCSUX is made in these cases:

- Job information is unavailable.
- Catalog information is available, and the device type is a tape device. When catalog information is available, but the device type is not tape, the exit skips the link to EDGLCSUX.

DFSMSrmm provides the possibility to further enhance the EDGLCSUX calls by providing an option to compare the JCL esoteric unit name against a list of your known tape unit names. You can enable this additional option by customizing the default processing by:

- Turning on the tape unit name checking code by changing the setting &TAPEDEC SETC to 'YES', and
- Customizing the hardcoded list of tape unit names. The tape unit names are listed in the shipped table called TAPEUNITS. Ensure that you include in this table all the tape unit names your users code in their JCL. You can include esoteric, generic, and specific unit names. The default table is also shown.

```
TAPEUNITS DC    A(TAPFIRST,8,TAPLAST)
*****
* Tape units list - may be customized
*****
TAPFIRST DC    CL8'TAPE'
* insert your location tape unit names here
* or edit any entry
      DC    CL8'3400-6'
      DC    CL8'3420-8'
      DC    CL8'CART'
      DC    CL8'3480'
      DC    CL8'3480X'
      DC    CL8'3490'
      DC    CL8'3490E'
      DC    CL8'3590'
      DC    CL8'3590-1'
      DC    CL8'3590-E'
      DC    CL8'3590-B'
      DC    CL8'3590-H'
      DC    CL8'3590L'
      DC    CL8'3592'
      DC    CL8'3592-J'
      DC    CL8'SYS3480R'
      DC    CL8'SYS348XR'
      DC    CL8'VTS'
      DC    CL8'MTL'
      DC    CL8' '      any blank entry is ignored
TAPLAST  DC    CL8'ATL'
```

Figure 26. Contents of the shipped table: TAPEUNITS

When you have &TAPEDEC set to 'YES', CBRUXVNL checks the supplied unit name and calls EDGLCSUX only in the case where it matches some tape unit name within the TAPEUNITS table. Otherwise, the EDGLCSUX call is skipped.

In addition, the decision to issue message EDG8197I for non-RMM managed volumes is made selectable via an option flag in the EDGLCSUP parameter list. The CBRUXVNL exit shipped by DFSMSrmm sets this option flag ON when the device type supplied by catalog is a tape device or &TAPEDEC is set to 'YES'. Otherwise, this option flag is OFF. To change this decision, you can customize the CBRUXVNL source code. This ensures that you will see message EDG8197I when you believe the volume is a tape volume, and the tape volume is not managed by DFSMSrmm.

Chapter 48. EREP modifications for 3592 Model E05

Environmental Recording, Editing, and Printing (EREP) program is a diagnostic application program that runs under MVS, VM, and VSE. It generates and prints reports from error recording data set (ERDS) records. With these reports, IBM service representatives can determine the existence, nature, and location of a problem.

This topic describes changes to the tape subsystem exception, event history, system error summary, and emulated device summary reports of the EREP program to support 3592 Model E05 tape drives.

Tape subsystem exception report

As shown in Figure 27 on page 315, EREP reports a temporary ORB record in its tape subsystem exception report in support of 3592 Model E05 tape drives.

TAPE SUBSYSTEM EXCEPTION REPORT						REPORT DATE 220 05		
						PERIOD FROM 076 02		
						TO 077 02		
*** SEQUENCE BY PROBABLE FAILING UNIT ***								
PROBABLE FAILING UNIT	DEVICE TYPE/ VOLID	FAILURE AFFECT	CPU	DEVNO /CUA	SIMS	MIMS	OBR PERM	OBR TEMP
					-----TOTALS-----			
LIBRARY				TOTAL	0	0	0	1
	3570-CXX	LIBRARY INFORMATIONAL DATA	00	07C2	0	0	0	1
DEVICE				TOTAL	0	0	2	1
	3590-H1X	LIBRARY DRIVE NOT UNLOADED	02	0C24	0	0	1	0
	3592-J1X	WORM OVERWRITE REJECTED	03	0C27	0	0	0	1
	3592-E05	LIBRARY DRIVE NOT UNLOADED	00	1B90	0	0	0	1
	3592-E05	PREVENTIVE MAINTENANCE COMPLETED	00	07C2	1	0	0	0

Figure 27. Partial tape subsystem exception report

Event history report

As shown in Figure 28 on page 315, EREP reports 3590 as the native device type in its event history report in support of 3592 Model E05 tape drives.

EVENT HISTORY (S/370 & S/370XA)						
TIME	JOBNAME	RECTYP	CP	CUA	SSYS	DEVT
DATE 358 99			*	DNO	CRW	
02 15 34 50	N/A	MDR	01	04B2	3590	04
02 22 35 74	N/A	MDR	00	04B0	3590	04
10 02 06 17	DRVNDSA	OBRTMP	03	0591	3590	
10 02 10 78	DRVNDSA	OBRPRM	03	0591	3590	
12 54 45 51	VARY	OBRPRM	06	0563	3590	06
23 08 25 93	DISB/RGP	OBRTMP	00	04BA	3590	04
23 08 25 93	DISB/RGP	OBRPRM	00	04BA	3590	
23 08 25 93	DISB/RGP	OBRTMP	00	04BE	3590	16

Figure 28. Partial event history report

System error summary report

Figure 29 on page 316 illustrates that the EREP system error summary report is changed to support 3592 Model E05 tape drives. The system error summary for 3590 includes the system error summary report series for 3590. These reports are only shown for 3592-E05 devices that emulate 3590 devices.

SYSTEM ERROR SUMMARY (PART 2)									
REPORT DATE 054 99									
PERIOD FROM 044 98									
TO 022 02									
TIME	JOBNAME	CPU	PHYSICAL ID	PHYSICAL TYPE	PHYSICAL ADDRESS	ERROR PATH	VOLUME	ERROR DESC	PROBABLE FAILING
DATE 358/99									
10:02:10:78	DRVNDSA	02	N/A	3590	0591	0591		N/A	HARDWARE
23:08:25:93	DISB/RGP	00	N/A	3590	04BA	16-04BA		N/A	VOLUME/C

Figure 29. Partial system error summary report

Emulated device summary report

Figure 30 on page 316 provides an example of an EREP emulated device summary report. The report in this example shows the emulated device type for 3592 Model E05 tape drives. The report includes an example of a 3592-E05 emulating a 3590-B1X.

3590 DEVICE SUMMARY		REPORT DATE 220 05	
		PERIOD FROM 076 02	
		TO 077 02	
DEVICE ADDRESS	REAL / EMULATED DEVICE TYPE		
014C	3590-E1X / 3490-CXX		
014D	3590-B1X / 3490-CXX		
014E	3590-E1X / 3490-CXX		
0231	3590-H1X / 3490-CXX		
0232	3590-H1X / 3490-CXX		
0233	3590-H1X / 3490-CXX		
0234	3592-J1X / 3490-CXX		
04B8	3590-B1X / 3490-CXX		
04B9	3590-B1X / 3490-CXX		
04BA	3590-B1X / 3490-CXX		
04BB	3590-B1X / 3490-CXX		
04BC	3590-B1X / 3490-CXX		
0591	3590-E1X / 3490-CXX		
0592	3590-E1X / 3490-CXX		
0880	3590-XXX / NATIVE		
0881	3590-XXX / NATIVE		
0882	3590-XXX / NATIVE		
0883	3590-XXX / NATIVE		
0884	3590-XXX / NATIVE		
088A	3590-XXX / NATIVE		
08AA	3590-E1X / 3590-B1X		
08AB	3590-E1X / 3590-B1X		
08AC	3592-E05 / 3590-B1X		
08AC	3592-J1X / 3590-B1X		

Figure 30. Partial emulated device summary report

Chapter 49. JES3 modifications for 3592 Model E05

JES3, a z/OS MVS subsystem, manages resources and work flow before and after jobs are processed. You can enable JES3 to allocate 3592 Model E05 tape drives and tape volumes in an SMS-managed IBM tape library environment (automated or manual) for 3590 Model B emulation only. To do so, you need to specify at least one of these library device group (LDG) names in your JES3plex. An LDG is a predefined set of tape subsystems within a JES3plex.

LDKsssss

Includes any 3592 Model E05 device emulating a 3590 Model B within the library indicated by serial number sssss.

LDGdddd

Includes any D/T3592 Model E05 device emulating a D/T3590 Model B in any library in the JES3plex. dddd = 359K.

Chapter 50. OAM modifications for 3592 Model E05

The Object Access Method (OAM) is a component of DFSMSdfp. OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. You can also use OAM's object support to manage objects on DASD, tape, and optical volumes.

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information about using OAM to manage tape volumes and tape libraries.
- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support* for additional information about using OAM to manage the data on tape volumes.
- See *z/OS MVS System Messages, Vol 4 (CBD-DMO)* for explanations and appropriate actions for CBRxxxxx messages.

OAM library support

OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. This topic describes the OAM library support functions that have been changed for use with the 3592 Model E05 tape drives. The enhancements include support for a new recording format EFMT2 and support for two additional 3592 media types MEDIA9 and MEDIA10. Note that the new media types are only supported on z/OS V1R5 and above whereas the drive itself is supported on z/OS V1R4 and above. This topic also describes enhancements to the volume not in library installation exit (CBRUXVNL) to pass additional job-related information.

LCS external services changes

LCS External Services supports the applicable 3592 Model E05 media types, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10, and the recording technology, EFMT1 and EFMT2, for these functions:

- Change use attribute
- Query volume residence
- Test volume eligibility
- Eject a volume
- Manual cartridge entry

Note:

- The MEDIA5, MEDIA6, MEDIA7, and MEDIA8 media types are valid with the EFMT1 or EFMT2 recording technologies.
- The MEDIA9 and MEDIA10 media types are valid only with the EFMT2 recording technology.

OAM installation exits changes

These installation exits support the new EFMT2 recording technology, and new MEDIA9 and MEDIA10 media types:

- Change use attribute (CBRUXCUA) installation exit: Tape recording technology fields and media type fields have been updated with EFMT2, MEDIA9, and MEDIA10.
- The UXCVWORM indicator is set to on for MEDIA10 to indicate this is a WORM volume as was done with previous WORM media types. The tape management system is alerted that the CUA function is being performed for a WORM volume when invoking the CBRUXCUA installation exit.

- Cartridge entry (CBRUXENT) installation exit: Tape recording technology fields and media type fields have been updated with EFMT2, MEDIA9, and MEDIA10.
- Cartridge eject (CBRUXEJC) installation exit: Tape recording technology fields and media type fields have been updated with EFMT2, MEDIA9, and MEDIA10.
- Volume not in library (CBRUXVNL) installation exit: Tape recording technology fields and media type fields have been updated with EFMT2, MEDIA9, and MEDIA10. For additional changes to the exit, refer to [“Volume not in library installation exit enhancement” on page 322](#).

Operator command support changes

Volumes with EFMT2 recording technology are only displayed on systems with full 3592 Model E05 support installed. MEDIA9 and MEDIA10 volumes are only displayed on z/OS V1R5 or above systems with full 3592 Model E05 support installed.

These operator tasks have been changed in support of the 3592 Model E05 tape drives.

- When appropriate, the DISPLAY SMS,VOLUME command can now display the new EFMT2 recording technology, and the new MEDIA9/MEDIA10 media types, in the output display for CBR1180I (OAM tape volume status).
- The LIBRARY DISPDRV command displays 3592-2 for the 3592 Model E05 tape drives in the output display for CBR1220I (Tape drive status). MEDIA9 or MEDIA10 is displayed as appropriate in this display.
- The LIBRARY ENTER command allows MEDIA9 or MEDIA10 to be set when entering the new media types into a manual tape library.
- The DISPLAY SMS,LIBRARY(library-name),DETAIL command displays MEDIA9 and MEDIA10 scratch counts, scratch thresholds, and scratch categories in the output display for CBR1110I.
- The LIBRARY DISABLE command allows CBRUXVNL to be specified, disabling the volume not in library exit.

Note: This does not disable job processing but does result in the volume not in library installation exit being bypassed or not called. In the absence of the CBRUXVNL installation exit's intervention, Job Step Setup processing attempts to allocate an applicable stand-alone tape drive for a volume that has been inadvertently ejected from a tape library. If there is no stand-alone drive capable of handling the tape volume request, the job or dynamic allocation fails. During Device Allocation or during Library Mount Processing, normal job processing for a volume not in the library with no CBRUXVNL installation exit intervention results in the job step or dynamic allocation failing.

- The DISPLAY SMS,OAM command, which already includes the status of the CBRUXVNL exit, displays OPERATOR DISABLED for the VNL exit, if appropriate.
- The LIBRARY SETCL command now allows MEDIA9 or MEDIA10 to be set for a 3592 Model E05 device that supports a cartridge loader.

Scratch mount considerations

Beginning with V1R5, a scratch request with no media type specified, and a 3592 Model E05 drive is allocated, if EFMT2 or no recording technology is specified, there are now 3 applicable scratch categories (MEDIA9, MEDIA5, and MEDIA7). Otherwise, there are two applicable media types for the 3592 Model E05 (MEDIA5 and MEDIA7).

As with existing WORM media types (MEDIA6 and MEDIA8), WORM media is not mounted by default and must be explicitly requested through Dataclass (this includes MEDIA10).

Scratch threshold processing change

For a scratch mount request with no media type specified, WORM media types are no longer included in the criteria to determine whether a library is above threshold as WORM media types must be specifically requested by data class.

OAM macro changes

Table 52 on page 321 describes changes to OAM mapping macros and installation exit parameter lists in support of 3592 Model E05 tape drives.

Table 52. OAM mapping macro changes		
The macro	that maps	has these changes.
CBRTDSI	the tape device selection information (TDSI)	TDSEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE TDSMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE TDSMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE
CBRTVI	the tape volume information	TVIEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE TVIMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE TVIMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE TVISCRM9 EQU C'S9' Volume is MEDIA9 SCRATCH TVISCRMA EQU C'SA' Volume is MEDIA10 SCRATCH TVIMEDTY has a new value for MEDIA9 which is X'09' TVIMEDTY has a new value for MEDIA10 which is X'0A'
CBRUXCPL	the change use attribute installation exit parameter list	UXCEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE UXCMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE UXCMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE
CBRUXEPL	the cartridge entry installation exit parameter list	UXEEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE UXEMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE UXEMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE
CBRUXJPL	the cartridge eject installation exit parameter list	UXJEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE UXJMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE UXJMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE

Table 52. OAM mapping macro changes (continued)																																																																																						
The macro	that maps	has these changes.																																																																																				
CBRUXNPL	the volume not in library installation exit parameter list	<p>UXNEFMT2 EQU 7 READ/WRITE on ENTERPRISE FORMAT 2 (EFMT2) DEVICE UXNMED9 EQU 9 MEDIA9 - ENTERPRISE EXTENDED TAPE CARTRIDGE UXNMED10 EQU 10 MEDIA10 - ENTERPRISE EXTENDED WORM TAPE CARTRIDGE</p> <p>The CBRUXVNL installation exit is enhanced with these new job-related information fields:</p> <table> <tr> <td>UXNSUPPT DS</td><td>XL1</td><td>SUPPORT FLAGS</td></tr> <tr> <td>UXNJINFO EQU</td><td>X'80'</td><td>ON IF JOB INFORMATION PROVIDED (JOB STEP SETUP INVOCATION)</td></tr> <tr> <td>*</td><td></td><td></td></tr> <tr> <td>UXNJOB DS</td><td>0CL120</td><td>JOB INFORMATION</td></tr> <tr> <td>UXNJOBNM DS</td><td>CL8</td><td>JOB NAME</td></tr> <tr> <td>UXNSTPNM DS</td><td>CL8</td><td>STEP NAME</td></tr> <tr> <td>UXNPRGNM DS</td><td>CL8</td><td>PROGRAM NAME</td></tr> <tr> <td>UXNDDNM DS</td><td>CL8</td><td>DD NAME</td></tr> <tr> <td>UXNDSN DS</td><td>CL44</td><td>DATASET NAME</td></tr> <tr> <td>UXNUNIT DS</td><td>CL8</td><td>UNIT NAME</td></tr> <tr> <td>UXNDISP DS</td><td>0CL17</td><td>DISPOSITION</td></tr> <tr> <td>(DISP=...)</td><td></td><td></td></tr> <tr> <td>UXNDISP1 DS</td><td>CL3</td><td>1ST SUBPARAMETER,</td></tr> <tr> <td>STATUS</td><td></td><td></td></tr> <tr> <td>UXNDISP2 DS</td><td>CL7</td><td>2ND SUBPARAMETER,</td></tr> <tr> <td>NORMAL</td><td></td><td></td></tr> <tr> <td>UXNDISP3 DS</td><td>CL7</td><td>3RD SUBPARAMETER,</td></tr> <tr> <td>ABNORMAL</td><td></td><td></td></tr> <tr> <td>*</td><td></td><td></td></tr> <tr> <td>UXNFLAGS DS</td><td>XL1</td><td>JOB INFORMATION</td></tr> <tr> <td>FLAGS</td><td></td><td></td></tr> <tr> <td>UXNCATLG EQU</td><td>X'80'</td><td>ON IF VOLSER OBTAINED FROM</td></tr> <tr> <td>CATALOG</td><td></td><td></td></tr> <tr> <td>DS</td><td>CL2</td><td></td></tr> <tr> <td>RESERVED</td><td></td><td></td></tr> <tr> <td>UXNDEVTP DS</td><td>CL4</td><td>DEVICE TYPE FROM</td></tr> <tr> <td>CATALOG</td><td></td><td></td></tr> <tr> <td>*</td><td></td><td>(PROVIDED IF UXNCATLG IS ON)</td></tr> </table>	UXNSUPPT DS	XL1	SUPPORT FLAGS	UXNJINFO EQU	X'80'	ON IF JOB INFORMATION PROVIDED (JOB STEP SETUP INVOCATION)	*			UXNJOB DS	0CL120	JOB INFORMATION	UXNJOBNM DS	CL8	JOB NAME	UXNSTPNM DS	CL8	STEP NAME	UXNPRGNM DS	CL8	PROGRAM NAME	UXNDDNM DS	CL8	DD NAME	UXNDSN DS	CL44	DATASET NAME	UXNUNIT DS	CL8	UNIT NAME	UXNDISP DS	0CL17	DISPOSITION	(DISP=...)			UXNDISP1 DS	CL3	1ST SUBPARAMETER,	STATUS			UXNDISP2 DS	CL7	2ND SUBPARAMETER,	NORMAL			UXNDISP3 DS	CL7	3RD SUBPARAMETER,	ABNORMAL			*			UXNFLAGS DS	XL1	JOB INFORMATION	FLAGS			UXNCATLG EQU	X'80'	ON IF VOLSER OBTAINED FROM	CATALOG			DS	CL2		RESERVED			UXNDEVTP DS	CL4	DEVICE TYPE FROM	CATALOG			*		(PROVIDED IF UXNCATLG IS ON)
UXNSUPPT DS	XL1	SUPPORT FLAGS																																																																																				
UXNJINFO EQU	X'80'	ON IF JOB INFORMATION PROVIDED (JOB STEP SETUP INVOCATION)																																																																																				
*																																																																																						
UXNJOB DS	0CL120	JOB INFORMATION																																																																																				
UXNJOBNM DS	CL8	JOB NAME																																																																																				
UXNSTPNM DS	CL8	STEP NAME																																																																																				
UXNPRGNM DS	CL8	PROGRAM NAME																																																																																				
UXNDDNM DS	CL8	DD NAME																																																																																				
UXNDSN DS	CL44	DATASET NAME																																																																																				
UXNUNIT DS	CL8	UNIT NAME																																																																																				
UXNDISP DS	0CL17	DISPOSITION																																																																																				
(DISP=...)																																																																																						
UXNDISP1 DS	CL3	1ST SUBPARAMETER,																																																																																				
STATUS																																																																																						
UXNDISP2 DS	CL7	2ND SUBPARAMETER,																																																																																				
NORMAL																																																																																						
UXNDISP3 DS	CL7	3RD SUBPARAMETER,																																																																																				
ABNORMAL																																																																																						
*																																																																																						
UXNFLAGS DS	XL1	JOB INFORMATION																																																																																				
FLAGS																																																																																						
UXNCATLG EQU	X'80'	ON IF VOLSER OBTAINED FROM																																																																																				
CATALOG																																																																																						
DS	CL2																																																																																					
RESERVED																																																																																						
UXNDEVTP DS	CL4	DEVICE TYPE FROM																																																																																				
CATALOG																																																																																						
*		(PROVIDED IF UXNCATLG IS ON)																																																																																				

Volume not in library installation exit enhancement

The volume not in library installation exit (CBRUXVNL) receives control under a variety of circumstances and error conditions that occur during job processing. The primary purpose of the exit is to give the installation the opportunity to enter a volume into a tape library during job step setup, device allocation and library mount processing.

If a tape is inadvertently ejected from a tape library, the exit is invoked providing an opportunity to reenter the volume in the library. With this support, job-related information is passed to the exit, via the CBRUXNPL parameter list, increasing the length of the parameter list. Job-related information can be used to assist the exit in making better decisions on whether to enter the volume in a library or take other action such as cancel the job or allow the allocation to select a standalone drive. The UXNJINFO indicator in the CBRUXNPL parameter list is set on when the CBRUXVNL installation exit is invoked during job step setup processing and job information is provided in the UXNJOB job information fields. If the UXNJINFO indicator is not on, then either the job information is not available because the CBRUXVNL exit invocation is not for job step setup processing or the system does not have the volume not in library job information support installed. If job information is available (job step setup CBRUXVNL invocation) but the information for a job information field is not available, the field contains binary zeroes. The new job-related information is only passed to the volume not in library exit during the job step setup invocation as this is the critical time for the exit to determine if the volume should be entered into a library. For the other phases of processing (device allocation and library mount processing), it has already been determined that the volume should reside in a tape library and timing was such that the volume was ejected. Since a failure to enter the volume into a tape library or the library specified during the device

allocation or library mount phases of processing would result in job failures, the additional job-related information is not needed for those phases of processing.

If UXNJOB job information is available (job step setup CBRUXVNL invocation) but the information for a job information field is not available, generally, the field contains binary zeroes. The UXNDISP fields contain standard JCL disposition parameters (status, normal, abnormal), reflecting the job specifications. If not specified on the job invocation, UXNDISP1, UXNDISP2, and UXNDISP3 may contain zeroes or, in some cases, may contain default disposition settings rather than zeroes. If the CBRUXVNL installation exit is invoked and the job-related information is for a volume that is part of a concatenated data set DD statement and is not the first data set in the concatenation, the UXNDDNM field will contain blanks.

For old allocations, if a volser was not specified and the dataset is cataloged, then the UXNCATLG indicator is set "on" and the UXNDEVTP field contains the 4-byte device type from the catalog. Otherwise, the UXNCATLG indicator is "off" and the UXNDEVTP field contains zeroes. When unit information is available (UNIT=), the UXNUNIT field contains the passed value; otherwise, the UXNUNIT field contains zeroes.

For more information regarding the CBRUXVNL installation exit, please see [*z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries*](#).

Cartridge entry processing

When a volume is entered into an IBM automated or manual tape library, the cartridge entry installation exit (CBRUXENT) is invoked to approve or deny an enter request and to set or verify the recording technology to be associated with a volume. If a volume TCDB record does not exist for the entry of a private MEDIA5, MEDIA6, MEDIA7 or MEDIA8 volume and there is no applicable recording technology being provided by the library's entry default data class, EFMT1 is passed to the exit; unknown is passed for a scratch volume.

If the exit returns with a recording technology for a MEDIA5, MEDIA6, MEDIA7, or MEDIA8 volume and it is not EFMT1 or EFMT2, the specification is considered invalid and the exit is disabled.

For a MEDIA9 or MEDIA10 volume, EFMT2 is passed to the exit as this is the only applicable recording technology for these media types; any other specification is considered invalid and the exit is disabled.

If a TCDB volume record exists and the volume's recording technology or media type is not supported on the system processing the volume, in an ATLDs, the volume is left in the library manager insert category to be processed by a system with appropriate support.

If CBRXLCS FUNC=MCE is used to enter a volume into an MTL and its existing TCDB record has EFMT2 recording technology or an unsupported media type (MEDIA9/MEDIA10) and the software does not support the recording technology and/or the media type, the request is failed with existing return code LCSFAIL (12) and existing reason code LCSFNSUP (310). If the CBRUXENT exit returns a recording technology or media type not supported in the MTL(up-level recording technology), the entry of the volume also fails.

Tape device selection information (TDSI) Migration Considerations

In prior support when new devices were introduced, there were read-compatibility considerations that required the customer to indicate on a volume or job basis that the request for a volume was for read-only purposes. This enabled a higher technology device that was downward read-compatible to be considered eligible for the request. This was particularly important if a customer had upgraded all of the drives in the library to the new recording technology and was a way to indicate that the volume was going to be used for read-only purposes. Since the 3592 Model E05 is both downward read and write compatible, explicit specification of the read-compatible special attribute indicator (TDSSPEC) or usage of the LABEL=(,,IN) on the DD statement of JCL will not be required for the EFMT1 recording format.

OAM object tape support

The Object Access Method (OAM) is also an access method supporting a class of data referred to as objects. An object is a named stream of bytes. The content, format, and structure of that byte stream

are unknown to OAM. There are no restrictions on the data in an object. For example, an object can be a compressed scanned image or coded data. Objects are different from data sets handled by existing access methods.

In an IBM tape library environment, the SETOAM DATACLASS parameter can be specified using a data class that contains the media type or recording technology; these specifications are associated with an Object or Object Backup storage group in the CBROAMxx member of PARMLIB.

In a stand-alone environment, the SETOAM TAPEUNITNAME parameter can be specified using an esoteric that contains 3592 Model E05. In addition to this, the SETOAM DATACLASS parameter can be used to indicate that the lower recording format (EFMT1) should be used by the drive, otherwise the default recording format (EFMT2) is used when writing from load point. These specifications are associated with an Object or Object Backup storage group in the CBROAMxx member of PARMLIB.

In addition, the SETOAM DATACLASS parameter can also be used inside and outside an IBM tape library environment to take advantage of performance scaling and performance segmentation. Performance scaling and performance segmentation are only available with MEDIA5 or MEDIA9 tape cartridge media. A DATACLASS with the performance scaling or performance segmentation data class attribute selected can be specified for OBJECT storage groups. The performance scaling data class attribute can be used to improve the random retrieval rate of primary objects; whereas, objects written to OBJECT BACKUP storage groups can specify a DATACLASS that does not specify performance scaling and can continue to utilize the full capacity of the MEDIA5 or MEDIA9 volume. For more detail on performance scaling and performance segmentation, see [“Performance scaling and segmentation for 3592” on page 259](#).

In addition to the performance scaling option available with MEDIA5 and MEDIA9 cartridge, the 60GB MEDIA7 economy cartridge can also be used to improve the random retrieval rate of primary objects.

For the 3592 Model E05 (always in 3590 emulation mode), OAM derives the media type and capacity from the control unit. If EFMT2 recording technology is used to write on the volume (either by default or specifically requested), the MEDIA5 and MEDIA6 capacity is 488281088 KB. The MEDIA7 and MEDIA8 economy capacity is 97655808 KB. The MEDIA9 and MEDIA10 extended capacity is 700 GB.

Table 53 on page 324 shows the entry for the optical configuration database (OCDB) MEDIATYP field. The media type is defined in the MEDIATYP field. These media types are defined:

- MEDIATYP field is 12, meaning Enterprise Extended Tape Cartridge. The CAPACITY value for this new media is 700 GB with the description of "Represents the approximate number of kilobytes of data for an IBM 3592 Enterprise Extended Tape Cartridge. This value is returned from the drive (3592 Model E05) and is used here as an approximation that is close to actual value."
- MEDIATYP field is 14, meaning Enterprise Extended WORM Tape Cartridge. The CAPACITY value for this new media is 700 GB with the description of "Represents the approximate number of kilobytes of data for an IBM 3592 Enterprise Extended Tape Cartridge. This value is returned from the drive (3592 Model E05) and is used here as an approximation that is close to actual value."

Table 53. Library table column descriptions				
Column description	Name	DB2 type	DB2 attribute	Report label
Capacity of tape	CAPACITY	INTEGER	Not Null	CAPACITY
Media Type	MEDIATYP	CHAR(2)	Not Null	MEDIATYPE

The ERDS Physical ID (EPI) value for the 3592 Model E05 drive is a hex '12' and is stored in the DB2 TAPEVOL table of the OAM Optical Configuration Database (OCDB) for a volume written in either EFMT1 or EFMT2 by a 3592 Model E05 drive and displayed, as appropriate, in the volume display. In the standalone environment, drives must be put in their own unique esoteric to ensure that a volume written with EFMT2 recording technology is not inadvertently allocated to a drive that does not support EFMT2. For an IBM tape library, the SETOAM DATACLASS parameter at the storage group (or global level) can be used to specify a desired recording technology and ensure allocation to an appropriate drive.

Storage groups using 3592 Model E05 drives should be comprised of either WORM tape volumes or rewritable tape volumes. In addition, you should consider the separation of extended length, standard length and economy length media types. In an IBM tape library environment, the SETOAM DATACLASS parameter at the storage group (or global level) can be used to specify a desired media type. By specifying

a DATACLASS media interchange for the storage group, MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9 and MEDIA10 can be separated and prevent unintentionally writing on the wrong media type.

To assist the tape management system in mounting an appropriate media type in the stand-alone environment (non system-managed tape environment), the DSNWITHSGNAME global keyword on the SETOAM statement in the CBROAMxx PARMLIB member appends the object storage group name to the OAM data set names. For more information, please refer to [“Object tape data set low-level qualifier enhancement”](#) on page 396.

Object tape migration considerations

In the past when migrating to a new drive model with a new recording technology using media types that could also be used at a lower-level recording technology, customers marked their partially filled volumes as full or not writable and new write requests were done at the new recording technology. When migrating from 3592-J drives to 3592-E05, MEDIA5, MEDIA6, MEDIA7, and MEDIA8 volumes written on 3592-J drives with EFMT1 recording technology and not filled to capacity do not need to be marked as full or not writable. Data can be extended using the EFMT1 recording technology on the 3592 Model E05 drive.

Object tape volume management support

OAM supports expiring an object tape volume whose data on the volume is all expired. The tape volume can be deleted or recycled if it has no valid data remaining because of expired data or all valid data has been moved to another volume due to recovery, the move volume utility, or the OSMC shelf manager processing.

As with the existing 3592 media types (MEDIA5, MEDIA6, MEDIA7 and MEDIA8), the 3592 Model E05 support for the additional media types (MEDIA9 and MEDIA10) includes special handling of WORM (MEDIA10) tape volumes that have expired. Because WORM tape volumes cannot be written from load point, they cannot be recycled.

With WORM tape, once the volume has been filled and data has been expired or DELETE has been requested on the MOVEVOL or RECOVERY command, the WORM tape volume is processed like the OAM RECYCLE MVSSCRATCH option. All knowledge of the volume is removed from the OAM DB2 tape volume database. Message, CBR2173I, is issued to signal the tape management system that a WORM volume has been expired or deleted and requires special handling based on the installation's procedures. If the WORM storage group has OAMSCRATCH or GROUP option specified for the TAPERECYCLEMODE keyword in the SETOAM statement in the CBROAMxx parmlib member, the WORM tape is still handled like the MVSSCRATCH option had been specified since WORM tape cannot be rewritten from load point. Message CBR2165I continues to be issued for a rewritable tape volume that has been expired or deleted.

Rewritable tape volumes being recycled (OAMSCRATCH or GROUP) have their data set format field reset to blank, indicating no current OAM data set written on the volume.

Part 5. 3592 Model J

Chapter 51. Introduction for 3592 Model J

This topic describes the IBM System Storage Tape System 3592 Model J tape drives and the Data Facility Storage Management Subsystem (DFSMS) software support needed to use them.

IBM System Storage Tape System 3592

The IBM System Storage Tape System 3592 provides high capacity, performance, and reliability, along with a wide range of host connectivity. Specifically, the IBM System Storage Tape System 3592 offers these features:

- Creates tapes for archive files.
- Backs up and restores systems in case of system or disk storage problems.
- Stores high-speed, high-capacity sequential application data sets.
- Stores temporary data sets.
- Satisfies off-site data storage for disaster recovery.
- Provides data interchange with other systems that use 3592 subsystems.
- Supports WORM (write once, read many) tape data cartridges whose data cannot be altered.

3592 Model J tape drive

The IBM System Storage Tape System 3592 consists of one or more 3592 Model J tape drives and uses these IBM System Storage family of tape media:

- MEDIA5 - The IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) physical media provides 300 GB of uncompressed capacity and 900 GB (assuming a 3:1 compression ratio) of compressed capacity depending on the type of data written.
- MEDIA6 - The IBM TotalStorage Enterprise WORM Tape Cartridge (MEDIA6) physical media provides 300 GB of uncompressed capacity and 900 GB (assuming a 3:1 compression ratio) of compressed capacity depending on the type of data written.
- MEDIA7 - The IBM TotalStorage Enterprise Economy Tape Cartridge (MEDIA7) physical media provides 60 GB of uncompressed capacity and 180 GB (assuming a 3:1 compression ratio) of compressed capacity depending on the type of data written.
- MEDIA8 - The IBM TotalStorage Enterprise Economy WORM Tape Cartridge (MEDIA8) physical media provides 60 GB of uncompressed capacity and 180 GB (assuming a 3:1 compression ratio) of compressed capacity depending on the type of data written.

The IBM System Storage Tape System 3592 Model J tape drive reduces data storage costs by increasing media capacity. In this information, the term 'J' refers to the Model J1A. You can use the 3592 Model J tape drive in the stand-alone environment or the tape library environment (automated or manual). Currently, the 3592 Model J tape drive does not have a cartridge loader.

The 3592 Model J tape drive offers these features:

- The 3592 Model J reads and writes EFMT1 (enterprise format 1) recording technology.
- The 3592 Model J uses the IBM System Storage family of tape media.
- The 3592 drives manufactured before the general availability of WORM capability and economy cartridges must have a microcode update to be able to read/write the WORM and economy cartridges. Drives without the updated microcode will reject the WORM and economy cartridges.
- The 3592 Model J optionally provides performance scaling by using only the first 60 GB of physical tape. The default is to use the full 300 GB capacity. This option is available on MEDIA5 tapes and is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.

- The 3592 Model J emulates 3590 Model B1x tape drives (all 3592 tape cartridge media supported in this emulation mode) or 3490E tape drives with MEDIA5 tape cartridge media only. In a system-managed tape library environment (manual or automated), only 3590 Model B1x emulation is supported.
- The 3592 Model J coexists with 3490E and 3590 devices in the 3494 automated tape library.
- The 3592 Model J coexists with 3490, 3490E, and 3590 devices in a manual tape library.

The 3592 Model J tape drive is always in emulation mode, either as a 3590 Model B1x device or as a 3490E device. The 3592 Model J cannot use the MEDIA3 or MEDIA4 cartridges used in 3590 tape drives, nor the MEDIA1 or MEDIA2 cartridges used in 3490E tape drives.

Related reading:

- See *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555, for additional information.

Write Once, Read Many (WORM)

The write-once, read-many (WORM) function of tape data storage is accomplished on the 3592 Model J by a combination of microcode controls in the drive, and a special WORM tape cartridge (MEDIA6 or MEDIA8). All 3592 drives with the appropriate microcode version installed are capable of reading and writing WORM cartridges.

When the drive senses that a cartridge is a WORM cartridge, the microcode prohibits the changing or altering of user data already written on the tape. The microcode keeps track of the last appendable point on the tape by means of an overwrite-protection pointer stored in the cartridge memory (CM). Statistical Analysis and Reporting System (SARS) data can be written and updated on WORM tapes because the SARS data is not in the user area of the tape. Each WORM cartridge is identified using a world-wide unique cartridge identifier (WWCID), which is permanent and locked, providing another level of security for data that must be maintained. This permanent locked information is stored in both the cartridge CM and on the tape itself, and can also be associated with the unique barcode VOLSER.

Note: In some publications, the world-wide unique cartridge identifier (WWCID) may also be referred to as the world-wide identifier (WWID).

While overwriting of data on a WORM cartridge is not allowed, appending is permitted under certain conditions. These operations are allowed:

- Appending an additional labeled file following the final file on a tape volume. This overwrites the final tape mark of a final pair of tape marks followed by a header label group for the file to be appended. Appending is only permitted where the trailer label group begins with a record that starts with EOF rather than EOV. EOV indicates that a file has been extended to a different volume.
- Appending an additional unlabeled file following the final file on a tape volume. This overwrites the final tape mark of a final pair of tape marks followed by the user file to be appended.
- Appending additional records to the final labeled file on a tape volume. This overwrites the final trailer label group and the tape mark immediately prior to the final trailer label group followed by the final file's user data records. Appending is only permitted where the trailer label group begins with a record that starts with EOF rather than EOV.
- Appending additional records to the final unlabeled file on a tape volume. This overwrites the final tape mark or pair of tape marks immediately following the last user data record of the unlabeled file.
- Relabeling a tape volume when only a header label group has been written and no user data records nor trailer label group has been written. This rewrites the header label group, including volume labels and remaining initial header label group records, where volume identification and other fields in the header label group may be changed. This is prohibited if the header label group was followed by a trailer label group, user data records, or more than two tape marks because user data is never overwritten.

Header label groups and trailer label groups are recognized when all records within them conform to either IBM Standard or ANSI Standard label definitions. Any record with a prefix not recognized as conforming to these standards is assumed to be a user data record and causes overwriting of the entire

label group to be prohibited. Double tape marks are assumed to occur only after the final recorded unlabeled file or the final label group on a tape. More than two adjacent tape marks indicate a null structure, such as a null user data file, between the first two of the multiple adjacent tape marks. For this reason, no more than two final tape marks are overwritten in any attempt to append.

In addition, the 3592 drive permits certain normal error recovery actions to succeed when writing to a volume that had been previously interrupted due to some equipment, connectivity, or power malfunction. In particular, in ESCON and FICON attachment environments, certain channel error recovery programs are supported via a mode of operation where the ESCON / FICON controller simulates the rewriting of records. The simulation of rewriting of records presents the appearance at the host of successful rewrites of logical records. The simulation succeeds only if the actual record already recorded on the medium precisely matches the record sent to the 3592 drive from the host.

z/OS software support for the 3592 Model J tape drive

Use z/OS software with the 3592 Model J to increase your data storage capacity with the IBM System Storage family of tape media and the EFMT1 recording technology. Table 54 on page 331 describes z/OS DFSMS components, Multiple Virtual Storage (MVS) Device Allocation, Environmental Recording, Editing, and Printing (EREP), DFSORT, and JES3 that provide software support for the 3592 Model J.

<i>Table 54. Components that provide software support for the 3592 Model J tape drive</i>	
Component	Function
AMS	AMS allows the use of the EFMT1 recording technology and IBM System Storage family of tape media for volumes as well as the printing and displaying of information about the recording technology and media type.
Device Services	Device Services manages the IBM System Storage Tape System 3592 devices.
DFSORT	DFSORT works without change with the IBM System Storage Tape System 3592 devices.
EREP	EREP provides device type information when formatting LOGREC records.
DFSMSHsm	DFSMSHsm allows the use of 3592 devices and media for DFSMSHsm-related activities. Customers can also choose to limit the data written to the first 60 GB (the optimally scaled performance capacity) of the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) by using the data class performance scaling attribute. This option is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.
ISMF	ISMF allows the use of 3592 devices and media in the ISMF Data Class Application, Mountable Tape Volume Application, and the Tape Library Management Application. In addition, the data class performance scaling attribute, if selected, allows the user to limit the amount of data written to each tape. This applies to MEDIA5 tape cartridges. For 3592 Model J, the limit is the first 20% (60 GB physical) of tape media.

Table 54. Components that provide software support for the 3592 Model J tape drive (continued)

Component	Function
z/OS Multiple Virtual Storage (MVS) Allocation	z/OS MVS Allocation allows the use of the EFMT1 recording technology and IBM System Storage family of tape media when using the Dynamic Allocation Text Unit DALINCHG.
OAM	OAM tape library support allows the use of the EFMT1 recording technology and IBM System Storage family of tape media in the IBM 3494 Automated Tape library and in the IBM manual tape library. OAM object tape support allows the use of 3592 devices and media for object-related activity. Customers can also choose to limit the data written to the first 60 GB (the optimally scaled performance capacity) of the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5) by using the data class performance scaling attribute. This option is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.
OCE/IFGOJES3	OCE/IFGOJES3 allows the use of the EFMT1 recording technology and IBM System Storage family of tape media in the stand-alone environment and the tape library environment. New devices can also be used in a tape library that is JES3-managed.
DFSMSrmm	DFSMSrmm allows the use of the EFMT1 recording technology and IBM System Storage family of tape media. DFSMSrmm records the volume capacity for a volume including the volume capacity when performance scaling is specified. This applies to the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5).
SMS	SMS allows the use of the EFMT1 recording technology and IBM System Storage family of tape media. You can specify the data class performance scaling attribute for the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5). This option is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.

Using 3592 Model J tape drives in an IBM tape library environment

z/OS DFSMS provides device allocation and media management in 3494 automated or manual tape library environments for 3592 Model J tape drives. This full support is required when 3592 Model J tape drives are installed in an IBM tape library environment. 3592 Model J drives can coexist with 3950 Model B1x, 3590 Model E1x, and 3590 Model H1x drives in the same library.

Inside an IBM tape library, only 3590 Model B1x emulation is supported. The system-managed tape library support recognizes the device as its real device type instead of its emulated device type; this enables "real" and emulated Model B1x tape drives to coexist and be properly managed in the same IBM tape library.

To request WORM media in a system-managed tape library environment and to ensure that WORM media is only used when explicitly requested, if a WORM scratch volume is to be used, media types MEDIA6 or MEDIA8 must be explicitly specified through data class. If a media type is not specified through data

class, MEDIA5 is the primary scratch media type and MEDIA7 is the alternate scratch media type if there are no MEDIA5 scratch volumes available.

Before using the new 3592 media (MEDIA6, MEDIA7, or MEDIA8) in the system-managed tape library environment (automated or manual), ensure that all existing 3592 drives in the library are upgraded to support the new media types. Otherwise, job failures may occur with a drive with the incorrect microcode load being allocated.

Using 3592 Model J tape drives in a stand-alone environment

3592 Model J tape drives emulate already-supported tape devices. To use these drives in a nonlibrary environment, you must manage mixed media and resolve drive allocation ambiguities between 3592 Model J drives and the actual models of drives that are being emulated. This is because the emulated device type is recorded in the data set records of user catalogs. You must manage media and device allocation according to your installation's storage management policies. You must separate real and emulated device types.

Before using the new 3592 media (MEDIA6, MEDIA7, or MEDIA8) in the stand-alone environment, ensure that all 3592 devices within the same esoteric are at the same 3592 microcode support level to ensure that a 3592 device is allocated that supports the new media types.

Recommendation: Use a manual tape library, DFSMSrmm, third-party tape management software, or write your own applications when using 3592 Model J tape drives in a stand-alone environment.

Implementation considerations for Using 3592 Model J tape drives

Consider these implementation tasks for using DFSMS software support for 3592 Model J tape drives.

- For non-specific mount requests in a stand-alone (non-SMS) tape environment, there are no automatic system controls for WORM cartridges. This can result in inadvertent and irreversible writes to WORM media. Using the tape management system pooling support to set up pools to select WORM versus R/W tape media and selecting economy length versus standard length cartridges help to guarantee that the correct media type is mounted.

In addition, SMS data class policies can be used to control WORM mounts for stand-alone, non-specific mount requests. There are two ways to enforce the data class media policy:

- Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=ALLMEDIATY. ALLMEDIATY enforces all data class media policies for all stand-alone scratch mounts.
- Specify the DEVSUPxx keyword, ENFORCE_DC_MEDIA=MEDIA5PLUS. MEDIA5PLUS ensures data class media policies for MEDIA5, MEDIA6, MEDIA7, and MEDIA8 are enforced for stand-alone scratch mounts.
- In the manual tape library (SMS) environment, WORM scratch mounts can be managed through the tape management system pooling support instead of data class. New DEVSUPxx keyword, MTL_NO_DC_WORM_OK, allows a WORM scratch volume to be used, even if it was not explicitly requested through data class.
- For the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5), use the performance scaling attribute specified through the ISMF data class application if you want to select optimal performance scaling for certain types of jobs and applications. The default setting is to use the tape to its full 300 GB capacity. This can be specified for tape allocations that are inside or outside an IBM tape library environment. The performance scaling option is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.

Note: In addition, the 3592 drive also supports a 260 GB segmented format of the 300 GB (MEDIA5) tape cartridge that provides fast access in the first 60 GB segment and slower access in the remaining 200 GB segment. However, this format is not currently supported in the zSeries environment and when detected during OPEN processing (file sequence 1, DISP=NEW), results in the MEDIA5 tape cartridge being reformatted to either its 60 GB scaled or 300 GB full capacity format as indicated in the performance scaling data class attribute.

- If you have mixed 3590-1 devices in a non-SMS environment, you need to define a unique esoteric name for each recording technology. Identify the esoteric names to DFSMSHsm using the SETSYS

USERUNITTABLE(*esoteric1:esoteric1, esoteric2:esoteric2...*) command to ensure that the correct device type is requested when the tape is mounted for input or output. If your installation uses SMS-managed tape devices or has a single 3590-1 recording technology, you do not need to define an esoteric for those devices; you might need to specify that DFSMSHsm allows mixed devices in the 3590-1 generic name (see APAR OW57282).

- In the stand-alone (non-SMS) environment, perform these implementation steps:
 1. Define data classes or alter existing data classes to:
 - Use the performance scaling attribute with the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5).
 - To take advantage of the new data class media enforcement support enabled through DEVSUPxx (ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS).
 2. Update the ACS routine to assign the appropriate data class construct.
- In an IBM tape library environment, perform these implementation steps:
 1. Define or alter existing data classes to specify the recording technology, media type, and performance scaling attributes, as appropriate. The performance scaling attribute applies to the IBM TotalStorage Enterprise Tape Cartridge (MEDIA5). This option is not available on MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.
 2. Define or alter existing tape storage group constructs.
 3. Update ACS routines to direct allocation to appropriate 3592 devices and media.
 4. Validate and activate the new or modified SMS configuration.
 5. Update parmlib member DEVSUPxx (as appropriate) with the MEDIAx parameters (MEDIA5, MEDIA6, MEDIA7, and MEDIA8) specifying the library partitioning category codes.

Related reading:

See Chapter 52, “[Migration to the software support for 3592 Model J tape drives,](#)” on page 335 for migration information and implementation information.

Chapter 52. Migration to the software support for 3592 Model J tape drives

DFSMS software support for the 3592 Model J addresses media management and data allocation in an IBM 3494 Automated Tape Library and in the manual tape library (MTL). You can manage media and allocate data to appropriate nonlibrary drives through separation of the real and emulating drives, third-party tape management software, or user-written applications. You can use the 3592 Model J drive and MEDIA5 on systems that are running OS/390 V2R10 and above. However, to use the new 3592 media types, MEDIA6, MEDIA7, and MEDIA8, z/OS V1R3 and above must be used.

This topic outlines the tasks and associated procedures that must be performed to migrate to software support for the 3592 Model J tape drive in these environments:

- Stand-alone environment
- IBM tape library environment
- OAMplex
- HSMplex

Understanding coexistence considerations for 3592 Model J1A

Coexistence support for the base 3592 support and MEDIA5 had been provided at OS/390 V2R10 and above by installing the needed full-support PTFs without the Device Services enabling PTF. The Device Services coexistence support prevented the 3590 Model J devices from coming online on a system that did not have all of the full-support PTFs installed. Installation of the base support enabling PTF then brought in all of the needed full-support PTFs and enabled the base 3592 support on that system.

In support of the new 3592 media types, MEDIA6, MEDIA7, and MEDIA8, coexistence support is also provided at OS/390 V2R10 and above. However, since full support for the new media types is only available at z/OS V1R3 and above, coexistence support is provided at OS/390 V2R10 through the installation of separate coexistence specific PTFs. At the full support release levels, coexistence support is provided by installing the needed full-support PTFs without the Device Services enabling PTF. As with the base 3592 support, installation of the new support's enabling PTF will bring in all of the needed support PTFs for MEDIA6, MEDIA7, and MEDIA8. Also, if the system is enabled for the base 3592 support and is not enabled for the new media support, it can still be used for MEDIA5 processing. Before using the new media types, ensure that all of the support code is installed as appropriate (full or coexistence). See [Table 55 on page 335](#) for a discussion of the coexistence PTFs that may be needed.

You must install coexistence PTFs on systems that will not have all of the 3592 Model J support installed (either the 3592 base support and/or the additional support for the new media types).

Review the coexistence migration tasks described in these topics.

Table 55. Coexistence migration tasks	
Environment	Coexistence considerations
Stand-Alone	As described in Chapter 51, "Introduction for 3592 Model J," on page 329 , z/OS DFSMS and related licensed programs provide full support for the base 3592 and MEDIA5 with OS/390 V2R10 and above, with support for the new media types, MEDIA6, MEDIA7, and MEDIA8, being provided with z/OS V1R3 and above. The base 3592 support enables the tape drives to operate in the stand-alone environment in either 3590 Model B1x or 3490E emulation and to coexist with other 3590-1 or 3490 tape drives. However, to use the new media types, MEDIA6, MEDIA7, or MEDIA8, only 3590 Model B1x emulation is supported.

Table 55. Coexistence migration tasks (continued)

Environment	Coexistence considerations
IBM Tape Library	<p>As described in Chapter 51, “Introduction for 3592 Model J,” on page 329, z/OS DFSMS and related licensed programs provide full support for the base 3592 and MEDIA5 with OS/390 V2R10 and above, with support for the new media types, MEDIA6, MEDIA7, and MEDIA8, being provided with z/OS V1R3 and above. The system-managed tape library support allows the tape drives to operate in an ATL or MTL environment as 3590 Model B1x devices, providing device allocation and tape media management support. This support allows the 3592 Model J tape drives to coexist with other 3590-1 tape drives in the same tape library. However, prior to using the new media types (MEDIA6, MEDIA7, and MEDIA8), ensure that all existing 3592 library drives have had their microcode upgraded in support of the new media types, otherwise job failures may occur with a 3592 drive with the wrong microcode level being allocated.</p>

Table 55. Coexistence migration tasks (continued)

Environment	Coexistence considerations
OAMplex	<p>For OAM's object support customers, in addition to the planning steps required for migration to the software support for the 3592 Model J tape drives in the stand-alone and IBM tape library environments, there are coexistence considerations your installation must take into account before you install the software in an OAMplex:</p> <ul style="list-style-type: none"> • For the base 3592 support and MEDIA5, OAM object tape coexistence support is provided at OS/390 V2R10 and above, through installation of the full support PTF. Coexistence support for the new media types (MEDIA6, MEDIA7, and MEDIA8) is provided at OS/390 V2R10 and above, with a separate coexistence PTF being provided at OS/390 V2R10. With z/OS V1R3 and above, OAM object tape coexistence support is provided in the full support PTF. Along with the support for the new media types (MEDIA6, MEDIA7, and MEDIA8) built into the coexistence and full support PTF is full support for the new OAM object tape data set name format (with the storage group name appended). In support of the new data set name format, coexistence and full support systems must have the DSNFMT column added to the TAPEVOL table in the Optical Configuration Database. Only one system in an OAMplex needs to run CBRSPMDS to add the TAPEVOL column, but all systems in the OAMplex need to run CBRPBIND. • OAM coexistence support prevents lower-level systems from selecting volumes with ERDS Physical Identifier (EPI) values for object write requests, and it also prevents the up-level volumes (MEDIA6, MEDIA7, and MEDIA8) from being selected on a system that is not enabled for the new media support. • OAM object support has coexistence considerations when running in an OAMplex environment with at least one system with the full support installed and enabled and at least one system at a release level where the new devices are supported; however, all of the support is not installed and enabled. In this mixed support environment, it is possible for a retrieve request to be received for an object, which resides on a tape cartridge volume which was written in EFMT1 track format (written on a 3592 Model J device) by a system that does not support the new devices and MEDIA5, or by a system that supports the new devices, but does not support the new media types (MEDIA6, MEDIA7, or MEDIA8), or both. If this is the case, coexistence support will be provided to allow OAM to attempt to locate an instance of OAM in the OAMplex where the full support is installed and enabled. If an instance of OAM is found where the request can be processed, the OAM on the system where the request originated will ship the retrieve request to the target system using XCF messaging services. Once 3592 Model J devices are used in an OAMplex environment and objects are written to tape volumes with the new EPI value recorded, it is expected that any OAM on a system where the full support is installed and enabled is eligible for processing requests using that volume. Therefore, the devices must be made available to all instances of OAM where the full support is installed.

Table 55. Coexistence migration tasks (continued)	
Environment	Coexistence considerations
OCE (Open / Close / End-of-Volume)	In support of the new media types (MEDIA6, MEDIA7, and MEDIA8), coexistence support is provided for the new media types on OS/390 V2R10 and above to prevent the new media types from being used on non-supporting systems. With the coexistence support installed, an abend will occur if an up-level volume is mounted on a down-level system.
HSMplex	<p>For the base 3592 support and MEDIA5, HSM coexistence support is provided at OS/390 V2R10 and above, through installation of the full support HSM PTF.</p> <p>HSM coexistence support for the new media types (MEDIA6, MEDIA7, and MEDIA8) is provided at the OS/390 V2R10 level through the OCE coexistence PTF. At the z/OS V1R3 level and above, HSM coexistence is provided by applying both the OCE and the HSM full support PTFs. This will ensure HSM does not use MEDIA6, MEDIA7, or MEDIA8 tapes on a non-supporting system.</p>

Preparing to install the software

See *IBM System Storage TS1120 Tape Drive and Controller Introduction and Planning Guide*, GA32-0555, for hardware requirements.

Coexistence support had been provided with OS/390 V2R10 for the base 3592 support and MEDIA5 and also provided for the new media types, MEDIA6, MEDIA7, and MEDIA8. Some of the new coexistence support is provided by installing the full-support APARs without the enabling APAR, and other coexistence support is provided through separate PTFs depending on the release level. The 3592 base support is available with OS/390 V2R10 and above, with support for the new media types being provided with z/OS V1R3 and above.

Installing the appropriate PTFs

Refer to the 3592 PSP bucket for the APAR and PTF numbers applicable for each release. An enabling PTF exists at the base 3592 support level to provide full device support for the 3592 Model J and in addition to this, there is a new enabling PTF that exists for the 3590 Model J for MEDIA6, MEDIA7, and MEDIA8 support. Installation of the appropriate enabling PTF pulls in all of the needed support PTFs and indicates to the system that all of the needed software support is installed.

In addition, as appropriate for your environment and release level, determine what coexistence PTFs are needed for your environment both from a base 3592 support level and also in support of the new media types.

Planning for DFSMS software support for the 3592 Model J

The planning steps you must consider to successfully install the 3592 Model J software, (base support and MEDIA5), and additionally, the support for new media types, MEDIA6, MEDIA7, and MEDIA8, vary depending upon the tape environment you have installed. Table 56 on page 339 discusses planning considerations for stand-alone environments (including tape devices installed in vendors' automated tape libraries) and for IBM tape library environments.

Table 56. 3592 Model J planning considerations

Area	Planning considerations
System customization: stand-alone environment	<ol style="list-style-type: none"> 1. Determine whether you need help from your tape management system vendor and contact them, if needed. 2. Determine the 3592 drives that have their microcode upgraded in support of the new media types (MEDIA6, MEDIA7, and MEDIA8) and ensure that the drives in the same esoteric are at the same support level. It is recommended that you upgrade all existing 3592 drives prior to using the new media types. 3. Determine which systems should have coexistence support and which systems should have full support. 4. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 5. Determine when to IPL the host machine after installing all necessary PTFs.
System customization: IBM library tape environment	<ol style="list-style-type: none"> 1. Determine whether you need help from your tape management system vendor and contact them, if needed. 2. Determine the libraries that will be using the new media types (MEDIA6, MEDIA7, and MEDIA8) and ensure that all 3592 library drives are upgraded prior to using the new media types. Also, a scratch allocation for a particular media type might have several libraries that are eligible for the request (have 3592 drives present), so ensure that all of the eligible 3592 library drives are upgraded for the new support. 3. Identify the installation exit changes that are needed. 4. Determine which systems should have coexistence support and which systems should have full support. 5. Determine when to IPL the host machine after installing the coexistence PTFs, if needed. 6. Determine when to IPL the host machine after installing all necessary PTFs.

Table 56. 3592 Model J planning considerations (continued)

Area	Planning considerations
System customization: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new 3592 Model J devices in a stand-alone environment: <ol style="list-style-type: none"> a. Follow the system customization planning steps listed for a stand-alone environment. b. Determine the esoteric or generic device names that need to be added to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. c. Determine whether to use the new global keyword DSNWITHSGNAME on the SETOAM statement in the CBROAMxx member of PARMLIB to append the object storage group name to the OAM object tape data set names. See “Object tape data set low-level qualifier enhancement” on page 396 for additional information. 2. If you install the new 3592 Model J devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the system customization planning considerations listed for an IBM tape library environment. b. Determine the new data classes that need to be defined in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. 3. In addition, if you install the new 3592 Model J devices in an OAMplex: <ol style="list-style-type: none"> a. Ensure that the new 3592 Model J devices are available to all instances of OAM where this software is installed. b. Determine whether systems exist that will require coexistence support. This situation is particularly important in an OAMplex where at least one system has the full-support software installed and enabled, and at least one system will not have all of the support installed or enabled. Coexistence support is needed if not all of the systems in the OAMplex are at the same full-support level. c. Installation of the full or coexistence support PTF for the new media types (MEDIA6, MEDIA7, and MEDIA8) brings in support for the new object tape data set name format. In support of this new function (even if this function is not used), the DSNFMT column must be added to the TAPEVOL table in the Optical Configuration Database. Only one system in an OAMplex needs to run CBRSPMDS to add the TAPEVOL column, but all systems in the OAMplex need to run CBRPBIND. d. To provide this coexistence support, as appropriate for the support and the release level, install the OAM full-support PTF without the enabling PTF or any separate coexistence support PTF. e. Determine when to IPL the host machine after installing the coexistence PTFs, if needed.
System customization: DFSMSHsm	See “Implementation considerations for Using 3592 Model J tape drives” on page 333 and “DFSMSHsm tips” on page 376 .

Table 56. 3592 Model J planning considerations (continued)

Area	Planning considerations
Storage administration: stand-alone tape environment	<ol style="list-style-type: none"> 1. Determine how to setup your tape management systems pooling support to separate rewritable (MEDIA5 and MEDIA7) and WORM (MEDIA6 and MEDIA8) media and also to separate the standard and economy length cartridges, as appropriate for their job and application usage. 2. Review the usage of the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA, (optional) to ensure that the media type mounted is the media type requested through data class. This can be used in the tape management systems poolwithg support as an additional safety check. 3. Review the existing SMS data class media policies to ensure compatibility with existing tape scratch pool policies before enabling the DEVSUPxx PARMLIB option, ENFORCE_DC_MEDIA. 4. Determine if media should be used at full capacity or scaled for optimal performance. If you decide to use the performance scaling attribute (available with MEDIA5 tape cartridges only), you can: <ol style="list-style-type: none"> a. Define a data class that requests performance scaling. b. Modify or create ACS routines to associate the tape output functions using performance scaling with a data class that requests performance scaling. 5. Determine how to allocate media to appropriate nonlibrary drives. Consider using the IBM manual tape library. You can also separate the real drives from the emulating drives, use third-party tape management software, or use customer-written applications. 6. Identify any needed changes to the hardware configuration definition (HCD) to define the new devices.
Storage administration: IBM tape library environment	<ol style="list-style-type: none"> 1. Review the usage of the DEVSUPxx PARMLIB option, MTL_NO_DC_WORM_OK, if the WORM cartridges in the manual tape library environment will be mounted through use of the tape management systems pooling support versus a data class WORM media specification. 2. Determine the 3592 media usage of rewritable (MEDIA5 and MEDIA7) and WORM (MEDIA6 and MEDIA8) media and also the usage of the standard and economy length cartridges. Then make the appropriate data class definition updates to select the appropriate media type. WORM media can only be used if explicitly requested through data class. 3. Review ACS routines for changes needed in selecting tape storage groups and libraries that have the new 3592 Model J devices. 4. Determine the data class updates that are needed to use the recording technology, media type, and performance scaling data class attribute (performance scaling available with MEDIA5 tape cartridges only). 5. Identify any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5, MEDIA6, MEDIA7, and MEDIA8, tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member.

Table 56. 3592 Model J planning considerations (continued)

Area	Planning considerations
Storage administration: OAM object tape environment	<p>The planning steps that you must consider in tape environments that use OAM objects vary depending upon the type of environment that is installed.</p> <ol style="list-style-type: none"> 1. If you install the new 3592 Model J devices in a stand-alone environment, follow the storage administration planning steps listed for a stand-alone environment. 2. If you install the new 3592 Model J devices in an IBM tape library: <ol style="list-style-type: none"> a. Follow the storage administration planning steps listed for an IBM tape library environment. b. Review ACS routines for STORE or CTRANS environments and make any changes needed to ensure proper class assignment. 3. If you install the new 3592 Model J devices in an OAMplex, you must make the devices available to all instances of OAM where the full support is installed.

Implementing this change could affect these areas of your processing environment:

Area	Considerations
Storage Administration	<p>For the base 3592 support and MEDIA5, these NaviQuest sample jobs have been changed for this function:</p> <ul style="list-style-type: none"> • ACBJBAD1 is the sample job used to define, alter, or display a data class. • ACBJBAIL is the sample job used to generate a data class list and a data class report. • ACBJBAIN is the sample job used to generate a data class report. <p>For the new 3592 media support (MEDIA6, MEDIA7, and MEDIA8), these NaviQuest sample job has been changed for this function:</p> <ul style="list-style-type: none"> • ACBJBAD1 is the sample job used to define, alter, or display a data class. <p>ISMF panels have been changed. See <i>z/OS DFSMSdfp Storage Administration</i> for information about the ISMF panel changes. See Chapter 55, “ISMF modifications for 3592 Model J,” on page 369 for information about ISMF support for the 3592 Model J.</p>

Area	Considerations
Operations	<p>These commands have been updated with this support:</p> <ul style="list-style-type: none"> • DEVSERV QTAPE • DISPLAY SMS,LIBRARY(<i>libname</i>),DETAIL • DISPLAY SMS,VOLUME • IDCAMS ALTER LIBRARYENTRY • IDCAMS ALTER VOLUMEENTRY • IDCAMS CREATE LIBRARYENTRY • IDCAMS CREATE VOLUMEENTRY • IDCAMS DCOLLECT • IDCAMS LISTCAT • LIBRARY DISPDRV • LIBRARY ENTER • LIBRARY SETCL
Auditing	None.
Application development	<p>The mapping macros and installation exits listed have been changed for this function.</p> <ul style="list-style-type: none"> • CBRTDSI - Maps the Tape Device Selection Information • CBRTVI - Maps the Tape Volume Information • CBRUXCPL - Installation Exit CBRUXCUA Parameter List • CBRUXEPL - Installation Exit CBRUXENT Parameter List • CBRUXJPL - Installation Exit CBRUXEJC Parameter List • CBRUXNPL - Installation Exit CBRUXVNL Parameter List • DALINCHG - Dynamic Allocation DALINCHG Text Unit • EDGRXEXT - Maps the data set records in the DFSMSrmm extract data set • EDGEXTSY - Maps the extract data set symbols used with DFSORT • EDGRVEXT - Maps the volume records in the DFSMSrmm extract data set • EDGSMFSY - Maps the SMF record symbols used with DFSORT • EDGSVREC - Maps the DFSMSrmm SMF volume records • IECLOGT - Maps the tape log data • IECOEVSE - Volume security verification exit parameter list • IECUCBCX - Maps the Tape UCB Device Class extension • IFGTEP - Maps the installation exit main parameter list • IFGWAX - Work area extension • IHADFVT - Maps the data facilities vector table

Area	Considerations
Diagnostic procedures	<p>The messages listed have been changed for this support.</p> <ul style="list-style-type: none"> • ARC0309I • ARC0332A • ARC0332R • ARC0343I • ARC0734I • ARC1236I • ARC1336I • ARC6410E • CBR0113I • CBR0114I • CBR0119I • CBR0185I • CBR0203I • CBR0213I • CBR1082I • CBR1083I • CBR1084I • CBR1110I • CBR1180I • CBR1220I • CBR1240I • CBR2167I • CBR2173I • CBR3660A • CBR3726I • CBR3781I • CBR4105I • CBR4196D • CBR4173I

Area	Considerations
Diagnostic procedures (continued)	<ul style="list-style-type: none"> • CBR6419I • CBR9097I • EDG3357I • EDG4055I • EDG4056I • IEA253I • IEC147I • IEC501A • IEC501E • IEC502E • IEC705I • IEE459I • IGF513I
Automation products	None.
General use	For DFSMSrmm, use the RMM ADDVOLUME subcommand, the RMM CHANGEVOLUME, and the RMM SEARCHVOLUME subcommand for the recording technology EFMT1 and for the media types MEDIA5, MEDIA6, MEDIA7, and MEDIA8.

Implementing the DFSMS software support for the 3592 Model J

To implement the 3592 Model J software support, perform the system-level and application-level tasks listed in these tables. **Required** tasks apply to any DFSMS installation enabling the function. **Optional** tasks apply to only specified operating environments or to situations where there is more than one way to set up or enable the function. For more details on the procedures associated with a given task, see the reference listed.

System-level tasks	Condition	Procedure reference
<i>Stand-alone tape environment</i> <ol style="list-style-type: none"> 1. Make any needed changes to the HCD to define the new devices. 2. If more than one recording technology is used for the same device type, create a unique esoteric for each of the recording technologies. Use the esoteric unit names in DFSMSHsm to direct allocations uniquely to each group of devices. 3. If performance scaling is used (available with MEDIA5 tape cartridges only), update or create ACS routines to assign a data class to tape output functions. For example, for DFSMSHsm, you can filter on single file tape data set names used by DFSMSHsm functions. Define the data class with the performance scaling attribute. 4. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of 3592 Model J drives exclusively because the EFMT1 recording technology is not compatible with other recording technologies. 5. Install coexistence PTFs as appropriate. 6. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support • z/OS HCD User's Guide • z/OS DFSMSHsm Implementation and Customization Guide

System-level tasks	Condition	Procedure reference
<p><i>IBM tape library environment</i></p> <ol style="list-style-type: none"> 1. Define or alter existing data class constructs as appropriate, to specify the EFMT1 recording technology, MEDIA5, MEDIA6, MEDIA7, or MEDIA8, media type, and the performance scaling attributes (performance scaling available with MEDIA5 tape cartridges only). 2. Define or alter existing storage group constructs to include libraries with the new 3592 Model J devices. 3. Update ACS routines to direct allocation to the 3592 Model J device as requested. 4. Validate and activate any new or modified SMS configuration. 5. Make any needed changes to the HCD to define the new devices. 6. To define the partitioning category code for MEDIA5 MEDIA6, MEDIA7, or MEDIA8, tape cartridges, specify the appropriate parameter of the DEVSUPxx parmlib member. 7. When systems are sharing a library with 3592 Model J devices installed, install coexistence PTFs or full-function PTFs on all involved systems. 8. IPL the system. 	Required	<ul style="list-style-type: none"> • z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries • z/OS HCD User's Guide • z/OS DFSMSdfp Storage Administration

System-level tasks	Condition	Procedure reference
<p><i>OAM object tape environment</i></p> <p>The migration steps that you must take in tape environments that use OAM objects vary depending upon the type of environment that is installed:</p> <ol style="list-style-type: none"> If you install the new 3592 Model J devices in an OAMplex: <ol style="list-style-type: none"> Make the new 3592 Model J devices available to all instances of OAM where this software is installed. Install coexistence PTFs as appropriate. Add the DSNFMT column to the TAPEVOL table in the Optical Configuration Database. Run CBRSMPPDS sample JCL to add the DSNFMT column. After the column has been added, run CBRPBIND. Only one system in an OAMplex needs to run CBRSMPPDS to add the TAPEVOL column, but all systems in the OAMplex must run CBRPBIND. <p>Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME).</p> <ol style="list-style-type: none"> IPL the system. If you install the new 3592 Model J devices in an IBM tape library: <ol style="list-style-type: none"> Follow the migration steps listed for an IBM tape library environment. Define the new data classes in STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. Add the DSNFMT column to the TAPEVOL table in the Optical Configuration Database. Run CBRSMPPDS sample JCL to add the DSNFMT column. After the column has been added, run CBRPBIND. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). Make the needed changes to ACS routines for ALLOC, STORE, or CTRANS environments. If you install the new 3592 Model J devices in a stand-alone environment: <ol style="list-style-type: none"> Follow the migration steps listed for a stand-alone environment. Add new device esoteric unit names or generic unit names to STORAGEGROUP statements in the CBROAMxx member of PARMLIB for the object storage groups that are to use the new devices. The esoteric or generic unit name must consist of 3592 Model J drives exclusively because the EFMT1 recording technology is not compatible with other recording technologies. Add the DSNFMT column to the TAPEVOL table in the Optical Configuration Database. Run CBRSMPPDS sample JCL to add the DSNFMT column. After the column has been added, run CBRPBIND. Consider setting DSNWITHSGNAME in the SETOAM statement in the CBROAMxx PARMLIB member. Review your ACS routines if appending the storage group name to OAM data set names (DSNWITHSGNAME). Make the needed changes to ACS routines for ALLOC, STORE and CTRANS environments. 	Required	z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support

System-level tasks	Condition	Procedure reference
<p><i>DFSMSHsm tape environment</i></p> <p>DFSMSHsm allows the specification of tape unit names using either generic or esoteric names. Installations that have a mixture of non-SMS-managed 3590 devices defined under the 3590-1 generic name, need to perform these steps:</p> <ol style="list-style-type: none"> 1. Define a unique esoteric for each recording technology. 2. Use the SETSYS USERUNITTABLE command to define these esoteric names to DFSMSHsm. This also applies to mixed devices in the 3490 generic. Installations that use SMS-managed tape devices or have a single 3590-1 recording technology, do not need to define an esoteric for those devices. However, if you have a mixed SMS-managed 3590 environment, please review APAR OW57282. 	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
<p><i>Setting up DFSMSHsm to use WORM output tapes for ABACKUP</i></p> <p>In a SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.</p> <p>In a non-SMS tape environment, the default allows tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUPxx parameter, ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS, is used, then the data class must request the appropriate media type for it to be successfully mounted.</p>	Required	<ul style="list-style-type: none"> • z/OS DFSMSHsm Implementation and Customization Guide • z/OS DFSMSHsm Storage Administration
Application-level tasks	Condition	Procedure reference
<p>For programs that use dynamic allocation and cannot take advantage of predefined data class definitions, set the PARM for the DALINCHG text unit key in DALINCHG to specify the media type and recording technology for system-managed tape library allocations.</p>	Optional	z/OS MVS Programming: Authorized Assembler Services Guide

Chapter 53. Access method services (AMS) modifications for 3592 Model J

This topic describes changes to the access method services (AMS) commands to support the 3592 Model J tape drives. These commands are changed.

- “ALTER LIBRARYENTRY” on page 349
- “ALTER VOLUMEENTRY” on page 351
- “CREATE LIBRARYENTRY” on page 354
- “CREATE VOLUMEENTRY” on page 356
- “DCOLLECT” on page 359
- “LISTCAT” on page 360



Attention: Use these AMS commands only to recover from tape volume catalog errors. Because AMS cannot change the library manager inventory in an automated tape library, use ISMF for normal tape library alter functions.

Related reading:

For explanations of all the parameters used with the AMS commands and additional examples, refer to *z/OS DFSMS Access Method Services Commands*.

ALTER LIBRARYENTRY

Use the AMS ALTER LIBRARYENTRY command to modify the attributes for an existing tape library entry.

ALTER LIBRARYENTRY command syntax

The syntax for the AMS ALTER LIBRARYENTRY command is as follows.

Keyword	Opeands
ALTER	<i>entryname</i> LIBRARYENTRY [CONSOLENAME(<i>consolename</i>)] [DESCRIPTION(<i>desc</i>)] [LIBDEVTYPE(<i>devtype</i>)] [LIBRARYID(<i>libid</i>)] [LOGICALTYPE{AUTOMATED MANUAL}] [NULLIFY([LIBDEVTYPE][LOGICALTYPE])] [NUMBEREMPTYLOTS(<i>numslots</i>)] [NUMBERSCRATCHVOLUMES(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>))] [NUMBERSLOTS(<i>numslots</i>)] [SCRATCHTHRESHOLD(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>))]

ALTER LIBRARYENTRY parameters

The NUMBERSCRATCHVOLUMES parameter and the SCRATCHTHRESHOLD parameter include the MEDIA5, MEDIA6, MEDIA7, and MEDIA8 subparameters for the IBM System Storage family of tape media.

[NUMBERSCRATCHVOLUMES(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num))]

Identifies the total number of MEDIA1, MEDIA2, MEDIA3, MEDIA4, MEDIA5, MEDIA6, MEDIA7, and MEDIA8 scratch volumes currently available in the given tape library.

MEDIA1(num)

The number of Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the number of Enhanced Capacity Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

The number of High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the number of IBM Extended High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

Abbreviation: NUMSCRV

[SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num))]

Identifies the scratch volume message threshold. When the number of scratch volumes in the tape library falls below the scratch threshold, an operator action message, requesting that scratch volumes be entered into the tape library, is issued to the library's console. When the number of scratch volumes exceeds twice the scratch threshold, the message is removed from the console.

MEDIA1(num)

Specifies the threshold number of Cartridge System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the threshold number of Enhanced Capacity System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

Specifies the threshold number of High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the threshold number of IBM Extended High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the threshold number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the threshold number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

Abbreviation: SCRTHR

Altering a tape library entry example

This example alters the entry for the tape library ATLLIB1.

```
//ALTERLIB JOB    ...
//STEP1   EXEC   PGM=IDCAMS
//SYSPRINT DD    SYSOUT=A
//SYSIN    DD     *
      ALTER  ATLLIB1 -
            LIBRARYENTRY -
            NUMBEREMPTYLOTS(2574) -
            NUMBERSCRATCHVOLUMES(MEDIA6(500) MEDIA2(400)) -
            SCRATCHTHRESHOLD(MEDIA6(200) MEDIA2(100))

/*
```

This command has these parameters:


- ATLLIB1 is the name of the entry being altered.
- LIBRARYENTRY alters a tape library entry.
- NUMBEREMPTYLOTS sets the number of empty slots to 2574.
- NUMBERSCRATCHVOLUMES sets the current number of scratch volumes available for MEDIA6 to 500 and for MEDIA2 to 400.
- SCRATCHTHRESHOLD sets the threshold number of scratch volumes for MEDIA6 to 200 and for MEDIA2 to 100.

ALTER VOLUMEENTRY

Use the AMS ALTER VOLUMEENTRY command to modify the attributes for an existing tape volume entry.

ALTER VOLUMEENTRY command syntax

The syntax of the ALTER VOLUMEENTRY command is as follows:

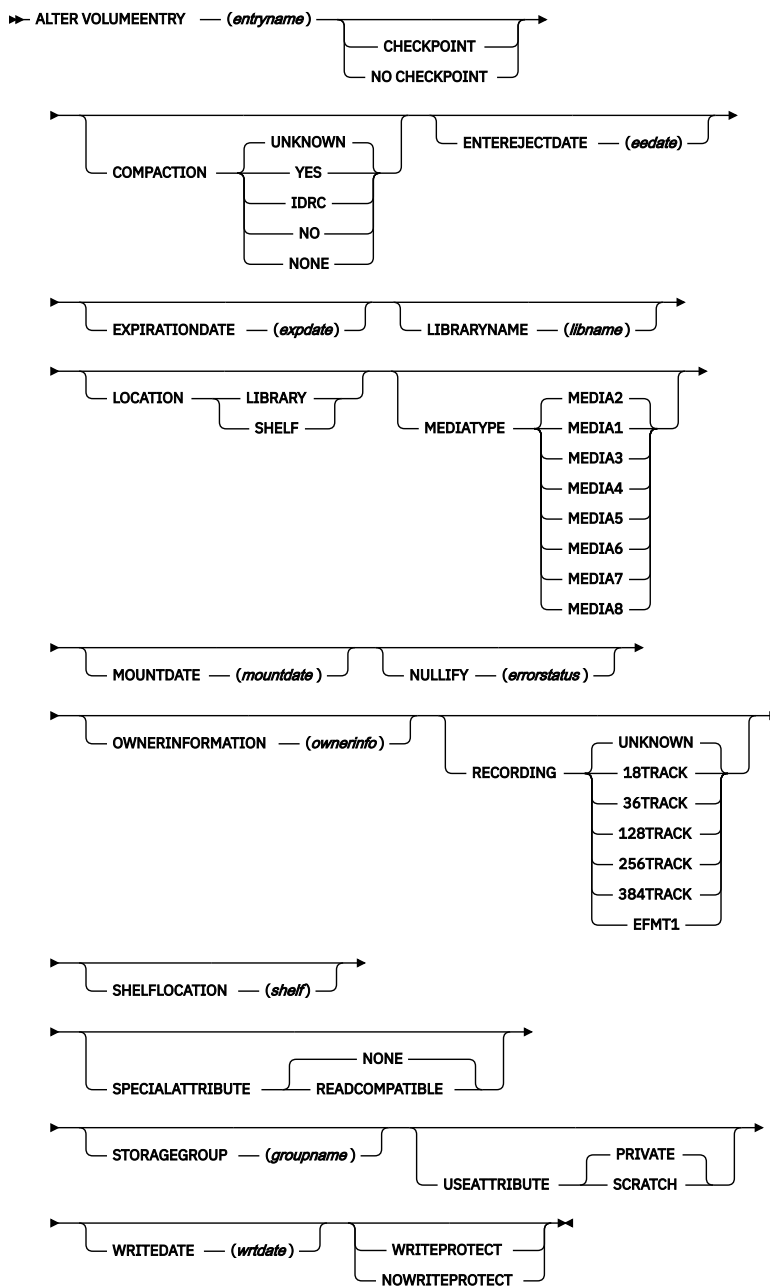

ALTER VOLUMEENTRY parameters

MEDIATYPE and RECORDING are optional parameters. The MEDIATYPE and the RECORDING parameter include the subparameters MEDIA5, MEDIA6, MEDIA7, MEDIA8, and EFMT1 for the 3592 Model J tape drive.

MEDIATYPE{ MEDIA1 | MEDIA2 | MEDIA3 | MEDIA4 | MEDIA5 | MEDIA6 | MEDIA7 | MEDIA8 }

Identifies the media type of the tape volume. If you do not use this, MEDIATYPE defaults to MEDIA2.

MEDIA1

Specifies that the tape volume is Cartridge System Tape.

MEDIA2

Specifies that the tape volume is Enhanced Capacity System Tape. You cannot use this parameter when SPECIALATTRIBUTE is READCOMPATIBLE or when RECORDING is set to 18TRACK.

MEDIA3

Specifies that the tape volume is High Performance Cartridge Tape.

MEDIA4

Specifies that the tape volume is IBM Extended High Performance Cartridge Tape.

MEDIA5

Specifies that the volume is IBM TotalStorage Enterprise Tape Cartridge.

MEDIA6

Specifies that the volume is IBM TotalStorage Enterprise WORM Tape Cartridge.

MEDIA7

Specifies that the volume is IBM TotalStorage Enterprise Economy Tape Cartridge.

MEDIA8

Specifies that the volume is IBM TotalStorage Enterprise Economy WORM Tape Cartridge.

Abbreviation: MTYPE

[RECORDING{18TRACK|36TRACK|128TRACK| 256TRACK|384TRACK|EFMT1|UNKNOWN}]

Identifies the tape recording technology. This parameter can be used for private tape volumes only. The default for scratch tape volumes is UNKNOWN.

18TRACK

Tape was written on an 18-track device and must be read on an 18-track device or a 36-track device.

36TRACK

Tape was written and must be read on a 36-track device.

128TRACK

Tape was written on a 128-track device and must be read on a 128-track, 256-track, or 384-track device.

256TRACK

Tape was written on a 256-track device and must be read on a 256-track device or a 384-track device.

Note: 128TRACK and 256TRACK are valid with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4) only.

384TRACK

Tape was written and must be read on a 384-track device.

Note: 384TRACK is valid with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4) only.

EFMT1

Tape was written and must be read on an EFMT1 (enterprise format 1) device.

Note: EFMT1 is valid with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), and (MEDIA8) only.

UNKNOWN

Tape recording technology is unknown. This is the default value for scratch tape volumes.

Abbreviation: REC

Altering a volume entry example

This example of the ALTER VOLUMEENTRY command alters the entry name that describes volume 0A2991.

```
//ALTERVOL JOB ...
//STEP1 EXEC PGM=IDCAMS
//SYSPRINT DD SYSOUT=A
//SYSIN DD *
      ALTER VOLUMEENTRY(V0A2991) -
            LIBRARYNAME(ATLIB02) -
            USEATTRIBUTE(SCRATCH) -
            MEDIATYPE(MEDIA6) -
            RECORDING(EFMT1)
```

The parameters that are used in this example are as follows:

- ALTER VOLUMEENTRY indicates that an entry that describes a single volume in a library is being altered.
- VOA2991 specifies that the name of the volume being altered is VOA2991 and that the *volser* is OA2991.
- LIBRARYNAME specifies that the name of the library with which this volume record is associated is ATLIB02.
- USEATTRIBUTE identifies the volume as being a SCRATCH tape.
- MEDIATYPE specifies the media type as MEDIA6.
- RECORDING specifies the recording technology as EFMT1.

CREATE LIBRARYENTRY

Use the AMS CREATE LIBRARYENTRY command to create a tape library entry. Use it only to recover from tape volume catalog errors.

CREATE LIBRARYENTRY command syntax

The syntax for the CREATE LIBRARY command is:

Keyword	Operands
CREATE	LIBRARYENTRY (NAME(<i>entryname</i>) LIBRARYID(<i>libid</i>) [CONSOLENAME(<i>consolename</i>)] [DESCRIPTION(<i>desc</i>)] [LIBDEVTYPE(<i>devtype</i>)] [LOGICALTYPE{AUTOMATED MANUAL}] [NUMBEREMPTYLOTS(<i>numslots</i>)] : [NUMBERSCRATCHVOLUMES(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>))] [NUMBERSLOTS(<i>numslots</i>)] [SCRATCHTHRESHOLD(MEDIA1(<i>num</i>) MEDIA2(<i>num</i>) MEDIA3(<i>num</i>) MEDIA4(<i>num</i>) MEDIA5(<i>num</i>) MEDIA6(<i>num</i>) MEDIA7(<i>num</i>) MEDIA8(<i>num</i>))]

CREATE LIBRARYENTRY parameters

The NUMBERSCRATCHVOLUMES parameter and the SCRATCHTHRESHOLD parameter include the MEDIA5, MEDIA6, MEDIA7, and MEDIA8 subparameters for the IBM System Storage family of tape media.

**[NUMBERSCRATCHVOLUMES(MEDIA1(*num*) MEDIA2(*num*) MEDIA3(*num*) MEDIA4(*num*)
MEDIA5(*num*) MEDIA6(*num*) MEDIA7(*num*) MEDIA8(*num*))]**

Identifies the total number of MEDIA1, MEDIA2, MEDIA3, MEDIA4, and MEDIA5 scratch volumes currently available in the given tape library.

MEDIA1(*num*)

Is the number of Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the number of Enhanced Capacity Cartridge System Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

Is the number of High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the number of IBM Extended High Performance Cartridge Tape scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes available. Use a number from 0 to 999999. The default is 0.

Abbreviation: NUMSCRV

[SCRATCHTHRESHOLD(MEDIA1(num) MEDIA2(num) MEDIA3(num) MEDIA4(num) MEDIA5(num) MEDIA6(num) MEDIA7(num) MEDIA8(num))]

Identifies the scratch volume message threshold. When the number of scratch volumes in the tape library falls below the scratch threshold, an operator action message, requesting that scratch volumes be entered into the tape library, is issued to the library console. When the number of scratch volumes exceeds twice the scratch threshold, the message is removed from the console.

MEDIA1(num)

Specifies the threshold number of Cartridge System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA2(num)

Specifies the threshold number of Enhanced Capacity System Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA3(num)

Specifies the threshold number of High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA4(num)

Specifies the threshold number of IBM Extended High Performance Cartridge Tape scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA5(num)

Specifies the threshold number of IBM TotalStorage Enterprise Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA6(num)

Specifies the threshold number of IBM TotalStorage Enterprise WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA7(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

MEDIA8(num)

Specifies the threshold number of IBM TotalStorage Enterprise Economy WORM Tape Cartridge scratch volumes. Use a number from 0 to 999999. The default is 0.

Abbreviation: SCRTHR

Creating a tape library entry example

The CREATE LIBRARYENTRY command can be used to perform functions shown in this example.

This example creates an entry for a tape library named ATLLIB1.

```
//CREATLIB JOB    ...
//STEP1      EXEC  PGM=IDCAMS
//SYSPRINT   DD    SYSOUT=A
//SYSIN      DD    *
      CREATE LIBRARYENTRY -
          (NAME(ATLLIB1) -
           LIBRARYID(12345) -
           LIBDEVTYPE(3494-L10) -
           LOGICALTYPE(AUTOMATED) -
           NUMBERSLOTS(15000) -
           NUMBEREMPTYSLOTS(1000) -
           NUMBERSCRATCHVOLUMES(MEDIA6(500) MEDIA2(400)) -
           SCRATCHTHRESHOLD(MEDIA6(200) MEDIA2(100)) -
           DESCRIPTION('TEST LIBRARY ATLLIB1') -
           CONSOLENAME(TESTCON)
/*
```

The parameters are:


- LIBRARYENTRY creates an entry for a tape library.
- NAME names the tape library ATLLIB1.
- LIBRARYID is the tape library's five-digit hexadecimal serial number, 12345.
- LIBDEVTYPE indicates that the tape library device type is 3494-L10.
- LOGICALTYPE specifies that the tape library is automated.
- NUMBERSLOTS is the total number of slots available in this tape library, 15000.
- NUMBEREMPTYSLOTS is the total number of empty slots currently available, 1000.
- NUMBERSCRATCHVOLUMES is the total number of MEDIA6 scratch volumes (500) and MEDIA2 scratch volumes (400).
- SCRATCHTHRESHOLD is the scratch volume threshold for MEDIA6 tape volumes (200) and MEDIA2 tape volumes is (100). When the number of available scratch volumes decreases to these values, an operator action message is issued to the console.
- DESCRIPTION is the description of the tape library.
- CONSOLENAME specifies that TESTCON is the console name.

CREATE VOLUMEENTRY

Use the AMS CREATE VOLUMEENTRY command to create tape volume entries.

CREATE VOLUMEENTRY command syntax

The syntax of the CREATE VOLUMEENTRY command is as follows:

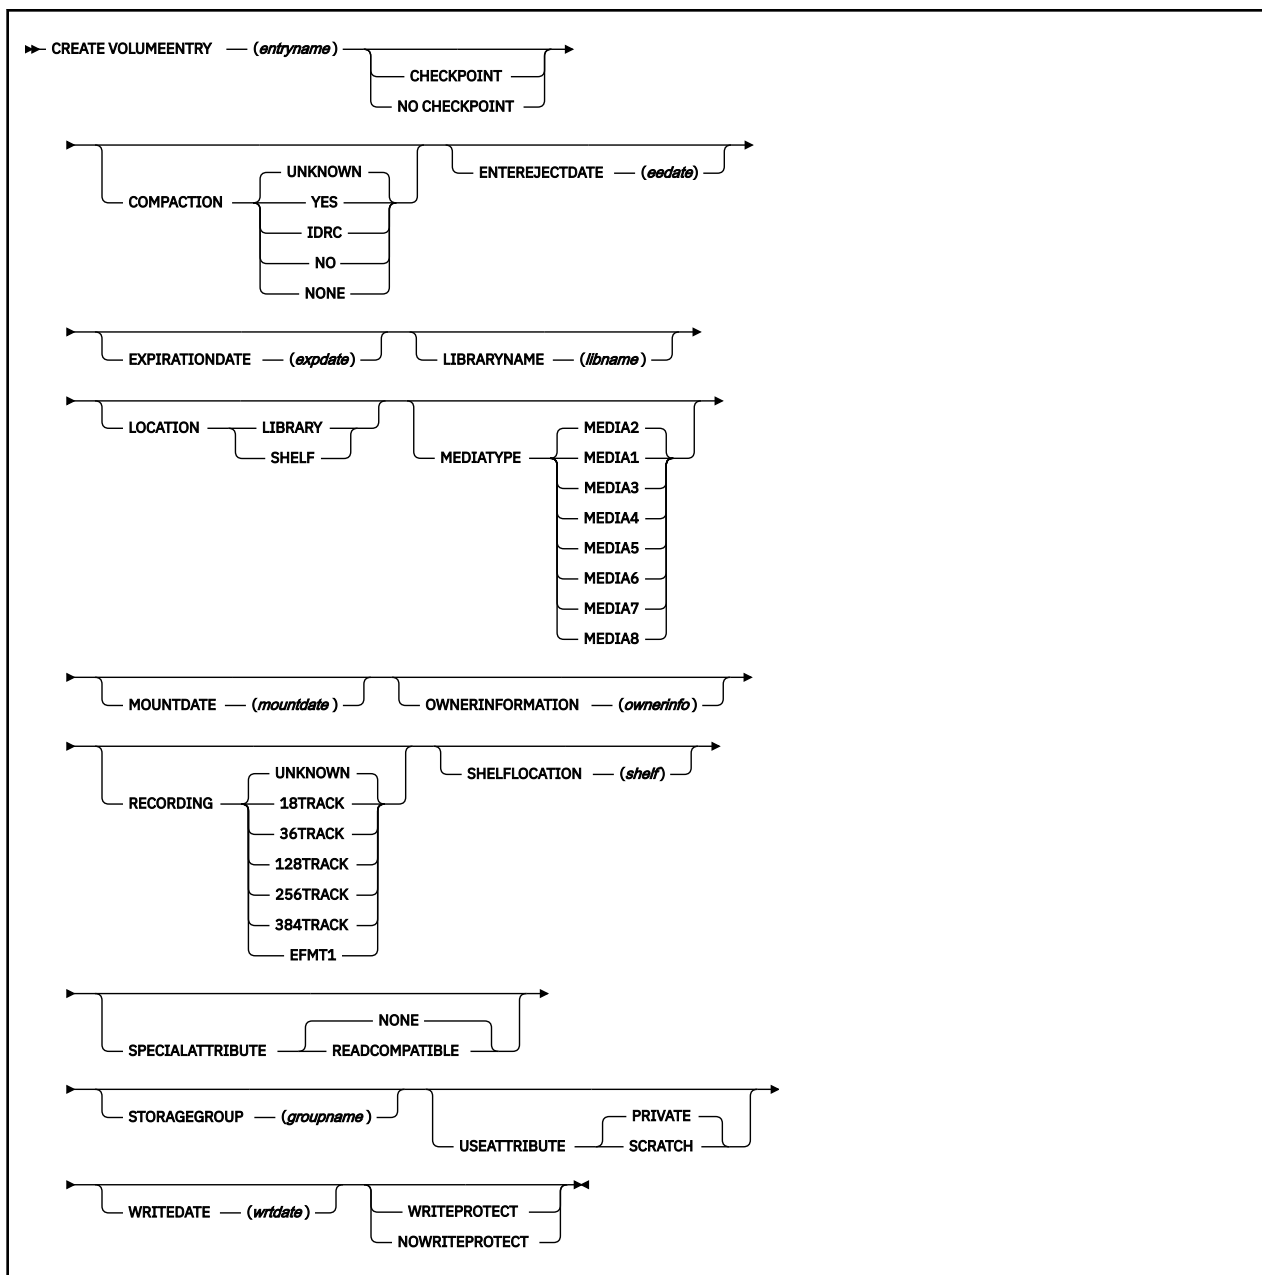

CREATE VOLUMEENTRY parameters

MEDIATYPE and RECORDING are optional parameters. The MEDIATYPE and the RECORDING parameter include subparameters MEDIA1, MEDIA2, MEDIA3, MEDIA4, MEDIA5, MEDIA6, MEDIA7, MEDIA8, and EFMT1 for the 3592 Model J tape drive.

MEDIATYPE{ MEDIA1 | MEDIA2 | MEDIA3 | MEDIA4 | MEDIA5 | MEDIA6 | MEDIA7 | MEDIA8 }

Identifies the media type of the tape volume. If you do not use this, MEDIATYPE defaults to MEDIA2.

MEDIA1

Specifies that the tape volume is Cartridge System Tape.

MEDIA2

Specifies that the tape volume is Enhanced Capacity System Tape. You cannot use this parameter when SPECIALATTRIBUTE is READCOMPATIBLE, or RECORDING is set to 18TRACK.

MEDIA3

Specifies that the tape volume is High Performance Cartridge Tape.

MEDIA4

Specifies that the tape volume is IBM Extended High Performance Cartridge Tape.

MEDIA5

Specifies that the tape volume is IBM TotalStorage Enterprise Tape Cartridge.

MEDIA6

Specifies that the tape volume is IBM TotalStorage Enterprise WORM Tape Cartridge.

MEDIA7

Specifies that the tape volume is IBM TotalStorage Enterprise Economy Tape Cartridge.

MEDIA8

Specifies that the tape volume is IBM TotalStorage Enterprise Economy WORM Tape Cartridge.

Abbreviation: MTYPE

[RECORDING{18TRACK|36TRACK|128TRACK| 256TRACK|384TRACK|EFMT1|UNKNOWN}]

Identifies the tape recording technology. This parameter can be used for private tape volumes only. The default for scratch tape volumes is UNKNOWN.

18TRACK

Tape was written on an 18-track device and must be read on an 18-track device or a 36-track device.

36TRACK

Tape was written and must be read on a 36-track device.

128TRACK

Tape was written on a 128-track device and must be read on a 128-track, 256-track, or 384-track device.

256TRACK

Tape was written on a 256-track device and must be read on a 256-track device or a 384-track device.

Note: 128TRACK and 256TRACK are valid with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4) only.

384TRACK

Tape was written and must be read on a 384-track device.

Note: 384TRACK is valid with MEDIATYPE(MEDIA3) or MEDIATYPE(MEDIA4) only.

EFMT1

Tape was written and must be read on an EFMT1 (enterprise format 1) device.

Note: EFMT1 is valid with MEDIATYPE(MEDIA5), (MEDIA6), (MEDIA7), and (MEDIA8) only.

UNKNOWN

Tape recording technology is unknown. This is the default value for scratch tape volumes.

Abbreviation: REC

Creating a VOLUME entry example

This example of the CREATE VOLUMEENTRY command creates a volume entry for volume 0A2991.

```
//CREATVOL JOB    ...
//STEP1    EXEC   PGM=IDCAMS
//SYSPRINT DD     SYSOUT=A
//SYSIN    DD      *
          CREATE VOLUMEENTRY(V0A2991) -
              LIBRARYNAME(ATLIB02) -
              USEATTRIBUTE(SCRATCH) -
              MEDIATYPE(MEDIA7) -
              RECORDING(EFMT1)
```

The parameters used in this example are as follows:

- CREATE VOLUMEENTRY indicates that an entry describing a single volume in a library is being created.

- VOA2991 specifies that the name of the volume entry being created is VOA2991 and the *volser* is OA2991.
- LIBRARYNAME specifies that the name of the library with which this volume record is associated is ATLIB02.
- USEATTRIBUTE identifies the volume as being a SCRATCH tape.
- MEDIATYPE specifies the media type as MEDIA7.
- RECORDING specifies the recording technology as EFMT1.

DCOLLECT

The DFSMS Data Collection Facility (DCOLLECT) is a function of access method services. DCOLLECT collects data in a sequential file that you can use as input to other programs or applications.

DCOLLECT command syntax

The syntax of the DCOLLECT command is as follows.

Keyword	Operands
DCOLLECT	{OUTFILE(<i>ddname</i>) OUTDATASET(<i>entryname</i>)} {[VOLUMES(<i>volser</i> [<i>volser</i> . . .])] [BACKUPDATA] [CAPPLANDATA] [EXCLUDEVOLUMES(<i>volser</i> [<i>volser</i> . . .])] [MIGRATEDATA] [SMSDATA(SCDSNAME(<i>entryname</i>) ACTIVE)] [STORAGEGROUP(<i>sgname</i> [<i>sgname</i> . . .])]} [DDCMEDIA{DDCMENUL DDCMEDA1 DDCMEDA2 DDCMEDA3 DDCMEDA4 DDCMEDA5 DDCMEDA6 DDCMEDA7 DDCMEDA8}] [DDCRECTE{DDCRTNUL DDC18TRK DDC36TRK DDC128TK DDC256TK DDC384TK DDCEFMT1}] [ERRORLIMIT(<i>value</i>)] [EXITNAME(<i>entrypoint</i>)] [MIGRSNAPALL MIGRSNAPERR] [NODATAINFO] [NOVOLUMEINFO] [REPLACE APPEND]

DCOLLECT parameters

The optional DDCMEDIA parameter and the optional DDCRECTE include subparameters for support of the 3592 Model J tape drive.

DDCMEDIA(DDCMENUL|DDCMEDA1|DDCMEDA2|DDCMEDA3 |DDCMEDA4|DDCMEDA5|DDCMEDA6|DDCMEDA7|DDCMEDA8)

shows the type and format of the cartridges used for mountable tape data sets used with this data class. It is mapped by one of these attributes:

DDCMENUL

Media type is not specified (NULL). The constant value is 0.

DDCMEDA1

Media type is MEDIA1 (cartridge system tape media). The constant value is 1.

DDCMEDA2

Media type is MEDIA2 (enhanced capacity cartridge tape media). The constant value is 2.

DDCMEDA3

Media type is MEDIA3 (high-performance cartridge tape media). The constant value is 3.

DDCMEDA4

Media type is MEDIA4 (extended high-performance cartridge tape media). The constant value is 4.

DDCMEDA5

Media type is MEDIA5 (Enterprise Tape Cartridge media). The constant value is 5.

DDCMEDA6

Media type is MEDIA6 (Enterprise WORM Tape Cartridge media). The constant value is 6.

DDCMEDA7

Media type is MEDIA7 (Enterprise Economy Tape Cartridge media). The constant value is 7.

DDCMEDA8

Media type is MEDIA8 (Enterprise Economy WORM Tape Cartridge media). The constant value is 8.

DDCRECTE**(DDCRTNUL | DDC18TRK | DDC36TRK | DDC128TK | DDC256TK | DDC384TK | DDCEFMT1)**

indicates the number of recording tracks on the cartridge used for the mountable tape data sets associated with this data class.

DDCRTNUL

The recording technology is not specified (NULL). The constant value is 0.

DDC18TRK

The recording technology is 18TRACK. The constant value is 1.

DDC36TRK

The recording technology is 36TRACK. The constant value is 2.

DDC128TK

The recording technology is 128TRACK. The constant value is 3.

DDC256TK

The recording technology is 256TRACK. The constant value is 4.

DDC384TK

The recording technology is 384TRACK. The constant value is 5.

DDCEFMT1

The recording technology is EFMT1. The constant value is 6.

DCCOLLECT example

Refer to [*z/OS DFSMS Access Method Services Commands*](#) for several examples of how to use the DCOLLECT function in a batch environment.

LISTCAT

Use the AMS LISTCAT command to list catalog entries.

LISTCAT command syntax

The syntax for the LISTCAT command remains the same but the output includes MEDIATYPE parameter values and RECORDING parameter values. The syntax is as follows:

Keyword	Operands
LISTCAT	[ALIAS] [ALTERNATEINDEX] [CLUSTER] [DATA] [GENERATIONDATAGROUP] [INDEX] [LIBRARYENTRIES(<i>libent</i>)] [NONVSAM] [PAGESPACE] [PATH] [USERCATALOG] [VOLUMEENTRIES(<i>volent</i>)] [CREATION(<i>days</i>)] [ENTRIES(<i>entryname</i> [/password] [<i>entryname</i> [/password] . . .]) LEVEL(<i>level</i>)] [EXPIRATION(<i>days</i>)] [FILE(<i>ddname</i>)] [LIBRARY(<i>libname</i>)] [<u>NAME</u> HISTORY VOLUME ALLOCATION ALL] [OUTFILE(<i>ddname</i>)] [CATALOG(<i>catname</i>)]

LISTCAT parameters

The volume recording technology and media type are not parameters that can be specified with the LISTCAT command.

List tape volume entries sample output

The LISTCAT command displays the values for the RECORDING parameter and the MEDIATYPE parameter. For the 3592 Model J, the RECORDING parameter value is EFMT1 and the MEDIATYPE parameter can be MEDIA5, MEDIA6, MEDIA7, or MEDIA8. [Figure 31 on page 362](#) shows EFMT1 as the recording technology and MEDIA5 as the media type used for volume 0A2991.

This example of the LISTCAT command lists all volumes in the ATLIB02 library catalog. The command returns catalog data for only one volume with a volume *entryname* value of V0A2991.

```

LISTCAT -
VOLUMEENTRIES
ALL
IDCAMS SYSTEM SERVICES          TIME: 11:29:12      04/02/02      PAGE      2
                                LISTING FROM CATALOG -- SYS1.VOLCAT.V0
VOLUME-ENTRY---V0A2991
DATA-VOLUME
LIBRARY-----ATLIB02      RECORDING-----EFMT1      ERROR-STATUS-----NOERROR      CREATION-DATE-2002-04-02
                                MEDIA-TYPE-----MEDIA5      USE-ATTRIBUTE-----SCRATCH      ENT-EJ-DATE----- (NULL)
                                COMPACTION----- (YES)      WRITE-PROTECTED--- (NULL)      LAST-MOUNTED----- (NULL)
                                SP-ATTRIBUTE-----NONE      LAST-WRITTEN----- (NULL)
                                SHELF-LOC----- (NULL)      EXPIRATION----- (NULL)
IDCAMS SYSTEM SERVICES          TIME: 11:29:12      04/02/02      PAGE      3
                                LISTING FROM CATALOG -- SYS1.VOLCAT.VGENERAL
                                THE NUMBER OF ENTRIES PROCESSED WAS:
                                AIX -----0
                                ALIAS -----0
                                CLUSTER -----0
                                DATA -----0
                                GDG -----0
                                INDEX -----0
                                NONVSAM -----0
                                PAGESPACE -----0
                                PATH -----0
                                SPACE -----0
                                USERCATALOG -----0
                                TAPELIBRARY -----0
                                TAPEVOLUME -----1
                                TOTAL -----1
                                THE NUMBER OF PROTECTED ENTRIES SUPPRESSED WAS 0
IDC0001I FUNCTION COMPLETED, HIGHEST CONDITION CODE WAS 0
IDCAMS SYSTEM SERVICES          TIME: 11:29:12      04/02/02      PAGE      4
IDC0002I IDCAMS PROCESSING COMPLETE. MAXIMUM CONDITION CODE WAS 0

```

Figure 31. LISTCAT output

The parameters used in this example are as follows:

- **VOLUMEENTRIES** specifies that information relating to tape volume entries for all volumes in the library are to be listed.
- **ALL** requires that all information that is associated with the tape volume entries is to be listed.
- **LIBRARY** specifies that only tape volume entries that are associated with the tape library named **ATLIB02** are to be listed.

Chapter 54. Tape drive and tape volume allocation modifications for 3592 Model J

Changes made to device support, storage management subsystem (SMS), and Multiple Virtual Storage (MVS) device allocation enable you to allocate the tape drives and tape volumes. Within an IBM tape library environment, your system can fully recognize all supported media types and recording technologies. This topic explains these changes:

- “[Device support modifications](#)” on page 363
- “[SMS modifications](#)” on page 366
- “[MVS device allocation modifications](#)” on page 366

Device support modifications

z/OS DFSMS device support provides hardware device-specific code, which allows tape drives, tape volumes, and DASD to interface with z/OS DFSMS. Specifically, it provides:

- The interfacing exits to the input/output supervisor (IOS) and EXCP device support code
- Error recovery procedure routines
- Services to acquire and log statistical and error data
- Services to acquire and display device states
- Utilities for functions like initializing tapes

You can use the MVS DEVSERV command to request basic status information on a device, a group of devices, or storage control units. You can use the QTAPE parameter of the DEVSERV command to display tape device information. Use DEVSERV QTAPE to display the real device type and the emulated device type.

With the DEVSERV QTAPE MED (medium) option, you can display information for the device type, media type, and cartridge volume serial number.

The syntax of the DEVSERV QTAPE command with the MED option is as follows:

DS QT,xxxx,MED,nnn

xxxx

Represents a three-digit or a four-digit device number in hexadecimal format.

nnn

Stands for the number of devices, starting at the address xxxx, for which the DEVSERV command displays the MED information. The value nnn is optional and can be any decimal number from 1 to 256, with 1 as the default value.

[Figure 32 on page 363](#) shows the display content when you issue the DEVSERV QTAPE MED command.

```
-----
----      DS QT MED Display Content      ----
-----

IEE459I          DEVSERV QTAPE
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID  X
```

Figure 32. DEVSERV QTAPE MED display content

X UNIT - tape device address
RDTYPE - real device type
EDTYPE - emulated device type

```

EXVLSR - external volume serial of cartridge
INVLSR - internal volume serial of cartridge
RMEDIA - real media type of the volume mounted on the drive
EMEDIA - emulated media type of the volume mounted on the drive
WWID    - world-wide identifier or world-wide unique cartridge identifier

```

Note:

1. EDTYPE, EXVLSR, INVLSR, RMEDIA, EMEDIA, and WWID are blank if information is not available.
2. Valid values for RMEDIA and EMEDIA are:

- 1=CST
- 2=EC-CST
- 3=3590 STD length tape
- 4=3590 EXT length tape
- 5=3592 Enterprise Tape Cartridge
- 6-W=3592 Enterprise WORM Tape Cartridge
- 7=3592 Enterprise Economy Tape Cartridge
- 8-W=3592 Enterprise Economy WORM Tape Cartridge

RMEDIA and EMEDIA are blank when the media type is not defined or cannot be determined.

These examples show sample output and messages of the DEVSERV QTAPE command with the MED option.

Figure 33 on page 364 shows the output of DS QT,962,MED when a 3592 Model J tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0962 3592-J 3590-1          6-W      3      85804D003C00000BC211CA0C

```

Figure 33. DS QT,962,MED output

Figure 34 on page 364 shows the output of DS QT,940,MED when a 3592 Model J tape drive emulates a 3590 Model B1x tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0940 3592-J 3590-1 003700          5      3

```

Figure 34. DS QT,940,MED output

Figure 35 on page 364 shows the output of DS QT,DA0,MED when a 3592 Model J tape drive emulates a 3490 tape drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
0DA0 3592-J 3490   AN4000          5      1

```

Figure 35. DS QT,DA0,MED output

Figure 36 on page 365 displays the message that is issued when the input device address is valid, but the device is not a Model B1x, Model E1x, Model H1x, 3592 Model J, or 3490E drive.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
0B60(10) Y
**** (10) - UNSUPPORTED DEVICE TYPE

```

Figure 36. DS QT,B60,MED message

Y Reason Code 10, UNSUPPORTED DEVICE TYPE, is shown when the device type given is not a Model B1x, Model E1x, Model H1x, 3592 Model J, or 3490E drive.

Figure 37 on page 365 shows the message and reason code 11 that you receive if the input device address and device type are valid, but the device is not ready.

```

IEE459I 11.32.31 DEVSERV QTAPE 608
UNIT RDTYPE EDTYPE EXVLSR INVLSR RMEDIA EMEDIA WWID
**** UNLISTED DEVICE(S) AND REASON CODES :
0DA0(11) Z
**** (11) - DEVICE NOT READY

```

Figure 37. DS QT,DA0,MED message

A bit, DFVT3592, is added to the IHADFVT mapping macro that maps the data facilities vector table. If the enabling PTF for base 3592 and MEDIA5 is installed, DFVT3592 is set to indicate that all of the base software support for the 3592 Model J tape drive is on the system and supports the 3592 drive and MEDIA5.

A bit, DFVTWORM, is added to the IHADFVT mapping macro that maps the data facilities vector table. If the enabling PTF for the media types, MEDIA6, MEDIA7, and MEDIA8, is installed, DFVTWORM is set to indicate that all of the software support for 3592 WORM media types (MEDIA6 and MEDIA8) and economy R/W media type (MEDIA7) is on the system.

System-wide DEVSUPxx parmlib member options control and manage media type selection for Automatic Tape Library (ATL) partitioning: MEDIA5=xxxx, MEDIA6=xxxx, MEDIA7=xxxx, and MEDIA8=xxxx, where xxxx is a 4-digit hexadecimal category code.

The IECUCBCX mapping macro is changed to support the 3592 Model J tape drive. The EPI values are:

- X'10' --REAL3592_EMUL3590
- X'11' --REAL3592_EMUL3490

There are also these bits:

- UCBCX_MAXBUFBLK is set if the device can report the maximum block size since the last synchronizing event.
- UCBCX_FASTACC is set if the medium supports a fast access segment.
- UCBCX_WORM is set if the device has WORM capability.

Additionally, the order of these two fields is reversed so that UCBCX_VOLSEQ is now a two-byte field and UCBCXRS6 is now a four-byte fields.

The IECLOGT mapping macro is changed to support the WORM media on the system. A bit, VLOG_WORM, is set for WORM media. There are also these fields:

- VLOG_WWID, a 12-byte hexadecimal medium world-wide identifier for WORM media that is unique for each tape cartridge and cannot be changed by a user command.
- VLOG_WMCNT, a two-byte Volume Write Mount Count indicator of the number of mounts that have occurred for the WORM volume when logical blocks were written to the medium. This field can be updated during an OPEN/CLOSE sequence when no user data is written to the tape because tape labels can be rewritten.

SMS modifications

SMS automates and centralizes storage management. It automatically assigns service requirements and attributes to data when that data is created. SMS configuration services validate, for example, the recording technology value that ISMF specifies in data class definitions.

In an IBM tape library environment (automated or manual), use ISMF to specify the:

- EFMT1 recording technology attribute
- Media type of MEDIA5, MEDIA6, MEDIA7, or MEDIA8
- Performance scaling option, if the media type is MEDIA5. Media types MEDIA6, MEDIA7, and MEDIA8 are not scalable.

The performance scaling option can also be specified and used outside of the system-managed tape library environment.

In support of the 3592 Model J tape drives, SMS configuration services are updated to validate the recording technology value and the media type value.

MVS device allocation modifications

MVS device allocation helps prioritize and select tape drives to meet the needs of application programs or system functions. Batch (JCL) or dynamic (SVC99) allocation makes these device needs known to MVS device allocation. MVS device allocation selects the appropriate devices and serializes them for the requester to use. It can also request that appropriate volumes be mounted on the allocated devices. It accomplishes these tasks by interfacing with SMS, DEVSERV, OAM, MSGDISP, and other system components.

MVS device allocation currently supports multiple types of tape devices. Within an IBM tape library environment, MVS device allocation considers media types and recording technologies when allocating tape drives and tape volumes. The dynamic allocation (SVC 99) volume interchange text unit (DALINCHG) allows you to specify EFMT1 for the recording technology and MEDIA5, MEDIA6, MEDIA7, or MEDIA8 for the media type. See [Table 57 on page 366](#) for DALINCHG parameter values.

Table 57. Dynamic allocation (DALINCHG) parameter values for tape cartridge media types		
Parameter value	Media type	Recording technology
65	MEDIA5	EFMT1
05	MEDIA5	No format
66	MEDIA6	EFMT1
06	MEDIA6	No format
67	MEDIA7	EFMT1
07	MEDIA7	No format
68	MEDIA8	EFMT1
08	MEDIA8	No format

Related reading:

- See [z/OS MVS System Commands](#) for more information on the DEVSERV QTAPE command.
- See Chapter 55, “ISMF modifications for 3592 Model J,” on [page 369](#) for more information on the ISMF panel changes.
- See [z/OS MVS Programming: Authorized Assembler Services Guide](#) for more information about the DALINCHG parameter.

- See [z/OS DFSMS Installation Exits](#) for more information about the IECUCBCX mapping macro.

Chapter 55. ISMF modifications for 3592 Model J

The interactive storage management facility (ISMF) provides a series of applications for storage administrators to define and manage SMS configurations. This topic describes changes to the data class application, the mountable tape volume application, and the tape library management application to support the 3592 Model J tape drive.

Related reading:

- See [*z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries*](#) for additional information on the ISMF tape library management application.
- See [*z/OS DFSMSdfp Storage Administration*](#) for additional information about data classes and the ISMF data class panels.

Data class define and alter panels for 3592 Model J

A data class is a set of data set allocation attributes and associated values. You can define, alter, display, and list a data class by using the ISMF data class define/alter panel. The data class define/alter panel has changed to support the 3592 Model J tape drives as follows:

- You can specify the E1 value for the recording technology attribute EFMT1.
- You can specify 5 as the value for the MEDIA5 media type attribute, 6 as the value for the MEDIA6 media type attribute, 7 as the value for the MEDIA7 media type attribute, or 8 as the value for the MEDIA8 media type attribute.
- You can specify performance scaling to obtain faster access to data on MEDIA5 media only. Media types MEDIA6, MEDIA7, and MEDIA8 are not scalable.

Mountable tape volume list panel

The mountable tape volume application enables you to create, save, and restore lists of tape cartridge volumes. It generates lists of mountable tape volumes and their characteristics that are based on the criteria you specify. MEDIA5, MEDIA6, MEDIA7, or MEDIA8 appears in column 8, MEDIA TYPE. EFMT1 appears in column 9, RECORDING TECHNOLOGY.

Tape library management panels

The tape library management application allows you to define, alter, list and display tape libraries. These panels have been changed to support the 3592 Model J tape drives.

- A Scratch Threshold field for media types MEDIA5, MEDIA6, MEDIA7, and MEDIA8 is available on the TAPE LIBRARY DEFINE panel.
- A Scratch Threshold field for media types MEDIA5, MEDIA6, MEDIA7, and MEDIA8 is available on the TAPE LIBRARY ALTER/REDEFINE panel.
- A Scratch Threshold and Scratch Number field for media types MEDIA5, MEDIA6, MEDIA7, and MEDIA8 is available on the TAPE LIBRARY DISPLAY panel.
- On the TAPE LIBRARY LIST panel, these columns are available:
 - Two columns, MEDIA5 Scratch Number (column 20) and MEDIA5 Scratch Threshold (column 21).
 - Two columns, MEDIA6 Scratch Number (column 22) and MEDIA6 Scratch Threshold (column 23).
 - Two columns, MEDIA7 Scratch Number (column 24) and MEDIA7 Scratch Threshold (column 25).
 - Two columns, MEDIA8 Scratch Number (column 26) and MEDIA6 Scratch Threshold (column 27).
 - Pre-existing columns, 22, 23, and 24, are now columns 28, 29, and 30.
- On the TAPE LIBRARY PRINT ENTRY panel, these columns are available:

- Two columns, MEDIA5 Scratch Number (column 20) and MEDIA5 Scratch Threshold (column 21).
- Two columns, MEDIA6 Scratch Number (column 22) and MEDIA6 Scratch Threshold (column 23).
- Two columns, MEDIA7 Scratch Number (column 24) and MEDIA7 Scratch Threshold (column 25).
- Two columns, MEDIA8 Scratch Number (column 26) and MEDIA8 Scratch Threshold (column 27).
- Pre-existing columns, 22, 23, and 24, are now columns 28, 29, and 30.
- On the TAPE LIBRARY SORT ENTRY panel, these columns are available:
 - Two columns, MEDIA5 Scratch Number (column 20) and MEDIA5 Scratch Threshold (column 21).
 - Two columns, MEDIA6 Scratch Number (column 22) and MEDIA6 Scratch Threshold (column 23).
 - Two columns, MEDIA7 Scratch Number (column 24) and MEDIA7 Scratch Threshold (column 25).
 - Two columns, MEDIA8 Scratch Number (column 26) and MEDIA8 Scratch Threshold (column 27).
 - Pre-existing columns, 22, 23, and 24, are now columns 28, 29, and 30.
- On the TAPE LIBRARY VIEW ENTRY panel, these columns are available:
 - Two items, MEDIA5 Scratch Number (column 20) and MEDIA5 Scratch Threshold (column 21).
 - Two columns, MEDIA6 Scratch Number (column 22) and MEDIA6 Scratch Threshold (column 23).
 - Two columns, MEDIA7 Scratch Number (column 24) and MEDIA7 Scratch Threshold (column 25).
 - Two columns, MEDIA8 Scratch Number (column 26) and MEDIA8 Scratch Threshold (column 27).
 - Pre-existing columns, 22, 23, and 24, are now columns 28, 29, and 30.

Chapter 56. OCE modifications for 3592 Model J

The z/OS DFSMS Open/Close/End-of-Volume (OCE) component is a set of system routines that builds the control block structure that connects the application, access method, and the operating system. OCE modifications include passing the media type and recording technology to DFSMS, DFSMSrmm, OAM/Library Automation Communication Services, and to the tape installation exits. OCE changes also include commands to scale the MEDIA5 cartridge either for performance or for full capacity and then to ensure that the same scaling factor persists across all volumes of a multivolume data set. During CLOSE of file sequence 1 on a performance scaled cartridge, performance scaling is externalized as an addition to message IEC205I.

To make stand-alone tape mount processing consistent with SMS tape, two system-wide parmlib member DEVSUPxx options are added to ensure data class media policy is enforced for stand-alone, non-specific mounts:

- ENFORCE_DC_MEDIA=ALLMEDIATY
- ENFORCE_DC_MEDIA= MEDIA5PLUS

Also, a new system-wide, parmlib member DEVSUPxx option for MTL (Manual Tape Library), non-specific mounts is added:

- DEVSUP keyword: MTL_NO_DC_WORM_OK

OCE detects new OPEN and EOVS abends for WORM support when write violations are detected:

- IEC147I, return code 80, abend613
- IEC147I, return code 84, abend613
- IEC026I, return code A8, abend637
- IEC026I, return code AC, abend637

The OCE routines also include the IFGTEP macro with several fields for mapping installation exit parameter lists. Values that can be returned are: EFMT1 in TEPMRECTK recording technology and MEDIA5, MEDIA6, MEDIA7, or MEDIA8 in TEPMMEDT media type, as shown in [Table 58 on page 372](#).

Related reading:

- See [z/OS DFSMS Using Data Sets](#) and [z/OS DFSMS Using Magnetic Tapes](#) for additional information about the OCE routines.
- See [z/OS DFSMS Installation Exits](#) for more information on OCE installation exit parameter lists.
- See [z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries](#) for more information on tape volume records.

SMS-managed tape configuration database (TCDB) volume record

The OPEN and EOVS routines update the SMS-managed TCDB volume records with an indicator for the EFMT1 recording technology.

SMS-managed tape (TVR) volume record

The OPEN and EOVS routines update the SMS-managed TVR volume records with the media type when opened for output to the first file.

DEVSUPxx parmlib member options

System-wide DEVSUPxx parmlib member options are included to control and manage media type selection for:

- Stand-alone environment:
 - ENFORCE_DC_MEDIA=ALLMEDIATY ensures data class media policies are enforced for all stand-alone, non-specific mounts.
 - ENFORCE_DC_MEDIA=MEDIA5PLUS ensures data class media policies are enforced for all stand-alone, non-specific mounts for any of the four 3592 tape cartridge media types.
- Note:** The ENFORCE_DC_MEDIA option can be used in conjunction with the tape management systems pooling support to ensure that the correct media type is mounted. Before setting this option, determine how data class is used in the stand-alone environment to ensure that a data class with the correct media type specification is selected and that any tape management system pool assigned to the allocation request matches the media type specified in the assigned data class.
- Manual Tape Library (MTL) non-specific volume requests:
 - MTL_NO_DC_WORM_OK indicates that the installation is managing WORM media allocations through the tape management system pooling support, instead of data class. This option results in OPEN accepting MTL WORM scratch mounts when no media type is identified via data class.
 - Automatic Tape Library (ATL) partitioning:
 - MEDIA5=xxxx
 - MEDIA6=xxxx
 - MEDIA7=xxxx
 - MEDIA8=xxxx

where xxxx is a 4-digit hexadecimal category code.

Open/EOV Volume Security and Verification Exit

This user exit provides additional volume verification. A new WORM tape mount indicator in the Volume Security and Verification Exit (type X'18' in the DCB exit) identifies the exit. A parameter list pointer in reg1 is passed. The parameter list is mapped by the IEEOVSE macro. A new bit flag (x'40') is added to byte OEVSFLG: OEVSWORM X'40' - WORM tape mounted.

IFGTEP macro

The IFGTEP macro maps the main and function-specific parameter lists for all OCE tape management exits. The IFGTEP macro has several fields that map the installation exit parameter lists. These fields are initialized for both SMS and non-SMS tapes.

Table 58 on page 372 describes the IFGTEP fields for mapping the installation exit main parameter list.

Table 58. IFGTEP fields for the installation exit main parameter list

Offset	Length or bit pattern	Field name	Description
31 (X'1F')	8	TEPMRECTK	Recording technology: 0=unknown 1=18TRK 2=36TRK 3=128TRK 4=256TRK 5=384TRK 6=EFMT1

Table 58. IFGTEP fields for the installation exit main parameter list (continued)

Offset	Length or bit pattern	Field name	Description
34 (X'22')	8	TEPMMEDT	Media type: 1=Media1 2=Media2 3=Media3 4=Media4 5=Media5 6=Media6 7=Media7 8=Media8

OCE Tape Installation Exits

The IFGTEP macro maps the tape log data. [Table 59 on page 373](#) describes the IFGTEP fields for mapping the installation exit main parameter list.

Table 59. IFGTEP fields for the installation exit main parameter list

Field name	Length or bit pattern	Description
TEPMWWID	CHAR(12)	WORM world-wide identifier
TEPMWMC	CHAR(2)	WORM tape cartridge media mounted, data written. This is passed in the tape installation main parameter list exit for WORM mounts to all exits.
TEPMWORM	BIT(1)	WORM tape cartridge media mounted

Chapter 57. DFSMSHsm modifications for 3592 Model J

DFSMS hierarchical storage manager (DFSMSHsm), a z/OS functional component, automatically manages low activity and inactive data in both system-managed and non-system-managed environments. DFSMSHsm also provides automatic backup and recovery of active data in the same environments.

This topic describes specific changes to DFSMSHsm support for the 3592 Model J tape drives. These changes are as follows:

- Output tape selection
- Output tape utilization
- Reuse capacity table
- WORM tape cartridge rejection at OPEN time
- Aggregate backup and recovery (ABARs) with WORM tape cartridge

Related reading:

- See *z/OS DFSMSdfp Storage Administration* for additional information on the SETSYS command.
- See *z/OS DFSMSHsm Implementation and Customization Guide* for additional information about implementing DFSMSHsm tape environments.

Output tape selection

DFSMSHsm selects 3592 Model J tape drives for output in SMS and non-SMS tape environments. DFSMSHsm performs all its allocation requests by using these standard dynamic allocation interfaces:

- **Non-SMS-managed output tape selection:** If multiple types of tape drives are installed that emulate the 3590 device type, you must define an esoteric name for each model that DFSMSHsm uses. You must then define the esoteric names to DFSMSHsm by using the SETSYS `USERUNITTABLE(esoteric1:esoteric1,esoteric2:esoteric2,...)` command. You must also specify the esoteric names as the unit names for the desired DFSMSHsm functions. If a single type of tape drive is installed that emulates the 3590 device type, you do not have to define an esoteric name; instead, you can specify the 3590-1 generic name for the desired DFSMSHsm functions.
- **SMS-managed output tape selection:** DFSMSHsm performs a non-specific allocation; it then finds an acceptable output tape for the already allocated drive. If the 3590-1 generic name is used with multiple types of tape drives emulating the 3590 device type, see APAR OW57282 for further instructions.

Output tape utilization

DFSMSHsm writes to 97% of the capacity of MEDIA5, MEDIA6, MEDIA7, and MEDIA8 tapes unless otherwise specified by the installation. Other percentages can be specified using the SETSYS `TAPEUTILIZATION` command, depending on the particular needs of the installation. DFSMSHsm uses the reported cartridge type on the physical device to determine the tape's capacity.

Reuse capacity table

The reuse capacity table supports MEDIA5 and MEDIA7 tape cartridges for 3592 Model J tape drives. DFSMSHsm uses the reuse capacity table to determine the tapes eligible for RECYCLE processing based on capacity for each media type. Each media type has separate reuse capacities for backup and migration.

WORM tape cartridge rejection at OPEN time

DFSMSHsm examines the OEVS`WORM` field passed by OPEN/EOV processing. The bit is turned on by OPEN/EOV when a WORM tape cartridge has been mounted. If a WORM tape cartridge is mounted for any function other than `ABACKUP` or `ARECOVER`, DFSMSHsm returns to OPEN/EOV with `RC08`, resulting in `ABEND913 RC34` and a failure of OPEN. DFSMSHsm fails the function and issues either message `ARC0309I` (for non-ABARs) or `ARC6410E` (for an `ARECOVER` ML2 tape).

Aggregate backup and recovery (ABARs) with WORM tape cartridge

Output for `LIST AGGREGATE(agname)` has a field labeled `WORM`. If the version resides on WORM tape cartridge media, `WORM=YES`. If it does not reside on WORM tape cartridge media, `WORM=NO`.

DFSMSHsm tips

Here are some tips you might find helpful when using DFSMSHsm with the 3592 Model J tape drives.

- If your installation has an excessive number of spanning data sets, consider specifying a larger value in the `SETSYS TAPESPANSIZE` command. A larger absolute value is needed to represent the same amount of unused capacity on a percentage basis when the tape has a larger total capacity. For example, if you allow 2% of unused tape to avoid tape spanning for a 3590-Hxx device using enhanced media, you specify a `TAPESPANSIZE` of 1200 MB. To allow 2% unused tape for a `MEDIA5` tape on a 3592 Model J device (no performance scaling), you specify a `TAPESPANSIZE` of 6000 MB. All size calculations for scaled tapes are based upon the scaled size and not the unscaled size.
- If the speed of data access on `MEDIA5` tape is more important than full use of capacity, consider using performance scaling. Performance scaling allows 60 GB of physical (and more logical) data on each tape and keeps all data sets closer together and closer to the initial tape load point. If you use performance scaling with the DFSMSHsm duplex function, be sure the original tape and the alternate tape both use performance scaling. Similarly make sure that `Tapecopy` input tapes and output tapes have the same performance scaling attributes.

Note: Performance scaling is not available on `MEDIA6`, `MEDIA7`, or `MEDIA8` tape cartridge media.

- If your installation is using `MEDIA5` tapes with performance scaling, consider using `MEDIA7` tapes for high performance functions. The available `MEDIA5` tapes could then be used to their full capacity.

DFSMSHsm recycle processing of 3592 tapes can take significantly longer than the recycle of smaller tapes because the amount of data moved at the same `RECYCLEPERCENT` can be much larger. Besides moving more data, the likelihood of a tape takeaway for recall processing increases with the number of data sets still remaining on the tape.

One option for controlling overall recycle run time is the `LIMIT(nnnn)` parameter of `recycle`. `Recycle` returns no more than the specified number of tapes to scratch during the current recycle run. Because `recycle` sorts the tapes based on the amount of valid data still on each volume, the tapes recycled require the least processing time.

Another option to consider is decreasing the `ML2RECYCLEPERCENT` parameter, the `RECYCLEPERCENT` parameter, or both. For example, if your installation uses performance scaling (60 GB) for ML2, and you would like to move no more than 6 GB of data when an ML2 tape is recycled, set `ML2RECYCLEPERCENT(10)`. If your installation uses full capacity (300 GB) for backup tapes and you would like to move no more than 6 GB of data when a backup tape is recycled, set `RECYCLEPERCENT(2)`. These examples assume that the ML2 and Backup tapes in the installation are filled to capacity because the calculations are based upon the average fullness of marked full tapes on your system (the reuse capacity.)

To determine how much data your current recycle threshold implies, use the reuse capacity associated with the tapes. The current recycle threshold percent multiplied by the reuse capacity gives the maximum amount of data on any of the tapes when they are recycled.

While lowering the recycle threshold reduces recycle processing time and decreases the number of times each tape must be recycled, it may also increase the overall number of tapes needed in your installation. Also, if you have a mix of ML2 or Backup tape capacities in need of recycle processing, you may want to recycle tapes with the RANGE parameter and use the appropriate recycle threshold for the tape capacities in the range.

In an SMS tape environment, and optionally in a non-SMS tape environment, the SMS data class construct can be used to select WORM tapes for ABACKUP processing. The output data set prefix specified in the aggregate group definition can be used by the ACS routines to select a WORM data class. Set up the ACS routine and the output data set name to uniquely identify the ABARS output files that must go to WORM tape.

In a non-SMS tape environment, the default is to allow tape pooling to determine if ABARS data sets go to WORM or R/W media. Optionally, if the DEVSUP parameter ENFORCE_DC_MEDIA=ALLMEDIATY or ENFORCE_DC_MEDIA=MEDIA5PLUS is used, then the data class must request the appropriate media type for it to be successfully mounted.

- If your installation is running OS/390 V2R10 or higher, consider using the Fast Subsequent Migration function to reduce the need to RECYCLE these high-capacity tapes.
- If your installation is running z/OS V1R3 or higher in a Sysplex environment, consider using the Common Recall Queue to optimize mounts of migration tapes.
- AUDIT MEDIACONTROLS for a FAILEDCREATE situation usually only needs to look at the last few files on a tape. If it is available for your system level, make sure Audit APAR OA04419 is applied.
- To fully utilize MEDIA5 tapes, unless you have a specific need to run in 22-bit FBID mode, operate 3592 Model J tape drives emulating D/T3490 in 32-bit FBID mode. MEDIA6, MEDIA7, and MEDIA8 tapes cannot be used on a 3592 Model J emulating D/T3490. The 3592 Model J tape drive always operates in 32-bit FBID mode when it is emulating D/T3590.
- If you decide to change the performance scaling attribute for a particular function and partially full MEDIA5 tapes already exist, mark full the partial MEDIA5 tapes for that function. This is necessary because OPEN processing carries over the performance scaling attribute from partial tapes to the next mounted empty tape as long as the tape is mounted under the same allocation. When the function runs the next time, it will need to mount an empty tape and the performance scaling change can take effect.

Chapter 58. DFSMSrmm modifications for 3592 Model J

DFSMSrmm is a feature of z/OS. It manages all tape media, such as cartridge system tapes and 3420 reels, and other removable media that you define to it.

DFSMSrmm performs these functions to support the 3592 Model J tape drives:

- Records the recording technology, as appropriate
- Records the media type
- Manages WORM tapes

This topic describes the updates to these DFSMSrmm TSO subcommands:

- ADDVOLUME
- CHANGEVOLUME
- SEARCHVOLUME


It also lists the changed REXX variables of the TSO subcommand, API structured field introducers, and mapping macros fields.

Related reading:

- See [*z/OS DFSMSrmm Managing and Using Removable Media*](#) for the complete syntax of the DFSMSrmm ADDVOLUME subcommand, the DFSMSrmm CHANGEVOLUME subcommand, the DFSMSrmm SEARCHVOLUME subcommand, DFSMSrmm return codes and reason codes, and REXX variables.
- See [*z/OS DFSMSrmm Application Programming Interface*](#) for further information about the DFSMSrmm API.
- See [*z/OS DFSMSrmm Implementation and Customization Guide*](#) for additional information about DFSMSrmm mapping macros.

ADDVOLUME

The ADDVOLUME TSO subcommand adds volumes to the DFSMSrmm control data set. This diagram shows the syntax of the MEDIATYPE operand, the VENDOR operand, and the WWID operand for the ADDVOLUME TSO subcommand.

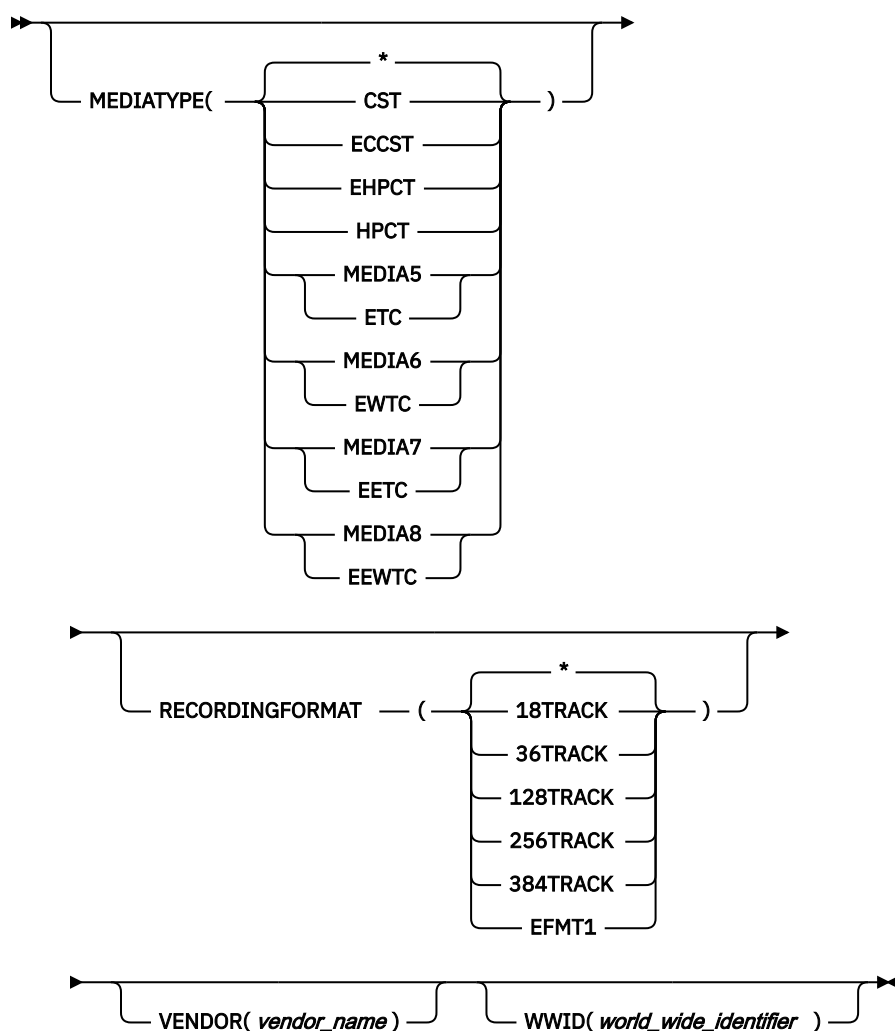

To use the EFMT1 recording technology, you must specify the MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, or MEDIA8) operand of the ADDVOLUME TSO subcommand.


Note: DFSMSrmm uses its own media names for MEDIA1 through MEDIA4 and optionally uses its own media names for MEDIA5 through MEDIA8. DFSMSrmm uses these names in output for RMM LISTVOLUME subcommand requests and from any REXX EXECs you might have written. [Table 60 on page 380](#) lists these DFSMSrmm media names.

Table 60. DFSMSrmm media names

Media name	DFSMSrmm media name
MEDIA1	CST
MEDIA2	ECCST
MEDIA3	HPCT
MEDIA4	EHPCT
MEDIA5	ETC
MEDIA6	EWTC
MEDIA7	EETC
MEDIA8	EEWTC

CHANGEVOLUME


The CHANGEVOLUME TSO subcommand updates details for a volume defined to DFSMSrmm. This diagram shows the syntax of the MEDIATYPE operand, the VENDOR operand, and the WWID operand for the CHANGEVOLUME TSO subcommand.

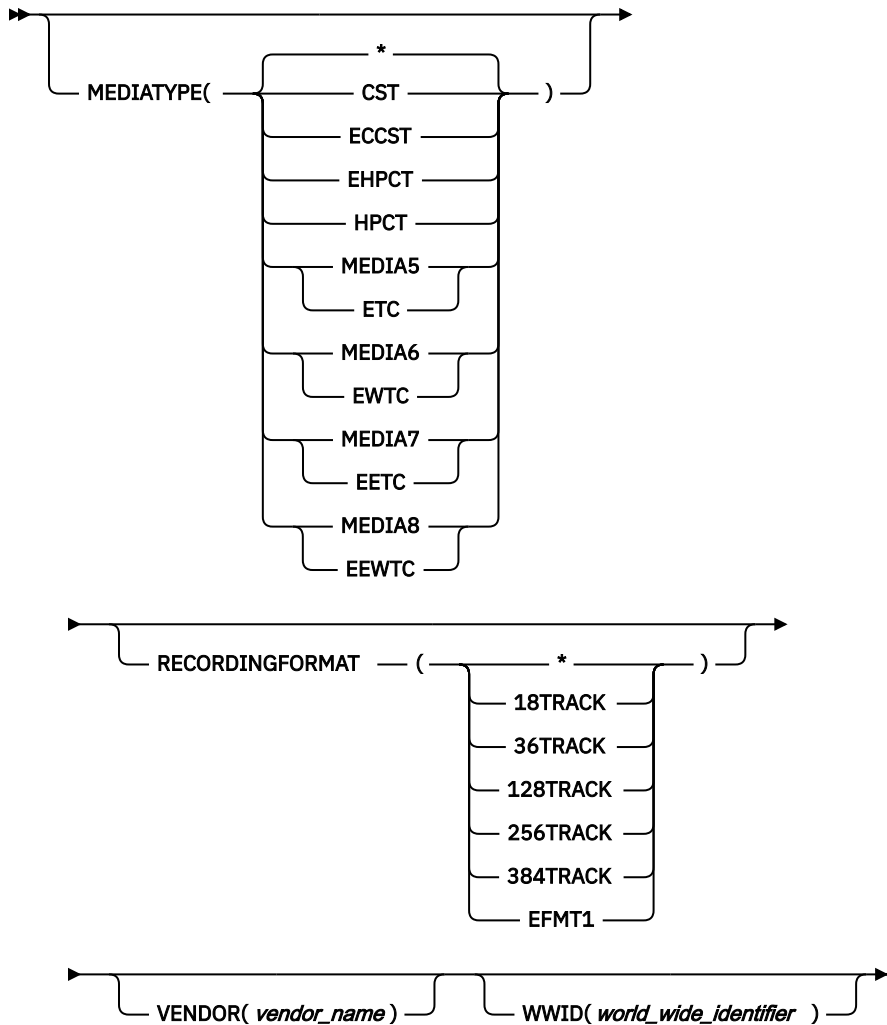

To use the EFMT1 recording technology, you must specify the MEDIATYPE(MEDIA5, MEDIA6, MEDIA7, or MEDIA8) operand of the CHANGEVOLUME TSO subcommand.

SEARCHVOLUME

You can use the SEARCHVOLUME TSO subcommand to obtain a list of volumes that match selection criteria that you specify. Specify EFMT1 to limit your search to volumes that are written in the EFMT1 recording technology. You can also specify a particular media type, such as MEDIA5, to then further limit your search. Specify the VENDOR operand to limit your search to the manufacturer or supplier of the volume. This diagram shows the syntax of the MEDIATYPE operand and the VENDOR operand for the SEARCHVOLUME TSO subcommand.

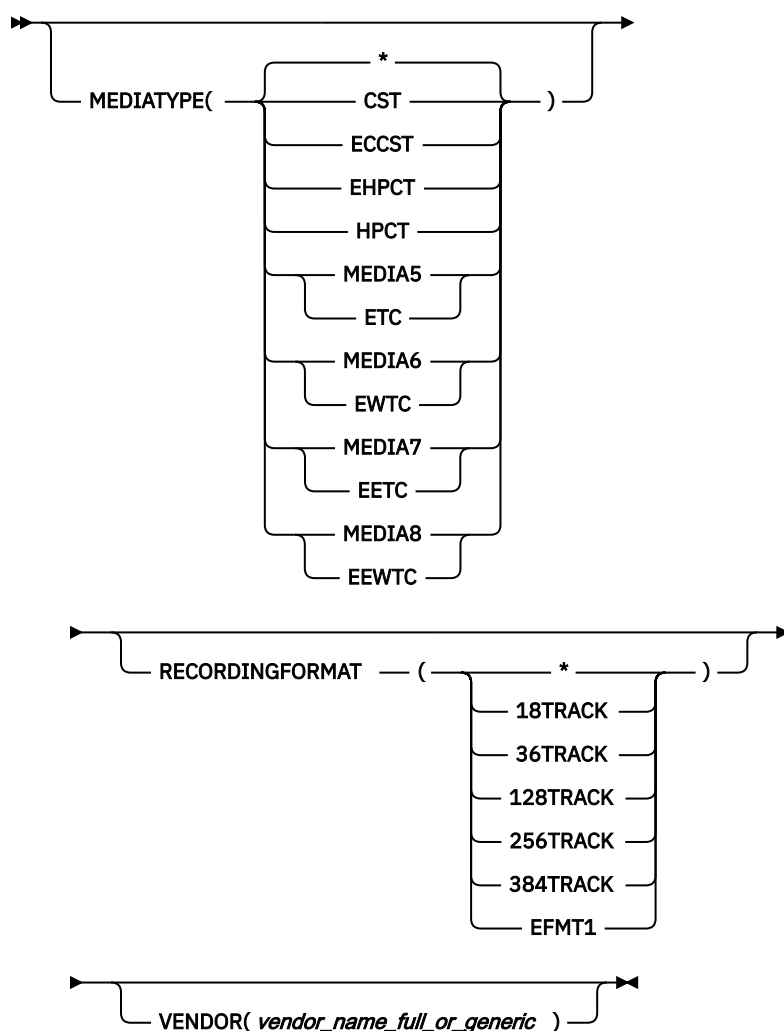

DFSMSrmm REXX variables

You can use the REXX variables to obtain volume information. The variables produced by the SEARCHVOLUME subcommand are stem variables.

Table 61. Changed TSO subcommand REXX variables

Variable name	Subcommands	Contents	Format
EDG@MEDT	LV SV	Tape media type	One of *, CST, ECCST, EHPCT, HPCT, ETC, EWTC, EETC, and EEWTC
EDG@MOP	LC, LC VLPOOL (stem variable)	Masteroverwrite	One of ADD, MATCH, LAST, or USER
EDG@VNDR	LV VOL, SV(e)	Vendor information	8 alphanumeric or special characters
EDG@VWMC	LV STAT, SV(e)	Volume write mount count	Numeric: 0 - 99999
EDG@WWID	LV, SV(e)	World-wide identifier	24 hexadecimal characters

DFSMSrmm structured field introducers

The DFSMSrmm application programming interface (API) returns data as structured fields in an output buffer that you define. Structured fields consist of a structured field introducer (SFI) and the data. SFIs describe the type, length, and other characteristics of the data.

Table 62 on page 383 shows the structured field introducers that support 3592 Model J tape drives.

Table 62. Changed structured field introducers

Name	Number	Type	Length	Value	Subcommands
MEDT	X'858000'	Binary(8)	9	Media type: 0=UNDEFINED 1=CST 2=ECCST 3=HPCT 4=EHPCT 5=ETC/ MEDIA5 6=EWTC/MEDIA6 7=EETC/ MEDIA7 8=EEWTC/MEDIA8	LV, SV
VNDR	X'8B9E00'	Character(8)	16	Vendor information	LV VOL, SV (e)
VWMC	X'8B9100'	Binary(31)	12	Volume write mount count	LV STAT, SV (e)
WWID	X'8C4500'	Character(24)	32	World-wide identifier	LV, SV (e)
MOP	X'85C000'	Binary(8)	9	Master overwrite: 1=ADD 2=LAST 3=MATCH 4=USER	+LC VLPOOL (stem variable)

DFSMSrmm macros

Table 63 on page 383 shows the changes made to DFSMSrmm mapping macros for 3592 Model J tape drives.

Table 63. DFSMSrmm mapping macro changes

Mapping macro	Function	Updates
EDGEXTSY	Maps the extract data set symbols used with DFSORT	Media type values: ETC, EWTC, EETC, EEWTC, EFMT1 recording technology value, the WWID, write mount count, and tape vendor information
EDGRVEXT	Maps the volume records in the DFSMSrmm extract data set	Media type values: ETC, EWTC, EETC, EEWTC, EFMT1 recording technology value, the WWID, write mount count, and tape vendor information
EDGRXEXT	Maps the data set records in the DFSMSrmm extract data set	Media type values: ETC, EWTC, EETC, EEWTC, EFMT1 recording technology value, the WWID, write mount count, and tape vendor information
EDGSMFSY	Maps the SMF record symbols used with DFSORT	Media type values: ETC, EWTC, EETC, EEWTC, EFMT1 recording technology value, the WWID, write mount count, and tape vendor information
EDGSVREC	Maps the DFSMSrmm SMF volume records	Media type values: ETC, EWTC, EETC, EEWTC, EFMT1 recording technology value, the WWID, write mount count, and tape vendor information

DFSMSrmm return codes and reason codes

Table 64 on page 384 shows the return codes and reason codes introduced with the z/OS DFSMS software support for the 3592 Model J tape drives.


Table 64. New return codes and reason codes

Return Code	Reason Code	Issued
12	244	These codes are issued when an attempt to change the volume WWID is made.

Parmlib Member EDGRMMxx VLPOOL MASTEROVERWRITE command

You use the parmlib member EDGRMMxx VLPOOL command to define pools and to set actions that you want taken on all the volumes that reside in the pool. The VLPOOL MASTEROVERWRITE operand controls how DFSMSrmm allows the overwriting of a volume. You can specify if you want to allow data to be appended to the end of a volume or overwritten, or to allow new files to be added to a volume. The MASTEROVERWRITE value applies to all volumes that reside in a pool. This diagram shows the syntax of the VLPOOL MASTEROVERWRITE operand.

If you do not specify the VLPOOL MASTEROVERWRITE value, DFSMSrmm uses the value that is set with the DFSMSrmm EDGRMMxx OPTION MASTEROVERWRITE operand.

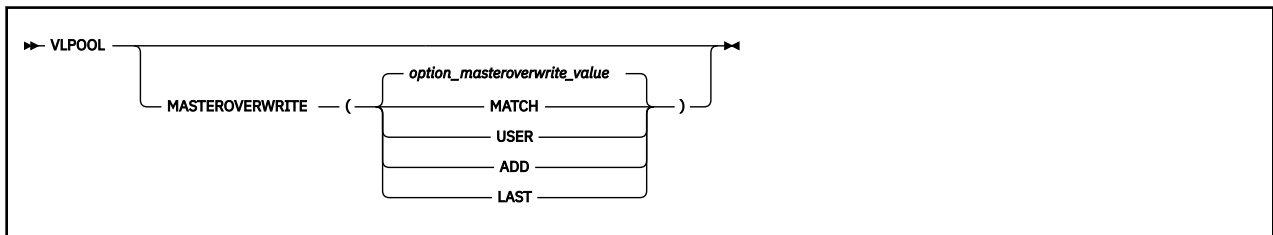

ADD

Specify this value so new data can be created and no existing data can be destroyed. No existing file on a volume can be recreated, but the last file can have new data added to it. When adding data to the last file, DFSMSrmm checks that the data set name used must match the existing data set name. Select this option when you want the last file on the volume to be extended or a new file added to the volume.

Note: DFSMSrmm enforces the MASTEROVERWRITE(ADD) option on a WORM tape that is in master status. This is done to ensure that you see a message from DFSMSrmm rather than one of a number of symptoms as a result of the tape drive preventing overwrites.

LAST

Specify this value to ensure that when an existing file on a master volume is being written to that only the last file on the volume can be used. The data set name used must match the existing data set name. Select this option when you want the last file on the volume to be used for output.

MATCH

Specify this value to ensure that when an existing file on a master volume is being used for output that exactly the same data set name must be used. Select this option when you want any existing file on the volume to be recreated regardless of whether it is the last file on the volume as long as the same data set name is used.

When you use an existing tape file for output all the files which are higher in sequence are destroyed.

USER

Specify this value to allow any existing file on a master volume to be used for output regardless of the data set names being used and its relative file position on the volume. Select this option when you want validation of master volumes to be just the same as for user status volumes.

When you use an existing tape file for output all the files which are higher in sequence are destroyed.

Default: The DFSMSrmm parmlib member EDGRMMxx OPTION command MASTEROVERWRITE operand value when you do not specify a VLPOOL MASTEROVERWRITE value.

SMSACS Input Variables for RMMVRS and RMMPOOL ACS Calls

You use the ACS routines to process the special calls that DFSMSrmm makes to the SMS subsystem for ACS processing. DFSMSrmm provides the DATACLAS variable if it is available in addition to the ACS read-only variables when requesting that either a management class or storage group is returned.

Related reading:

See *z/OS DFSMSrmm Implementation and Customization Guide* for additional information about DFSMSrmm calls to the SMS ACS routines.

Using DFSMSrmm to manage WORM tapes

DFSMSrmm validates WORM tapes at OPEN time and rejects any WORM tapes using this criteria.

- DFSMSrmm ensures that the mounted volume has the correct WWID. DFSMSrmm obtains the WWID for a WORM tape from the tape drive when the volume is mounted and used or when you define the WORM tape to DFSMSrmm using the RMM TSO subcommands.
- When DFSMSrmm has a Write Mount Count for a WORM media, DFSMSrmm ensures that the mounted volume write mount count matches the value recorded in the DFSMSrmm control database.
- DFSMSrmm enforces the MASTEROVERWRITE(ADD) option on a WORM tape that is in master status. This is done to ensure that you see a message from DFSMSrmm rather than one of a number of symptoms as a result of the tape drive preventing overwrites. When a WORM volume is in user status, DFSMSrmm does not enforce the same checks, but does prevent any updates to information records in the DFSMSrmm control data set for existing data sets that are written to the volume. In the latter case, any write or rewrite of data on the volume is subject to the checks built into IBM's WORM tape functionality, so it may or may not be allowed.

For a WORM tape that has been successfully validated, DFSMSrmm records the WWID and write mount count from the tape drive if there are no values defined to DFSMSrmm.

Defining WORM tapes to DFSMSrmm

You can use the RMM ADDVOLUME subcommand to define volumes to DFSMSrmm. When you are defining WORM tapes to DFSMSrmm, allow DFSMSrmm to record the volume WWID when the volume is first used on the system rather than specifying the WWID yourself. This ensures that the WWID for the volume is recorded correctly.

Separating WORM tapes in separate scratch pools

When you use scratch pooling for non-system-managed tape or use a manual tape library, ensure that WORM tapes are in a separate scratch pool. If you mix WORM tape and non-WORM tape in a scratch pool, you cannot control the type of tape that is mounted for a non-specific volume request.

Changing the status of WORM tapes

DFSMSrmm prevents WORM tapes from returning to scratch to prevent their misuse. If you inadvertently define a WORM tape as MASTER volume or a USER volume, you cannot scratch the volume once it has been used for input or output. You can change the status of a WORM tape to scratch status using one of these techniques.

1. Use the RMM DELETEVOLUME *volser* FORCE command to delete the volume.
2. Use the RMM ADDVOLUME *volser* STATUS(SCRATCH) command to add the volume to DFSMSrmm with the scratch status.
3. Use the RMM CHANGEVOLUME *volser* RELEASE(REPLACE) CONFIRMRELEASE(REPLACE) command to set the release action for the volume to REPLACE and to clear information about the volume from the DFSMSrmm control data set.
4. Optionally, use the RMM CHANGEVOLUME *volser* CONFIRMRELEASE(INIT) command to confirm that the volume is already labeled.

5. Run DFSMSrmm expiration processing to set the volume to scratch status.

Identifying WORM tapes ready for destruction

Because WORM tapes cannot be reused, you cannot return the volumes to the scratch pool when the data has expired. Normally you would expect the volumes to be destroyed once all the data has expired. DFSMSrmm provides support for automating the management of this process using the existing volume release actions. By default DFSMSrmm sets the return to owner release action, but you can alternatively use the replace release action by changing the release action at any time during the volumes life.

You can set the release actions for the volumes to trigger one of these actions.

- List all the WORM tapes that are pending return to their owner. Pick the volumes from the list and destroy them. After the volumes are destroyed, use the RMM CHANGEVOLUME * CRLSE(RETURN) or RMM CHANGEVOLUME *volser* CRLSE(RETURN) command to confirm the release action which deletes the volume information from the DFSMSrmm control data set.
- List all the WORM tapes that are pending replacement. Pick the volumes from the list and destroy them. Create new WORM tapes that use the same set of volume serial numbers. After the volumes are destroyed, use the RMM CHANGEVOLUME * CRLSE(REPLACE) or RMM CHANGEVOLUME *volser* CRLSE(REPLACE) command to confirm the release action which updates the volume information in the DFSMSrmm control data set to reflect the volume that has been replaced with a new volume.

Chapter 59. EREP modifications for 3592 Model J

Environmental Recording, Editing, and Printing (EREP) program is a diagnostic application program that runs under MVS, VM, and VSE. It generates and prints reports from error recording data set (ERDS) records. With these reports, IBM service representatives can determine the existence, nature, and location of a problem.

This topic describes changes to the tape subsystem exception, event history, system error summary, and emulated device summary reports of the EREP program to support 3592 Model J tape drives.

Tape subsystem exception report

As shown in Figure 38 on page 387, EREP reports a temporary ORB record in its tape subsystem exception report in support of 3592 Model J tape drives.

TAPE SUBSYSTEM EXCEPTION REPORT					REPORT DATE 050 04				
					PERIOD FROM 076 02				
					TO 077 02				
*** SEQUENCE BY PROBABLE FAILING UNIT ***									
PROBABLE FAILING UNIT	DEVICE TYPE/ VOLID	FAILURE AFFECT		CPU	DEVNO /CUA	SIMS	MIMS	ORB PERM	ORB TEMP
*****-TOTALS-----*****									
LIBRARY					TOTAL	0	0	0	1
	3570-CXX	LIBRARY INFORMATIONAL DATA		00	07C2	0	0	0	1
DEVICE					TOTAL	0	0	2	1
	3590-H1X	LIBRARY DRIVE NOT UNLOADED		02	0C24	0	0	1	0
	3592-J1X	WORM OVERWRITE REJECTED		03	0C27	0	0	0	1

Figure 38. Partial event history report

Event history report

As shown in Figure 39 on page 387, EREP reports 3590 as the native device type in its event history report in support of 3592 Model J tape drives.

EVENT HISTORY (S/370 & S/370XA)							
TIME	JOBNAME	RECTYP	CP	CUA	SSYS	DEVT	
DATE 358 99			*	DNO	CRW		
02 15 34 50	N/A	MDR	01	04B2	3590	04	
02 22 35 74	N/A	MDR	00	04B0	3590	04	
10 02 06 17	DRVNDSA	OBRTMP	03	0591	3590		
10 02 10 78	DRVNDSA	OBRPRM	03	0591	3590		
12 54 45 51	VARY	OBRPRM	06	0563	3590	06	
23 08 25 93	DISB/RGP	OBRTMP	00	04BA	3590	04	
23 08 25 93	DISB/RGP	OBRPRM	00	04BA	3590		
23 08 25 93	DISB/RGP	OBRTMP	00	04BE	3590	16	

Figure 39. Partial event history report

System error summary report

Figure 40 on page 388 illustrates that the EREP system error summary report is changed to support 3592 Model J tape drives. The system error summary for 3590 includes the system error summary report series for 3490. These reports are only shown for 3590 devices that emulate 3490 devices.

SYSTEM ERROR SUMMARY (PART 2)									
REPORT DATE 054 99									
PERIOD FROM 044 98									
TO 022 02									
TIME	JOBNAME	CPU	PHYSICAL ID	PHYSICAL TYPE	PHYSICAL ADDRESS	ERROR PATH	VOLUME	ERROR DESC	PROBABLE FAILING
DATE 358/99									
10:02:10:78	DRVNSA	02	N/A	3590	0591	0591		N/A	HARDWARE
23:08:25:93	DISB/RGP	00	N/A	3590	04BA	16-04BA		N/A	VOLUME/C

Figure 40. Partial system error summary report

Emulated device summary report

Figure 41 on page 388 provides an example of an EREP emulated device summary report. The report in this example shows the emulated device type for 3592 Model J tape drives. The report includes an example of a 3592-J1X emulating a 3490-CXX and an example of a 3592-J1X emulating a 3590-B1X.

3590 DEVICE SUMMARY		REPORT DATE 104 99	
		PERIOD FROM 044 98	
		TO 019 99	
DEVICE ADDRESS	REAL / EMULATED DEVICE TYPE		
014C	3590-E1X / 3490-CXX		
014D	3590-B1X / 3490-CXX		
014E	3590-E1X / 3490-CXX		
0231	3590-H1X / 3490-CXX		
0232	3590-H1X / 3490-CXX		
0233	3590-H1X / 3490-CXX		
0234	3592-J1X / 3490-CXX		
04B8	3590-B1X / 3490-CXX		
04B9	3590-B1X / 3490-CXX		
04BA	3590-B1X / 3490-CXX		
04BB	3590-B1X / 3490-CXX		
04BC	3590-B1X / 3490-CXX		
0591	3590-E1X / 3490-CXX		
0592	3590-E1X / 3490-CXX		
0880	3590-XXX / NATIVE		
0881	3590-XXX / NATIVE		
0882	3590-XXX / NATIVE		
0883	3590-XXX / NATIVE		
0884	3590-XXX / NATIVE		
088A	3590-XXX / NATIVE		
08AA	3590-E1X / 3590-B1X		
08AB	3590-E1X / 3590-B1X		
08AC	3592-J1X / 3590-B1X		

Figure 41. Partial emulated device summary report

Chapter 60. JES3 modifications for 3592 Model J

JES3, a z/OS MVS subsystem, manages resources and work flow before and after jobs are processed. You can enable JES3 to allocate 3592 Model J tape drives and tape volumes in an SMS-managed IBM tape library environment (automated or manual) for 3590 Model B emulation only. To do so, you need to specify at least one of these library device group (LDG) names in your JES3plex. An LDG is a predefined set of tape subsystems within a JES3plex.

- LDGddd. dddd=359J indicates that a 3592 Model J tape drive emulates a 3590 Model B in any library within the JES3plex.
- LDJsssss. The serial number sssss indicates the library within which a 3592 Model J tape drive that emulates a 3590 Model B resides.

Chapter 61. OAM modifications for 3592 Model J

The Object Access Method (OAM) is a component of DFSMSdfp. OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. You can also use OAM's object support to manage objects on DASD, tape, and optical volumes.

Related reading:

- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Tape Libraries* for additional information about using OAM to manage tape volumes and tape libraries.
- See *z/OS DFSMS OAM Planning, Installation, and Storage Administration Guide for Object Support* for additional information about using OAM to manage the data on tape volumes.
- See *z/OS MVS System Messages, Vol 4 (CBD-DMO)* for explanations and appropriate actions for CBRxxxxx messages.

OAM library support

OAM uses the concepts of system-managed storage, introduced by SMS, to manage, maintain, and verify tape volumes and tape libraries within a tape storage environment. This topic describes the OAM library support functions that have been changed for use with the 3592 Model J tape drives.

LCS external services changes

LCS External Services supports the media types, MEDIA5, MEDIA6, MEDIA7, and MEDIA8, and the recording technology, EFMT1, for these functions:

- Change use attribute
- Query volume residence
- Test volume eligibility
- Eject a volume
- Manual cartridge entry

OAM installation exits changes

These installation exits support EFMT1 recording technology and MEDIA5, MEDIA6, MEDIA7, and MEDIA8 media types:

- Change use attribute (CBRUXCUA) installation exit: Tape recording technology fields and media type fields have been updated with EFMT1 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8.
- The UXCVWORM indicator is set to on if the volume is a WORM media type. The tape management system is alerted that the CUA function is being performed for a WORM volume when invoking the CBRUXCUA installation exit.
- Cartridge entry (CBRUXENT) installation exit: Tape recording technology fields and media type fields have been updated with EFMT1 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8.
- Cartridge eject (CBRUXEJC) installation exit: Tape recording technology fields and media type fields have been updated with EFMT1 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8.
- Volume not in library (CBRUXVNL) installation exit: Tape recording technology fields and media type fields have been updated with EFMT1 and MEDIA5, MEDIA6, MEDIA7, and MEDIA8.

Operator command support changes

These operator tasks have been changed in support of the 3592 Model J tape drives.

- To obtain information about recording technology and media type for volume AN4441, issue the command:

```
DISPLAY SMS,VOLUME(AN4441)
```

In this example, OAM displays EFMT1 and MEDIA5 in the output display for CBR1180I (OAM tape volume status) for the recording technology and media type.

```
CBR1180I OAM tape volume status:
VOLUME MEDIA STORAGE LIBRARY USE W C SOFTWARE LIBRARY
      TYPE GROUP NAME ATR P P ERR STAT CATEGORY
AN4441 MEDIA5 SGATLOBJ ATL10001 P N N NOERROR PRIVATE
-----
RECORDING TECH: EFMT1 COMPACTION: YES
SPECIAL ATTRIBUTE: NONE ENTER/EJECT DATE: 2003-05-30
CREATION DATE: 2003-05-30 EXPIRATION DATE:
LAST MOUNTED DATE: 2003-07-03 LAST WRITTEN DATE: 2003-07-03
SHELF LOCATION:
OWNER:
-----
```

In this example, OAM displays EFMT1 and MEDIA6 in the output display for CBR1180I (OAM tape volume status) for the recording technology and media type. A new WORM media indicator is also displayed.

```
CBR1240I Object tape vol status:
VOLUME STORAGE UNITNAME RD WR CM IN MED FREE-SPACE % LOST REQ
      GROUP USE TYPE FULL FLAG CT
JWC053 GROUP52 3590-1 Y Y Y N 08 292968448 0 N 0
Volume is WORM tape.
XCF MEMBER NAME: OAMSYS1
CAPACITY: 292968448
ERDS PHYSICAL ID: 0010
CREATION DATE: 2004-04-01 EXPIRATION DATE: 0001-01-01
LAST MOUNTED DATE: 2004-04-01 LAST WRITTEN DATE: 2004-04-01
CBR1180I OAM tape volume status:
VOLUME MEDIA STORAGE LIBRARY USE W C SOFTWARE LIBRARY
      TYPE GROUP NAME ATR P P ERR STAT CATEGORY
JWC053 MEDIA6 SGATLOBJ ATL10001 P N N NOERROR PRIVATE
-----
RECORDING TECH: EFMT1 COMPACTION: UNKNOWN
SPECIAL ATTRIBUTE: NONE ENTER/EJECT DATE: 2004-03-30
CREATION DATE: 2004-03-30 EXPIRATION DATE:
LAST MOUNTED DATE: 2004-04-01 LAST WRITTEN DATE: 2004-04-01
SHELF LOCATION:
OWNER:
-----
Volume is WORM tape.
```

- To display tape drive status, issue the command:

```
LIBRARY DISPDRV,BC0
```

In this example, OAM displays 3592-J, as the device type for a 3592 Model J device, and as appropriate, MEDIA5, MEDIA6, MEDIA7, or MEDIA8 as the ICL CATEGORY, in the output display for CBR1220I (tape drive status).

```
CBR1220I Tape drive status:
DRIVE DEVICE LIBRARY ON OFFREASN LM ICL ICL MOUNT
NUM TYPE NAME LI OP PT AV CATEGORY LOAD VOLUME
0BC0 3592-J ATL10001 Y N N N A NONE N
```

- To enter the MEDIA5, MEDIA6, MEDIA7, or MEDIA8 media type into a manual tape library, issue the command:

```
LIBRARY ENTER, volser, library_name, media_type
```

where media_type is MEDIA5, MEDIA6, MEDIA7, or MEDIA8

- To set the media type of scratch volumes to be loaded into a 3592 Model J device that supports a cartridge loader, issue the command:

```
LIBRARY SETCL, device_number, media_type
```

where media_type is MEDIA5, MEDIA6, MEDIA7, or MEDIA8

- To display the MEDIA5, MEDIA6, MEDIA7, and MEDIA8 scratch count, scratch threshold, and scratch category in the output display for CBR1110I, issue the command:

```
DISPLAY SMS,LIBRARY(ATL10001),DETAIL
```

```
CBR1110I OAM library status:
TAPE      LIB  DEVICE      TOT  ONL  AVL  TOTAL  EMPTY  SCRTCH  ON  OP
LIBRARY   TYP  TYPE      DRV  DRV  DRV  SLOTS  SLOTS  VOLS   Y   Y
ATL10001  AL   3494-L10    6    1    1  1299   304     2   Y   Y
-----
MEDIA      SCRATCH      SCRATCH      SCRATCH
TYPE       COUNT      THRESHOLD    CATEGORY
MEDIA1      0          1          0281
MEDIA2      0          1          0282
MEDIA3      1          1          0283
MEDIA4      1          1          0284
MEDIA5      0          2          0285
MEDIA6      0          2          0286
MEDIA7      0          2          0287
MEDIA8      0          2          0288
-----
OPERATIONAL STATE:  AUTOMATED
ERROR CATEGORY SCRATCH COUNT:          0
HIGH CAPACITY INPUT STATION CAPACITY:   105
HIGH CAPACITY OUTPUT STATION CAPACITY:  105
-----
Convenience I/O station installed.
Convenience I/O station in Output mode.
Convenience I/O station Empty.
Bulk input/output configured.
```

OAM macro changes

Table 65 on page 393 describes changes to OAM mapping macros and installation exit parameter lists in support of 3592 Model J tape drives.

Table 65. OAM mapping macro changes		
The macro	that maps	has these changes.
CBRLCSPL	the LCS External Services parameter list	LCSIVLMM EQU 24 INVALID VOLUME LIST, MIXED MEDIA, REWRITABLE AND WORM VOLUMES
CBRTDSI	the tape device selection information (TDSI)	TDSEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE TDSMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE TDSMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE TDSMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE TDSMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE

Table 65. OAM mapping macro changes (continued)

The macro	that maps	has these changes.
CBRTVI	the tape volume information	<p>TVIEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE</p> <p>TVIMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE</p> <p>TVIMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE</p> <p>TVIMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE</p> <p>TVIMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE</p> <p>TVISCRM5 EQU C'S5' Volume is MEDIA5 SCRATCH</p> <p>TVISCRM6 EQU C'S6' Volume is MEDIA6 SCRATCH</p> <p>TVISCRM7 EQU C'S7' Volume is MEDIA7 SCRATCH</p> <p>TVISCRM8 EQU C'S8' Volume is MEDIA8 SCRATCH</p> <p>TVIMEDTY has a new value for MEDIA5 which is X'05'</p> <p>TVIMEDTY has a new value for MEDIA6 which is X'06'</p> <p>TVIMEDTY has a new value for MEDIA7 which is X'07'</p> <p>TVIMEDTY has a new value for MEDIA8 which is X'08'</p>
CBRUXCPL	the change use attribute installation exit parameter list	<p>UXCEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE</p> <p>UXCMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE</p> <p>UXCMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE</p> <p>UXCMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE</p> <p>UXCMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE</p>
CBRUXEPL	the cartridge entry installation exit parameter list	<p>UXEEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE</p> <p>UXEMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE</p> <p>UXEMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE</p> <p>UXEMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE</p> <p>UXEMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE</p>
CBRUXJPL	the cartridge eject installation exit parameter list	<p>UXJEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE</p> <p>UXJMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE</p> <p>UXJMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE</p> <p>UXJMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE</p> <p>UXJMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE</p>

Table 65. OAM mapping macro changes (continued)		
The macro	that maps	has these changes.
CBRUXNPL	the volume not in library installation exit parameter list	UXNEFMT1 EQU 6 READ/WRITE on ENTERPRISE FORMAT 1 (EFMT1) DEVICE UXNMED5 EQU 5 MEDIA5 - ENTERPRISE TAPE CARTRIDGE UXNMED6 EQU 6 MEDIA6 - ENTERPRISE WORM TAPE CARTRIDGE UXNMED7 EQU 7 MEDIA7 - ENTERPRISE ECONOMY TAPE CARTRIDGE UXNMED8 EQU 8 MEDIA8 - ENTERPRISE ECONOMY WORM TAPE CARTRIDGE

Scratch mount considerations

To request WORM tape cartridge media in a system-managed tape library environment, use data class with the media interchange specification indicating a WORM media type (MEDIA6 or MEDIA8). If a media type is not specified through data class and a 3592 device is allocated, MEDIA5 will be mounted with MEDIA7 as the alternate.

3592 drive level and allocation considerations

In a system-managed tape library environment, all the 3592 drives in a library need to be upgraded with the microcode support if MEDIA6, MEDIA7, or MEDIA8 media types are used. A mount failure occurs when a drive without the microcode upgrade is allocated for a mount request requiring one of the new media types.

OAM object tape support

The Object Access Method (OAM) is also an access method supporting a class of data referred to as objects. An object is a named stream of bytes. The content, format, and structure of that byte stream are unknown to OAM. There are no restrictions on the data in an object. For example, an object can be a compressed scanned image or coded data. Objects are different from data sets handled by existing access methods.

In an IBM tape library environment, the SETOAM DATACLASS parameter can be specified using a data class that contains the media type or recording technology; these specifications are associated with an Object or Object Backup storage group in the CBROAMxx member of PARMLIB.

In a stand-alone environment, the SETOAM TAPEUNITNAME parameter can be specified using an esoteric that contains 3592 Model J devices. These specifications are associated with an Object or Object Backup storage group in the CBROAMxx member of PARMLIB.

In addition, the SETOAM DATACLASS parameter can also be used inside and outside an IBM tape library environment to take advantage of performance scaling. Performance scaling is only available with MEDIA5 (300GB) tape cartridge media. A DATACLASS with the performance scaling data class attribute selected can be specified for OBJECT storage groups to improve the random retrieval rate of primary objects; whereas, objects written to OBJECT BACKUP storage groups can specify a DATACLASS that does not specify performance scaling and can continue to utilize the full capacity of the MEDIA5 volume.

In addition to the performance scaling option available with the 300GB MEDIA5 cartridge, the 60GB MEDIA7 economy cartridge can also be used to improve the random retrieval rate of primary objects.

Recommendations:

- To use the volumes effectively, we recommend that you run in 3590-1 emulation mode, otherwise with 3490E emulation, OAM will run out of 22-bit tape blockids before being able to fill the tape.

Note: The 3592 Model J does not support 3490E emulation mode with MEDIA6, MEDIA7, or MEDIA8 tape cartridge media.

- To guarantee that objects written on any drive in the esoteric group can be read on any drive in the same esoteric group, specify esoteric unit names with compatible recording technologies.
- In order to prevent allocating an inappropriate drive for a request, it is important to separate, in an esoteric or a generic, the 3592 Model J devices with the upgraded microcode support for MEDIA6, MEDIA7, and MEDIA8 from any other 3592 devices without the upgrade. Another alternative is to consider upgrading all 3592 drives.
- Storage groups using 3592 Model J drives should be comprised of either WORM tape volumes or rewritable tape volumes. In addition, you should consider the separation of standard length and economy length media types.
- In the system-managed tape library environment (automated or manual), the SETOAM DATACLASS parameter at the storage group, or global level, can be used to request a specific media type through the data class media interchange specification. Outside of the system-managed type library environment, the tape management system pooling support can be used to direct the storage group request to a particular set of media with a new option to now append the storage group name to the OAM object tape data set names.

Table 66 on page 396 shows the entry for the optical configuration database (OCDB) MEDIATYP field. The media type is defined in the MEDIATYP field. These media types are defined:

- MEDIATYP field is 07, meaning Enterprise Tape Cartridge. When utilizing the tape to its full capacity, the CAPACITY value for the media is 292 968 448 kilobytes and if utilizing the media to its performance scaled capacity, the CAPACITY value for the media is 60 653 568 kilobytes.
- MEDIATYP field is 08, meaning Enterprise WORM Tape Cartridge. When utilizing the tape to its full capacity, the CAPACITY value for the media is 292 968 448 kilobytes with the description of "Represents the approximate number of kilobytes of data for an IBM 3592 Enterprise WORM Tape Cartridge. This value will be returned from the drive (3592 Model J) and is used here as an approximation that will be close to actual value."
- MEDIATYP field is 09, meaning Enterprise Economy Tape Cartridge. When utilizing the tape to its full capacity, the CAPACITY value for the media is 60 653 568 kilobytes with the description of "Represents the approximate number of kilobytes of data for an IBM 3592 Enterprise Economy Tape Cartridge. This value will be returned from the drive (3592 Model J) and is used here as an approximation that will be close to actual value."
- MEDIATYP field is 10, meaning Enterprise Economy WORM Tape Cartridge. When utilizing the tape to its full capacity, the CAPACITY value for the media is 60 653 568 kilobytes with the description of "Represents the approximate number of kilobytes of data for an IBM 3592 Enterprise Economy WORM Tape Cartridge. This value will be returned from the drive (3592 Model J) and is used here as an approximation that will be close to actual value."

Table 66. Library table column descriptions				
Column description	Name	DB2 type	DB2 attribute	Report label
Capacity of tape	CAPACITY	INTEGER	Not Null	CAPACITY
Media Type	MEDIATYP	CHAR(2)	Not Null	MEDIATYPE

Object tape data set low-level qualifier enhancement

With the 3592 Model J support for new media types (MEDIA6, MEDIA7, and MEDIA8), OAM includes an enhancement to optionally append a low-level qualifier to the OAM object tape data set names. To assist the tape management system in mounting an appropriate media type in the stand-alone environment (non system-managed tape environment), the DSNWITHSGNAME global keyword on the SETOAM statement in the CBROAMxx PARMLIB member appends the object storage group name to the OAM data set names (OAM.PRIMARY.DATA, OAM.BACKUP.DATA, OAM.BACKUP2.DATA). For example, if OAM receives a store request for an object for storage group GROUP55, GROUP55 is appended as the low-level qualifier to the OAM.PRIMARY.DATA data set name, resulting in OAM.PRIMARY.DATA.GROUP55.

The tape management system can parse the data set low-level qualifier (storage group) to determine from which pool a scratch volume should be selected for a mount request in the stand-alone environment. By associating object storage group names with tape management scratch pools, specific media type volumes can be assigned to specific pool names and separated, preventing a WORM volume request from being used for a rewritable volume request and the other way around.

Though discussion of the new DSNWITHSGNAME global keyword has centered around the stand-alone (non-system managed tape environment) where scratch allocations are typically satisfied with the assignment of a tape management system scratch pool versus the assignment of an appropriate data class, this new keyword can also be specified in the system-managed tape library environment to better identify what object storage group data is written to the tape.

Once the DSNWITHSGNAME is specified, all new OAM object data set names for all storage groups have the storage group name appended. Regardless if DSNWITHSGNAME is specified or not, data sets written in the original data set name format or the new data set name format can be retrieved.

The MODIFY OAM, DISPLAY, and SETOAM command displays indicate if the GLOBAL DSNWITHSGNAME keyword is specified on the SETOAM statement in the CBROAMxx PARMLIB member.

Data set format column, DSNFMT, is added to the TAPEVOL table of the Optical Configuration Database. If a tape volume has a DSNFMT value of blank, the data set written on the volume is the original data set format with no storage group low-level qualifier or has no current OAM data set written on the tape. If a tape volume has a DSNFMT value of 'G' for group, the data set written on the volume has the storage group appended.

Sample JCL, CBRSMPS, adds the DSNFMT column to the TAPEVOL table in the Optical Configuration Database. Also, CBRSAMPL is modified to include the TAPEVOL DSNFMT column.

Object tape volume management support

Starting with z/OS DFSMS V1R5, OAM supports expiring an object tape volume whose data on the volume is all expired. The tape volume can be deleted or recycled if it has no valid data remaining because of expired data or all valid data has been moved to another volume due to recovery, the move volume utility, or the OSMC shelf manager processing.

The 3592 support for the new media types (MEDIA6, MEDIA7, and MEDIA8) includes special handling of WORM (MEDIA6 and MEDIA8) tape volumes that have expired. Because WORM tape volumes cannot be written from load point, they cannot be recycled.

With WORM tape, once the volume has been filled and data has been expired or DELETE has been requested on the MOVEVOL or RECOVERY command, the WORM tape volume is processed like the OAM RECYCLE MVSSCRATCH option. All knowledge of the volume is removed from the OAM DB2 tape volume database. Message, CBR2173I, is issued to signal the tape management system that a WORM volume has been expired or deleted and requires special handling based on the installation's procedures. If the WORM storage group has OAMSCRATCH or GROUP option specified for the TAPERECYCLEMODE keyword in the SETOAM statement in the CBROAMxx parmlib member, the WORM tape is still handled like the MVSSCRATCH option had been specified since WORM tape cannot be rewritten from load point. Message CBR2165I continues to be issued for a rewritable tape volume that has been expired or deleted.

Rewritable tape volumes being recycled (OAMSCRATCH or GROUP) have their data set format field reset to blank, indicating no current OAM data set written on the volume.

MOVEVOL command

Because WORM tape volumes cannot be rewritten from load point and cannot be recycled for reuse, the only MOVEVOL commands allowed are with the DELETE option, or MOVEVOL with no option specified. The MOVEVOL command with the RECYCLE option is rejected for a WORM tape volume.

Appendix A. Accessibility

Accessible publications for this product are offered through [IBM Documentation for z/OS \(www.ibm.com/docs/en/zos\)](http://www.ibm.com/docs/en/zos).

If you experience difficulty with the accessibility of any z/OS documentation see [How to Send Feedback to IBM](#) to leave documentation feedback.

Notices

This information was developed for products and services that are offered in the USA or elsewhere.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive, MD-NC119
Armonk, NY 10504-1785
United States of America*

For license inquiries regarding double-byte character set (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

*Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan Ltd.
19-21, Nihonbashi-Hakozakicho, Chuo-ku
Tokyo 103-8510, Japan*

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

This information could include missing, incorrect, or broken hyperlinks. Hyperlinks are maintained in only the HTML plug-in output for IBM Documentation. Use of hyperlinks in other output formats of this information is at your own risk.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

*IBM Corporation
Site Counsel
2455 South Road*

Poughkeepsie, NY 12601-5400
USA

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

COPYRIGHT LICENSE:

This information contains sample application programs in source language, which illustrate programming techniques on various operating platforms. You may copy, modify, and distribute these sample programs in any form without payment to IBM, for the purposes of developing, using, marketing or distributing application programs conforming to the application programming interface for the operating platform for which the sample programs are written. These examples have not been thoroughly tested under all conditions. IBM, therefore, cannot guarantee or imply reliability, serviceability, or function of these programs. The sample programs are provided "AS IS", without warranty of any kind. IBM shall not be liable for any damages arising out of your use of the sample programs.

Terms and conditions for product documentation

Permissions for the use of these publications are granted subject to the following terms and conditions.

Applicability

These terms and conditions are in addition to any terms of use for the IBM website.

Personal use

You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative work of these publications, or any portion thereof, without the express consent of IBM.

Commercial use

You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or

reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

Rights

Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.

IBM Online Privacy Statement

IBM Software products, including software as a service solutions, ("Software Offerings") may use cookies or other technologies to collect product usage information, to help improve the end user experience, to tailor interactions with the end user, or for other purposes. In many cases no personally identifiable information is collected by the Software Offerings. Some of our Software Offerings can help enable you to collect personally identifiable information. If this Software Offering uses cookies to collect personally identifiable information, specific information about this offering's use of cookies is set forth below.

Depending upon the configurations deployed, this Software Offering may use session cookies that collect each user's name, email address, phone number, or other personally identifiable information for purposes of enhanced user usability and single sign-on configuration. These cookies can be disabled, but disabling them will also eliminate the functionality they enable.

If the configurations deployed for this Software Offering provide you as customer the ability to collect personally identifiable information from end users via cookies and other technologies, you should seek your own legal advice about any laws applicable to such data collection, including any requirements for notice and consent.

For more information about the use of various technologies, including cookies, for these purposes, see IBM's Privacy Policy at ibm.com/privacy and IBM's Online Privacy Statement at ibm.com/privacy/details in the section entitled "Cookies, Web Beacons and Other Technologies," and the "IBM Software Products and Software-as-a-Service Privacy Statement" at ibm.com/software/info/product-privacy.

Policy for unsupported hardware

Various z/OS elements, such as DFSMSdfp, JES2, and MVS, contain code that supports specific hardware servers or devices. In some cases, this device-related element support remains in the product even after the hardware devices pass their announced End of Service date. z/OS may continue to service element code; however, it will not provide service related to unsupported hardware devices. Software problems related to these devices will not be accepted for service, and current service activity will cease if a problem is determined to be associated with out-of-support devices. In such cases, fixes will not be issued.

Minimum supported hardware

The minimum supported hardware for z/OS releases identified in z/OS announcements can subsequently change when service for particular servers or devices is withdrawn. Likewise, the levels of other software products supported on a particular release of z/OS are subject to the service support lifecycle of those

products. Therefore, z/OS and its product publications (for example, panels, samples, messages, and product documentation) can include references to hardware and software that is no longer supported.

- For information about software support lifecycle, see: [IBM Lifecycle Support for z/OS \(www.ibm.com/software/support/systemsz/lifecycle\)](http://www.ibm.com/software/support/systemsz/lifecycle)
- For information about currently-supported IBM hardware, contact your IBM representative.

Programming interface information

This document primarily documents information that is **not** intended to be used as a programming interface of z/OS DFSMS.

Trademarks

DFSMSrmm
IBM
IBMLink
RACF
z/OS
z/VM

Microsoft, Windows, Windows NT, and the Windows logo are trademarks of Microsoft Corporation in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Linux is a trademark of Linus Torvalds in the United States, other countries, or both.

Apache Tomcat and Tomcat are trademarks of the Apache Software Foundation in the United States, other countries, or both.

Other company, product, and service names may be trademarks or service marks of others.

Glossary

The terms in this glossary are defined as they pertain to the software support for the IBM System Storage Tape System 3592. This glossary might include terms and definitions from the following references:

- The *American National Standard Dictionary for Information Systems*, ANSI X3.172-1990, copyright 1990 by the American National Standards Institute (ANSI). Copies may be purchased from the American National Standards Institute, 11 West 42nd Street, New York 10036.
- The *Information Technology Vocabulary*, developed by Subcommittee 1, Joint Technical Committee 1, of the International Electrotechnical Commission (ISO/IEC JTC2/SC1).
- IBM Dictionary of Computing, New York: McGraw-Hill, 1994.

3480

An IBM 3480 Magnetic Tape Subsystem device that is capable of recording data only in the 3480 format.

3480X

A 3480 XF device or an IBM 3490 Magnetic Tape Subsystem device that is capable of recording data in either the 3480 format or the 3480 XF (IDRC) format.

3490

An IBM 3490 Magnetic Tape Subsystem device.

3490E

See 3490.

3590

An IBM TotalStorage Enterprise Tape Drive 3590 that operates as a 3590-B1x. See 3590-B1x, 3590-E1x and 3590-H1x.

3590B1x

An IBM TotalStorage Enterprise Tape Drive 3590 Model B1x .

3590E1x

An IBM TotalStorage Enterprise Tape Drive 3590 Model E1x .

3590H1x

An IBM TotalStorage Enterprise Tape Drive 3590 Model H1x.

3592J1A

IBM System Storage Tape System 3592 Model J.

3592E05

IBM System Storage Tape System 3592 Model E05.

3592E06

IBM System Storage Tape System 3592 Model E06.

3592E07

IBM System Storage Tape System 3592 Model E07.

access method services (AMS)

A multifunction service program that manages VSAM and non-VSAM data sets, as well as integrated catalog facility (ICF) catalogs.

ACF

Automated cartridge facility.

ACL

Automatic cartridge loader.

ACS

Automatic class selection.

allocation

Generically, the entire process of obtaining a volume and unit of external storage, and setting aside space on that storage for a data set.

AMS

Access method services.

AOM

Asynchronous operation manager.

APAR

Authorized program analysis report.

API

Application programming interface.

ATL

Automated tape library.

ATLDS

Automated tape library dataserver.

automated tape library

A device consisting of robotic components, cartridge storage areas, tape subsystems, and controlling hardware and software, together with the set of tape volumes that reside in the library and can be mounted on the library tape drives.

automatic cartridge loader

An optional feature of the 3480 magnetic tape subsystem that allows preloading of multiple tape cartridges. This feature is standard in the 3490 magnetic tape subsystem.

automatic class selection (ACS)

Routines that determine the data class, management class, storage class, and storage group for a JCL DD statement. The storage administrator is responsible for establishing ACS routines appropriate to an installation's storage requirements.

backup

The process of creating a copy of a data set or object to be used in case of accidental loss.

cartridge system tape

The base tape cartridge media used with 3480 or 3490 magnetic tape subsystems.

construct

One of the following: data class, storage class, management class, storage group, aggregate group, base configuration.

cross-coupling facility (XCF)

A component of the MVS operating system that provides functions to support cooperation between authorized programs running within a sysplex.

DASD

Direct access storage device.

DASD volume

A DASD space identified by a common label and accessed by a set of related addresses.

data class

A collection of allocation and space attributes, defined by the storage administrator, that is used to create a data set.

Data Facility Sort (DFSORT)

An IBM-licensed program that is a high-speed data processing utility. DFSORT provides an efficient and flexible way to handle sorting, merging, and copying operations, as well as providing versatile data manipulation at the record, field, and bit level.

Data Facility Storage Management Subsystem (DFSMS)

An operating environment that helps automate and centralize the management of storage. To manage storage, SMS provides the storage administrator with control over data class, storage class, management class, storage group, and automatic class selection routine definitions.

data set

The major unit of data storage and retrieval in z/OS DFSMS, consisting of a collection of data in a prescribed arrangement and described by control information to which the system has access.

DDR

Dynamic device reconfiguration.

device

This term is used interchangeably with unit. You mount a tape on a unit or device, such as a 3490.

device category

A storage device classification used by SMS. The device categories are as follows SMS-managed DASD, SMS-managed tape, non-SMS-managed DASD non-SMS-managed tape.

DFSMS

See *Data Facility Storage Management Subsystem*.

DFSMSdfp

DFSMS data facility product. A z/OS DFSMS functional component that provides functions for storage management, data management, program management, device management, and distributed data access.

DFSMSdss

DFSMS data set services. A z/OS DFSMS functional component that provides functions for copying, moving, dumping, and restoring data sets and volumes.

DFSMShsm

DFSMS hierarchical storage manager. A z/OS DFSMS functional component that provides functions for backing up and recovering data, and managing space on volumes in the storage hierarchy.

DFSMShsm-managed volume

(1) A primary storage volume, which is defined to DFSMShsm but which does not belong to a storage group. (2) A volume in a storage group, which is using DFSMShsm automatic dump, migration, or backup services. Contrast with *system-managed volume* and *DFSMSrmm-managed volume*.

DFSMSrmm

DFSMS removable media manager. A z/OS DFSMS functional component that provides functions for managing removable media.

DFSMSrmm control data set

A VSAM key-sequenced data set that contains the complete inventory of your removable media library, as well as the movement and retention policies you define. In the control data set, DFSMSrmm records all changes made to the inventory, such as adding or deleting volumes.

DFSMSrmm-managed volume

A tape volume that is defined to DFSMSrmm. Contrast with *system-managed volume* and *DFSMShsm-managed volume*.

DFSORT

Data Facility Sort.

EEFMT2

Enterprise encrypted format 2 recording technology

EEFMT3

Enterprise encrypted format 3 recording technology

EEFMT4

Enterprise encrypted format 4 recording technology

EFMT1

Enterprise format 1 recording technology

EFMT2

Enterprise format 2 recording technology

EFMT3

Enterprise format 3 recording technology

EFMT4

Enterprise format 4 recording technology

ERDS

Error recording data set

enhanced capacity cartridge system tape

Cartridge system tape with increased capacity that can only be used with 3490E Magnetic Tape Subsystems. Contrast with *cartridge system tape*.

Enterprise Tape Cartridge

Cartridge system tape with increased capacity that can only be used with 3592 Magnetic Tape Subsystems (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, MEDIA10, MEDIA11, MEDIA12, and MEDIA13). Contrast with *cartridge system tape*.

EREP

Environmental Recording, Editing, and Printing.

ESCON

Enterprise systems connection.

file

A collection of information treated as a unit. In non-OS/390 UNIX environments, the terms *data set* and *file* are generally equivalent and are sometimes used interchangeably. See also *data set*.

GB

GB = 1,000,000,000 bytes for tape storage capacity.

hardware configuration definition

An interactive interface in the MVS system that enables an installation to define hardware configurations from a single point of control.

HCD

Hardware configuration definition.

IBM TotalStorage Enterprise Tape Cartridge

A Cartridge system tape with increased capacity that can only be used with 3592 Magnetic Tape Subsystems (MEDIA5, MEDIA6, MEDIA7, MEDIA8, MEDIA9, and MEDIA10).

Interactive Storage Management Facility (ISMF)

The interactive interface of z/OS DFSMS that allows users and storage administrators access to the storage management functions.

IOS

Input/output supervisor.

IPL

Initial program load.

ISMF

Interactive storage management facility.

JCL

Job control language.

JES

Job Entry Subsystem .

keyword

A predefined word that is used as an identifier.

LDG

Library device group.

manual tape library (MTL)

An installation-defined set of stand-alone tape drives and the set of tape volumes that can be mounted on those drives.

MEDIA5

IBM Enterprise Tape Cartridge.

MEDIA6

IBM Enterprise WORM Tape Cartridge.

MEDIA7

IBM Enterprise Economy Tape Cartridge.

MEDIA8

IBM Enterprise Economy WORM Tape Cartridge.

MEDIA9

IBM Enterprise Extended Tape Cartridge.

MEDIA10

IBM Enterprise Extended WORM Tape Cartridge.

MEDIA11

IBM Enterprise Advanced Tape Cartridge.

MEDIA12

IBM Enterprise Advanced WORM Tape Cartridge.

MEDIA13

IBM Enterprise Advanced Economy Tape Cartridge.

MB

MB = 1,000,000 bytes for tape storage capacity.

MTL

Manual tape library.

MVS

Multiple virtual storage.

MVSCP

Multiple virtual storage configuration program.

OAM

Object access method.

OAM complex (OAMplex)

One or more instances of OAM running on systems that are part of a Parallel Sysplex. The OAM systems that are part of an OAMplex share a common OAM database in a DB2 data-sharing group.

OAM-managed volumes

Optical or tape volumes controlled by the object access method (OAM).

object access method (OAM)

An access method that provides storage, retrieval, and storage hierarchy management for objects and provides storage and retrieval management for tape volumes contained in system-managed libraries.

OCDB

Optical configuration database.

O/C/EOV

Open/close/end-of-volume.

OS/390

Operating System/390.

performance

- (1) A measurement of the amount of work a product can produce with a given amount of resources.
- (2) In a DFSMS environment, a measurement of effective data processing speed with respect to objectives set by the storage administrator. Performance is largely determined by throughput, response time, and system availability.

performance scaling

Formatting a tape so that less than its full capacity is used. Formatting a tape to its optimal performance capacity decreases the amount of time required to access the data on the tape. A tape that is formatted to its optimal performance capacity can later be reused and formatted to its full capacity. This applies only to MEDIA5, MEDIA9, and MEDIA11 tape cartridge media.

performance segmentation

Formatting a tape into a fast access segment to be filled first, and a slower access segment to be filled after. This applies only to MEDIA5, MEDIA9, and MEDIA11 tape cartridge media.

private tape volume

A volume assigned to specific individuals or functions.

PTF

Program temporary fix.

recording format

For a tape volume, the format of the data on the tape; for example, 18, 36, 128, 256, 384 tracks, EFMT1, EFMT2, EEFMT2, EFMT3, EEFMT3, EFMT4, or EEFMT4.

recovery

The process of rebuilding data after it has been damaged or destroyed, often by using a backup copy of the data or by reapplying transactions recorded in a log.

REXX

Restructured extended executor.

SCDS

Source control data set.

scratch

The status of a tape volume that is available for general use, because the data on it is incorrect or is no longer needed. You request a scratch volume when you omit the volume serial number on a request for a tape volume mount.

scratch volume

A tape volume that contains expired data only. See *scratch*.

SCSI

Small computer system interface.

SFI

Structured field introducer.

storage administrator

A person in the data processing center who is responsible for defining, implementing, and maintaining storage management policies.

storage class

A collection of storage attributes that identify performance goals and availability requirements, defined by the storage administrator, used to select a device that can meet those goals and requirements.

storage group

A collection of storage volumes and attributes, defined by the storage administrator. The collections can be a group of DASD volumes or tape volumes, or a group of DASD, optical, or tape volumes treated as a single object storage hierarchy. See also *tape storage group*.

storage management

The activities of data set allocation, placement, monitoring, migration, backup, recall, recovery, and deletion. These can be done either manually or by using automated processes. The Storage Management Subsystem automates these processes for you, while optimizing storage resources. See also *Storage Management Subsystem*.

Storage Management Subsystem (SMS)

A z/OS DFSMS facility used to automate and centralize the management of storage. Using SMS, a storage administrator describes data allocation characteristics, performance and availability goals, backup and retention requirements, and storage requirements to the system through data class, storage class, management class, storage group, and ACS routine definitions.

storage subsystem

A storage control and its attached storage devices. See also *tape subsystem*.

subsystem

A special MVS task that provides services and functions to other MVS users. Requests for service are made to the subsystem through a standard MVS facility known as the subsystem interface (SSI). Standard MVS subsystems are the master subsystem and the job entry subsystems JES2 and JES3.

system-managed storage

Storage managed by the Storage Management Subsystem. SMS attempts to deliver required services for availability, performance, and space to applications.

SVC

Supervisor call

system-managed tape library

A collection of tape volumes and tape devices, defined in the tape configuration database. A system-managed tape library can be automated or manual. See also *tape library*.

tape configuration database (TCDB)

One or more volume catalogs used to maintain records of system-managed tape libraries and tape volumes.

tape library

A set of equipment and facilities that support an installation's tape environment. This can include tape storage racks, a set of tape drives, and a set of related tape volumes mounted on those drives. See also *system-managed tape library*.

tape storage group

A type of storage group that contains system-managed private tape volumes. The tape storage group definition specifies the system-managed tape libraries that can contain tape volumes. See also *storage group*.

tape subsystem

A magnetic tape subsystem consisting of a controller and devices, which allows for the storage of user data on tape cartridges.

tape volume

A tape volume is the recording space on a single tape cartridge or reel. See also *volume*.

TCDB

Tape configuration database.

TSO

Time-sharing option.

TS1120

IBM System Storage TS1120 (3592 Model E05, 3592-2 and 3592-2E) .

TS1130

IBM System Storage TS1130 (3592 Model E06, 3592-3E) .

TS1140

IBM System Storage TS1140 (3592 Model E07, 3592-4E) .

VOLSER

Volume serial number.

volume

The storage space on DASD, tape, or optical devices, which is identified by a volume label.

volume serial number (VOLSER)

An identification number in a volume label that is assigned when a volume is prepared for use on the system. For standard label volumes, the volume serial number is the VOL1 label of the volume. For volumes without labels, the volume serial number is the name the user assigns to the volume.

world-wide identifier (WWID)

Often used in z/OS software as the abbreviation for the world-wide unique cartridge identifier (WWCID). See also *world-wide unique cartridge identifier*.

world-wide unique cartridge identifier (WWCID)

A permanent identifier associated with a specific tape cartridge, typically stored on the tape itself and the non-volatile cartridge memory.

Write Once, Read Many (WORM)

A technology to allow data to be written once to storage media. After that, data is permanent and cannot be altered, but can be read any number of times.

WWCID

See world-wide unique cartridge identifier.

WWID

See world-wide identifier.

Index

Numerics

- 3590–1 Generic Unit
 - using mixed track technology drives [57](#), [137](#), [230](#)
- 3592 Model E05
 - coexistence considerations for [265](#)
 - CREATE LIBRARYENTRY command [286](#)
 - introduction for [257](#)
 - LISTCAT parameters [293](#)
- 3592 Model J tape drive
 - introduction for [329](#)
- 3592 Tape Drive
 - 3592 Model E05
 - migration tasks [268](#), [274](#)
 - encryption-capable TS1120 tape drive
 - migration tasks [190](#), [197](#)
 - Model J
 - migration tasks [345](#)
 - Model Jx
 - migration tasks [338](#)
 - TS1130 tape drive
 - migration tasks [108](#)
 - TS1130 tape drives
 - migration tasks [101](#)
 - TS1140 tape drive
 - migration tasks [25](#)
 - TS1140 tape drives
 - migration tasks [17](#)

A

- access method services (AMS)
 - modifications for 3592 Model E05 [279](#)
 - modifications for 3592 Model J [349](#)
 - modifications for TS1120 tape drives [203](#)
 - modifications for TS1130 tape drives [113](#)
 - modifications for TS1140 tape drives [31](#)
- accessibility
 - contact IBM [399](#)
- ACS (automatic class selection)
 - allocation to 3592 Model E05 [275](#)
 - allocation to 3592 Model J [346](#)
 - allocation to encryption-capable TS1120 tape drive [199](#)
 - allocation to TS1130 tape drives [109](#)
 - allocation to TS1140 tape drives [27](#)
- ADDVOLUME
 - KEYENCODE1 [235](#)
 - KEYENCODE2 [235](#)
 - KEYLABEL1 [235](#)
 - KEYLABEL2 [235](#)
 - MEDIATYPE
 - MEDIA10 [143](#), [235](#), [309](#)
 - MEDIA11 [59](#)
 - MEDIA12 [59](#)
 - MEDIA13 [59](#)
 - MEDIA5 [143](#), [235](#), [309](#)
 - MEDIA6 [143](#), [235](#), [309](#)

- ADDVOLUME (*continued*)
 - MEDIATYPE (*continued*)
 - MEDIA7 [143](#), [235](#), [309](#)
 - MEDIA8 [143](#), [235](#), [309](#)
 - MEDIA9 [143](#), [235](#), [309](#)
 - RECORDINGFORMAT
 - EEFMT2 [143](#), [235](#)
 - EEFMT3 [143](#)
 - EEFMT4 [59](#)
 - EFMT1 [235](#), [309](#)
 - EFMT2 [235](#), [309](#)
 - EFMT3 [143](#)
 - EFMT4 [59](#)
- ADREID0 mapping macro
 - changes for encryption-capable TS1120 tape drive [233](#)
 - changes for TS1130 tape drive [129](#)
- ALTER LIBRARYENTRY
 - changed parameters for TS1140 [31](#)
 - for TS1140 tape drive [31](#)
 - NUMBEREMPTYLOTS parameter [31](#)
 - NUMBERSCRATCHVOLUMES parameter [31](#)
 - NUMBERSLOTS parameter [31](#)
 - SCRATCHTHRESHOLD parameter [31](#)
- ALTER LIBRARYENTRY command
 - example
 - for 3592 Model E05 [281](#)
 - examples [351](#)
 - parameters
 - optional [286](#), [356](#)
 - parameters for 3592 Model E05 [281](#)
- ALTER VOLUMEENTRY
 - EFMT1 [349](#)
 - EFMT2 for 3592 Model E05 [279](#)
 - RECORDING parameter [279](#), [349](#)
- ALTER VOLUMEENTRY command
 - EEFMT2 Support [203](#)
 - EFMT1 [351](#)
 - EFMT2 for 3592 Model E05 [282](#)
 - EFMT2 for encryption-capable TS1120 tape drive [203](#)
 - EFMT3 and EEFMT3 support [113](#)
 - EFMT4 and EEFMT4 support [32](#)
 - RECORDING parameter
 - EFMT3 and EEFMT3 support [113](#)
 - EFMT4 and EEFMT4 support [32](#)
 - TS1130 support [113](#)
 - TS1140 support [32](#)
- AMS
 - ALTER LIBRARYENTRY
 - for TS1140 tape drive [31](#)
 - ALTER VOLUMEENTRY
 - EFMT3 and EEFMT3 support [113](#)
 - EFMT4 and EEFMT4 support [31](#)
 - CREATE LIBRARYENTRY
 - for 3592 Model E05 [284](#)
 - for TS1140 tape drive [32](#)
 - CREATE VOLUMEENTRY
 - EFMT3 and EEFMT3 support [114](#)

AMS (continued)

CREATE VOLUMEENTRY (continued)

EFMT4 and EEFMT4 support [33](#)

DCOLLECT

for 3592 Model E05 [290](#)

for encryption-capable TS1120 tape drive [204](#)

for TS1130 [114](#)

for TS1140 [33](#)

LISTCAT

for 3592 Model E05 [292](#)

for encryption-capable TS1120 tape drive [204](#)

for TS1130 tape drive [114](#)

for TS1140 tape drive [34](#)

API structured field introducers [67](#), [149](#), [242](#), [313](#), [383](#)

assistive technologies [399](#)

B

BLK6 ('80D0B0') - Total block count [68](#)

BLKT ('80D030') - Total block count [68](#)

C

CBRSMKBO SAMPLIB member [161](#)

CBRTDSI mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

CBRTVI mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXCPL mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXCUA exit [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXEJC exit [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXENT exit [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXEPL mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

CBRUXNPL mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

CHANGEVOLUME

KEYENCODE1 [237](#)

KEYENCODE2 [237](#)

KEYLABEL1 [237](#)

KEYLABEL2 [237](#)

MEDIATYPE

MEDIA10 [145](#), [237](#), [311](#)

MEDIA11 [61](#)

MEDIA12 [61](#)

MEDIA13 [61](#)

MEDIA5 [61](#), [145](#), [237](#), [311](#), [381](#)

MEDIA6 [61](#), [145](#), [237](#), [311](#), [381](#)

MEDIA7 [61](#), [145](#), [237](#), [311](#), [381](#)

MEDIA8 [145](#), [237](#), [311](#), [381](#)

MEDIA9 [145](#), [237](#), [311](#)

NOKEYLABEL1 [237](#)

NOKEYLABEL2 [237](#)

RECORDINGFORMAT

EEFMT2 [145](#), [237](#)

EEFMT3 [145](#)

EEFMT4 [61](#)

EFMT1 [145](#), [237](#), [311](#), [381](#)

EFMT2 [145](#), [237](#), [311](#)

EFMT3 [145](#)

EFMT4 [61](#)

coexistence considerations

for 3592 Model E05 [265](#)

for encryption-capable TS1120 tape drive [185](#)

for TS1130 tape drive [97](#)

for TS1140 tape drive [13](#)

command

command (continued)

syntax conventions [xxiii](#)

commands

ADDVOLUME [59](#), [143](#), [235](#), [309](#), [379](#)

ALTER LIBRARYENTRY

for TS1140 tape drive [31](#)

ALTER VOLUMEENTRY

EFMT3 and EEFMT3 support [113](#)

EFMT4 and EEFMT4 support [31](#)

CHANGEVOLUME [61](#), [145](#), [237](#), [311](#), [381](#)

CREATE LIBRARYENTRY

for 3592 Model E05 [284](#)

for TS1140 tape drive [32](#)

CREATE VOLUMEENTRY

EFMT3 and EEFMT3 support [114](#)

EFMT4 and EEFMT4 support [33](#)

DCOLLECT

for 3592 Model E05 [290](#)

for encryption-capable TS1120 tape drive [204](#)

for TS1130 [114](#)

for TS1140 [33](#)

DFSMSdss BUILDSEA command [233](#)

DFSMSdss COPYDUMP command [232](#)

DFSMSdss DUMP command [232](#)

DFSMSdss RESTORE command [232](#)

LISTCAT

for 3592 Model E05 [292](#)

for encryption-capable TS1120 tape drive [204](#)

for TS1130 tape drive [114](#)

for TS1140 tape drive [34](#)

LISTDATASET [65](#), [147](#)

LISTVOLUME [66](#), [148](#), [240](#)

SEARCHVOLUME [63](#), [146](#), [239](#), [312](#), [381](#)

compound SFI [69](#), [150](#)

Compression Ratio SFI [68](#)

conflicts in recording technology, resolving

for 3592 [263](#)

for TS1120 [181](#)

for TS1130 [94](#)

for TS1140 [11](#)

contact

z/OS [399](#)

conversion of tapes from D/T3490 to D/T3590 [136](#)

CRAT ('817890') - Compression Ratio [68](#)

CREATE LIBRARYENTRY

for TS1140 tape drive [32](#)

NUMBEREMPTYLOTS parameter [32](#)

NUMBERSCRATCHVOLUMES parameter [32](#)

NUMBERSLOTS parameter [32](#)

SCRATCHTHRESHOLD parameter [32](#)

CREATE LIBRARYENTRY command

examples

for 3592 Model E05 [286](#)

format

for 3592 Model E05 [284](#)

CREATE VOLUMEENTRY

command syntax [356](#)

CREATE VOLUMEENTRY command

examples

for 3592 Model E05 [290](#)

for TS1130 [114](#)

for TS1140 [33](#)

format

EFMT3 and EEFMT3 support [114](#)

CREATE VOLUMEENTRY command *(continued)*

format *(continued)*

- EFMT4 and EEFMT4 support [33](#)
- for 3592 Model E05 [287](#)
- for encryption-capable TS1120 tape drive [203](#)
- for TS1130 [114](#)
- for TS1140 [33](#)

D

D/T3490

- conversion to D/T3590 [136](#)

DALINCHG

- DALINCHG text unit [122](#), [214](#), [299](#), [366](#)
- EFMT1 [122](#), [214](#), [299](#), [366](#)

DALINCHG text unit

- for TS1120 [216](#)
- for TS1130 [40](#), [123](#)

DALKYC1 text unit [215](#)

DALKYC2 text unit [216](#)

DALKYL1 text unit [215](#)

DALKYL2 text unit [215](#)

DASD [35](#), [117](#), [207](#), [295](#), [363](#)

data class

- using encryption-capable TS1120 tape drive [225](#), [231](#)
- using TS1130 tape drive [131](#)
- using TS1140 tape drive [51](#)

Data Set Size Factor SFI [150](#)

DDCMEDIA parameter

- DCCOLLECT command
- for 3592 Model E05 [291](#)

DDCRECTE parameter

- DCCOLLECT command
- for 3592 Model E05 [292](#)

defining library group names in a JES3plex [75](#), [155](#), [247](#), [317](#), [389](#)

device support [35](#), [117](#), [207](#), [295](#), [363](#)

DEVSERV QTAPE MED

- sample messages [35](#), [117](#), [207](#), [295](#), [363](#)
- sample output [35](#), [117](#), [207](#), [295](#), [363](#)
- Syntax [35](#), [117](#), [207](#), [295](#), [363](#)

DEVSUPxx parmlib member options [371](#)

DFSMSdss

- application programming interface (API)
 - change to Exit 26 [233](#)
- BUILDSA command [233](#)
- considerations for encryption-capable TS1120 tape drive [231](#)
- considerations for TS1130 tape drive [129](#)
- considerations for TS1140 tape drive [49](#)
- COPYDUMP command [232](#)
- double encryption [232](#)
- handling of dump encryption requests [232](#)
- planning to use encryption-capable TS1120 tape drive [231](#)
- Stand Alone Restore program [233](#)

DFSMSHsm

- considerations for encryption-capable TS1120 tape drive [225](#)
- considerations for TS1130 tape drive [131](#)
- considerations for TS1140 tape drive [51](#)
- implementation
 - for 3592 Model E05 [276](#)
 - for encryption-capable TS1120 tape drive [200](#)

DFSMSHsm *(continued)*

implementation *(continued)*

- for TS1130 tape drives [111](#)
- for TS1140 tape drives [28](#)
- managing spanning data sets [57](#), [137](#), [230](#), [307](#), [376](#)
- modifications
 - for 3592 Model E5 tape drive [305](#)
- output tape selection [375](#)
- specifying how much of a tape DFSMSHsm uses [228](#)
- TAPEUTILIZATION PERCENTFULL [375](#)
- tips [57](#), [137](#), [230](#), [307](#), [376](#)

DFSMSHsm dump class

- using encryption-capable TS1120 tape drive [231](#)

DFSMSHsm LIST command [52](#), [132](#), [226](#)

DFSMSrmm

- API structured field introducer (SFI) [67](#), [149](#), [242](#), [313](#), [383](#)
- mapping macros [69](#), [151](#), [242](#), [313](#), [383](#)
- reason codes [383](#)
- return codes [383](#)
- REXX variables [67](#), [149](#), [241](#), [312](#), [382](#)

DFSMSrmm media names [310](#), [380](#)

DFSMSrmm TSO subcommand

- ADDVOLUME [59](#), [143](#), [235](#), [309](#), [379](#)
- CHANGEVOLUME [61](#), [145](#), [237](#), [311](#), [381](#)
- LISTDATASET [65](#), [147](#)
- LISTVOLUME [66](#), [148](#), [240](#)
- SEARCHVOLUME [63](#), [146](#), [239](#), [312](#), [381](#)

DFSMSrmm TSO subcommands

- updates for TS1140 [59](#)

double encryption

- method for allowing [232](#)

dsname allocation text unit [40](#), [123](#), [215](#)

DSS6 [67](#), [149](#)

DSS6 ('82B030') - Data Set Size Factor [150](#)

dump class

- using encryption-capable TS1120 tape drive [225](#)
- using TS1130 tape drive [131](#)
- using TS1140 tape drive [51](#)

dynamic allocation (DALINCHG)

- DALINCHG text unit [40](#)
- parameter values for media types [40](#)

E

EDG@KEL1 [241](#)

EDG@KEL2 [241](#)

EDG@KEM1 [241](#)

EDG@KEM2 [241](#)

EDG@MEDR [67](#), [149](#), [241](#), [312](#)

EDG@MEDT [312](#)

EDGCLREC [69](#), [151](#), [242](#), [313](#)

EDGDREC [69](#), [151](#)

EDGEXTSY [69](#), [151](#), [242](#), [313](#), [383](#)

EDGPL100 [313](#)

EDGRDEXT [69](#), [151](#), [383](#)

EDGRVEXT [69](#), [151](#), [242](#), [313](#)

EDGRXEXT [69](#), [151](#), [242](#), [313](#), [383](#)

EDGSMFSY [69](#), [151](#), [242](#), [313](#), [383](#)

EDGSVREC [69](#), [151](#), [242](#), [313](#), [383](#)

EEFMT2

- ADDVOLUME [235](#)

- CHANGEVOLUME [145](#), [237](#)

- SEARCHVOLUME [146](#), [239](#)

- EEFMT3
 - ADDVOLUME [143](#)
 - CHANGEVOLUME [145](#)
 - SEARCHVOLUME [146](#)
- EEFMT4
 - ADDVOLUME [59](#)
 - CHANGEVOLUME [61](#)
 - SEARCHVOLUME [63](#)
- EFMT1
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- EFMT2
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- EFMT3
 - ADDVOLUME [143](#)
 - CHANGEVOLUME [145](#)
 - SEARCHVOLUME [146](#)
- EFMT4
 - ADDVOLUME [59](#)
 - CHANGEVOLUME [61](#)
 - SEARCHVOLUME [63](#)
- EI00CANSFE bit
 - added to ADREID0 mapping macro [129](#)
- EI00MIXDEV bit
 - added to ADREID0 mapping macro [129](#)
- EI00SWNCRYPT bit
 - added to ADREID0 mapping macro [129](#)
- EI26TWHE bit
 - added to ADREID0 mapping macro [233](#)
- emulated device summary report
 - emulated device type [73](#), [153](#), [316](#), [388](#)
- encryption
 - of dumps [49](#), [51](#), [129](#), [131](#), [225](#), [231](#)
 - of tapes [3](#), [87](#), [169](#)
- encryption and key labels [222](#)
- Encryption Key Manager (EKM)
 - for TS1120 [171](#)
- encryption-capable TS1120 tape drive
 - DFSMSdss considerations [231](#)
 - DFSMSdss planning [231](#)
 - DFSMSshm considerations [225](#)
 - introduction for [169](#)
 - media support for [175](#)
- equivalent text units [123](#), [214](#)
- EREP
 - emulated device summary report [73](#), [153](#), [245](#), [315](#), [387](#)
 - ERDS records [73](#), [153](#), [245](#), [315](#), [387](#)
 - event history report [245](#), [315](#), [387](#)
 - for 3592 Model E05 [315](#)
 - for 3592 Model E06 [153](#)
 - for encryption-capable TS1120 tape drive [245](#)
 - for TS1140 tape drive [73](#)
 - IBM service representatives [73](#), [153](#), [245](#), [315](#), [387](#)
 - system error summary report [245](#), [315](#), [387](#)
 - TAPE Media Informational Messages (MIMs) [73](#), [153](#)
 - TAPE subsystem exception report [73](#), [153](#)
- Error recovery procedure routines [35](#), [117](#), [207](#), [295](#), [363](#)
- event history report
 - 3590 [315](#), [387](#)
 - 3592 Model E05 [315](#)

- event history report (*continued*)
 - native device type [315](#), [387](#)
- EXCP [35](#), [117](#), [207](#), [295](#), [363](#)
- Exit [26](#)
 - change to ADREID0 mapping macro [233](#)

G

- glossary [405](#)

H

- HSMplex consideration
 - for 3592-2 tape drives [305](#)

I

- IBM Security Key Lifecycle Manager [5](#)
- IBM System Storage
 - 3592 Model E05 [268](#), [274](#)
 - 3592 Model J [345](#)
 - 3592 Model Jx [338](#)
 - encryption-capable TS1120 tape drive [175](#), [190](#), [197](#)
 - TS1130 tape drive [90](#), [108](#)
 - TS1130 tape drives [101](#)
 - TS1140 tape drive [6](#), [25](#)
 - TS1140 tape drives [17](#)
- IBM System Storage Tape System 3592
 - 3592 Model E05 tape drive [257](#)
 - 3592 Model J tape drive [329](#)
 - software support
 - for 3592 Model E05 [260](#)
 - for encryption-capable TS1120 tape drive [8](#), [92](#), [177](#)
 - software support for [331](#)
 - tape drive
 - 3592 Model J [329](#)
 - WORM
 - for 3592 Model E05 [258](#)
- IBM tape library
 - customization
 - for 3592 Model E05 [272](#)
 - for encryption-capable TS1120 tape drive [195](#)
 - for TS1130 tape drives [22](#), [105](#)
 - implementation [346](#)
 - implementation for 3592 Model E05 [275](#)
 - implementation for encryption-capable TS1120 tape drive [199](#)
 - implementation for TS1130 tape drives [109](#)
 - implementation for TS1140 tape drives [27](#)
 - planning for [19](#), [102](#), [192](#), [269](#), [339](#)
 - using 3592 Model E05 tape drives [262](#)
 - using 3592 Model J tape drives [332](#)
 - using encryption-capable TS1120 tape drives [180](#)
 - using TS1130 tape drives [94](#)
 - using TS1140 tape drives [10](#)
- IECLOGT macro [365](#)
- IECLOGT mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)
- IECOEVSE mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)
- IECSNST macro [24](#), [107](#), [196](#), [273](#), [343](#)
- IECUCBCX macro [24](#), [107](#), [196](#), [209](#), [273](#), [297](#), [343](#), [365](#)
- IFGTEP macro [372](#)
- IFGWAX mapping macro [24](#), [107](#), [196](#), [273](#), [343](#)

- IHADFT macro [24](#), [107](#), [196](#), [273](#), [343](#), [365](#)
- implementation considerations [11](#), [94](#), [181](#)
- in-band tape encryption
 - administration tasks for [253](#)
- information center
 - IBM System Storage 3592-C07 Controller [xxi](#)
 - IBM System Storage TS1140 Tape Drive [xxi](#)
- input tape use
 - non-SMS input tape use [52](#), [132](#), [226](#), [305](#)
 - SMS output tape use [52](#), [132](#), [226](#), [305](#)
- IOS [35](#), [117](#), [207](#), [295](#), [363](#)
- ISMF

- data class
 - for 3592 Model E05 [301](#)
 - for 3592 Model J [369](#)
 - for TS1120 [219](#)
 - for TS1130 [125](#)
 - for TS1140 [43](#)
- mountable tape volume
 - for 3592 Model E05 [301](#)
 - for 3592 Model J [369](#)
 - for TS1120 [219](#)
 - for TS1130 [125](#)
 - for TS1140 [43](#)

J

- JCL DD statement parameters
 - equivalent text units
 - for TS1120 [214](#)
- JES3
 - library device group [75](#), [155](#), [247](#), [317](#), [389](#)
 - modifications for 3592 Model E05 [317](#)
 - modifications for encryption-capable TS1120 tape drive [247](#)
 - modifications for TS1130 tape drive [155](#)
 - modifications for TS1140 tape drive [75](#)

K

- KEL1 [242](#)
- KEL2 [242](#)
- KEM1 [242](#)
- KEM2 [242](#)
- keyboard
 - navigation [399](#)
 - PF keys [399](#)
 - shortcut keys [399](#)
- KEYENCOD1
 - ADDVOLUME [235](#)
- KEYENCOD2
 - ADDVOLUME [235](#)
- KEYLABEL1
 - ADDVOLUME [235](#)
- KEYLABEL2
 - ADDVOLUME [235](#)

L

- list tape volume entries sample output
 - EEFMT2 subparameter [205](#)
 - EFMT3 and EEFMT3 subparameters [115](#)

- list tape volume entries sample output (*continued*)
 - EFMT4 and EEFMT4 subparameters [34](#)
- LIST TTOC command
 - for EEFMT2 formatted tapes [227](#)
 - for EEFMT3 formatted tapes [133](#)
 - for EEFMT4 formatted tapes [53](#)
 - for EFMT2 formatted tapes [306](#)
 - for EFMT3 formatted tapes [133](#)
 - for EFMT4 formatted tapes [53](#)
- LISTCAT output
 - for 3592 Model E05 [293](#)
 - for 3592 Model J [361](#)

M

- mapping macros
 - CBRTDSI
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - CBRTVI
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - CBRUXCPL
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - CBRUXEPL
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - CBRUXNPL
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - EDGCLREC [69](#), [151](#), [242](#), [313](#)
 - EDGEXTSY [69](#), [151](#), [242](#), [313](#), [383](#)
 - EDGPL100 [313](#)
 - EDGRDEXT [69](#), [151](#), [383](#)
 - EDGRVEXT [69](#), [151](#), [242](#), [313](#)
 - EDGRXEXT [69](#), [151](#), [242](#), [313](#), [383](#)
 - EDGSDREC [69](#), [151](#)
 - EDGSMFSY [69](#), [151](#), [242](#), [313](#), [383](#)
 - EDGSVREC [69](#), [151](#), [242](#), [313](#), [383](#)
 - IECLOGT
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - IECOEVSE
 - for 3592 Model E05 [273](#)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - IECUCBCX [209](#), [297](#), [365](#)
 - IFGTEP [372](#)
 - IFGWAX
 - for 3592 Model E05 [273](#)

- mapping macros (*continued*)
 - IFGWAX (*continued*)
 - for encryption-capable TS1120 tape drive [196](#)
 - for TS1130 tape drives [107](#)
 - for TS1140 tape drives [24](#)
 - IHADFVT [365](#)
- Media Recording Format SFI [68](#), [150](#)
- media support
 - for encryption-capable TS1120 tape drive [175](#)
 - for TS1130 tape drive [90](#)
 - for TS1140 tape drive [6](#)
- Media Type SFI [68](#)
- MEDIA10
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [63](#), [146](#), [239](#), [312](#)
- MEDIA11
 - CHANGEVOLUME [61](#)
 - SEARCHVOLUME [63](#)
- MEDIA12
 - CHANGEVOLUME [61](#)
 - SEARCHVOLUME [63](#)
- MEDIA13
 - CHANGEVOLUME [61](#)
- MEDIA5
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- MEDIA6
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- MEDIA7
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- MEDIA8
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- MEDIA9
 - ADDVOLUME [235](#), [309](#)
 - CHANGEVOLUME [145](#), [237](#), [311](#)
 - SEARCHVOLUME [146](#), [239](#), [312](#)
- MEDIATYPE
 - MEDIA10 [284](#), [290](#)
 - MEDIA5 [284](#), [289](#), [290](#), [353](#), [358](#)
 - MEDIA6 [284](#), [289](#), [290](#), [353](#), [358](#)
 - MEDIA7 [284](#), [289](#), [290](#), [353](#), [358](#)
 - MEDIA8 [284](#), [289](#), [290](#), [353](#), [358](#)
 - MEDIA9 [284](#), [290](#)
- MEDIATYPE parameter
 - ALTER VOLUMEENTRY command
 - for 3592 Model E05 [283](#), [289](#)
- MEDR [67](#), [149](#), [242](#), [313](#)
- MEDR ('857000') - Media Recording Format [68](#), [150](#)
- MEDT [313](#)
- MEDT ('858000') - Media Type [68](#)
- messages
 - updates for 3592 Model E05 [274](#)
 - updates for encryption-capable TS1120 tape drive [197](#)
 - updates for TS1130 tape drive [107](#)
 - updates for TS1140 tape drive [25](#)
- migration considerations

- migration considerations (*continued*)
 - object tape [81](#)
- migration information
 - for 3592 Model E05 [265](#)
 - for encryption-capable TS1120 tape drive [185](#)
 - for TS1130 tape drive [97](#)
 - for TS1140 tape drive [13](#)
- mixed track technology drives
 - allowing DFSMSHsm to use [57](#), [137](#), [230](#)
- MVS device allocation
 - batch (JCL) [39](#), [121](#), [213](#), [298](#), [366](#)
 - dynamic (SVC99) allocation [39](#), [121](#), [213](#), [298](#), [366](#)
 - LIBSERV [39](#), [121](#), [213](#), [298](#), [366](#)
 - MSGDISP [39](#), [121](#), [213](#), [298](#), [366](#)
 - OAM [39](#), [121](#), [213](#), [298](#), [366](#)
 - SMS [39](#), [121](#), [213](#), [298](#), [366](#)

N

- navigation
 - keyboard [399](#)
- notational conventions [xxii](#)
- NUMBERSCRATCHVOLUMES parameter
 - ALTER LIBRARYENTRY command
 - for 3592 Model E05 [280](#), [285](#)

O

- O/C/EOV
 - IFGTEP macro [45](#), [127](#), [221](#), [303](#), [371](#)
 - recording technology conflict [45](#), [127](#), [221](#), [303](#), [371](#)
- OAM
 - for 3592 Model E05 [319](#), [323](#)
 - for encryption-capable TS1120 tape drive [249](#), [252](#)
 - for TS1130 tape drive [157](#), [160](#)
 - for TS1140 tape drive [77](#), [81](#)
 - library support [77](#), [157](#), [249](#), [319](#), [391](#)
 - object tape support [81](#), [160](#), [252](#), [323](#), [395](#)
- OAM modifications
 - for 3592 Model E05 [319](#)
 - for 3592 Model J [391](#)
 - for encryption-capable TS1120 tape drive [249](#)
 - for TS1130 tape drive [157](#)
 - for TS1140 tape drive [77](#)
- OAMplex
 - coexistence considerations
 - for 3592 Model E05 [267](#)
 - for encryption-capable TS1120 tape drive [189](#)
 - for TS1130 tape drives [100](#)
 - for TS1140 tape drives [16](#)
 - customization
 - for 3592 Model E05 [272](#)
 - for encryption-capable TS1120 tape drive [195](#)
 - for TS1130 tape drives [105](#)
 - for TS1140 tape drives [22](#)
 - implementation
 - for 3592 Model E05 [276](#)
 - for encryption-capable TS1120 tape drive [200](#)
 - for TS1130 tape drives [28](#), [110](#)
 - planning for
 - for 3592 Model E05 [270](#)
 - for encryption-capable TS1120 tape drive [193](#)
 - for TS1130 tape drives [20](#), [103](#)

- object tape
 - migration considerations [81](#)
- output tape selection
 - non-SMS output tape selection
 - SMS ACS routine [56](#), [135](#), [229](#), [305](#), [375](#)
 - SMS output tape selection
 - SMS cartridge eligibility [56](#), [135](#), [229](#), [305](#), [375](#)

P

- parmlib
 - VLPOOL MASTEROVERWRITE operand [384](#)
- performance scaling
 - for 3592 [259](#)
 - for TS1120 [177](#)
 - for TS1130 [92](#)
 - for TS1140 [8](#)
- performance segmentation
 - for 3592 [259](#)
 - for TS1120 [177](#)
 - for TS1130 [92](#)
 - for TS1140 [8](#)
- Physical space used SFI [68](#)
- PSZ6 ('87D300') - Physical space used [68](#)

R

- required product knowledge [xxi](#)
- resolving recording technology conflicts
 - for 3592 [263](#)
 - for TS1120 [181](#)
 - for TS1130 [94](#)
 - for TS1140 [11](#)
- reuse capacity table
 - MEDIA10 [306](#)
 - MEDIA7 [375](#)
 - MEDIA9 [306](#)

S

- scaling
 - for 3592 [259](#)
 - for TS1120 [177](#)
 - for TS1130 [92](#)
 - for TS1140 [8](#)
- scratch tapes
 - non-SMS input tape use
 - SMS ACS routine [229](#), [306](#)
 - SMS output tape use
 - SMS cartridge eligibility [229](#), [306](#)
- SCRATCHTHRESHOLD parameter
 - ALTER LIBRARYENTRY command
 - for 3592 Model E05 [280](#), [286](#)
- SEARCHVOLUME
 - MEDIATYPE
 - MEDIA10 [146](#), [239](#), [312](#)
 - MEDIA11 [63](#)
 - MEDIA12 [63](#)
 - MEDIA13 [63](#)
 - MEDIA5 [146](#), [239](#), [312](#), [381](#)
 - MEDIA6 [146](#), [239](#), [312](#), [381](#)
 - MEDIA7 [146](#), [239](#), [312](#), [381](#)
 - MEDIA8 [146](#), [239](#), [312](#), [381](#)

- SEARCHVOLUME (*continued*)
 - MEDIATYPE (*continued*)
 - MEDIA9 [146](#), [239](#), [312](#)
 - RECORDINGFORMAT
 - EEFMT2 [146](#), [239](#)
 - EEFMT3 [146](#)
 - EEFMT4 [63](#)
 - EFMT1 [146](#), [239](#), [312](#), [381](#)
 - EFMT2 [146](#), [239](#), [312](#)
 - EFMT3 [146](#)
 - EFMT4 [63](#)
- segmentation
 - for 3592 [259](#)
 - for TS1120 [177](#)
 - for TS1130 [92](#)
 - for TS1140 [8](#)
- shortcut keys [399](#)
- SMS
 - EFMT1 [212](#), [298](#), [366](#)
 - EFMT2 [38](#), [121](#), [212](#), [298](#)
 - ISMF [38](#), [121](#), [212](#), [298](#), [366](#)
 - recording technology [38](#), [121](#), [212](#), [298](#), [366](#)
 - SMS configuration services [38](#), [121](#), [212](#), [298](#), [366](#)
- SMS-managed TCDB volume records [371](#)
- SMS-managed TVR volume records [371](#)
- stand-alone library
 - coexistence considerations
 - for 3592 Model E05 [266](#)
 - for encryption-capable TS1120 tape drive [186](#)
 - for TS1130 tape drive [14](#), [98](#)
 - customization
 - for 3592 Model E05 [271](#)
 - for encryption-capable TS1120 tape drive [194](#)
 - for TS1130 tape drives [104](#)
 - for TS1140 tape drives [21](#)
 - implementation
 - for 3592 Model E05 [275](#)
 - for encryption-capable TS1120 tape drive [198](#)
 - for TS1130 tape drives [26](#), [108](#)
 - planning for
 - for 3592 Model E05 [268](#)
 - for encryption-capable TS1120 tape drive [191](#)
 - for TS1130 tape drive [18](#), [101](#)
 - using 3592 Model E05 tape drives [263](#)
 - using 3592 Model J tape drives [333](#)
 - using encryption-capable TS1120 tape drives [181](#)
 - using TS1130 tape drives [94](#)
 - using TS1140 tape drives [10](#)
- summary of changes [xxix](#)
- syntax conventions
 - how to read [xxiii](#)
- syntax diagrams
 - how to read [xxii](#)
- system error summary report
 - 3490 [315](#), [387](#)
 - 3590 [315](#), [387](#)
 - 3592 Model E05 [315](#)

T

- tape
 - specifying how much of a tape DFSMSHsm uses [228](#)
- tape devices
 - 3490 [39](#), [121](#), [213](#), [298](#), [366](#)

- tape devices (*continued*)
 - 3590–1 [39](#), [121](#), [213](#), [298](#), [366](#)
 - automated tape library environment [39](#), [121](#), [213](#), [298](#), [366](#)
- tape drive
 - 3592 Model E05 [257](#)
 - 3592 Model J [327](#)
 - TS1120 [257](#)
 - TS1120 encryption-capable [169](#)
 - TS1130 [87](#)
 - TS1140 [1](#), [3](#)
- tape encryption [3](#), [87](#), [169](#)
- Tape Hardware Emulation [54](#), [134](#), [228](#)
- TAPE Media Informational Messages (MIMs)
 - 3592 [73](#), [153](#)
- tape subsystem exception report
 - 3590 [315](#), [387](#)
 - 3592 [153](#)
 - native device type [73](#), [153](#), [315](#), [387](#)
 - TS1140 [73](#)
- Tape Volume Record (TVR)
 - TS1140 support
 - OCE processing [45](#)
- TAPEUTILIZATION [56](#), [136](#)
- TAPEUTILIZATION and PERCENTFULL
 - determining capacity [56](#), [135](#), [229](#), [306](#), [375](#)
- Tivoli Key Lifecycle Manager (TKLM) [5](#), [89](#)
- TKLM (Tivoli Key Lifecycle Manager) [5](#), [89](#)
- Total block count SFI [68](#)
- TS1120
 - cartridge entry processing [251](#)
 - Encryption Key Manager (EKM) [171](#)
 - equivalent text units for [214](#)
 - JCL DD statement parameters for [214](#)
 - management interfaces for [172](#)
 - OCE tape installation exits [223](#)
 - operator command support changes [250](#)
 - tape device naming conventions [228](#)
- TS1120 tape drive
 - encryption-capable
 - media support for [175](#)
 - introduction for [257](#)
- TS1120 tape drives
 - implementation considerations for [181](#)
- TS1130
 - cartridge entry processing [159](#)
 - DFSMSrmm modifications for [139](#)
 - equivalent text units for [123](#)
 - JCL DD statement parameters for [123](#)
 - KB tracking [160](#)
 - management interfaces for [89](#)
- TS1130 tape drive
 - DFSMSdss [129](#)
 - DFSMSdss considerations [129](#)
 - DFSMSshm considerations [131](#)
 - introduction to [87](#)
 - media support for [90](#)
- TS1130 tape drives
 - implementation considerations for [94](#)
- TS1140
 - management interfaces for [6](#)
 - mount processing change [79](#)
 - multiple recording format capability [47](#)
 - OCE processing

- TS1140 (*continued*)
 - OCE processing (*continued*)
 - WORM support [45](#)
- TS1140 tape drive
 - DFSMSdss considerations [49](#)
 - DFSMSshm considerations [51](#)
 - introduction for [3](#)
 - media support for [6](#)
- TS1140 tape drives
 - implementation considerations for [11](#)
- TVR (Tape Volume Record)
 - TS1140 support
 - OCE processing [45](#)

U

- USE6 [67](#), [149](#)
- USE6 ('8AE030') - Volume Usage Factor [150](#)
- USEM [67](#), [149](#)
- USEM ('8AE000') - Volume Usage (KB) [150](#)
- user interface
 - ISPF [399](#)
 - TSO/E [399](#)

V

- VLPOOL MASTEROVERWRITE operand
 - in parmlib [384](#)
- Volume Usage Factor SFI [150](#)
- Volume Usage SFI [150](#)

W

- WORM
 - TS1140 support
 - OCE processing [45](#)
- WORM tape cartridge
 - aggregate backup and recovery [307](#), [376](#)
 - rejection at OPEN [307](#), [376](#)

Z

- z/OS DFSMS [35](#), [117](#), [207](#), [295](#), [363](#)



Product Number: 5655-ZOS

SC23-6854-70

